

VIPER

Installation & Operation Manual



VIPER 2.08

Table of Contents

Chapter 1 - Getting Started with the Viper System	1
The Viper Interface	2
Active Matrix Transflective Touchscreen	2
Keypad	3
Adjusting the Backlight	3
Connectors	4
Flashdisk Storage Card	4
Installing the Flashdisk	5
Hardware Installation	6
Viper Single Product (Liquid) CAN Control System	7
Viper Dual Product (Liquid/Granular) CAN Control System	8
Viper Power Connection	9
Viper Console Connection	10
DGPS Receiver Connection	11
Viper Guidance System	12
Viper/Invicta 115/RGL 600 Universal/Smartrax Package	13
Programs Menu	13
Selecting a Program	14
Screen Calibration	14
Registering Your Viper System	16
Viper Care and Use	21
Chapter 2 - Setting Up the Controller Area Network (CAN)	23
CAN System Connections	23
CAN Terminators	24
Wiring Power to a CAN System	24
CAN Node Wiring	25
Adding Nodes to the CAN System	26
Detecting the CAN Bus Nodes	27
CAN Initialization Results	27
Selecting a New Controller	27
Re-Addressing Product Nodes	28
Programming the Nodes on the CAN System	29
Boom Cals	30
Miscellaneous	31
Units	32
Speed Sensor	32
Speed Cal	32
AccuBoom Node	35
Audible Alarms	35
Fan/Pump RPM	36
Speed	36
Node Version Information	37
Data Box 1	38
Dual Flow %	39
Off Rate %	39
Low Tank	39

Low Limit	39
Flow/Shaft Alarm	40
Vacuum/Bin Alarm	40
Decimal Shift	40
Zero ShutOff	41
Display Smoothing	41
Agitator	41
Ratio Rate	41
Data Box 2	42
Tank Volume	43
Area/Hour	43
Vol/Min	43
Rate Cal	43
Rate +/-	43
Meter Cal/Density	43
Spreader	43
Valve Cal	48
Valve Cal 2	48
Fan/Pump Cal	48
Min PW	49
Pre Set PW	53
PW Freq	53
Ratio Rate	53
Valve Delay	53
PWM	53
Pressure Area	54
Dual Pressure	54
Calibrating the Pressure Transducer Using an Analog Gauge	55
Entering a Setting with no Analog Gauge	55
Application Area	56
Tally Registers	58
Resetting the Tally Registers	59
Setting or Resetting Distance and Individual Nodes	59
Alarms	61

Chapter 3 - Navigating the Viper Interface..... 63

Main Screen Features	63
Profile	64
Current Heading	66
Speed	67
Map Area	68
Application Rates	69
Booms	70
Tabs	71
GPS Status Indicator	72
Product Control Status	74
Autoboomb Status Indicator	75
Display Data	77
Tabs	78
Main Tab	79
Field Boundaries	80

b

Guide Tab	81
Rx+Cov+Scout Tab	82
Rx Tab	83
Cov Tab	85
Accessing Coverage Map Information	86
Scout Tab	87
Marking a Field Boundary	87
Importing a Field Boundary	89
AccuBoom Tab	92
Screen Tool Icons	93
System Status Icons	94
Menus	95
Exit Button	95
About Button	96
Setup Button	97
Activation Key and Feature Activation	98
Entering the Activation Key	98
Viper Features	100
Guidance	100
Single Product VRA	100
Multi-Product VRA	100
Maps	101
Street Maps	102
Downloading Street Maps	102
Loading the Street Maps to the Viper Console	103
Deleting Street Maps	104
Scout Maps	104
External Waypoint Switchbox	106
About Offsets	107
Coverage Maps	108
Setting the Coverage Map Percentages and Colors	108
Zero Rate Tolerance	109
Prescription (Rx) Maps	110
Accessing the Rx Map Menu	111
Rx Look-Ahead	112
Rx Map Colors	113
Editing a Rx Color Template	117
Deleting a Rx Color Template	118
Local Settings	119
Accessing the Local Setting Menu	119
Language	120
Choosing a Language	120
Profile Configuration	121
Saving Profile Information	121
Loading a Saved Profile	122
Units Configuration	123
Setting the Unit of Measurement	123
Time Zone Configuration	124
Setting the Correct Operating Time Zone	124
Serial Communication Port Setup	125
GPS Comm Port Setup	126

Generic (Non-Raven) GPS Setup	127
Setting up the GPS Comm Port to a Non-Raven DGPS Receiver	127
Raven GPS Setup	128
Auto-Configuring a Raven DGPS Receiver	128
Raven GPS + Lightbar Setup	129
Configuring a Raven DGPS Receiver + Lightbar	129
Tilt Sensor	130
Configuring the Tilt Sensor	132
Tilt Status	133
Tilt	134
Temp	134
Dir	134
Antenna Height	134
GPS Delay	134
Reverse Polarity	134
Tilt Filter	134
Zeroing the Tilt Sensor	135
Console Comm Port Setup	136
Auxiliary Comm Port Setup	136
Configuring Viper for Lightbar Guidance	137
Configuring the On-Screen Lightbar	137
External Lightbar	139
Boom Settings and Mapping	140
Boom Setup	140
Setting up Booms	141
Boom Mapping	145
Mapping the Booms	146
Advanced Settings	148
Chapter 4 - Using the Viper System	151
Jobs	151
New Jobs	151
Product Application	152
Guidance	153
AccuBoom Control	154
Product Chaining	154
Starting a New Job	155
Pausing a Job	162
Restarting a Paused Job	162
Existing Jobs	162
Viewing an Existing Job	163
Adding to an Existing Job	163
Deleting Jobs	164
Deleting Jobs by Selection	165
Application Reports	166
Customer Information	167
Field Information	168
Field Conditions	169
Weather Information	170
Applicator Information	170
Vehicle Information	171

Product Information	172
Ingredient Information	173
Report Notes Information	174
Creating an Application Report	175
Chapter 5 - Product Chaining	177
Enabling Product Chaining	177
Using Product Chaining	181
Display Data	183
Miscellaneous Messages	184
Chapter 6 - Using AccuBoom	185
Viper CAM AccuBoom Installation	186
Viper CAN AccuBoom with Serial Console Installation	187
AccuBoom Control Setup	188
Look-Ahead	188
Turn-Off % Coverage	188
AccuBoom Override	189
Zero Rate Shut Off	189
Configuring the AccuBoom Control	189
AccuBoom Boom Disable	190
Disabling Booms	190
Zero Rate Shutoff	191
Enabling Zero Rate Zone Shut Off	191
AccuBoom Override	191
Enabling AccuBoom Override	191
AccuBoom Spray/No-Spray Zones	193
Standard AccuBoom Method	194
Create AccuBoom No-Spray Map Method	194
Load AccuBoom No-Spray Map Method	195
Create Map From Field Boundary Method	196
Changing Spray/No-Spray Default Colors	197
AccuBoom Spray/No-Spray Maps	198
Chapter 7 - Using AutoBoom	203
UltraGlide Autoboom	204
PowerGlide Plus Autoboom	205
Calibrating Autoboom	206
Calibrating UltraGlide Autoboom	207
Calibrating UltraGlide in PowerGlide Plus Mode	211
Calibrating PowerGlide Plus Autoboom	215
Autoboom Operation	217
Enabling Autoboom	219
Autoboom Status Display	220
Adjusting Autoboom Operation	220
UltraGlide System Adjustment	221
To Adjust Sensor Height	221
To Adjust Sensitivity	221
To Adjust Speed	222
PowerGlide Plus System Adjustment	222
To Adjust High and Low Limits of the Pressure Alarm Setting	222

To Adjust the Pressure Alarm Point	223
To Adjust Heaviest Setting	223
To Adjust Lightest Setting	223
Resetting Defaults	224
Resetting UltraGlide Defaults	224
Resetting PowerGlide Plus Defaults	226
Chapter 8 - Viper Guidance	229
Swathing Patterns	232
Patterns	232
Straight AB	233
Contour Fixed	233
Contour 1 Button	235
Contour 2 Button	236
C Clamp	237
Headlands Separate	238
Headlands Combined	239
Headlands 2 Separate	240
Headlands 2 Combined	241
Spiral	242
One Step	243
Seed	244
Headlands with Contour	245
Headlands 2 with Contour	246
Using the Guide Tab	248
Lightbar Display	249
Off-Swath Distance	249
Swath Number	249
Swathing Pattern	249
LB Bright Button	249
LB Dim Button	249
Reset A-B Button	249
Recal A-B Button	250
Set A/Set B Button	250
Load A-B/Save A-B Button	250
Set Flag/Goto Flag/Clear Flag Button	251
Zoom Level	251
Course Direction Indicator (CDI) Needle	251
Nav Needle Stationary	251
Nav Needle Moving	252
Guidance AB Lines	252
Saving an AB Line	252
Loading an AB Line	254
Chapter 9 - Understanding Flashdisk Files	255
Flashdisk File Structure	255
AccuBoom Folder	255
Autoboomb Alarms	256
CovMaps Folder	256
Guidance Archive Folder	256
Jobs Folder	256

Rbin Folder	256
RxMaps Folder	257
RxMaps\colors Sub-Folder	257
Scout Folder	257
Setting Folder	257
Streetmaps Folder	257
Vnav Folder	258
Zulu.ini File	258
Maintaining the Flashdisk	258
Chapter 10 - External Serial Rate Control	259
Setting up the Auxiliary Port for External Serial Rate Control	259
Connecting the GreenSeeker® RT200 to Viper	260
Starting a Job with External Rate Control	260
Chapter 11 - Rbin Viewer	263
Downloading Rbin Viewer	263
Downloading Rbin Software	263
Installing the Rbin Viewer	265
To Install the Rbin Viewer	266
Viewing Rbin Files	270
To Open an Rbin Report	270
Exporting Shapefiles	272
Toolbar Options	273
To Select the Coverage Display Options	274
To Change Coverage Map Colors	275
Rbin Options	276
To Change the Units of Measure	276
To Change the Layout	277
To Change the Language	279
Enabling Manual Console Display	280
Export Settings	281
Editing an Rbin Report	282
Reset History	285
Chapter 12 - Troubleshooting the Viper System	287
Viper Troubleshooting Information	287
General Issues	288
Setup Issues	290
Job Issues	291
Rx Map Issues	292
Coverage Map Issues	292
Error Messages	293
General Error Messages	293
Setup Error Messages	293
Job Error Messages	294
Variable Rate Control (VRC) Error Messages	296
GPS Error Messages	297
CAN Troubleshooting	298

Appendices

Appendix A - Flashdisk Maintenance	299
Appendix B - Calculating the Boom Width (Calibration) for Liquid Applications	303
Appendix C - Calculating and Verification of Spreader Constant	305
Appendix D - Calculating Speed Calibration	307
Appendix E - Calculating Calibrations for Liquid and Granular Applications	309
Appendix F - Testing the Speed Sensor Extension Cable	313
Appendix G - Testing the Flow Meter Cables	317
Appendix H - Using the Invicta Front Panel Program with the Viper System	321
Appendix I - Controlling Spinner RPM	323

Index

A			
About Button	96	Autoboom Operation	217
About Offsets	107	Autoboom Status Display	220
AccuBoom Tab	92	Autoboom Status Indicator	75
Accessing Coverage Map Information	86	Auto-Configuring a Raven DGPS Receive	128
Accessing the Local Setting Menu	119	Auxiliary Comm Port Setup	136
Accessing the Rx Map Menu	111		
AccuBoom Boom Disable	190	B	
AccuBoom Control	154	Boom Cals	30
AccuBoom Control Setup	188	Boom Mapping	145
AccuBoom Folder	255	Boom Settings and Mapping	140
AccuBoom Node	35	Boom Setup	140
AccuBoom Override	189	Booms	70
AccuBoom Override	191		
AccuBoom Spray/No-Spray Maps	198	C	
AccuBoom Spray/No-Spray Zones	193	C Clamp	237
Activation Key and Feature Activation	98	Calibrating Autoboom	206
Active Matrix Transflective Touchscreen	2	Calibrating PowerGlide Plus Autoboom	215
Adding Nodes to the CAN System	26	Calibrating the Pressure Transducer Using	55
Adding to an Existing Job	163	Calibrating UltraGlide Autoboom	207
Adjust the Pressure Alarm Point	223	Calibrating UltraGlide in PowerGlide Plus	211
Adjusting Autoboom Operation	220	CAN Initialization Results	27
Adjusting the Backlight	3	CAN Node Wiring	25
Advanced Settings	148	CAN System Connections	23
Agitator	41	CAN Terminators	24
Alarms	61	CAN Troubleshooting	298
Antenna Height	134	Change Coverage Map Colors	275
Appendix A - Flashdisk Maintenance	299	Change the Language	279
Appendix B - Calculating the Boom Width	303	Change the Layout	277
Appendix C - Calculating and Verification	305	Change the Units of Measure	276
Appendix D - Calculating Speed Calibratic	307	Changing Spray/No-Spray Default Colors	197
Appendix E - Calculating Calibrations for l	309	Choosing a Language	120
Appendix F - Testing the Speed Sensor Ex	313	Configuring a Raven DGPS Receiver + Li	129
Appendix G - Testing the Flow Meter Cab	317	Configuring the AccuBoom Control	189
Appendix H - Using the Invicta Front Pan	321	Configuring the On-Screen Lightbar	137
Appendix I - Controlling Spinner RPM	323	Configuring the Tilt Sensor	132
Application Area	56	Configuring Viper for Lightbar Guidance	137
Application Rates	69	Connecting the GreenSeeker® RT200 to V	260
Application Reports	166	Connectors	4
Applicator Information	170	Console Comm Port Setup	136
Area/Hour	43	Contour 1 Button	235
Audible Alarms	35	Contour 2 Button	236
Autoboom Alarms	256	Contour Fixed	233

Course Direction Indicator (CDI) Needle	251	Error Messages	293
Cov Tab	85	Existing Jobs	162
Coverage Map Issues	292	Exit Button	95
Coverage Maps	108	Export Settings	281
CovMaps Folder	256	Exporting Shapefiles	272
Create AccuBoom No-Spray Map Method	194	External Lightbar	139
Create Map From Field Boundary Method	196	External Serial Rate Control	259
Creating an Application Report	175	External Waypoint Switchbox	106
Current Heading	66		
Customer Information	167		
		F	
D		Fan/Pump Cal	48
Data Box 1	38	Fan/Pump RPM	36
Data Box 2	42	Field Boundaries	80
Decimal Shift	40	Field Conditions	169
Deleting a Rx Color Template	118	Field Information	168
Deleting Jobs	164	Flashdisk File Structure	255
Deleting Jobs by Selection	165	Flashdisk Storage Card	4
Deleting Street Maps	104	Flow/Shaft Alarm	40
Detecting the CAN Bus Nodes	27		
DGPS Receiver Connection	11	G	
Dir	134	General Error Messages	293
Disabling Booms	190	General Issues	288
Display Data	77	Generic (Non-Raven) GPS Setup	127
Display Data	183	Getting Started with the Viper System	1
Display Smoothing	41	GPS Comm Port Setup	126
Downloading RBin Software	263	GPS Delay	134
Downloading RBin Viewer	263	GPS Error Messages	297
Downloading Street Maps	102	GPS Status Indicator	72
Dual Flow %	39	Guidance	100
Dual Pressure	54	Guidance	153
		Guidance AB Lines	252
E		Guidance Archive Folder	256
Editing a Rx Color Template	117	Guide Tab	81
Editing an Rbin Report	282		
Enabling AccuBoom Override	191	H	
Enabling Autoboom	219	Hardware Installation	6
Enabling Manual Console Display	280	Headlands 2 Combined	241
Enabling Product Chaining	177	Headlands 2 Separate	240
Enabling Zero Rate Zone Shut Off	191	Headlands 2 with Contour	246
Entering a Setting with no Analog Gauge	55	Headlands Separate	238
Entering the Activation Key	98	Headlands with Contour	245

Hedlands Combined	239	Maps	101
I		Marking a Field Boundary	87
Importing a Field Boundary	89	Menus	95
Ingredient Information	173	Meter Cal/Density	43
Install the RBin Viewer	266	Min PW	49
Installing the Flashdisk	5	Miscellaneous	31
Installing the RBin Viewer	265	Miscellaneous Messages	184
		Multi-Product VRA	100
J		N	
Job Error Messages	294	Nav Needle Moving	252
Job Issues	291	Nav Needle Stationary	251
Jobs	151	Navigating the Viper Interface	63
Jobs Folder	256	New Jobs	151
		Node Version Information	37
K		O	
Keypad	3	Off Rate %	39
L		Off-Swath Distance	249
Language	120	One Step	243
LB Bright Button	249	Open an Rbin Report	270
LB Dim Button	249	P	
Lightbar Display	249	Patterns	232
Load A-B/Save A-B Button	250	Pausing a Job	162
Load AccuBoom No-Spray Map Method	195	PowerGlide Plus Autoboom	205
Loading a Saved Profile	122	PowerGlide Plus System Adjustment	222
Loading an AB Line	254	Pre Set PW	53
Loading the Street Maps to the Viper Con	103	Prescription (Rx) Maps	110
Local Settings	119	Pressure Area	54
Look-Ahead	188	Product Application	152
Low Limit	39	Product Chaining	154
Low Tank	39	Product Chaining	177
M		Product Control Status	74
Main Screen Features	63	Product Information	172
Main Tab	79	Profile	64
Maintaining the Flashdisk	258	Profile Configuration	121
Map Area	68	Programming the Nodes on the CAN Syst	29
Mapping the Booms	146	Programs Menu	13
		PW Freq	53
		PWM	53

R

Rate +/-	43
Rate Cal	43
Ratio Rate	41
Ratio Rate	53
Raven GPS + Lightbar Setup	129
Raven GPS Setup	128
Rbin Folder	256
Rbin Options	276
Rbin Viewer	263
Re-Addressing Product Nodes	28
Recal A-B Button	250
Registering Your Viper System	16
Report Notes Information	174
Reset A-B Button	249
Reset History	285
Resetting Defaults	224
Resetting PowerGlide Plus Defaults	226
Resetting the Tally Registers	59
Resetting UltraGlide Defaults	224
Restarting a Paused Job	162
Reverse Polarity	134
Rx Look-Ahead	112
Rx Map Colors	113
Rx Map Issues	292
Rx Tab	83
Rx+Cov+Scout Tab	82
RxMaps Folder	257
RxMaps\colors Sub-Folder	257

S

Saving an AB Line	252
Saving Profile Information	121
Scout Folder	257
Scout Maps	104
Scout Tab	87
Screen Calibration	14
Screen Tool Icons	93
Seed	244
Select the Coverage Display Options	274
Selecting a New Controller	27
Selecting a Program	14

Serial Communication Port Setup	125
Set A/Set B Button	250
Set Flag\Goto Flag\Clear Flag Button	251
Setting Folder	257
Setting or Resetting Distance and Individu	59
Setting the Correct Operating Time Zone	124
Setting the Coverage Map Percentages an	108
Setting the Unit of Measurement	123
Setting up Booms	141
Setting up the Auxiliary Port for External S	259
Setting Up the Controller Area Network (C	23
Setting up the GPS Comm Port to a Non-I	127
Setup Button	97
Setup Error Messages	293
Setup Issues	290
Single Product VRA	100
Speed	36
Speed	67
Speed Cal	32
Speed Sensor	32
Spiral	242
Spreader	43
Standard AccuBoom Method	194
Starting a Job with External Rate Control	260
Starting a New Job	155
Straight AB	233
Street Maps	102
Streetmaps Folder	257
Swath Number	249
Swathing Pattern	249
Swathing Patterns	232
System Status Icons	94

T

Tabs	71
Tabs	78
Tally Registers	58
Tank Volume	43
Temp	134
The Viper Interface	2
Tilt	134
Tilt Filter	134
Tilt Sensor	130

Tilt Status	133	Viper Single Product (Liquid) CAN Contr	7
Time Zone Configuration	124	Viper Troubleshooting Information	287
To Adjust Heaviest Setting	223	Viper/Invicta 115/RGL 600 Universal/Sma	13
To Adjust High and Low Limits of the Pre	222	Vnav Folder	258
To Adjust Lightest Setting	223	Vol/Min	43
To Adjust Sensitivity	221		
To Adjust Sensor Height	221	W	
To Adjust Speed	222		
Toolbar Options	273	Weather Information	170
Troubleshooting the Viper System	287	Wiring Power to a CAN System	24
Turn-Off % Coverage	188		
		Z	
U			
UltraGlide Autoboom	204	Zero Rate Shut Off	189
UltraGlide System Adjustment	221	Zero Rate Shutoff	191
Understanding Flashdisk Files	255	Zero Rate Tolerance	109
Units	32	Zero ShutOff	41
Units Configuration	123	Zeroing the Tilt Sensor	135
Using AccuBoom	185	Zoom Level	251
Using AutoBoom	203	Zulu.ini File	258
Using Product Chaining	181		
Using the Guide Tab	248		
Using the Viper System	151		
V			
Vacuum/Bin Alarm	40		
Valve Cal	48		
Valve Cal 2	48		
Valve Delay	53		
Variable Rate Control (VRC) Error Messa	296		
Vehicle Information	171		
Viewing an Existing Job	163		
Viewing Rbin Files	270		
Viper CAM AccuBoom Installation	186		
Viper CAN AccuBoom with Serial Conso	187		
Viper Care and Use	21		
Viper Console Connection	10		
Viper Dual Product (Liquid/Granular) CAI	8		
Viper Features	100		
Viper Guidance	229		
Viper Guidance System	12		
Viper Power Connection	9		

RAVEN INDUSTRIES

LIMITED WARRANTY

WHAT IS COVERED?

This warranty covers all defects in workmanship or materials in your Raven Flow Control Product under normal use, maintenance, and service.

HOW LONG IS THE COVERAGE PERIOD?

This warranty coverage runs for 12 months from the purchase date of your Raven Flow Control Product. This warranty coverage applies only to the original owner and is not transferrable.

HOW CAN YOU GET SERVICE?

Bring the defective part, and proof of date of purchase, to your local dealer. If your dealer agrees with the warranty claim, he will send the part, and proof of purchase to his distributor or to Raven for final approval.

WHAT WILL RAVEN INDUSTRIES DO?

When our inspection proves the warranty claim, we will, at our option, repair or replace the defective part and pay for return freight.

WHAT DOES THIS WARRANTY NOT COVER?

Raven Industries will not assume any expense or liability for repairs made outside our plant without written consent. We are not responsible for damage to any associated equipment or product and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person is authorized to assume for us any liability. Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Raven Industries
Flow Controls Division
P.O. Box 5107
Sioux Falls, SD 57117-5107

Toll Free 800-243-5435
Fax 605-331-0426
www.ravenprecision.com
fcinfo@ravenind.com

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under the copyright laws.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>