

VX52L^{10A} FHDTV QUICKSTART GUIDE

Before You Begin

- Verify all of the contents of your accessory package
- Review safety guidelines in Owner's Manual
- Place your High Definition TV so that the rear connectors are accessible
- Install AA batteries into the VIZIO Remote Control
- Write down your VX52LF 10A Serial Number (located on the back)

Contents:



Power Cord





Screen Cloth &



The Best Connection

- For the best quality picture, we recommend using HDMI, DTV, RGB or Component inputs when possible. These are the only inputs capable of high definition (HD). Using these inputs does not guarantee high definition unless a high definition source is connected. However, not all equipment is capable of these connections. TV and AV are not capable of HD signals.
- ⁺ Both DTV and TV share the same port. The television will automatically register which input type is connected.






VIZIO provides installation services, cables & wall mounts (see details for Optional Components on back). Visit www.VIZIO.com or call 1-888-849-4623 to order today.

Four Easy Steps Simply follow our color-coded Step Charts and you're done.

1) Choose items to connect to your VIZIO HDTV 2) Choose equipment

- Determine which type of Signal Source and any Additional Equipment you wish to connect to your VIZIO HDTV.
- The colored dots under each Signal Source and Additional Equipment indicate which type of connections you may use to connect to your VIZIO HDTV.

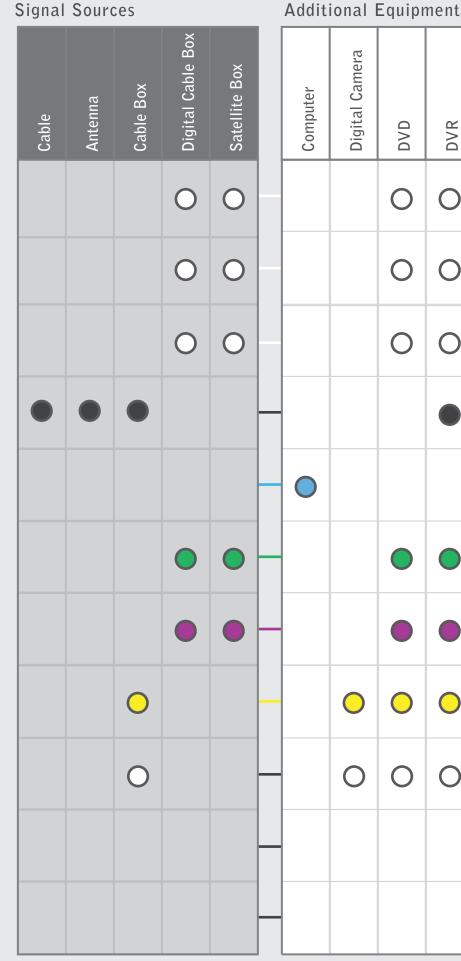

3 WAYS TO GET HDTV

- 1) Off-Air antenna (using the DTV antenna input). To see if you are able to receive HD signals off-air and for help choosing the right antenna, visit www.antennaweb.org.
- 2) Cable Subscribe to HD programming through your local cable company (HD cable box required).
- 3) Satellite Subscribe to HD programming through Direct TV or Dish Network (HD satellite receiver required).

connection methods

- Using the colored dots from Step One, follow the row across to Step Two to match up the colored dots to the same colored connection method.
- Choose ONLY one method for each piece of equipment.


3) Select cables and make connections

- Once you have determined the connection methods from Step Two, follow the row to Step Three to determine what kind of cables you need and what the connections look like on your equipment.
- Following the color-coded system, use the appropriate cables and connect your Signal Source and Additional Equipment to the color-coded inputs on your VIZIO HDTV. (Refer to **Connection Map** at bottom of page.)
- Once connected, turn on your VIZIO HDTV and all your equipment.

	Digital Ca	DVD	DVR	Game Sy:	Sound Sy	VCR	Video Ca	Connection Methods	My Equipment Has	My VIZIO HDTV Has
		0	0					HDMI 1 TYPE: Digital High Definition QUALITY: Best Digital	HDMI	
		0	0					HDMI 2 TYPE: Digital High Definition QUALITY: Best Digital	HDMI	
		0	0					HDMI 3 TYPE: Digital High Definition QUALITY: Best Digital	HDMI DVI	
								DTV / TV TYPE: Cable/Antenna QUALITY: Best Digital/Good Analog		\bigcirc
)								RGBPC TYPE: RGB Analog QUALITY: Best Analog	Optional Audio	Optional Audio
								COMPONENT 1 TYPE: Component Analog QUALITY: Better Analog		
								COMPONENT 2 TYPE: Component Analog QUALITY: Better Analog		
	0	0	0	0		0	0	AV1 TYPE: Analog QUALITY: Good Analog		
	0	0	0	0		0	0	AV2 TYPE: Analog QUALITY: Good Analog		
								OPTICAL TYPE: Digital Audio Out QUALITY: Best Digital		0
					0			AUDIO OUT TYPE: Analog Audio Out QUALITY: Good Analog		

For additional help with connecting components to your VIZIO TV, visit http://ceaconnectionsguide.com for an interactive guide



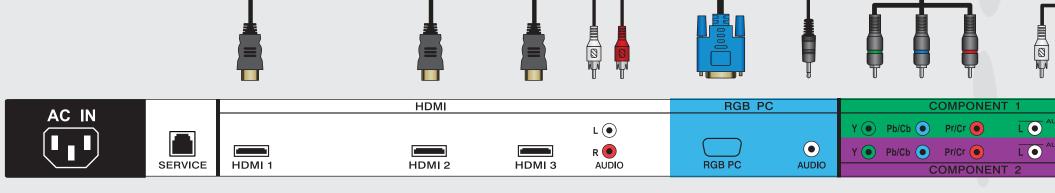


For more information, see your Owner's Manual, Chapter 2, CONNECTING EQUIPMENT.

BACK OF TV

4) Use your VIZIO HDTV Follow the programming instructions on the other side of this guide.

Cable Needed

- If you are using the DTV/TV input, turn over this guide and follow Procedure 1.
- If you are using an input other than DTV/TV, turn over this guide and follow Procedure 2.

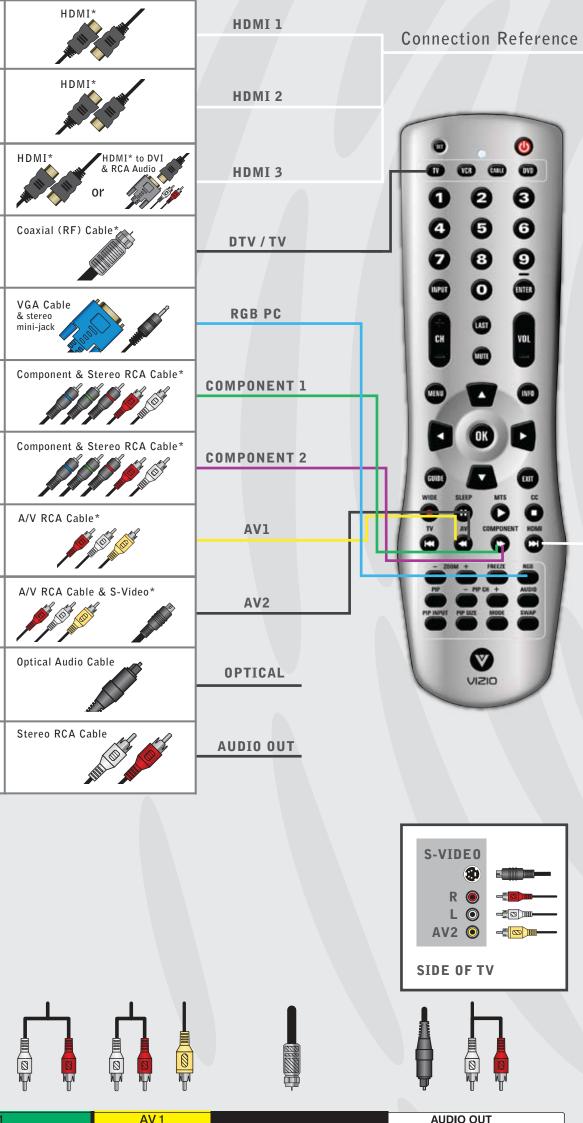

©2008 VIZIO Inc.

OPTICAL

L (•)

ANALOG

DTV/TV

 \odot

CABLE / ANTENNA

LO

R

R





1 Receiving Channels through DTV/TV Input using Regular Antenna or Regular Cable Service (No Box) Signals.	2 Displaying Channels from different Signal Sources (External TV Tuner, VC or Satellite Receiver) through different Inputs.		
STEP 1.1 Wetere	STEP 2.1		
Connect your signal source (cable from antenna or cable from the wall for Cable Service without box) directly to the DTV/TV RF (commonly named COAXIAL) connector.	Service HDMI1 HDMI2 HDMI3 AUGO RGB PC AUGO COMPONENT 2		
	STEP 2.2		
STEP 1.2	A Turn on the TV. The Initial Setup menu screen should appear. If this screen does appear, press on remote control to initialize the process. If the screen does not appear,		
A Turn on the TV. The Initial Setup menu screen should appear. If this screen does not appear see User's	please skip to Step D. B Select Language: English, Español, Francais.		
Manual, Chapter 3 for TV Tuner Setup.	C Press EXIT key to exit the Initial Setup menu.		
B Press key to initialize the process.	If you have an HD service you must use the HDMI (best) or Component connection.		
Select Language: English, Español, Francais.	NOTE: Composite or S-Video Cables can only be used for SD (480i) pictures.		
Press button to go to next screen.	Turn on your Cable Box, VCR, External TV Tuner or Satellite Receiver and you will see a picture on your TV sepicture, make sure you have selected the correct input on the TV set.		
D Press once to select Cable or Antenna.			
Press to continue to next screen.	If the selected input is RF connection, you should be aware that the TV set needs to be on either channel 3 or or channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver; User's Manual of such equipment for details.		
Press key on remote control to scan for channels. Scanning for	NOTE: The TV set will be displaying any television station or program selected by the Cable Box, VCR, External Tuner or S		
available channels could take several minutes.	set will not be able to change programs or channels; this is controlled by the equipment sending the signal. If the service be with two different outputs for two different (distant) rooms, then scanning channels should help to find the signal. Be awar		
Once scanning is finished, programming is	selected varies from provider to provider, meaning you may have to call your provider company so they can provide you with with high-definition TV sets. Some examples of these channels are: 105, 106, 115 and 116.		
complete. Press the EXIT key to exit.			

• Coaxial connection (RF connector) is recognized as the threaded connector, commonly called cable, screw on or coaxial connector which carries the image (picture) and sound (audio) through a single cable.

© Composite connection (RCA connectors) is recognized by the three (yellow, red and white) standardized color coded RCA connectors. Yellow carries the image (picture); red (right channel) and white (left channel) carry the sound (audio) of the signal.

© Component connection (RCA connectors) is recognized by the three (green, blue and red) standardized color coded RCA connectors for image (picture) plus the two (red and white) standardized color coded RCA connectors for the sound (audio) of the signal.

• HDMI (High-Definition Multimedia Interface) connection (HDMI connector) is recognized by the standardized elongated D-Shaped connector which carries both the image (picture) and the sound (audio) of the signal through a single cable.

G S-Video (separate video) connection (4-pin Mini-DIN connector) is recognized by the small connectors at the end of a cable with multiple pins in it. This connection carries only the image (picture) of the signal; therefore, there is a need to supply a separate sound (audio) signal by using the two (red and white) standardized color coded RCA connectors.

VX52L^{10A} FHDTV QUICKSTART GUIDE

ntrol.

3 Fine Tuning your TV for Home Use.

After completing either Procedure 1 or Procedure 2, please follow the steps below to optimize your TV set display:

- 1. Press the **MENU** key to bring up the Menu display. Use the 🔽 or 🖪 button to scroll to the Color Temperature option.
- 2. Press the **b**utton to select it.
- 3. Press either 🖸 or 💽 button to change setting to Normal, and then press the **EXIT** key again to go back to previous screen.
- 4. Press either 🔽 or 🖪 button to select the Picture Mode option.
- 5. Press either or button to change the Picture Mode option to Standard.
- 6. Press the **EXIT** key to exit the on screen display Menu.

NOTE: If you followed Procedure 1, take the following steps to ensure that the correct program times are shown when pressing the Guide key:

Press the **MENU** key, which will bring up the picture mode menu. Pressing either the or button, scroll across to the icon showing the little satellite dish or antenna. The next screen will appear showing Time Zone; using either the **T** or **L** button, select it, and finally by pressing either the or button, choose the proper Time Zone for your area. Press the **EXIT** key to exit the on screen display Menu.

JIZIO

ERTIFIED

0ľ

Consult your Cable or Satellite Owner's Manual to determine if you need a 3, 4 or 5-digit code. If your Cable or Satellite Box requires:

- 3-digits, please use "627" (This code usually works with DISHNetwork.)
- 4-digits, please use "1758", "0178" or "0128"
- 5-digits, please use "11758", "10178" or "10128" (These codes usually work with DIRECTV.)

Your new TV set is now ready

to automatically reproduce the best picture quality from the input signal being fed into it. Enjoy your VIZIO HDTV.



These small arrows correspond to the arrows shown in the above Steps. They surround the OK key.

Optional Components




When it comes to components and accessories, don't settle for less than VIZIO. We offer a full line of products specifically designed to accentuate your VIZIO HDTV. To learn more about how you can enhance your VIZIO experience, call 888-849-4623 or visit www.VIZIO.com.

Our VIZIO Certified HD cables carry the same standards of excellence as all our VIZIO products. Available in: DVI, HDMI and Component in lengths of 2, 5, and 10 meters.

VIZIO CERTIFIED MOUNTS

viewing position you want it

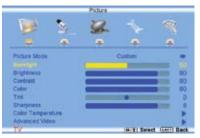









ENHANCE YOUR VIZIO EXPERIENCE

VIZIO HIGH-DEFINITION CERTIFIED CABLES

FLUSH MOUNT- turn your HDTV into a work of art

- TILT MOUNT- adjust your HDTV for the most comfortable
- ARTICULATING ARM- position your HDTV exactly where

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com