



VIZIO

WHERE VISION MEETS VALUE

VR2 REMOTE CONTROL

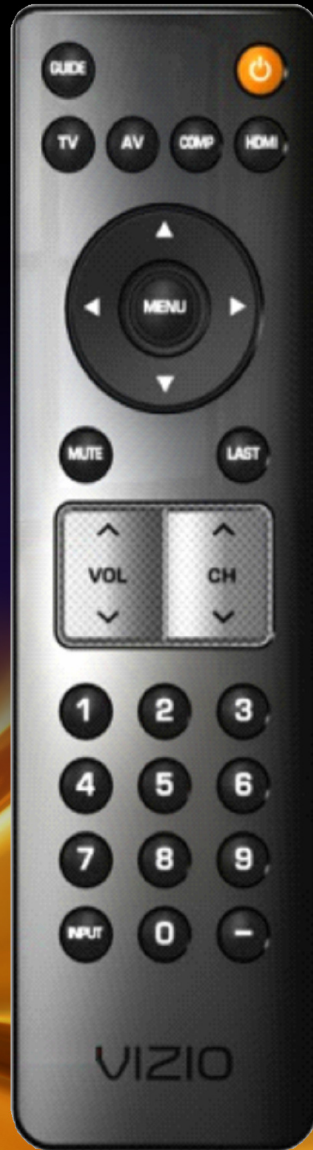


Table of Contents

1.1 VIZIO Remote Control.....	3
1.1.1 Insertion of Batteries in the Remote Control.....	4
1.1.2 Remote Control Range.....	4
1.1.3 VIZIO Remote Control Precautions	4



1.1 VIZIO Remote Control

GUIDE – This button displays program information. Press this button once and the information for the program being viewed is shown. Press it a second time and the Electronic Programming Guide will appear in the screen.

POWER – Press this button to turn the TV on from the Standby mode. Press it again to return to the Standby mode.

TV – Press this button to select TV.

AV – Press this button to select the Audio Video input. Pressing this button repeatedly to toggle through the AV inputs. If S-Video is being used, then AV will show the signal going through this input as the S-video takes priority.

COMPONENT – Press this button to select the Component (YPbPr) input. Pressing this button repeatedly will toggle through the Component (Component 1 and component 2) inputs.

HDMI – Press this button to select the HDMI input. Pressing this button repeatedly will toggle through the HDMI (HDMI1, and HDMI 2) different inputs

MENU – Use this button for the On-Screen Display (OSD) menus. When used within the OSD menus, pressing this key will make the selection of an option.



These buttons navigate the On-Screen Display (OSD).

MUTE – This button turns the sound on and off.

LAST – This button recalls the previously viewed channel when it is used in TV mode. This button also has different functions when being used in conjunction with the On-Screen Display (OSD) menu.

VOL (+ or -) – These buttons turn the volume up or down.

CH (+ or -) – These buttons change the channels up or down.

Number Button Pad – Use these buttons to select a channel or enter a password.

INPUT – This button allows the user to cycle through the inputs. Repeatedly pressing this button will step through the input sources in the following sequence: TV, AV (S-Video), Component1, Component2, RGB, HDMI1 and HDMI2.

- (**DASH**) – When selecting a digital channel directly, use this button for the separation of main and sub-channels. For example, channel 28-2 would be selected by the button sequence 2 8 DASH 2.



1.1.1 Insertion of Batteries in the Remote Control

Press and slide out the battery cover by following the direction shown by the molded arrow on the surface of the cover.

Insert two AA batteries into the remote control. Match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment.

Press and slide the battery cover back into place.

Precautionary Tips for Inserting the Batteries:

Only use the specified AA batteries.

Do not mix new and old batteries. This may result in cracking or leakage that may pose a risk of fire or lead to personal injury.

Inserting the batteries incorrectly may also result in cracking or leakage that may pose a risk of fire or lead to personal injury.

Dispose of the batteries in accordance with local laws and regulations.

Keep the batteries away from children and pets.



1.1.2 Remote Control Range

Point the remote control at the remote control sensor to transmit the commands.

Do not place any obstacles between the remote control and the receiver window.

The effective range of the remote control is approximately 30 feet (10 meters) from the front of the receiver window, 30° to the left and right, 20° up and down.

1.1.3 VIZIO Remote Control Precautions

The remote control should be kept dry and away from heat sources. Avoid humidity.

If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.

When not using the remote control for a long period of time, remove the batteries.

Do not take the batteries apart, heat them, or throw them into a fire.

Do not subject the remote control to undue physical stress, such as striking or dropping it.

Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.







www.VIZIO.com

BRAVO, VIZIO, WHERE VISION MEETS VALUE AND THE V LOGO ARE TRADEMARKS OF VIZIO INC. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE OR OBLIGATION. © 2008 VIZIO INC. ALL RIGHTS RESERVED.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>