

# User Manual

## Blender

MODEL: WBL1130PB/W  
WBL1130GB/W

1. READ these instructions carefully before installing and operating the blender. Keep them for further reference.
2. Record in the space below the "SERIAL NO." found on the nameplate on your blender and retain this information for future reference.

SERIAL NO.:

Please save sales receipt for warranty.



**Westinghouse**

INNOVATION YOU CAN BE SURE OF

## CONTENTS

### SAFETY INFORMATION

Important Safety Instructions .....	3
Electrical Requirements .....	5
Don't When Using Your Blender .....	6

### SET UP & USE

Specifications .....	7
Installation Guide .....	7
Parts & Features .....	8
Control Panel .....	8
Operation Instructions .....	9
Speed Chart .....	10
Blending Tips and Techniques .....	11

CLEANING & CARE .....	12
-----------------------	----

### TROUBLE SHOOTING & WARRANTY

Before You Call For Service .....	13
Customer Service .....	13
Troubleshooting .....	14
Limited Warranty .....	15

## PRODUCT REGISTRATION

Thank you for purchasing our Westinghouse product. This easy-to-use manual will guide you in getting the best use of your blender.

Remember to record the model and serial numbers. They are on a label under the base of the blender.

\_\_\_\_\_

Model number

\_\_\_\_\_

Serial number

\_\_\_\_\_

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

## SAFETY INFORMATION

### DANGER

**DANGER** - Immediate hazards which **WILL** result in severe personal injury or death

### WARNING

**WARNING** - Hazards or unsafe practices which **COULD** result in severe personal injury or death

### CAUTION

**CAUTION** - Hazards or unsafe practices which **COULD** result in minor personal injury

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

1. Read all instructions before using the appliance.
2. To protect against risk of electrical shock, do not put blender base, cord or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment. Or, call the toll-free number listed on the warranty page of this manual.
7. The use of attachments, including canning jars, not recommended or sold by the appliance manufacturer may cause fire, electric shock or risk of injury to persons.
8. Do not use outdoors.
9. Do not let the plug or cord hang over the edge of table or counter or touch hot surfaces, including the stove.
10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A rubber or plastic spatula may be used but must be used only when the blender is not running.
11. Blades are sharp. Handle carefully.
12. To reduce the risk of injury, never place cutter assembly blades on base without the jar properly attached.

## SAFETY INFORMATION

13. Always operate blender with cover in place.
14. Never add to container while appliance is operating.
15. Container must be properly in place before operating appliance.
16. When blending hot liquids, remove center piece of two-piece cover.
17. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

### TAMPER-RESISTANT SCREW

#### **WARNING**

**WARNING:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

**NOTE:** If the power supply cord is damaged, it should be replaced by qualified personnel; or by an authorized service center.

## SAFETY INFORMATION

### ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### POWER SUPPLY CORD

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
2. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
3. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
  - a) Use an extension cord rated no less than 10-amperes.
  - b) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

**NOTE:** Neither Westinghouse nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

## SAFETY INFORMATION

### DON'T WHEN USING YOUR BLENDER

This section lists foods that should not be placed in the blender, tasks that the blender can not accomplish, and tasks not recommended for the blender:

#### DO NOT PLACE ANY OF THE FOLLOWING IN BLENDER

- Large pieces of frozen foods
- Tough foods such as raw turnips, sweet potatoes and potatoes
- Bones
- Hard salami pepperoni
- Boiling liquids: Cool for 5 minutes before placing in blending jar

#### SEVERAL OTHER DON'TS

- Operate blender without the lid on the blending jar
- Store foods in the blending jar
- Overfill the blender: the blender is more efficient with less rather than more
- Put boiling liquids into blender
- Use PULSE for more than 5 seconds at a time; release the PULSE/OFF button regularly, allow the blender to rest briefly, then continue
- Run blender for longer than 1/2 minutes at a time. Scrape down sides of blending jar, if necessary, and continue blending
- Use if blending jar is chipped or cracked

#### TASKS NOT RECOMMENDED FOR THE BLENDER

- Whipping cream
- Beating egg whites
- Mixing dough
- Mashing potatoes
- Grinding meats
- Extracting juice from fruits and vegetables

## SET UP & USE

### SPECIFICATIONS

- Motor: 120V-60Hz, 350W
- Unit Dimensions (H x W x D): 15.29" x 8.23" x 7.56"
- Net Weight: Approx. 3.6 lbs.

 
### INSTALLATION GUIDE

1. Place the gift box containing your blender on a flat, sturdy surface before unpacking.
2. Remove instruction booklet and other printed materials from the top of corrugated insert. Next remove the top corrugated insert.
3. Carefully lift blender jar from box and set aside.
4. Carefully remove lower corrugated insert containing the blender assembly. Be careful not to tip the jar when moving.

**NOTE:** · To assemble the blender, follow the Blender Jar Assembly on page 9 in this instruction booklet. Replace all corrugated inserts in the box and save the box for repackaging.  
· Before using for the first time: Wash all parts according to the CLEANING & CARE on page 12 of this manual to remove any dust or residue.


## SET UP & USE

### PARTS & FEATURES

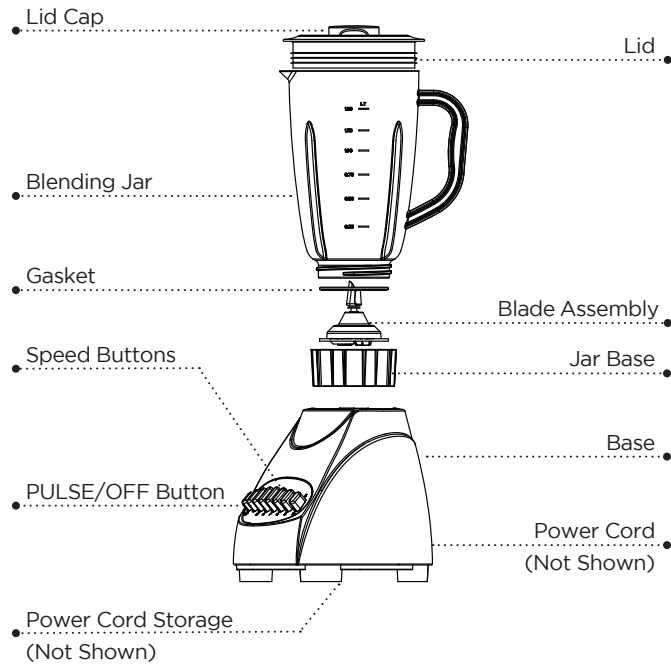

**JAR CAPACITY :** Depending on your purchase your blender may have a Glass or Plastic blending jar  
**PLASTIC JAR :** 48 oz (1.5 liters) **GLASS JAR :** 42 oz (1.25 liters)

### CONTROL PANEL

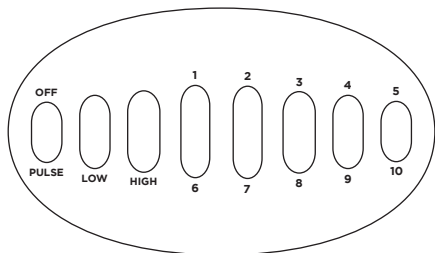 


- **Off/Pulse:** Use for thick mixtures.
- **Low:** Press to set speed level from 1 to 5.
- **High:** Press to set speed level from 6 to 10.
- **Speed buttons:** To set speed levels from 1 to 10. Refer to page 10 for speed chart.

## SET UP & USE
 
### OPERATION INSTRUCTIONS

#### BLENDER JAR ASSEMBLY

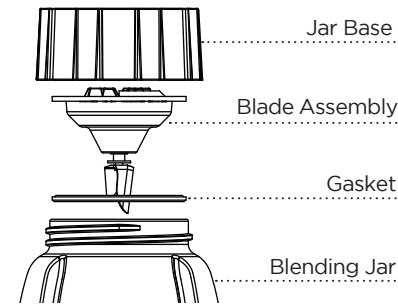

1. Turn the blender jar upside down, and place it flat on a sturdy surface.
2. Place the rubber gasket on the round opening on the bottom of the blender jar.
3. Turn the blade assembly upside down, as shown in the picture, and place the blade end inside the blender jar opening.

**NOTE:** · Blades are sharp. Handle with care.

4. Secure the gasket and blade assembly into place as shown in the picture. Tighten by twisting the jar base clockwise. Make sure base is tightly fastened to blender jar. Once assembled, turn the blender jar right-side up.
5. Push the lid on the top of the blender jar. Secure the lip cap into the lid.
6. Place the blender jar on the motor base.
7. Plug in the power cord. Your blender is now ready to be used.

#### USING YOUR BLENDER

1. Make sure appliance is OFF.
2. Place foods to be blended into jar.
3. Place lid on jar, make sure lid cap is in place.
4. Plug power cord into outlet.

**NOTE:** · When in use, do not leave blender unattended. When using hard foods, such as ice, cheese, nuts and coffee beans, keep one hand on the lid to keep blender in place.

5. Select the speed that best suits your desired task.(See SPEED CHART Pg. 10).
6. When blending thick mixtures, such as smoothies, power drinks and milkshakes press the PULSE button several times to begin the blending process. Press the PULSE button for no more than 5 seconds at a time. This helps break up the ice.
7. Open the lid cap to add ingredients while the blender is running and drop ingredients through the opening.

**NOTE:** · Do not remove the lid while the blender is running

8. When finished, press the PULSE/OFF button. Make sure blades have completely stopped before attempting to remove the blending jar from the base.
9. Remove lid to pour.
10. Always unplug the appliance when not in use.

## SET UP & USE

### SPEED CHART

PULSE/OFF	<ul style="list-style-type: none"> <li>Use for thick mixtures</li> </ul>
10	<ul style="list-style-type: none"> <li>Blend salsa</li> <li>Prepare sauces</li> <li>Remove lumps from gravies</li> </ul>
9	<ul style="list-style-type: none"> <li>Chop fruits and vegetables</li> <li>Chop cooked meats</li> </ul>
8	<ul style="list-style-type: none"> <li>Puree baby foods - fruits and vegetables</li> </ul>
7	<ul style="list-style-type: none"> <li>Aerate soups and beverages</li> </ul>
6	<ul style="list-style-type: none"> <li>Liquify frozen juices, drink mixes and condensed soups</li> <li>Prepare salad dressing</li> <li>Blend pudding</li> <li>Puree hot liquids</li> </ul>
5	<ul style="list-style-type: none"> <li>Blend milkshakes and malts</li> <li>Prepare smoothies</li> </ul>
4	<ul style="list-style-type: none"> <li>Blend protein drinks</li> <li>Liquifies frozen drinks, smoothies</li> </ul>
3	<ul style="list-style-type: none"> <li>Chop, coarse-to-fine</li> <li>Grind coffee beans, spices</li> <li>Grind hard cheese, cooked meats and coconut</li> </ul>
2	<ul style="list-style-type: none"> <li>Grate hard cheeses and vegetables</li> </ul>
1	<ul style="list-style-type: none"> <li>Low speed blend</li> </ul>
HIGH/LOW	<ul style="list-style-type: none"> <li>Select to change speed between Hi and Low                             <ul style="list-style-type: none"> <li>HIGH - Press to set speeds from 6 through 10</li> <li>LOW - Press to set speeds from 1 through 5</li> </ul> </li> </ul>

## SET UP & USE

### BLENDING TIPS AND TECHNIQUES

- Chop food or fruit into pieces no larger than 3/4" for use in the blender.
- When preparing foods that have several different kinds of ingredients, always add the liquid ingredients first.
- When ingredients splatter onto the sides of the jar or the mixture is very thick, press the PULSE/OFF button to turn appliance off. Remove the lid and use a rubber spatula to scrape down the sides of the jar and to redistribute the food, pushing food toward the blades. Replace the lid and continue blending.

**NOTE:** · Appliance should always have lid in place when in use.  
· Do not remove the lid while the blender is running.

- The lid cap holds up to 30ml (1 ounce) of liquid and can be used as a measure when adding ingredients such as juices, milk, cream or liquor.
- Make sure blender jar and chopping assembly are completely dry when chopping spices, herbs, breadcrumbs, nuts or grinding coffee beans, etc.
- When using PULSE function, use short bursts. Allow the blades to stop rotating between pulses. Do not use PULSE for more than 5 seconds at a time.
- Use the PULSE/OFF button to begin the blending process when preparing beverages that include ice cubes, this helps to produce a smoother texture.

- The PULSE function is helpful when short bursts of power are needed, such as when preparing thick smoothies or milkshakes.
- It is helpful to begin the blending process on the lowest speed and then increase to a higher speed, if necessary.
- To stop blending at any time, press the PULSE/OFF button.

**NOTE:** · When blending hot ingredients, remove the lid cap and then put it back partly open, with the opened side tilted away from you. Cover lid with a cloth to avoid splattering and only use the lowest speed. Do not blend more than 750ml at a time.

## CLEANING AND CARE

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, turn off and unplug the appliance.
2. Lift the blending jar by the handle off the base.
3. Remove the gasket and the blade assembly.

**NOTE:** · Blades are sharp, handle with care.

4. Remove lid and lid cap.
5. Wash removable parts by hand or in the dishwasher. Place the jar on the bottom rack and the rest of the parts on the top rack only.

### WRAP AROUND CORD STORAGE

When the blender is not in use you can wrap the cord under the base. This will reduce the risk of becoming entangled or tripping.

## TROUBLESHOOTING & WARRANTY

### BEFORE YOU CALL FOR SERVICE

IF THE BLENDER FAILS TO OPERATE:

- A) Check to make sure that the blender is plugged in securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE BLENDER YOURSELF.

### CUSTOMER SERVICE

## IMPORTANT

### DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #  
REQUIRED FOR WARRANTY SERVICE**

## TROUBLESHOOTING & WARRANTY

### TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the blender still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Liquid is leaking from bottom of jar	Gasket is either missing or not in place correctly	Check that jar is assembled correctly
Appliance does not turn on	Appliance is not plugged in	Check that appliance is plugged into a working outlet
Mixture in blender does not seem to be blending	Not enough liquid in mixture being blended or too much ice	Turn the blender off and use a rubber spatula to redistribute the food, add some liquid and PULSE the mixture to aid in the blending process
Herbs or bread are sticking to sides of blender and not getting chopped	Blending jar or blade are not dry	Always make sure that the jar, the blade are dry
Jar separates from jar base when being removed from blender. Liquid spills onto counter	Jar was twisted when being removed from base of blender	When removing jar from blender base, simply lift up, do not twist

## TROUBLESHOOTING & WARRANTY

### LIMITED WARRANTY

Westinghouse brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.** W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured blender equivalent to your original purchase during the warranty period.

**Exclusions:** This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to product failure or delay in service, repair or replacement.

14. Service calls to instruct you how to use your blender.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**Obtaining Service:** To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at 1-855-855-0294.

W Appliance Co.,  
New York, NY 10018





©, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF are trademarks of Westinghouse Electric Corporation. Used under license by W Appliance Company. All Rights Reserved.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>