



Westinghouse

USER'S MANUAL
MANUEL DE L'UTILISATEUR
MANUAL DEL USUARIO

 
VR-2680DF

Contents

Safety and warnings.....	2-4
Introduction.....	5
Installation.....	6-9
Remote Control.....	10
Operation.....	11-14
Trouble Shooting.....	15

IMPORTANT SAFETY INSTRUCTION

1. Read these safety instructions.
2. Keep these safety instructions.
3. Heed all warnings.
4. Follow all safety instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators , stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at power outlets, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture , does not operate normally, or has been dropped.
13. Apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.

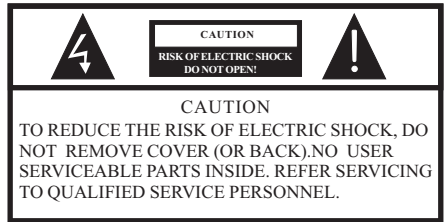


The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.




The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

 
To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

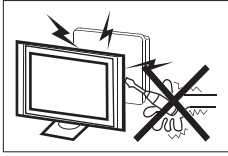

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

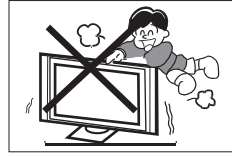

 Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

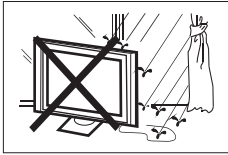

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

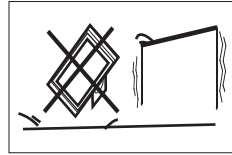

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



 
Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

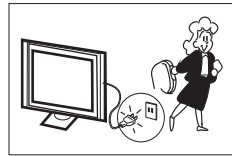


When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

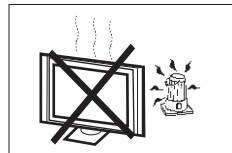

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

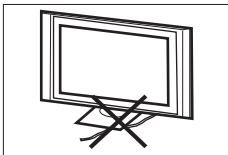

 Do not trap the power supply cord under the television receiver.

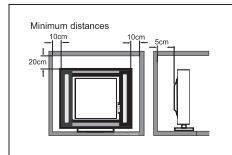

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Thank you very much for purchasing this TV. To enjoy your product from the very beginning, read this manual carefully and keep it handy for easy reference.



INSTALLATION

- Locate the TV in the room where light does not strike the screen directly.
- Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- Allow enough space between the TV and the wall to permit ventilation.
- Avoid extremely warm locations to prevent possible damage to the cabinet or premature component failure.
- This TV can be connected to AC 100-240 Volts, 50/60 Hz. Never connect to a DC supply or any other power supply.
- Do not cover the ventilation openings when using the TV.

CAUTION

Never tamper with any components inside the TV, or any other adjustment controls not mentioned in this manual. All LCD-TV's are high voltage instruments. When you clean up dust or water drops on the LCD PANEL or CABINET, the power cord should be pulled out from the receptacle, then wipe the TV with a dry soft cloth. During thunder and lightning, unplug the power cord and antenna cord to prevent damage to your TV. All repairs to this TV should only be performed by qualified TV service personnel.

Earthing connection--- The apparatus shall be connected to MAINS socket outlet with a protective earthing connection. MAINS plug or appliance coupler of the apparatus is used as disconnect device, it should remain readily operable.

Warning: Change or modifications to this unit not expressly by the part responsible for compliance could void the user's authority to operate the Equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Shield cables must be used with this unit to ensure compliance with the Class B FCC limits.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.
WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

Main features

- 1366 x 768 native resolution for HD performance
- Integrated ATSC TV tuner for HDTV broadcast reception
- High brightness provides a vivid and brilliant picture
- Deeper blacks and brighter whites with high contrast
- Wide Screen aspect ratio (16:9) for a complete home theater experience
- HDMI input for true digital connection
- VGA port for connection to PC
- Built-in stereo speaker system
- Full-function Remote Control


Accessories

AC Power Cord.....	1
Infrared Remote Control.....	1
User's Manual	1
Battery(AAA).....	2

Main parameter


Viewing Picture Size(diagonal)	26 inch
Resolution:	1920x1080
Aspect Ratio:	16:9
TV System:	ATSC Digital system and NTSC Analog system
Video Signal System:	NTSC/PAL/SECAM
Receiving Channel:	Cable :1-135/ Air: 2-69(ATV&DTV)
Power consumption:	130W
Input Power Voltage:	AC 100V-240V 50/60Hz
Audio Output Power(THD ≤ 7%):	2x3W
Rear High-Definition Multimedia Interface(HDMI) Input	x 2
YCb(Pb)Cr(Pr) Input	x 1
Rear Composite Video Input	x 1
Analog RGB(VGA) Input	x 1
Rear Audio Input	x 2
Horizontal definition(TV line)	Composite Video Input ≥350 Video Input ≥400 YCb(Pb)Cr(Pr) ≥400

 Front panel

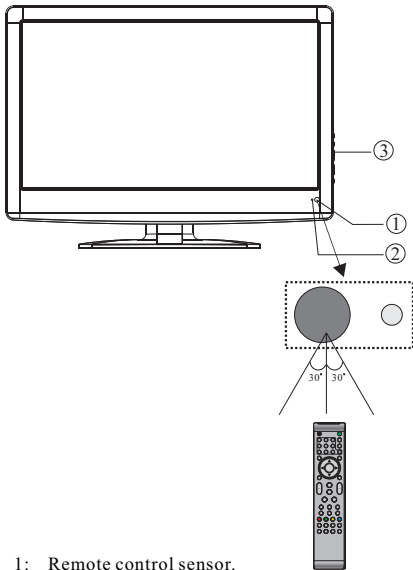


- 1: Remote control sensor.
- 2: Indicator LED: GREEN ● POWER ON.
RED ● STANDBY.
- 3: Keypad

 Side panel

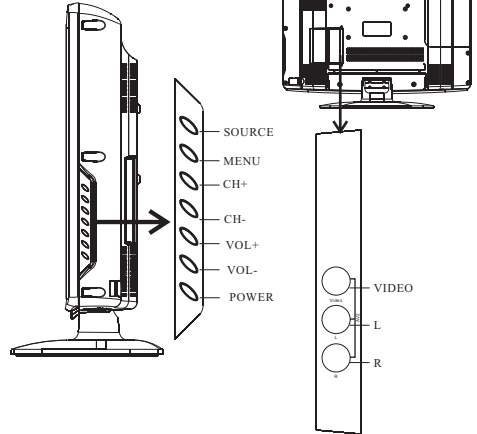

- 1. **SOURCE**: Display the input source menu.
- 2. **MENU**: Display main MENU.
- 3. **CH+/CH-**: In TV mode, press "CH+" or "CH-" to change the channel up and down. In MENU mode, press "CH+" or "CH-" to select items .
- 4. **VOL+/VOL-**: Adjust sound level. In MENU mode, press "VOL+" or "VOL-" to adjust the item that you selected.
- 5. **POWER** : Press this button to turn the unit ON. Press it again to turn the set OFF.
- 6. **VIDEO INPUT**
- 7. **AUDIO INPUT-L**
- 8. **AUDIO INPUT-R**

 REAR CONNECTORS

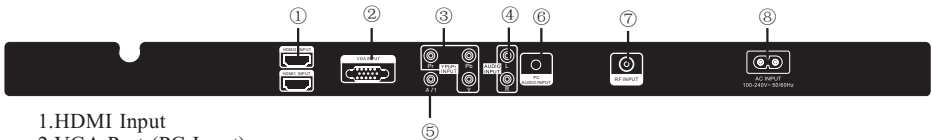

- 1. HDMI Input
- 2. VGA Port (PC Input)
- 3. Component Video (YPbPr) Input
- 4. Audio Input
- 5. Composite Video Input
- 6. PC Audio Input
- 7. Antenna Socket
- 8. AC Power Socket

Note: 1. Composite video input and component video input share the audio input.
2. When "DVI to HDMI cable" is used, the audio output for DVI needs to be connected to the PC Audio Input (above 7).

 
PC

STEPS:

Be sure both the TV and computer turned off.

- 1.Connect VGA and audio cable.
- 2.Connect the power cord.
- 3.Power on the TV, switch to VGA mode.
- 4.Power on the PC.


This sequence is very important.

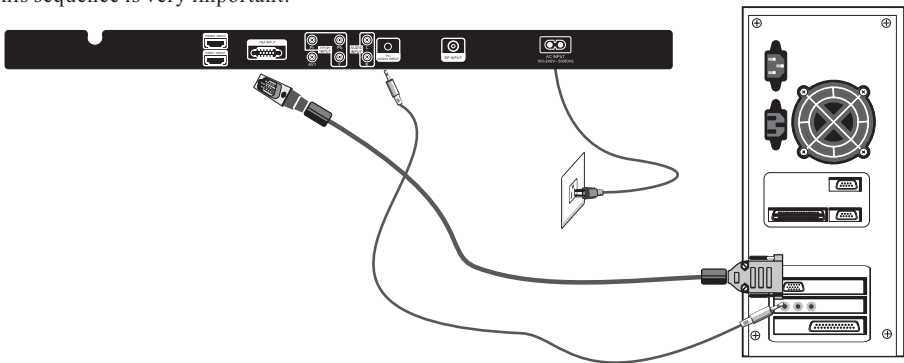

PRESET MODE

	RESOLUTION	V.Freq.(Hz)	H.Freq.(KHz)
1	720*400	70	31.47
2	640*480	60	31.47
3	640*480	75	37.50
4	800*600	60	37.88
5	800*600	75	46.88
6	1024*768	60	48.36
7	1024*768	70	56.48
8	1024*768	75	60.02
9	1280*1024	60	63.98
10	1280*1024	75	80.00

 ANTENNA

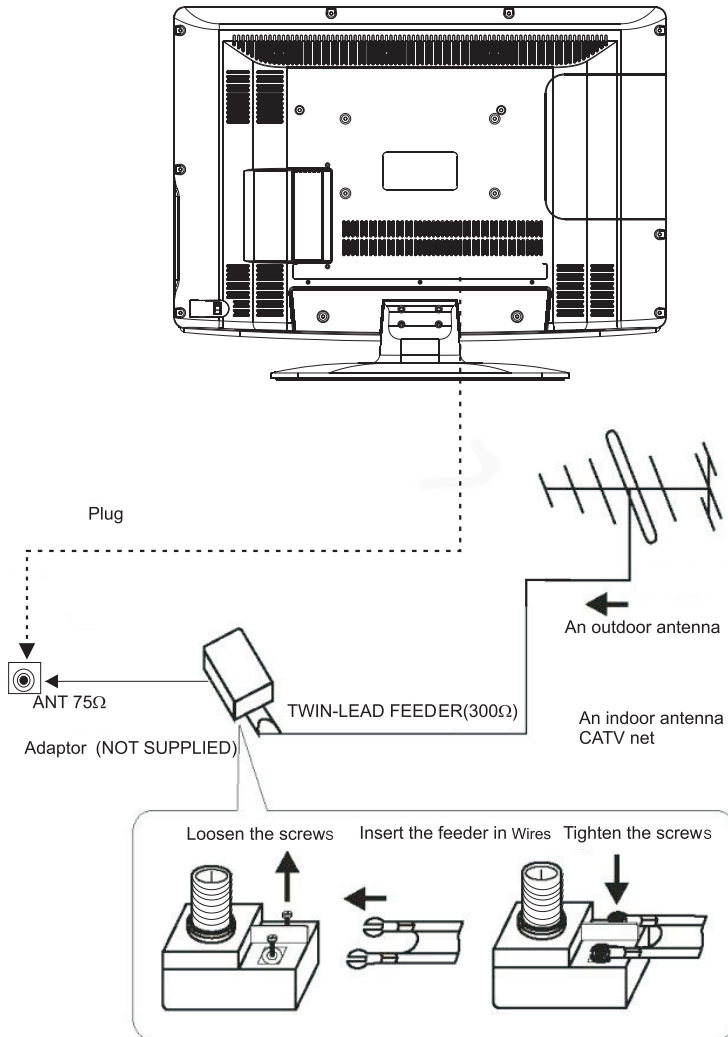




Note:
 Aerial connections: IEC (female).
 Input impedance: 75 Ω unbalanced.

AV EQUIPMENT

This TV provides two group of AV and one group of YPbPr for convenient connection to a VCR, DVD or other video equipment. Please refer to the owiter s manual of the equipment to be connected as well.


You can use the input terminals on the TV set as follows.

   VIDEO EQUIPMENT with YPbPr

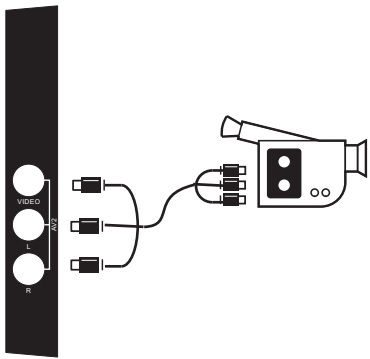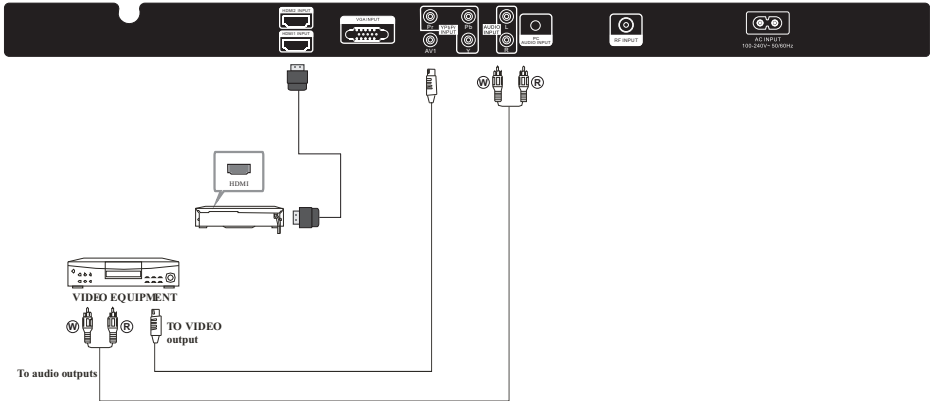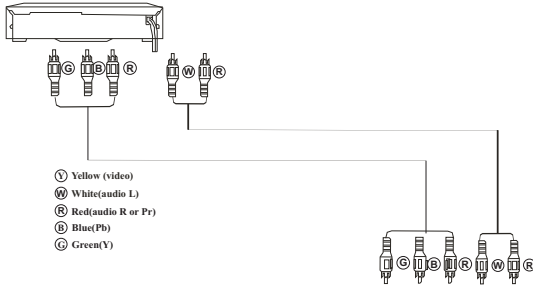

It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc.....

 YPbPr can support these video formats:480i,576i,480p,576p,720p,1080i.

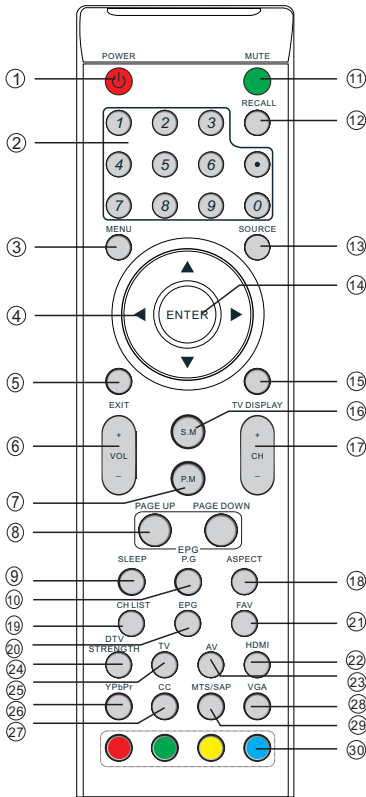

- 1: **POWER**
To set the TV standby or on.
- 2: **NUMBER KEY**
For direct access to program.
- 3: **MENU**
To display TV menu or to return to the previous menu.
- 4: **CURSOR**
To move within the menu.
- 5: **EXIT**
Used to exit menu.
- 6: **VOL +/-**
To adjust sound level.
- 7: **P.M**
To switch picture mode.
- 8: **PAGE DOWN/PAGE UP**
In EPG mode, use this key to page up/down the EPG information.
- 9: **SLEEP**
Set time to turn off the TV.
- 10: **P.G**
Setting the Parental Control level control.
- 11: **MUTE**
To disable or enable the sound.
- 12: **RECALL**
To access the previously viewed program.
- 13: **SOURCE**
To display or exit TV input source menu.
- 14: **ENTER**
Confirms selection.
- 15: **TV DISPLAY**
Displays/removes the program Information
- 16: **S.M**
To switch sound mode.
- 17: **CH +/-CH-**
To access the next or previous Program.
- 18: **ASPECT**
To change picture aspect .
- 19: **CH LIST**
Used to display the channel list.
- 20: **EPG**
Display all the information of DTV programs.
- 21: **FAV**
Used to access your favourite channels in digital TV mode.
- 22: **HDMI**
Hot key directly go to HDMI source.
- 23: **AV**
Hot key directly go to AV source.
- 24: **DTV STRENGTH**
Used to display the DTV signal strength menu.
- 25: **TV**
Hot key directly go to TV source.
- 26: **YPbPr**
Hot key directly go to YPbPr source.
- 27: **CC**
Enable or disable the CC function.
- 28: **VGA**
Hot key directly go to VGA source.
- 29: **MTS/SAP**
Switch the sound stereo, SAP and mono.
- 30: **COLOR KEYS**
Reserved keys

Insert Batteries Into the Remote Control



1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover.
Replace with new batteries when the TV set begins to show the following symptoms:
Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

 
Remark:

- 1) Alkaline Battery Recommended.
- 2) Remove batteries when they are weak or if the remote control is not to be used for long time.

1. PICTURE MENU

The first item of the MENU is PICTURE MENU. You can adjust picture effect here, such as contrast, brightness, etc.

Press $\blacktriangledown/\blacktriangle$ to select, press $\blacktriangleleft/\blacktriangleright$ to adjust, press MENU to exit.

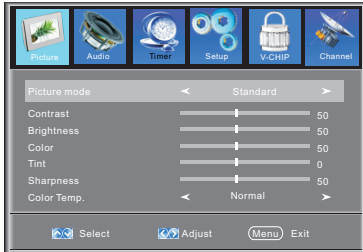


Note:

If you want to adjust contrast, brightness, color, and sharpness , the picture mode must return to "personal" status.

2.AUDIO MENU

The second item of the MENU is AUDIO MENU. You can adjust sound here.

 Press $\blacktriangledown/\blacktriangle$ to select, press $\blacktriangleleft/\blacktriangleright$ to adjust, press MENU to exit.

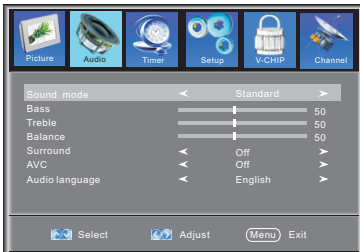


Note:

The item of Audio language is available in ATSC program.

3.TIMER MENU

The third item of the MENU is TIMER MENU. You can adjust time here.

 Press $\blacktriangledown/\blacktriangle$ to select, press $\blacktriangleleft/\blacktriangleright$ to adjust, press MENU to exit.

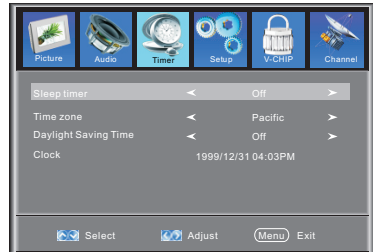

1).SLEEP TIMER: adjust this item , you can set the sleep timer .

Note:

The item of Time zone, the item of Daylight Saving Time and the item of clock are available in ATSC program

4. SETUP MENU

The forth item of the MENU is SETUP MENU. You can setup system here.

Press $\blacktriangledown/\blacktriangle$ to select, press $\blacktriangleleft/\blacktriangleright$ to adjust, press MENU to exit.



Note:

Restore Default: Reset all the settings to default value.

4.1 Advanced: In VGA Mode only.

 
Press ▼▲ button to select Advanced, Press ► button, the screen will display as follow:



- (1).H-Pos:Adjust the horizontal position of the screen.
- (2).V-Pos:Adjust the vertical position of the screen.
- (3).Clock: Fine tune the screen width.
- (4).Phase: Fine tune the phase of the screen. Usually don't adjust this item.
- (5).Auto: Auto adjust to fit the screen.


4.2 Closed Caption: switch close caption mode.

Press ▼▲ button to select Closed Caption, Press ► button, the screen will display as follow:

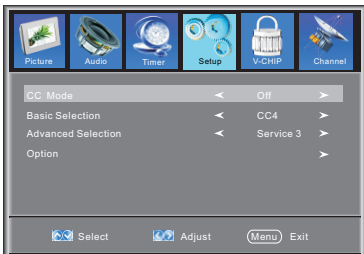

- (1):Advanced selection: only ATSC program is available.
- (2):Option:Used to edit CC font.

 Press ► button, the screen will display as follow:

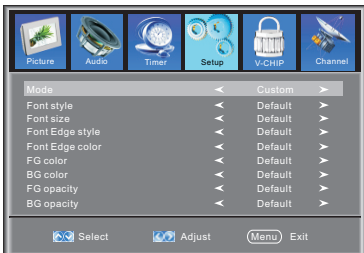

NOTE: Only ATSC program is available.

 
5. V-CHIP MENU

The fifth item of the MENU is V-CHIP MENU.


You can setup Parental Control here.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.

Parent control: input the password, it will go into Parental Control menu. Factory default password is 6666.

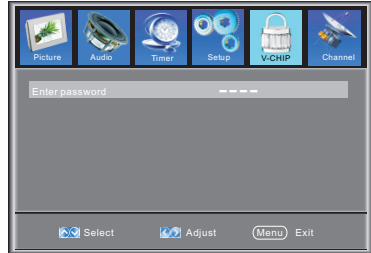

 5.1.Input the correct password ,the screen will display as follow:

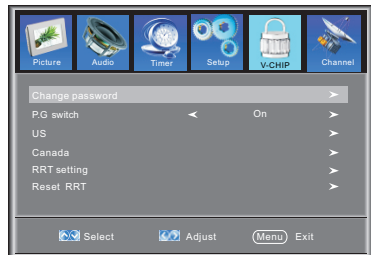

1). Change Password: Press ► button, the screen will display as follow:



 
1).New password: Input the new password

2).Confirm password: Input the new password again

5.2 V-CHIP switch:

When the Parental Control switch is ON, the below options can be adjusted.


5.3 US: Press ► button, the screen will display as follow:

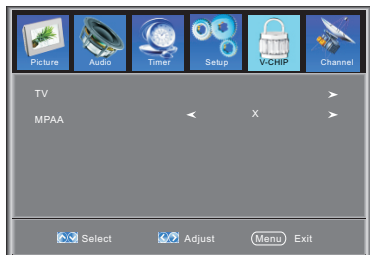


2).MPAA:switch the movie-rating control level; N/A, G,PG, PG-13,R,NC-17,X.

Rating	Description
G	General audiences, All Ages admitted
PG	Parental Guidance suggested. Some material may not be Suitable for children.
PG-13	Parents strongly cautioned. Some material .may be Inappropriate for children under 13.
R	Restrict. Under 17 requires accompanying parent or adult guardian(age varies in some jurisdictions)
NC-17	No one 17 and under admitted.
X	X is an order rating that is unified with NC-17 but may be encoded in the data of order movies.

 5.4 Canada: Press ► button, the screen will be displayed as follow:

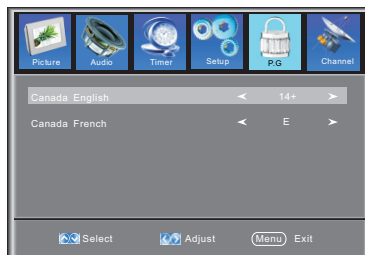

 1):TV: Press ► button, the screen will display as follow:

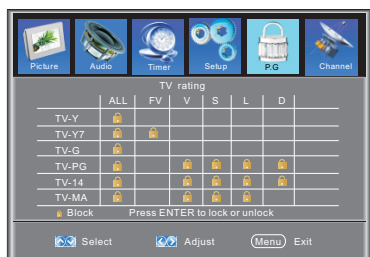

1): Canada English: switch the english rating control level:E,C,C8+,G,PG,14+,18+.

Rating	Content	Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Suggested age	TV-Y (All children)					
	TV-Y7(Direct to order children)	X				
	TV-G(General audience)					
	TV-PG(Parental Guidance suggested)		X	X	X	X
	TV-14(Parents strongly cautioned)		X	X	X	X
TV-MA(Mature audience only)		X	X	X		

And use ENTER key to switch lock/ unlock Parental Control feature.


Rating	Description
E	Exempt: Includes news, sports, documents and other information programming: talk shows, music videos, and variety programming.
C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of securityand well-being.
C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen.
G	General: Considered acceptable for all age groups, Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline But it must be integral to the development of plot or character. Language usage could be profane and nudity , present within the context of theme.
18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of secretary and nudity.

2).Canada French: switch the French-rating control level: E, G,8ANS+,13 ANS+,16ANS+,18ANS+.

Rating	Description
E	Exempt programming
G	General :All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner .
8ans+	General but inadvisable for young children :May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with paren.
13ans+	Over 13 years: Could contain scenes of frequent violent scenes and in tense violence.
16ans+	Over 16 years: Could contain frequent violent scenes and violence.
18ans+	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.


5.5 RRT setting: in ATSC digital TV mode, it could be adjusted

 5.6 Reset RRT: Press ► button, the screen will be displayed as follow:

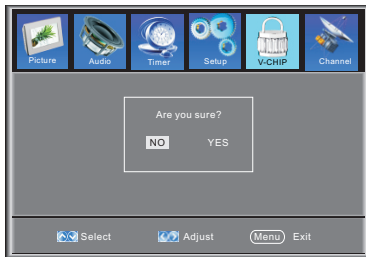


6. Channel MENU

 
The sixth item of the MENU is Channel MENU. You can adjust digital and analogue TV Channel . Press ▼▲ to move, press ◀▶ to adjust here.

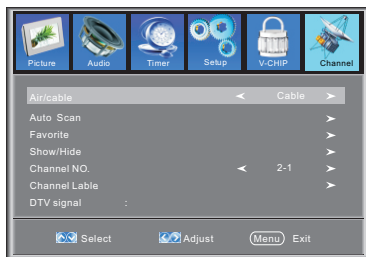

  - 1). Air/Cable: select Air TV signal and cable TV signal.
- 2). Auto Scan: If it's the first time you use the TV, you should scan all the TV channels first, press the ► button to confirm, you will see below menu :

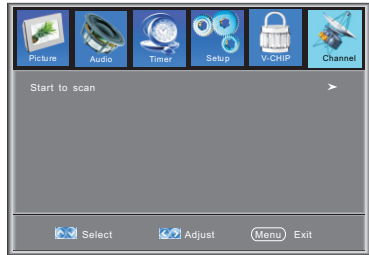



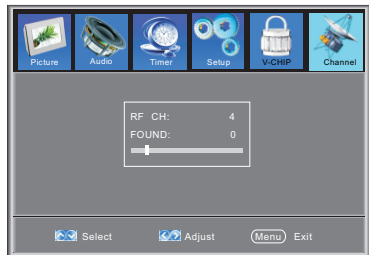













- A): Start to scan: press the ► button to confirm, you will see below menu which indicates auto search is in process.



 - 3). Favorite: Press ◀▶ button to choose/delete the favorite channel .
- 4). Show/Hide: Press ◀▶ button to display or hide currently channel.
- 5). Channel NO. :Display the currently channel number.
- 6). Channel label: Press ▲▼button to edit currently channel name.
- 7). DTV signal: Display DTV signal intension. It can't be selected and adjusted.

Trouble shooting

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
 <p>Snow</p>	 <p>Noise</p>	antenna position, direction or connection
 <p>Ghost</p>	 <p>Normal audio</p>	antenna position, direction or connection
 <p>Interference</p>	 <p>Noise</p>	electronic equipment, car/ motorcycle, fluorescent light
 <p>Normal Picture</p>	 <p>Mute</p>	Volume (check if mute is activated or if the audio system connections are not correct)
 <p>No picture</p>	 <p>Mute</p>	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 <p>No colour</p>	 <p>Normal audio</p>	Colour control
 <p>Picture breaking up</p>	 <p>Normal audio or weak</p>	retune channel
 <p>No colour</p>	 <p>Noise</p>	TV system

The LCDTV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue, black or white. Please note this does not affect the performance of the product.



www.westinghousedigital.com



S/N: _____



Westinghouse Digital, LLC
Orange, CA

SE-UM-2604-0101

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>