

# USER'S MANUAL



**19" LCD Monitor  
model LCM-19v1**



**Westinghouse**

# Table of Contents

<b>IMPORTANT PRODUCT SAFETY INSTRUCTIONS .....</b>	<b>2</b>
CLEANING THE LCD MONITOR .....	4
SAFETY GUIDELINES .....	5
FCC COMPLIANCE STATEMENT .....	5
<b>INSTALLATION.....</b>	<b>6</b>
1. ATTACHING THE BASE STAND TO THE LCD MONITOR .....	6
2. CONNECT VGA AND AUDIO CABLES .....	6
3. CONNECT THE POWER CABLE .....	6
4. TURN THE POWER ON .....	6
<b>OSD MENU FUNCTIONS.....</b>	<b>7</b>
OSD MENUS.....	8
<b>BACKLIGHT CONTROL.....</b>	<b>9</b>
DISPLAY MODES .....	99
<b>IMAGE PROBLEMS .....</b>	<b>10</b>
NO SIGNAL INPUT.....	10
OUT OF RANGE .....	10
<b>APPENDIX.....</b>	<b>11</b>
SPECIFICATIONS .....	11
TROUBLESHOOTING .....	12
No Power.....	12
No Image.....	12
Power is ON but No Screen Image .....	12
“Out Of Range”.....	12
Fuzzy Image.....	12
Image Too Bright or Too Dark.....	12
Distorted Image.....	12
Image is Not Centered (size is not scaled correctly).....	12
Colors are Not Correct.....	12
No Sound .....	12
Mounting the LCD Monitor on a Wall.....	13
Additional Questions .....	13

# IMPORTANT PRODUCT SAFETY INSTRUCTIONS

Read carefully and follow all warnings and instructions in this User's Manual and those marked on the product before you use the monitor. Failing to follow these warnings can result in personal injury or damage to the monitor. Keep this User's Manual in a convenient location for future reference. **Important:** Save the original box and all packing material for future shipping needs.

## Proper Handling of the Monitor

Always handle your LCD monitor with care. Avoid touching the LCD screen. Skin oils are difficult to remove.

Always position the LCD monitor on a stable and level surface. Unstable surfaces can cause the monitor to topple and fall, resulting in possible damage or injury.

Avoid exposing the monitor to direct sunlight or high temperatures, which can damage or shorten its useful life. Do not place near heat sources such as radiators, heat registers, or other appliances that generate heat. Orient the monitor away from direct sunlight to reduce glare.

Avoid exposing the monitor to rain, water, moisture or high humidity. Do not place it near basins or sinks where it may come in contact with water.

Never place heavy or sharp objects on the LCD monitor, video cable, or power cord.

## Overloading Outlets

Do not overload electrical power sources when installing the LCD monitor. Overloading wall outlets, circuits, or extension cords can result in overheating, fire, or electric shock. Use only grounded or polarized outlets.

## Power Cord Protection

Minimize wear on the power supply cord. The power supply cord should be routed away from foot traffic and contact with other objects. Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged.

## Ventilation

Slots and openings on the cabinet are provided for ventilation purposes. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. Keep the LCD monitor a minimum of four (4) inches away from any wall to assure sufficient airflow and ventilation. Increased temperatures may cause fire or device failure.

To assure proper ventilation, do not block the openings by placing the product on a bed, sofa, rug or other similar surface. Do not place the product in a built-in installation, such as a bookcase or enclosed rack, unless proper ventilation is provided.

### **Other Notices and Precautions**

**Caution:** Never remove the rear cover. There are no user serviceable parts inside. The LCD monitor contains high voltage parts. You may be seriously injured if you touch them.

Do not attempt repairs yourself. The warranty does not cover repairs or attempted repairs by anyone not authorized by Westinghouse Digital. Refer all servicing and repairs to qualified service personnel.

If the monitor begins to emit smoke, an abnormal noise, or a strange odor, immediately turn it off and unplug the power cord. Contact the Westinghouse Service Center.

If the LCD monitor will not be used for an extended period of time, unplug the power cord.

## Cleaning the LCD Monitor

- **MAKE SURE THE LCD MONITOR IS TURNED OFF**
- **NEVER SPRAY OR POUR LIQUID DIRECTLY ONTO THE SCREEN OR CASE**

### To Clean the Screen:

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If it still is not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner on a clean, soft, lint-free cloth, and wipe the screen.

### To Clean the Case:

1. Use a soft, dry cloth.
2. If it still is not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent on a clean, soft, lint-free cloth, then wipe the surface.

### Disclaimer

Westinghouse Digital does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or case. Some chemical cleaners have been reported to damage the screen and/or LCD display case. Westinghouse Digital will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

# Safety Guidelines

**Warning:** This device must be operated with the original power supply, part number ADP-60CF A.

 
**CAUTION:** The power supply outlet should be located near the equipment and should be easily accessible. Use a power cable that is properly grounded. Always use the appropriate AC cord that is certified for the individual country. Some examples are listed below:

- |                 |  |
|-----------------|--|
| USA.....UL      | Switzerland ..... SEV                      |
| Canada.....CSA  | Britain ..... BASE/BS                      |
| Germany.....VDE | Japan ..... Electric Appliance Control Act |

## IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit is enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord, or it is not enclosed.

The female receptacle of the cord set must meet IEC-60320 requirements and should look like Figure A1 below:



### For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), UL Listed, and CSA Labeled. For units that are mounted on a desk or table, type SVT or SJT power cords may be used. If the monitor is placed on the floor, only SJT type cord may be used. The power cord must be selected according to the current rating for your unit. Please consult the table below for the selection criteria for power cords used in the United States and Canada.

Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG	10 Amps
	16 AWG	12 Amps
	14 AWG	12 Amps
SVT	18 AWG	10 Amps
	17 AWG	12 Amps

## FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

### FCC Warning:

To assure continued FCC compliance, the user must use grounded power supply cord and the provided shielded cables. Any unauthorized changes or modifications not expressly approved by Westinghouse Digital for compliance could void the user's authority to operate this device.

# Installation

Congratulations on your purchase of a Westinghouse 19" LCD Monitor. Sleek and practical, this lightweight and wall-mountable LCD monitor delivers a crisp and clear display optimized for 1280 x 1024 display resolution.

## Package Contents

- LCD Monitor (19")
- Detachable Base Stand
- Cables
  - DC Power Supply Adapter
  - AC Power Adapter Cord
  - VGA (HD15) Male – Male Cable
  - 3.5 mm Male – Male Stereo Audio Cable
- Literature
  - User's Manual
  - Warranty Card

## 1. Attaching the Base Stand to the LCD Monitor

Attach the base stand to the LCD monitor stand neck. Align the holes and tabs; press in and snap into place. To remove the base stand, press the tabs on the bottom of the stand neck and remove the base.

## 2. Connect the VGA and Audio Cables

Connect a VGA cable (to the connector labeled "D-SUB") and an audio cable (to the connector labeled "AUDIO-IN") from the back panel of the LCD monitor to your PC.

## 3. Connect Power Cables

Connect the DC power adapter cord to the LCD Monitor (to the connector labeled "DC-IN") and then connect the female AC power cord to the adapter. Plug the AC power cord into a properly grounded AC outlet.

## 4. Turn the Power On

Press the power button on the front of the LCD monitor. The LED light will turn green if a signal input is detected or it will be orange if no input is detected.

### Auto Adjust

Although a computer can detect the new monitor with the built-in VESA Plug & Play feature, the Auto Adjust function can be used to enhance the display. To perform the Auto Adjust:

 
# OSD Menu Functions

All the function settings for the LCD monitor are controlled via the control keys located on the bottom part of the front panel. To display the OSD main menu, press the “Menu” keypad button on the control keys. (Note: The OSD menu display will disappear automatically after approximately 10 seconds, if no action is taken.)

The LCD monitor has been adjusted to optimal settings before shipment. Adjustments to the monitor settings can be made using the OSD menu.


- Press the “Menu” keypad button to display the OSD menu.
- Press the “+” or “-” keypad button to select the function to be adjusted.
- Press the “Menu” keypad button to enter the OSD sub-menu to be adjusted.
- Press the “+” or “-” keypad button to change the setting of the function.

To exit the OSD menu or go back to the previous action, press the “Auto/Exit” keypad button. It automatically will save any changes that have been made.

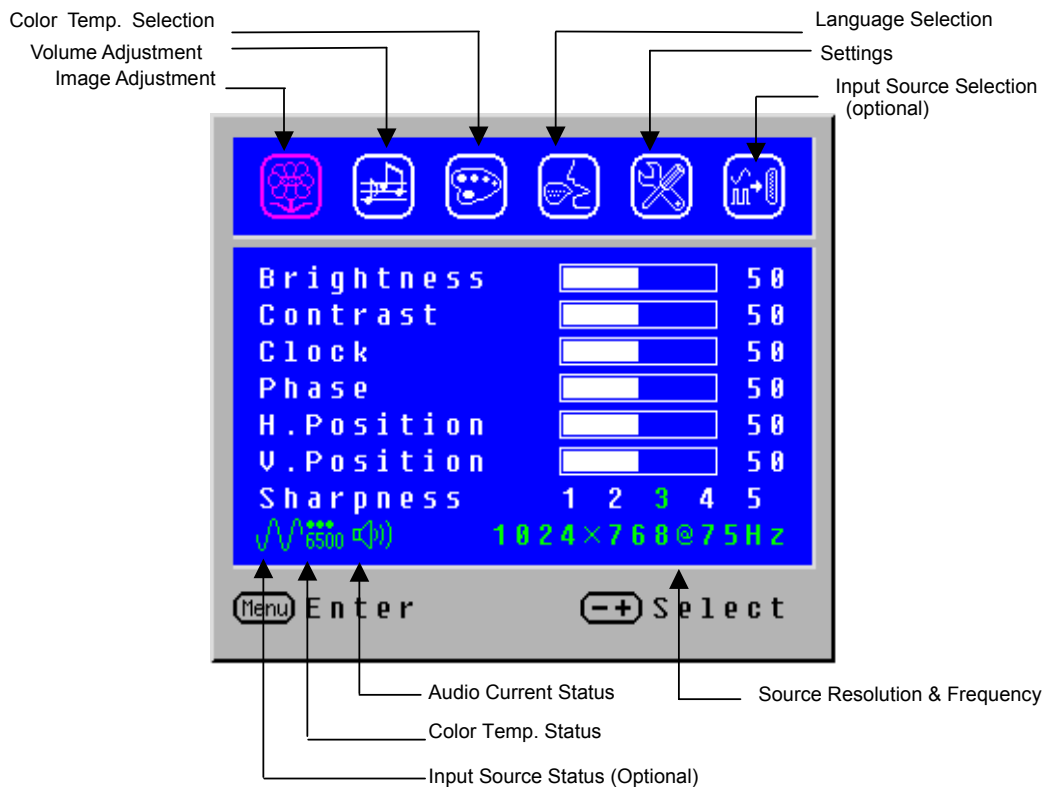

 Repeat above steps for changing the setting of other functions. The following is a list of the OSD sub-menus for the LCD monitor.

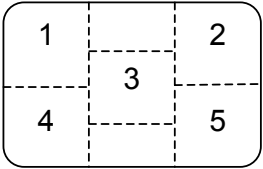

OSD Menu	Sub-Menu	Description and Function
Image	Brightness	Adjust the brightness of the screen
	Contrast	Adjust the contrast of the image
	Clock	Adjust the clock pulse of the image
	Phase	Adjust the focus of the image
	H. Position	Move the image left and right on the screen
	V. Position	Move the image up and down on the screen
	Sharpness	Adjust the picture sharpness of lower resolutions
Audio	Volume	Adjust the audio volume
	Mute	Turn on or off the audio muting
Color	9300K	Set the color temperature to 9300K white color
	7500K	Set the color temperature to 7500K white color
	6500K	Set the color temperature to 6500K white color
	User/Red	Adjust red gain
	User/Green	Adjust green gain
	User/Blue	Adjust blue gain
Language	English	Select the OSD language
	Français	
	Italiano	
	Deutsch	
	Español	
	日本語	
	□□□□	
	繁體中文	
Settings	OSD Timeout	Adjust the OSD display time setting
	OSD Position	Move the OSD display position to any one of the following 5 positions within the overall screen 
	Auto Setting	Adjust clock, phase and positions automatically
	Recall	Restore factory settings
	Input Source	Analog

# Backlight Control

## Display Modes

The monitor backlighting can be controlled by using the Turbo button on the control keypad. There are 3 modes: Economy, Text and Picture. To toggle between these modes, press the Turbo key until the mode you desire is selected. These modes automatically change the backlighting levels between bright, brighter and brightest.



# Image Problem

 
## No Signal Input

If there is no source connected to the monitor, the following error message will be displayed:



## Out of Range

If the monitor settings are not compatible with the PC or out of range of the LCD monitor, the following error message will be displayed:

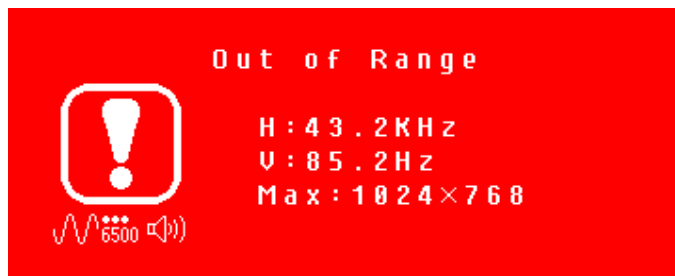

# Appendix

## Specifications

<b>Panel Size</b>	Type	19" Color TFT Active Matrix LCD. Anti-static and hard coated.
<b>Optimum Resolution</b>		1280 x 1024
<b>Response Time</b>		21 ms
<b>Contrast Ratio</b>		600:1
<b>Maximum Brightness</b>		300 Nits
<b>Viewing Angles</b>		170° (H) / 170° (V)
<b>Color Saturation</b>		72% TBD
<b>Wall/Arm Mount</b>	Physical	Directly wall mountable 100 mm VESA®
<b>Input Signal</b>	Video	HD-15 pin mini D-Sub (VGA connector)
	Audio	3.5mm Mini-Stereo jack male-male
<b>Speaker Output</b>		Built-in audio amplifier and speakers, 2.5 watts * 2 channels
<b>Power</b>	Voltage	100-240 VAC, 50/60 Hz (auto switch), 1.5A
<b>Operating Conditions</b>	Temperature	32° F to +95° F (0° C to +35° C)
	Humidity	20% to 90% (no condensation)
	Altitude	Up to 3,000 meters
<b>Storage Conditions</b>	Temperature	-4° F to +140° F (-20° C to +60° C)
	Humidity	10% to 90% (no condensation)
	Altitude	Up to 12,000 meters
<b>Dimensions</b>	Unit	16.4 (w) x 17.1 (h) x 9.2 (d) in
	Carton	18.2 (w) x 18.4 (h) x 6 (d) in
<b>Weight</b>	Unit	10.4 lb (3.8 kg)
<b>Regulations</b>		FCC-B, UL, CSA (CUL), Energy Star®, Plug & Play
<b>Power consumption</b>	DC On	<73W (Blue LED)
	DC Off	<3W (LED OFF)
<b>Lamp Life</b>		40,000 hours

# Troubleshooting

## No Power

- Make sure the DC cord is plugged into the back of the LCD monitor.
- Make sure the AC power cord is securely connected to the AC socket.
- Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage.

## No Image

- Make sure the power button is ON.
- Check whether the LCD monitor and computer power cords are plugged in and check the power supply.

## Power is ON but No Screen Image

- Adjust the brightness and contrast levels.
- Make sure the VGA cable is securely connected to both the computer and monitor.

## “Out Of Range”

- Check the computer image output resolution and frequency and compare the value with the preset values of the computer's graphics card.

## Fuzzy Image

- Adjust the Phase setting on the monitor.

## Image Too Bright or Too Dark

- Adjust the brightness and contrast levels using the OSD.
- Make sure that the computer is not displaying an irregular image.
- Check the VGA connection between the computer and LCD monitor.
- Perform Auto Adjust.

## Distorted Image

- Reset the LCD monitor by performing the “Recall” function using the OSD.
- Remove extra accessories (such as a VGA extension cord).

## Image is Not Centered (size is not scaled correctly)

- Perform Auto Adjust
- Adjust the horizontal and/or vertical position using the OSD.
- Check image size setting.

## Colors are Not Correct

- Adjust the color setting using the OSD.

## No Sound

- Check the audio connection.

## Mounting the LCD Monitor on a Wall

- Check the Westinghouse Digital website for wall mounting solutions.
- Use the 100 mm VESA hole pattern to secure a mounting plate to the LCD monitor.
- Use professional installation to reduce the risk of injury and damage.

## Additional Questions

- See our website at [www.westinghousedigital.com](http://www.westinghousedigital.com).
- Contact Westinghouse Digital Customer Service at (866) 287-5555 or write us at [service@westinghousedigital.com](mailto:service@westinghousedigital.com).



Westinghouse Digital Electronics  
City of Industry, CA

[www.westinghousedigital.com](http://www.westinghousedigital.com)

SE-UM-1901-0502

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>