



Westinghouse

**USER'S MANUAL**  
*MANUEL DE L'UTILISATEUR*  
*MANUAL DEL USUARIO*

---

**SK-26H240S**

**SK-26H520S**

Widescreen HDTV

*TVHD à Écran Géant*

*TVHD Pantalla Grande*

# TABLE OF CONTENTS

<b>IMPORTANT SAFETY AND PRECAUTIONS .....</b>	<b>1</b>
Important Information.....	1
Safety Precautions.....	2
<b>GENERAL INFORMATION.....</b>	<b>4</b>
Feature.....	4
Controls and Ports of the Panel.....	5
Accessories .....	7
Remote Control.....	8
<b>INSTALLATION &amp; FUNCTION ADJUSTMENT .....</b>	<b>10</b>
Installation.....	10
How to remove the Base .....	13
Function Adjustment .....	14
<b>TROUBLESHOOTING .....</b>	<b>25</b>
<b>PC INPUT PRESET TIMMING TABLE.....</b>	<b>29</b>
<b>PRODUCT SPECIFICATION .....</b>	<b>30</b>

English

Español

 
Français

# IMPORTANT SAFETY AND PRECAUTIONS

This wide active matrix TFT (thin film transistor) liquid crystal monitor is designed for use as a stand alone TV as well as a display device for video electronics appliances and personal computers.

## Important Information

Warning : To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

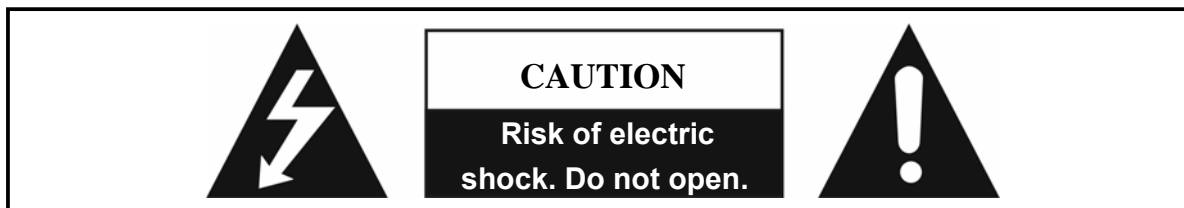

Caution : To reduce the risk of electric shock, do not attempt to disassemble or modify this device. There are no user-serviceable parts inside. Refer any service issues to qualified service personnel.

Caution : FCC/ CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Important: One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws. Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.

Warning : Do not leave stationary images, patterns, PIP windows, or letterbox images on the screen for prolonged periods of time as this may result in permanent damage to the LCD panel. This type of damage is not covered under warranty. The following are examples of, but not limited to, potentially hazardous display output: side bar images, video game patterns, closed captioning, channel logos and letterbox black bars. To prevent this type of damage, it is recommended to display constantly moving images that fill the screen as often as possible.

According to industrial standards for LCD display technology; there are a certain number of allowable defective pixels. Although we produce panels with more than 99.9% active cells, there still may be some cells that do not produce light or remain constantly lit. For further information, please contact sales or technical support.


English

Español

Français

## **Safety Precautions**

 1. Cleaning : Unplug the power cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners.
2. Water and moisture : Do not use the product near water or areas of high moisture content such as swimming pools, bathtubs or wet basements.
3. Ensure that no water droplets remain on the screen. Water can cause permanent discoloration.
4. Heat sources : Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
5. For added protection during a lightning storm or for extended periods of non-use, unplug the power cord from the wall outlet and disconnect the antenna (if used). This will prevent damage to the product due to power line surges.
6. If an outside antenna is connected to the product, make sure the antenna is properly grounded so as to provide some protection against voltage surges. ( Coaxial connector shielding from cable distribution system should be probably earthed. )

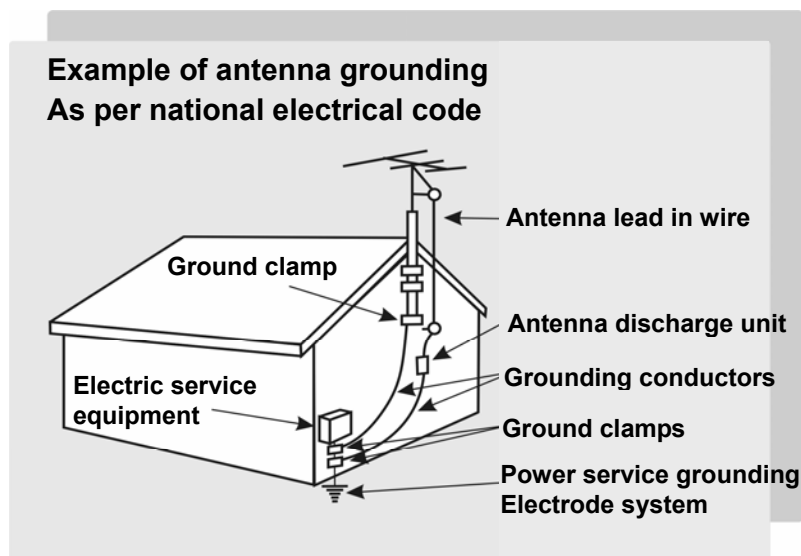

7. Stand : Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Use only mounting hardware recommended by the manufacturer.



8. Use care when moving the product on a rolling cart. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.

9. Ventilation : The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings as insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surfaces since they can block ventilation openings. This product was not designed to operate in an enclosed environment. Don't place the product in an enclosed space such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

10. The LCD panel used in this product is made of glass. Therefore, it can break if the product is dropped or struck.

11. During the LCD panel lifespan it is normal for a few pixels to become defective. Non-active pixels may appear on the screen as fixed points of red, blue or green. Refer pixel policy questions to the reseller for further clarification on acceptable loss.

12. An outside antenna system should not be located in the vicinity of overhead power lines or other electrical conduits. When installing an outside antenna, use extreme caution to prevent the antenna from coming into contact with said items, as contact with them may be fatal.

# GENERAL INFORMATION

 
## **Feature**

Your TV is designed with the latest technology and is a high-performance unit that includes the following special feature :

- ◆ Multi-sources input included RF IN, D-SUB, HDMIx2, Compositex2, S-Videox2, and Componentx2.
- ◆ Built-in combo tuner is able to receive ATSC, NTSC and Clear QAM Cable signals.
- ◆ Built-in 10W dual channel speakers.
- ◆ Embedded video enhance and noise Reduction features for the colorful and clearest picture possible.
- ◆ Provided multi-channel sound decoder for stereo and bilingual broadcasts.
- ◆ Automatic sleep timer control.
- ◆ Component video input for high definition TV programming (HDTV ready), resolution up to 720p, 1080i.

## Controls and Ports of the Panel

### Front Panel Views

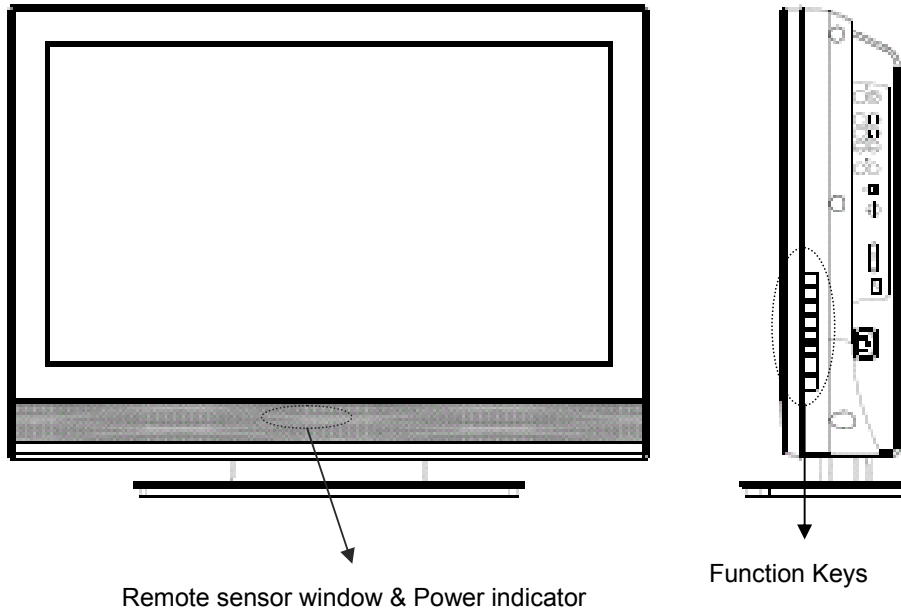

### FUNCTION KEYS

1. **MENU** : Display the main menu. When OSD is appeared, press the button to select or access the sub-menu.
2. **VOLUME (+ / -)** : Increase/decrease the volume or be the left/right arrow button for menu.
3. **CHANNEL (+ / -)** : Change the channel or be the up/down arrow button for menu.
4. **SOURCE** : Select the input source ( TV, S-Video1, S-Video2, Video 1, Video 2 , YPbPr 1 , YPbPr 2 , HDMI1, HDMI2, PC ).
5. **POWER** : Turn the LCD-TV on or off.
6. **REMOTE SENSOR WINDOW** : aim the remote control towards this spot on the TV.
7. **POWER INDICATOR** : BLUE LIGHT – power on

AMBER LIGHT – power sleep

EXTINGUISHED – power off

---

**NOTE 1** : These buttons control the basic features of your TV, including the on-screen menu. To use advanced features, you must use the remote control.

**NOTE 2** : The picture of LCD TV display is for reference only.

 
---

English


Español

Français

## Side Panel Views

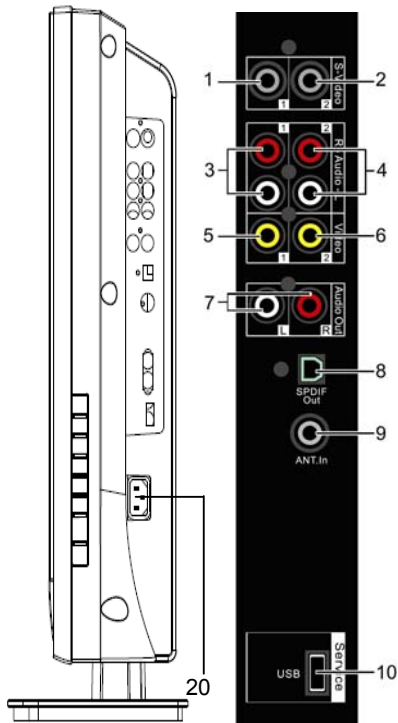


1. S-Video1 input  
Connect to a legacy video device such as a VCR or video game system.
2. S-Video2 input
3. Video1 & S-Video1 Audio input  
Connect an external audio source to this jack.
4. Video2 & S-Video2 Audio input  
Connect an external audio source to this jack.
5. Video1 input  
Connect the Composite video to a legacy video such as a VCR or video game system.
6. Video2 input
7. Audio output(R/L)  
Connect this output to an external stereo audio amplifier, receiver or surround sound processor with R/L audio inputs.
8. SPDIF output(Optical)  
Connect this output to an external stereo audio amplifier, receiver or surround sound processor with SPDIF optical input.
9. ANT.(RF input)  
Connect the LCD TV to an over-the-air antenna or cable service to view NTSC and ATSC(HDTV) content.
10. USB  
Factory service port

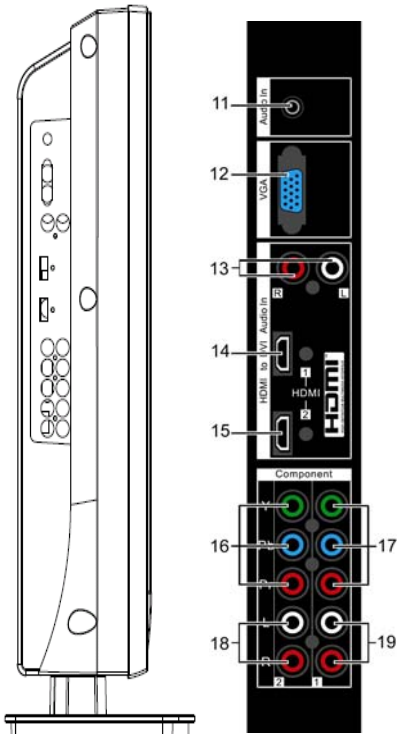 

11. VGA Audio in  
Connect to the audio out(Green) from a computer.
12. VGA  
Using a 15-pin VGA cable, connect to a computer.
13. HDMI Audio input(R/L)  
Connect the audio input if you using a DVI-to-HDMI converter.
14. HDMI1 input  
Connect to an external video device such as HD digital cable/satellite receiver, HD STB, Media center PC, or DVD player.
15. HDMI2 input
16. YPbPr2 input  
Connect an external video device with component output to this jack.
17. YPbPr1 input
18. YPbPr2 Audio2 input(L/R)  
Connect an external audio source to this jack.
19. YPbPr1 Audio1 input(L/R)
20. AC power in  
Connect power cable to AC inlet.



## Accessories

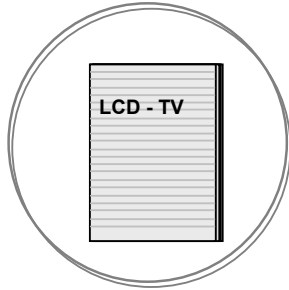 


User's Manual



Remote Control & Batteries



 
Power Cord

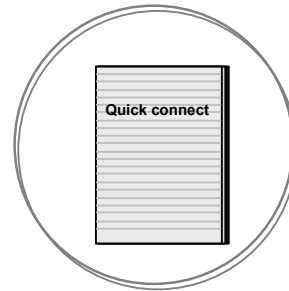

Quick Connect Guide



 Warranty Card

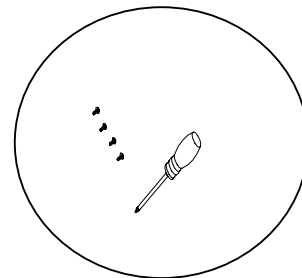


Screw driver & Screws x4(base)

English


Español

Français

## Remote Control

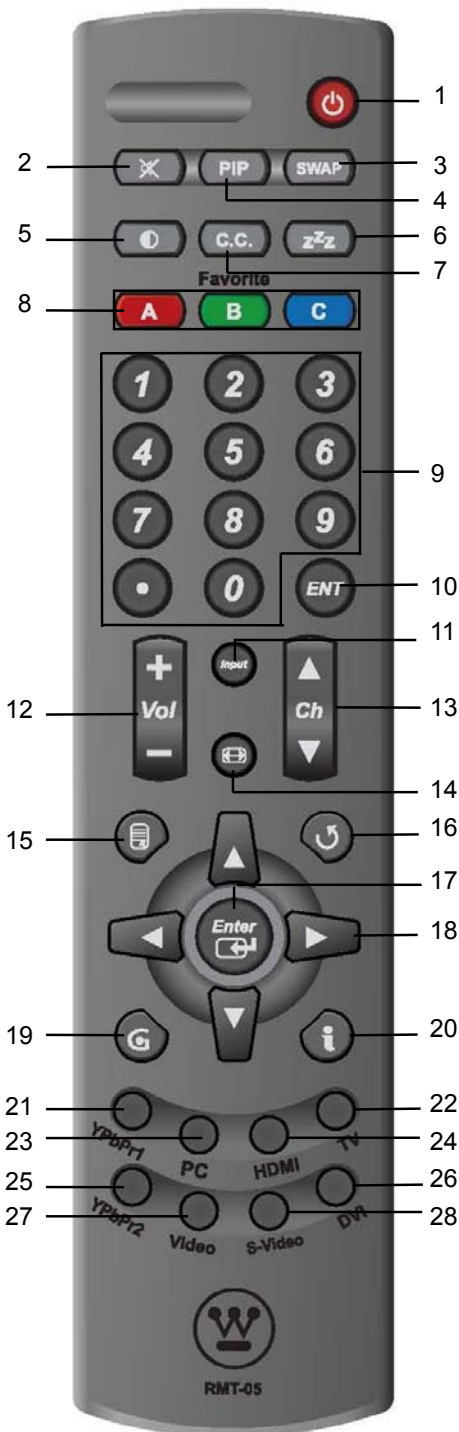 

<b>1</b>	<b>Power</b>
	Switch TV power on/off.
<b>2</b>	<b>Mute</b>
	Turn the sound on/off.
<b>3</b>	<b>Swap</b>
	No support
<b>4</b>	<b>PIP</b>
	No support
<b>5</b>	<b>Backlight</b>
	No support
<b>6</b>	<b>Sleep</b>
	Press to select a preset time interval for automatic power down.
<b>7</b>	<b>CC</b>
	Press to enable or disabled closed caption.
<b>8</b>	<b>Favorite</b>
	Select, remove or add your favorite channel. Press Favorite(A, B, C)key to access favorite list. Use arrow keys and enter key to select, add or remove the channel from favorite list.
<b>9</b>	<b>Channel number keys</b>
	Select specific channel.
<b>10</b>	<b>Enter</b>
	Execute a command.
<b>11</b>	<b>Input</b>
	Select input source.
<b>12</b>	<b>VOL +/-</b>
	Volume Up/Down adjustment.
<b>13</b>	<b>CH +/-</b>
	TV channel Up/Down adjustment.
<b>14</b>	<b>Screen Fit</b>
	Select video display format "Standard" or "Fill".
<b>15</b>	<b>Menu</b>
	Display the User setup menu.
<b>16</b>	<b>Last CH</b>
	Switch to previous channel.
<b>17</b>	<b>Enter</b>
	Execute a command.
<b>18</b>	<b>▲/▼/◀/▶</b>
	OSD manual control(▲/▼:TV channel Up/Down; ◀/▶ :Volume Up/Down)

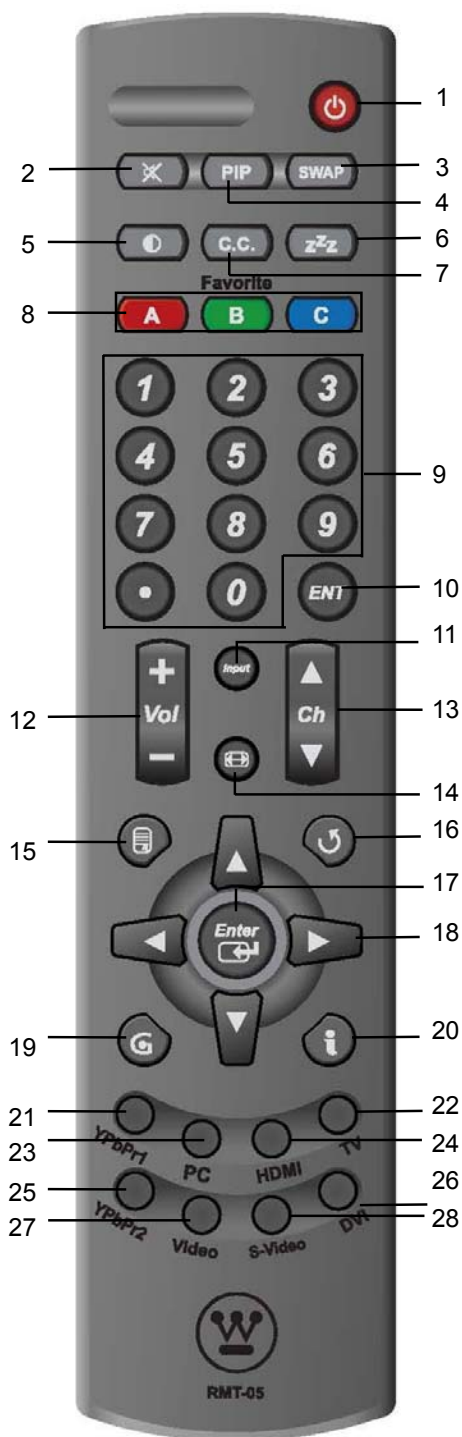 

<b>19</b>	<b>Guide</b>
	Broadcast program information.
<b>20</b>	<b>Info.</b>
	Display the source and channel information.
<b>21</b>	<b>YPbPr1</b>
	Select YPbPr1 or 2 source input.
<b>22</b>	<b>TV</b>
	Select TV(NTSC/ATSC) source input.
<b>23</b>	<b>PC</b>
	Select VGA source input.
<b>24</b>	<b>HDMI</b>
	Select HDMI 1 or 2source input.
<b>25</b>	<b>YPbPr2</b>
	Select YPbPr2 source input.
<b>26</b>	<b>DVI</b>
	No support.
<b>27</b>	<b>Video</b>
	Select Video 1 or 2 input.
<b>28</b>	<b>S-Video</b>
	Select S-Video 1 or 2 input.

English

Español


Français

# INSTALLATION AND FUNCTION ADJUSTMENT
 
## Installation

### 1. Insert Batteries into Remote Control



- 1) Remove the battery cover.
- 2) Insert two size AAA batteries corresponding to (+) and (-) marks on the battery compartment.

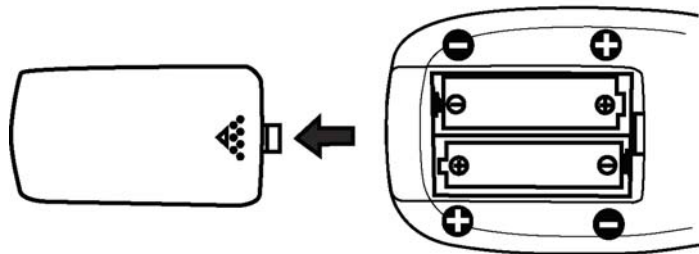

## **CAUTION**

- Only use AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Dispose of used batteries in accordance with local laws and regulations.
- Keep batteries away from children and pets.
- When the remote control will not be used for an extended period, remove the batteries.
  
## 2. Connections

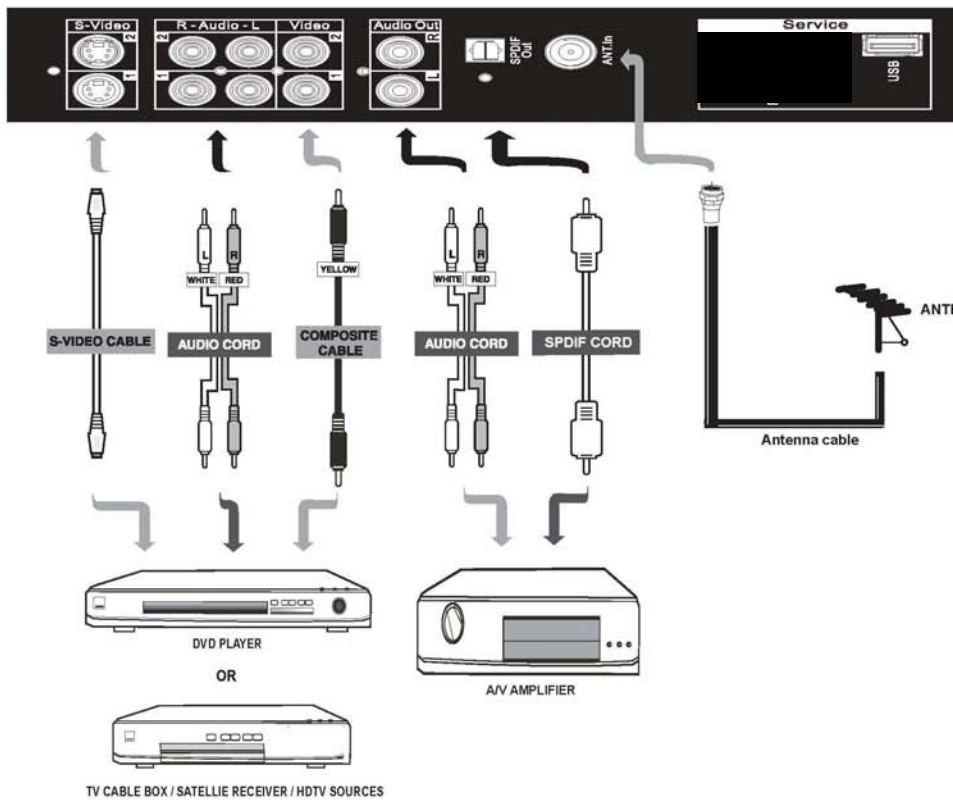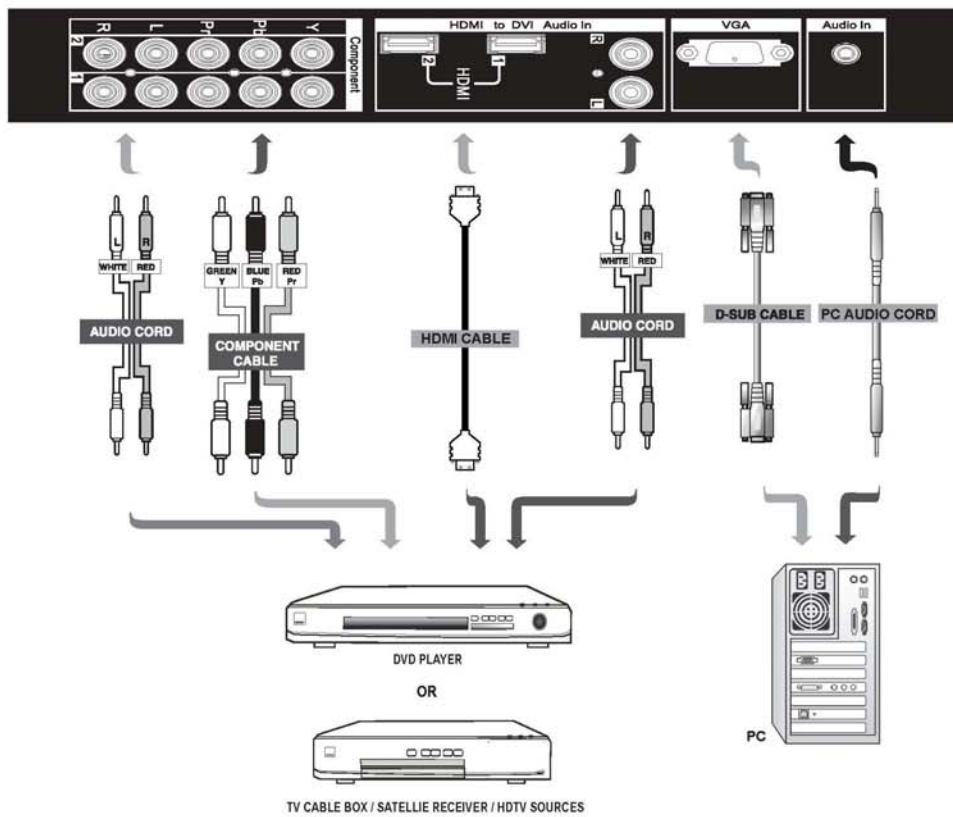

English

Español

Français

### **3. Connect power cables**

Connect the power cord to the LCD TV then to a proper AC outlet.

**IMPORTANT:** The power input voltage for TV is 120Vac, before beginning; make sure all devices are turned off.

### **4. Turn Power On**

Press the power button on the right side of the LCD TV, or press the power (Red) button on the remote control.

### **5. Select input source for the LCD TV using the OSD menu or remote control direct select buttons**

### **6. If connecting to Antenna, Cable or other RF source on TV inputs:**

See page 19 to scan and edit available channels.


### **7. If connecting to a PC(VGA):**

For the best picture quality, set the timing of your computer to 1366 x 768 at 60Hz.

Refer to the graphic card's user guide of your computer to set this timing.

## **How to remove the BASE**

 - a. Carefully place the TV face down on a soft clean surface.
- b. Remove the four screws underneath the BASE.  
(See picture below)
- c. Pull out the BASE from the TV.

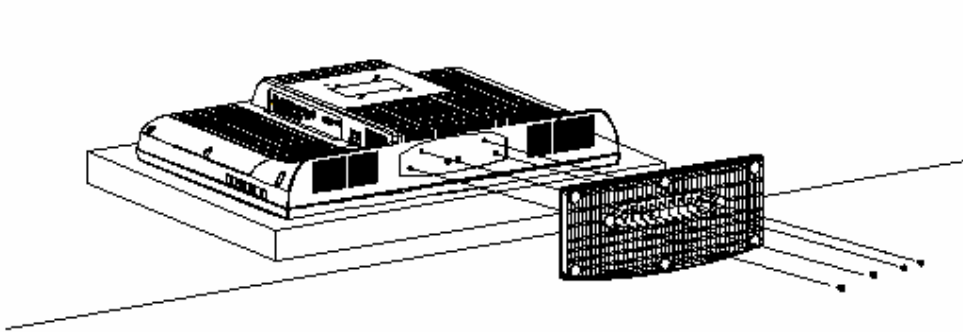


## **Function adjustment**

There are four main Setup Menus; these are Settings, Channels, Locks and Guide. All the functions can be adjusted either by the remote control or by using the control keys on the LCD TV's right side.

### **Viewing OSD Menu**

 To display the main menu, press the Menu button on the right side of front control keys of the LCD TV or the MENU key on the remote control. Press arrow keys to select desired OSD menu and Enter key to select desired setting.



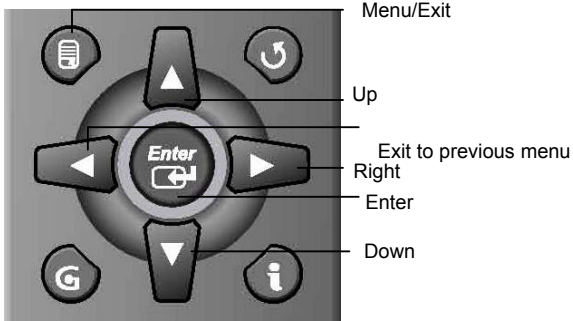

English

Español

Français

## Video



### Video settings:

Press arrow keys to select or adjust your favorite picture settings. DONE button to close picture setting menu.



### Screen Fit:

Adjust your TV screen to handle different picture formats.

 
Standard/Fill/Overscan/DVD Restoration



### Color Temp.:

Press arrow keys to select or adjust your preferred color temperature settings.

Cool/Neutral/Warm/User

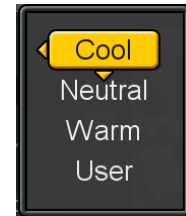

### 3D Comb Filter:

Press arrow keys to select or adjust your preferred settings.

Off/Low/Medium/High



 
### Temporal NR:

Press arrow keys to select or adjust your preferred settings.

Off/Low/Medium/High



## Audio Setting

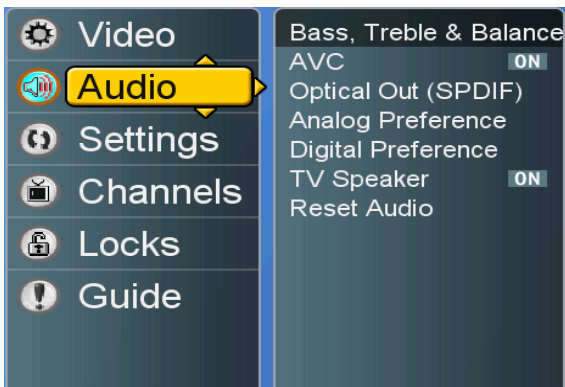

### Bass, Treble & Balance



Use arrow keys to adjust the bass, treble and balance.

### Optical Out

Select AC3/PCM



### Analog Preference

Select an analog audio preference if TV signal is analog.

Mono/Stereo/SAP



### Digital Preference

Select language preference for digital channels.

English/French/Spanish

 


English


Español

Français

## Settings

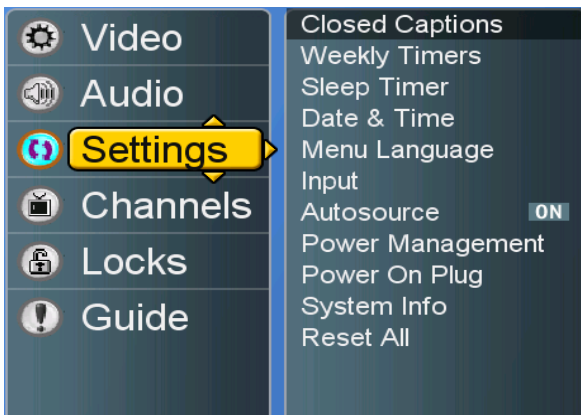

### Close Captions

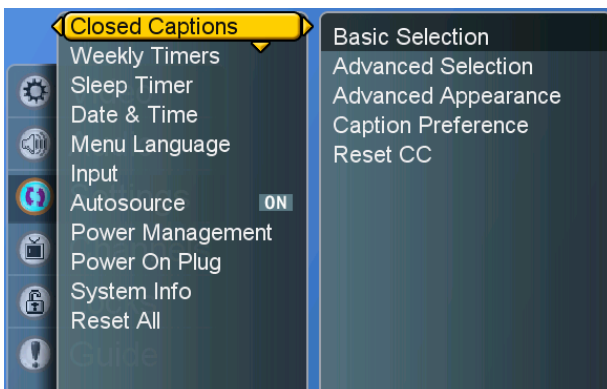 

### Basic Selection



Choose the type of closed caption settings to use for programs broadcast with basic caption.

### Advanced Selection

Use arrow keys to adjust closed caption appearance such as font and size, each change can be previewed on bottom of menu.



 
### Caption Preference

Select Always Basic/Always Advanced/Automatic.



### Timers

Select automatic power-on time.

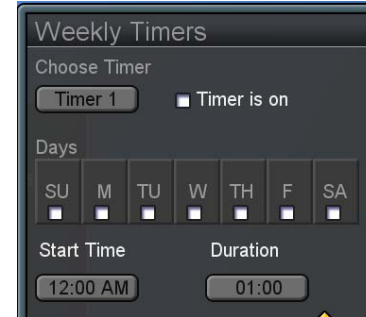

### Date & Time

Set Date & Time.

 


### Menu Language

Use arrow keys to adjust Menu Language




## Input

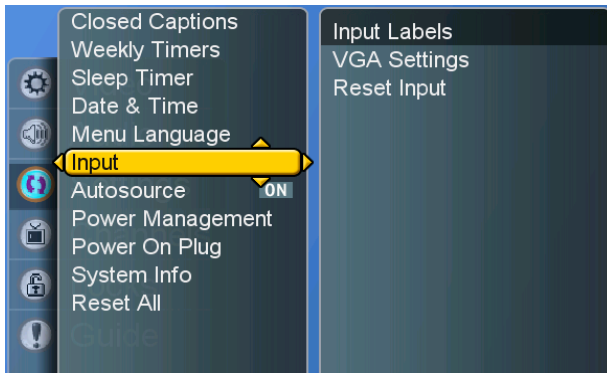


## Autosource

 Autosource can detect new source which is plugged in TV and switch input source setting of your TV to the source automatically.

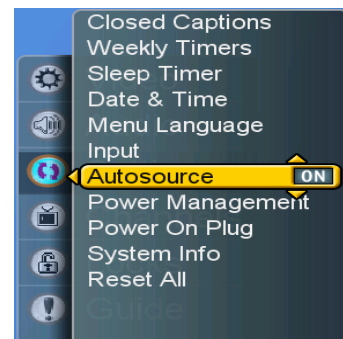


## Power Management

 Set TV power saving modes (Normal/quick boot-up time, but large power consumption; Energy saving/longer boot-up time, but small power consumption.)

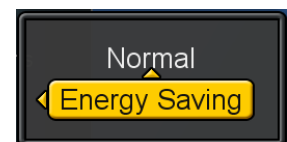


## Power On Plug

 Set TV power on memory when un-plug power cord and re-plug it. (ON/automatic power-on memory; OFF/no automatic power-on)

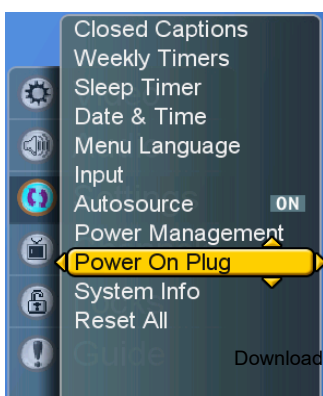


## System Info

 Display important system info, you may need the information when calling customer service or troubleshooting such as firmware version and micro version. Press DONE button or arrow key to previous menu.

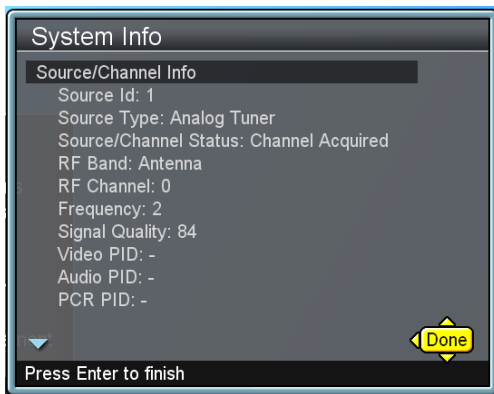

## RESET ALL

 Reset all settings back to factory defaults. Reset will delete all settings you have made including channel list.

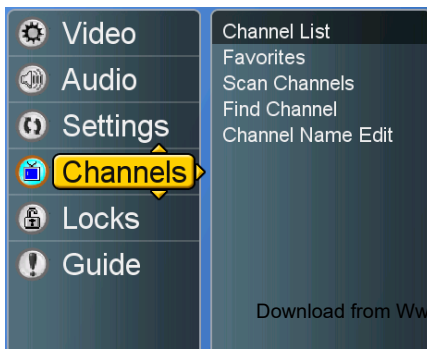

## Channels

## Master Channel list

To display which channels have been scanned.



## Scan Channels

To auto scan current available channels by using "Antenna or cable" scan.



 
## Favorites

To display which channels have been set for Favorites.



## Find Channel

Enter channel number via number key then press DONE button to find a channel. You may be required to enter four digits pin number if pin number was set before.

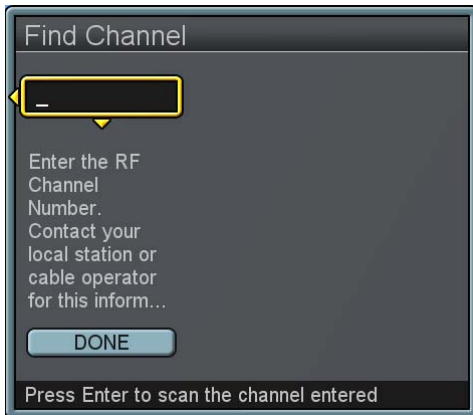

## Channel Name Edit

Edit the channel name in channel list. Enter the edited channel, press "enter" button of remote control, shows "Change name" menu. You can compile the name you like, then press "Done" button, the edition is to be finished.



Lock feature prevents viewers from watching programs that are not age-appropriate, such as programs containing violence or adult language.

 
The pin number is required when you want to enter Locks menu, just use the remote control to key in your pin number. The factory default pin number is 0000.





## Rating Locks

Select which USA or Canada rating you want to set. \_

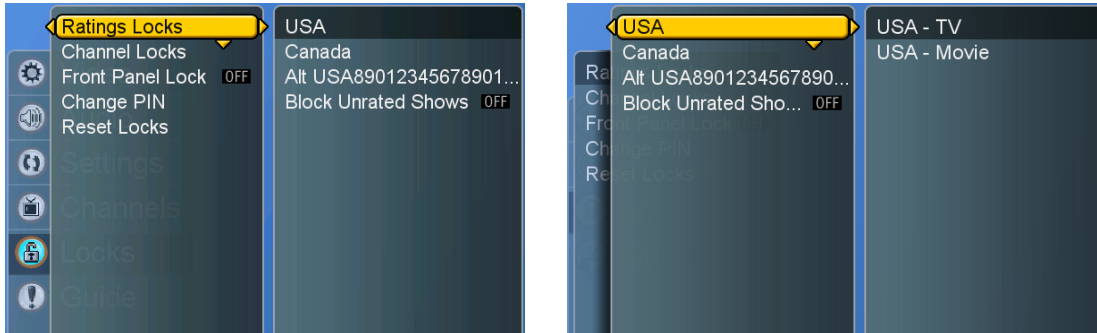

## USA TV Rating

TV Y All children

 
TV Y7 For older children

TV G General audience

TV PG Parental guidance suggested

TV 14 Parental strongly cautioned

TV MA Mature audience only

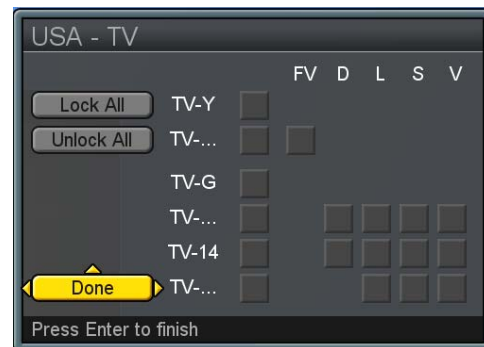

## USA Movie Rating

G General audience

 
PG Parental guidance suggested

PG-13 Parental strongly cautioned

R Restricted


NC 17 No on 17 and under admitted

X Adult audience only

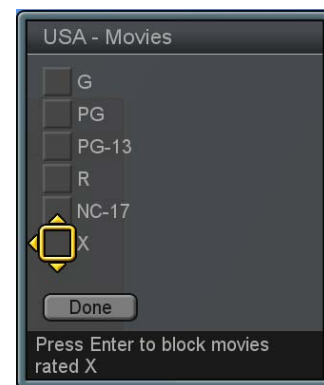

## Canada-French

 G General programming, suitable for all audience

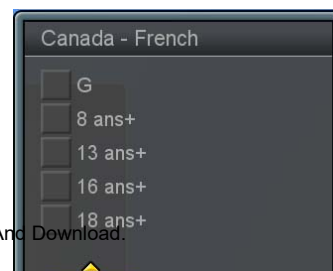

- 8 ans+ Children eight years and older
- 13 ans+ Viewers 13 year and older
- 16 ans+ Viewers 16 year and older
- 18 ans+ Adult programming

**Canada-English**

- C Children
- C8+ Children eight years and older
- G General programming, suitable for all audience
- PG Parental guidance
- 14+ Viewers 14 year and older
- 18+ Adult programming



**Channel Locks**

To set which channels are locked, use arrow keys to lock one or more channels.

Select button on menu to lock and unlock channels.



**Guide**

Show program information for the current channel, such as signal strength, resolution, channel number, V-chip, CC, and Program Title.



English

Español

Français

## TROUBLESHOOTING

### There is no picture or sound.

---

---

 


- Make sure the AC adapter is connected.
- Verify that there is a valid source signal.
- Make sure the correct input mode is selected.

### There is no picture from AV.

---

---

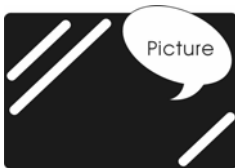

- Make sure the BRIGHTNESS is properly adjusted.
- The florescent lamp may have reached the end of its life.  
Contact an authorized service center.
- Make sure the video source is plugged into the composite video-in port.

### There is no sound.

---

---

 


- Make sure the volume is not set to minimum.
- Make sure the sound is not muted

### There is no picture or sound, just noise.

---

---

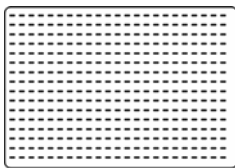

- The source signal may be weak.
- Your provider may be experiencing difficulties.
- Check your input connections.

### Picture is not clear.

---

---



- The source signal may be weak.
- The provider may be experiencing difficulties.
- Check input connections.

### Picture is light or improperly tinted.

---



- Check the Hue, Saturation and Color adjustments.
- Reset the TV to the factory default settings.

### The picture is too dark.

---



- Select a different Video Preset mode.
- Check the Brightness of Picture Settings.
- The fluorescent lamp may have reached the end of its life. Contact an authorized service center.

### Remote control does not work.

---



- Install new batteries.
- Make sure the remote sensor window isn't blocked.
- Make sure the system is in the right mode (TV / VCR / CBL / AUX)

### There are stripes on the screen or colors fade.

---



- There may be interference from other appliances.
- There may be interference between the video source cable and the power cable.
- Make sure the power and video cables are not touching. Check the Hue, Saturation and Color adjustments

### The picture is not sharp.

---



- The signal source may be weak.
- The provider may be experiencing difficulties.
- Check input connections.
- Check the Sharpness of Picture Settings.

### The picture moves.

---



- The source signal may be weak.
- The provider may be experiencing difficulties.
- Check input connections.

### The picture is doubled or tripled.

---



- The source signal may be weak.
- Check input connections.

### The picture is spotted.

---



- There may be interference from other appliances nearby or around the LCD TV.

# PC INPUT PRESET TIMMING TABLE

## PC / Timing Table

No.	Mode Name Resolution	H.Freq. V.Fre.	H. Polarity V. Polarity	Pixel CLK (MHz)	Hor. Total CLK No.	Hor. Display CLK No.	Hor. Bck Porch CLK No.	Hor. Syth CLK No.	Vert. Total Line No.	Vert. Display Line No.	Vert. Bak Porch Line No.	Vert. Syc Width Line No.
1	VGA 70Hz 720*400	31.469 70.087	- +	28.322	900	720	54	108	449	400	35	2
2	VGA 60Hz 640*480	31.469 59.941	- -	25.175	800	640	48	96	525	480	33	2
3	VGA 67Hz 640*480	35.00 66.667	- -	30.24	864	640	96	64	525	480	39	3
4	VGA 72Hz 640*480	37.861 72.809	- -	31.5	832	640	120	40	520	480	20	3
5	VGA 75Hz 640*480	37.5 75.0	- -	31.5	840	640	120	64	500	480	16	3
6	SVGA 56Hz 800*600	35.156 56.25	+ +	36.0	1024	800	128	72	625	600	22	2
7	SVGA 60Hz 800*600	37.879 60.317	+ +	40.0	1056	800	88	128	628	600	23	4
8	SVGA 72Hz 800*600	48.077 72.188	+ +	50.0	1040	800	64	120	666	600	23	6
9	SVGA 75Hz 800*600	46.875 75.0	+ +	49.5	1056	800	160	80	625	600	21	3
10	XGA 60Hz 1024*768	48.363 60.004	- -	65.0	1344	1024	160	136	806	768	29	6
11	XGA 70Hz 1024*768	56.476 70.069	- -	75.0	1328	1024	144	136	806	768	29	6
12	XGA 75Hz 1024*768	60.023 75.029	+ +	78.75	1312	1024	176	96	800	768	28	3
13	60Hz 1280*720	44.76 60.0	- +	74.481	1664	1280	192	136	746	720	22	3
14	60Hz 1280*800	49.68 60.0	- +	83.462	1680	1280	200	136	828	800	24	3
15	60Hz 1360*768	47.368 59.959	+ -	72.0	1520	1360	80	32	790	768	15	5

\* The resolution and the frequencies are displayed on the screen may not exactly same as this list.

# PRODUCT SPECIFICATION

ITEMS		26" LCD - TV	
<b>Panel</b>	Screen Size	26" LCD Panel	
	Aspect Ratio	16 : 9	
	Resolution	1366 x 768	
	Display colors	16.2M colors	
	Viewing Angle (CR>10)	170° Hor. / 170° Ver. (typ.)	
<b>TV Function</b>	Broadcasting System	Analog : NTSC M / N	Digital : ATSC/Clear QAM
	Receiving Channel	Analog : PLL181Ch., CATV 125Ch	Digital : 54M Hz~864M Hz
	Sound System	Analog : Multi-channel TV Sound	Digital : Multi-Track Sound
	Resolution	Analog : 480i	Digital : 1080i, 720p,480p, 480i
	Data Broadcasting	Close Caption , V - Chip	
<b>Video Input</b>	Composite Signal	CVBS	x 2
	Y, C Signal	S-Video	x 2
	Component Signal	Y Pb Pr	x 2 (720P / 1080i , HDTV ready )
<b>PC Input</b>	HDMI Connection	HDMI	x 2
	VGA Connection	D-Sub 15 pin	
	Scanning Frequency	$f_H = 31.5 \sim 60\text{KHz}$ / $f_V = 56 \sim 75\text{Hz}$	
<b>Audio Input</b>	Audio 1	Composite	
		S - Video	
	Audio 2	Component	
	Audio 3	HDMI to DVI & PC jack in	
<b>Audio Output</b>	Speaker ( build-in)	10W + 10W (Average)	
	RCA Out	Left / Right	
	Digital Audio Out	SPDIF (DTV) .	
<b>Feature</b>	Function Keys	Power , Input , Menu , Up/Down(Channel) , +/- (Volume)	
	Video Performance	3D Comb-filter , 3D De-interlace , Aspect Ratio Control (ARC) , Auto Picture Control, Noise Reduction	
	Other Control	Sleep Timer, Timer On, Timer Off	
<b>Power</b>	Power Supply	AC 100V ~ 240V , 50 / 60Hz	
	Power Consumption	< 200 W	
<b>Dimension</b>	W x H x D	655 mm * 505 mm * 175 mm	
<b>Weight (net)</b>	Without Accessories	11 Kg	





[www.westinghousedigital.com](http://www.westinghousedigital.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>