



Westinghouse

6-Outlet Yard Stake with Dual Timers

All Weather 6-Outlet Safety Power Station

with Digital Photocell Timer & Programmable 7 Day Digital Timer

NOTE: To set up Timer for the first time, plug in the timer for 10 minutes, then push the "Reset" button to clear all settings.

To Use Digital Timer

Slide Switch To "Timer"

To Set the Current Time While time appears in the LCD.

- 1 Push the "Set Time" button once. The time display will be flashing. (If the display stops flashing before you finish, just push "Set Time" again to continue.)
- 2 Push the "Day" button until the current day appears on top.
- 3 Push the "Hour" button until the current hour appears. Be sure to cycle through the hours until AM or PM appears to the right of the time.
- 4 Push the "Min" button until the current minute appears. (Holding the "Min" button down will make the minutes advance rapidly.)
- 5 Push the "Set Time" button to finish the program – the display will stop flashing. (If it stops flashing before you push the button, that's okay.)

To Set Program

Slide Switch To "Timer" - be sure to set the current time first (see left)

- 1 Push the "Mode" button once. The words "Program #1 ON" will appear. We will now set the time for your plugged-in devices to turn ON.
- 2 Push the "Set Time" button once. The time display will be flashing. (If the display stops flashing before you finish, just push "Set Time" again to continue.)
- 3 All of the days of the week will appear on top. This means that the On/Off times you set will run every day of the week. To have the program run only on specific days, push the "Day" button to cycle through the different day options. The choices in order are:

MO TU WE TH FR SA SU - all the days of the week	MO – Monday Only	FR – Friday Only
MO TU WE TH FR SA - Monday through Saturday	TU – Tuesday Only	SA – Saturday Only
MO TU WE TH FR - Monday through Friday	WE – Wednesday Only	SU – Sunday Only
SA SU - Saturday and Sunday only	TH – Thursday Only	

- 4 Push the "Hour" button until the desired ON hour appears. Be sure to cycle through the hours until AM or PM appears to the right of the time.
- 5 Push the "Min" button until the desired ON minute appears.
- 6 Push the "Set Time" button to finish the program - the display will stop flashing. (If it stops flashing before you push the button, that's okay.)
- 7 Push the "Next Program" button. The words "Program #1 OFF" will appear.
- 8 Repeat 2 - 6 to set the OFF time.
- 9 Push the "Mode" button to finish the program and return to the current time.

You are now finished setting Program #1. To set additional programs, push "Mode" to enter the programming mode and then "Next Program" to reach Program 2, 3, etc. Up to 6 programs can be entered.

NOTE: The digital timer turns On and Off when the current time matches the time you set in the program, and is not retroactive. This means that if the current time is 5pm and you set the timer to turn ON at 4pm, the program will not run until tomorrow at 4pm.

To Use Photo Cell Timer

Slide Switch To "Photo Cell"

- 1 Push the "Mode" button once. You will see the words "On At Dusk, OFF 0:00 At Dawn." This means that the plugged-in devices will power ON when it gets dark, and will power OFF at sunrise.
- 2 Push the "Photo Set" button repeatedly to cycle through the different Dusk to Dawn options. You may have your devices turn ON at Dusk, and turn OFF from 1 to 12 hours after dusk.
- 3 Push the "Mode" button once to finish programming. It is okay if the current time displayed is not correct; the Photocell timer will still work correctly. If desired, you may set the current time by following the instructions to the left.

Manual On/Off

The timer can be manually turned On or Off as desired.

- Push the ON/OFF/AUTO button to change the current mode to On, Off, or Auto (follow the timer settings).

Ni-MH battery included.

10Min Charge retains program for up to 1 months.
Full charge retains for more than 2 months.



Contains Ni-MH (nickel metal hydride) battery. Battery must be recycled or disposed of properly.

Customer Service Assistance: Toll Free 1-800-730-3707

Packaging and Use Instructions

General: An outdoor seasonal-use cord-connected wiring device shall contain all of the following or equivalent statements (following the word CAUTION) on the outer surface of the smallest unit package or on a stuffer sheet or tag (or its equivalent):

- 1 **CAUTION – Risk of Fire.** Not for permanent installation. Use only with a total of 12 Ampere maximum Christmas-tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.
- 2 If using Christmas tree or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (pushin) lamps to this cord set.
- 3 Cord sets shall be plugged into a GFCI-protected receptacle.
- 4 If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
- 5 After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- 6 For temporary outdoor installation and use - Not to exceed 90 days

15Ft. (4.5m) AWG 12/3 SJTW
Rated 125V/15A/1875W/60Hz

Interactive Programming & Operating Tutorial
available online at: www.thencc.com



is the registered trademark of The Stanley Works and Subsidiaries. Produced under license by The NCC.
Distributed by: The NCC, Inc., Brooklyn, NY 11220 • www.thencc.com • MADE IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>