 


COOKTOP PARTS

For Model: TER20W0DW0
(White)

30" ELECTRIC
FREESTANDING
CONVENTIONAL
RANGE

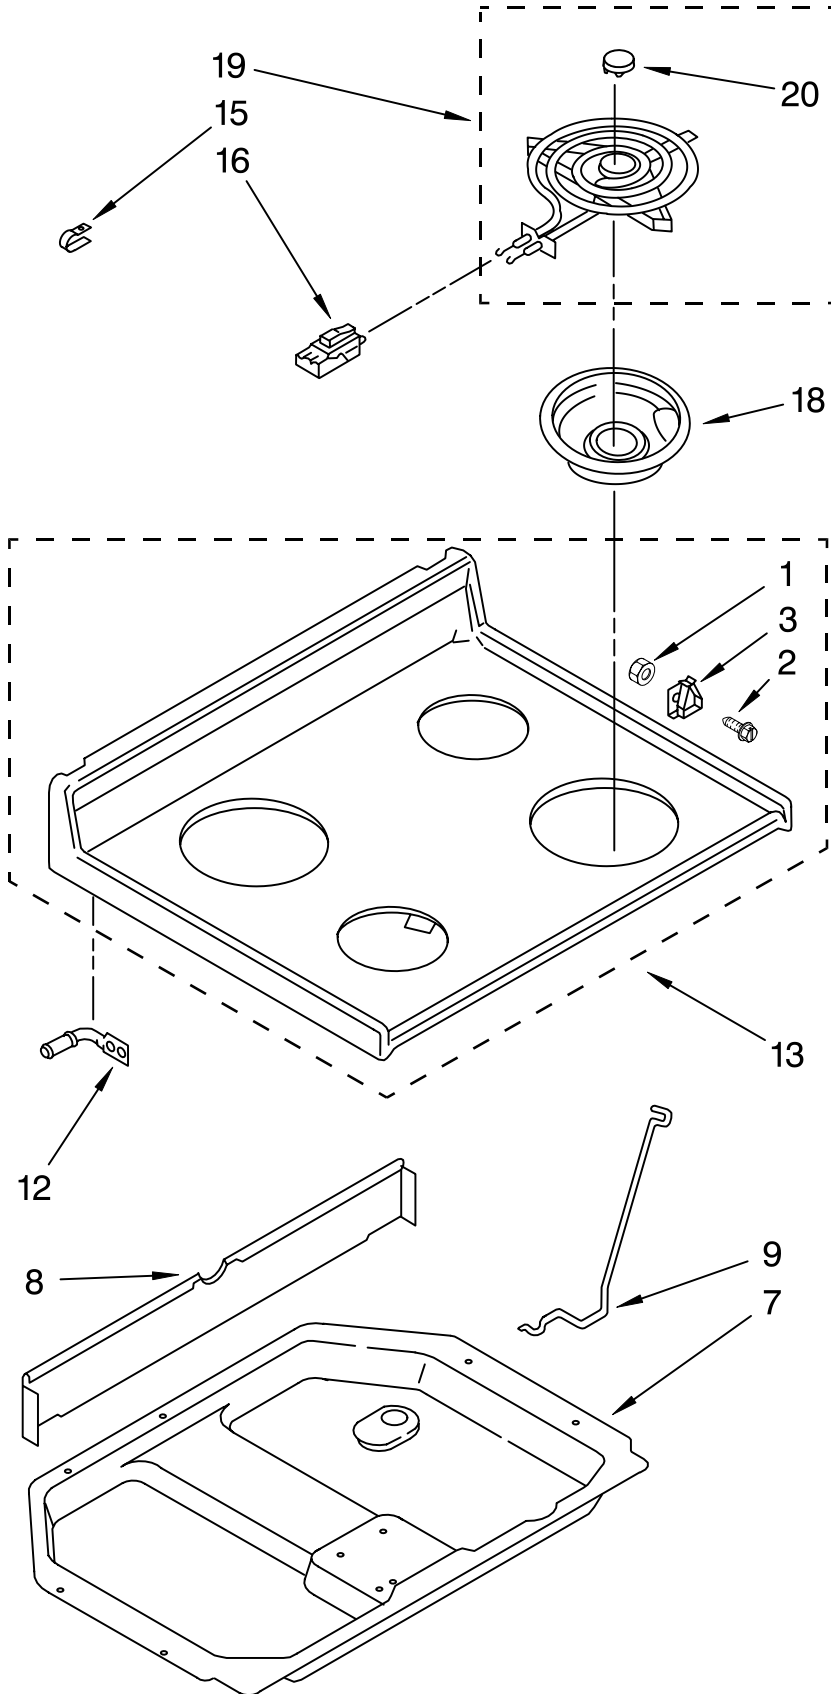

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	814103	Nut (4)
2	487887	Screw, 3-48 x 1/4 (4)
3	3148790	Clip, Hold Down (4)
7	3169186	Box, Burner
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10-16 x 1/2 (4)
9	3148659	Rod, Cooktop (2)
12	3169384	Pin, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
13	3170981	Cooktop White
	690989	Screw, 10-32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10-16 x 1/2
16	312606	Clip, Mtg. Receptacle (4)
	313808	Screw, 6-32 x 9/32 (4)
18	3150246	Pan, Reflector 6" Element (2)
	3150247	8" Element (2)
19		Unit, Surface
	660528	6" L.F. & R.R.
	660530	8" R.F. & L.R. (Includes Illus. 20)
20	309195	Medallion (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

 For Model: TER20W0DW0
(White)

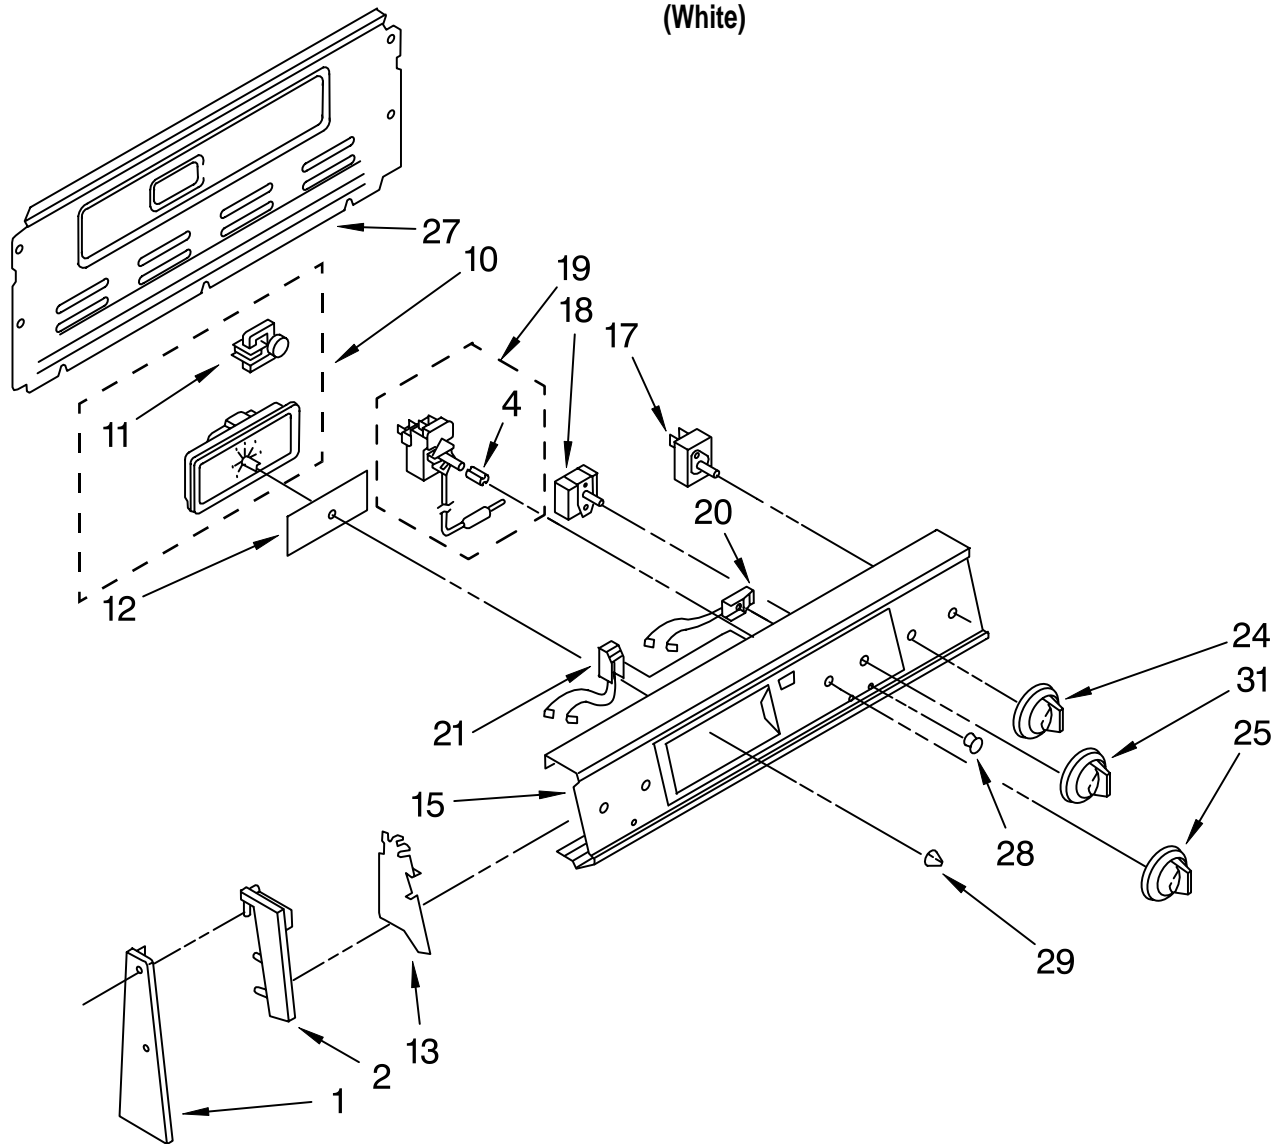

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	3187671	End Trim R.H.
	3187672	End Trim L.H.
	343641	Screw, 10-16 x 1/2 (4)
2	3150441	End Cap R.H.
	3150442	End Cap L.H.
	254225	Screw, 8BT x 1/4 (4)
4	3169525	Sleeve, Adaptor
10	3169298	Timer, Clock
	246132	Screw, 8A x 3/8 (2)


Illus. No.	Part No.	DESCRIPTION
11	309822	Motor, Timer
12	3148852	Glass, Timer
13	313608	Shield (2)
	246132	Screw, #8 x 3/8 (2)
15	3169196	Panel, Control
	690989	Screw, 10-32 x 1/2
17		Switch, Infinite
	3148951	6" Element (2)
	3148953	8" Element (2)
	308119	Screw, 8-32 x 1/4 (8)
18	3150430	Switch, Selector
	308119	Screw, 8-32 x 1/4 (2)

Illus. No.	Part No.	DESCRIPTION
19	3169302	Thermostat, Oven
	311932	Screw, 6-32 x 1/4 (2)
20	314031	Light, Indicator (Oven)
21	3150662	Light, Indicator (Surface Unit)
24	3149983	Knob, Control (4) (Infinite Switch)
25	3149987	Knob, Control (Thermostat)
27	3187332	Rear Cover Control Panel
	343641	Screw, 10-16 x 1/2 (8)
28	313101	Lens, Amber (2)
29	3169182	Knob, Timer
31	3149984	Knob, Selector

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

 For Model: TER20W0DW0
(White)

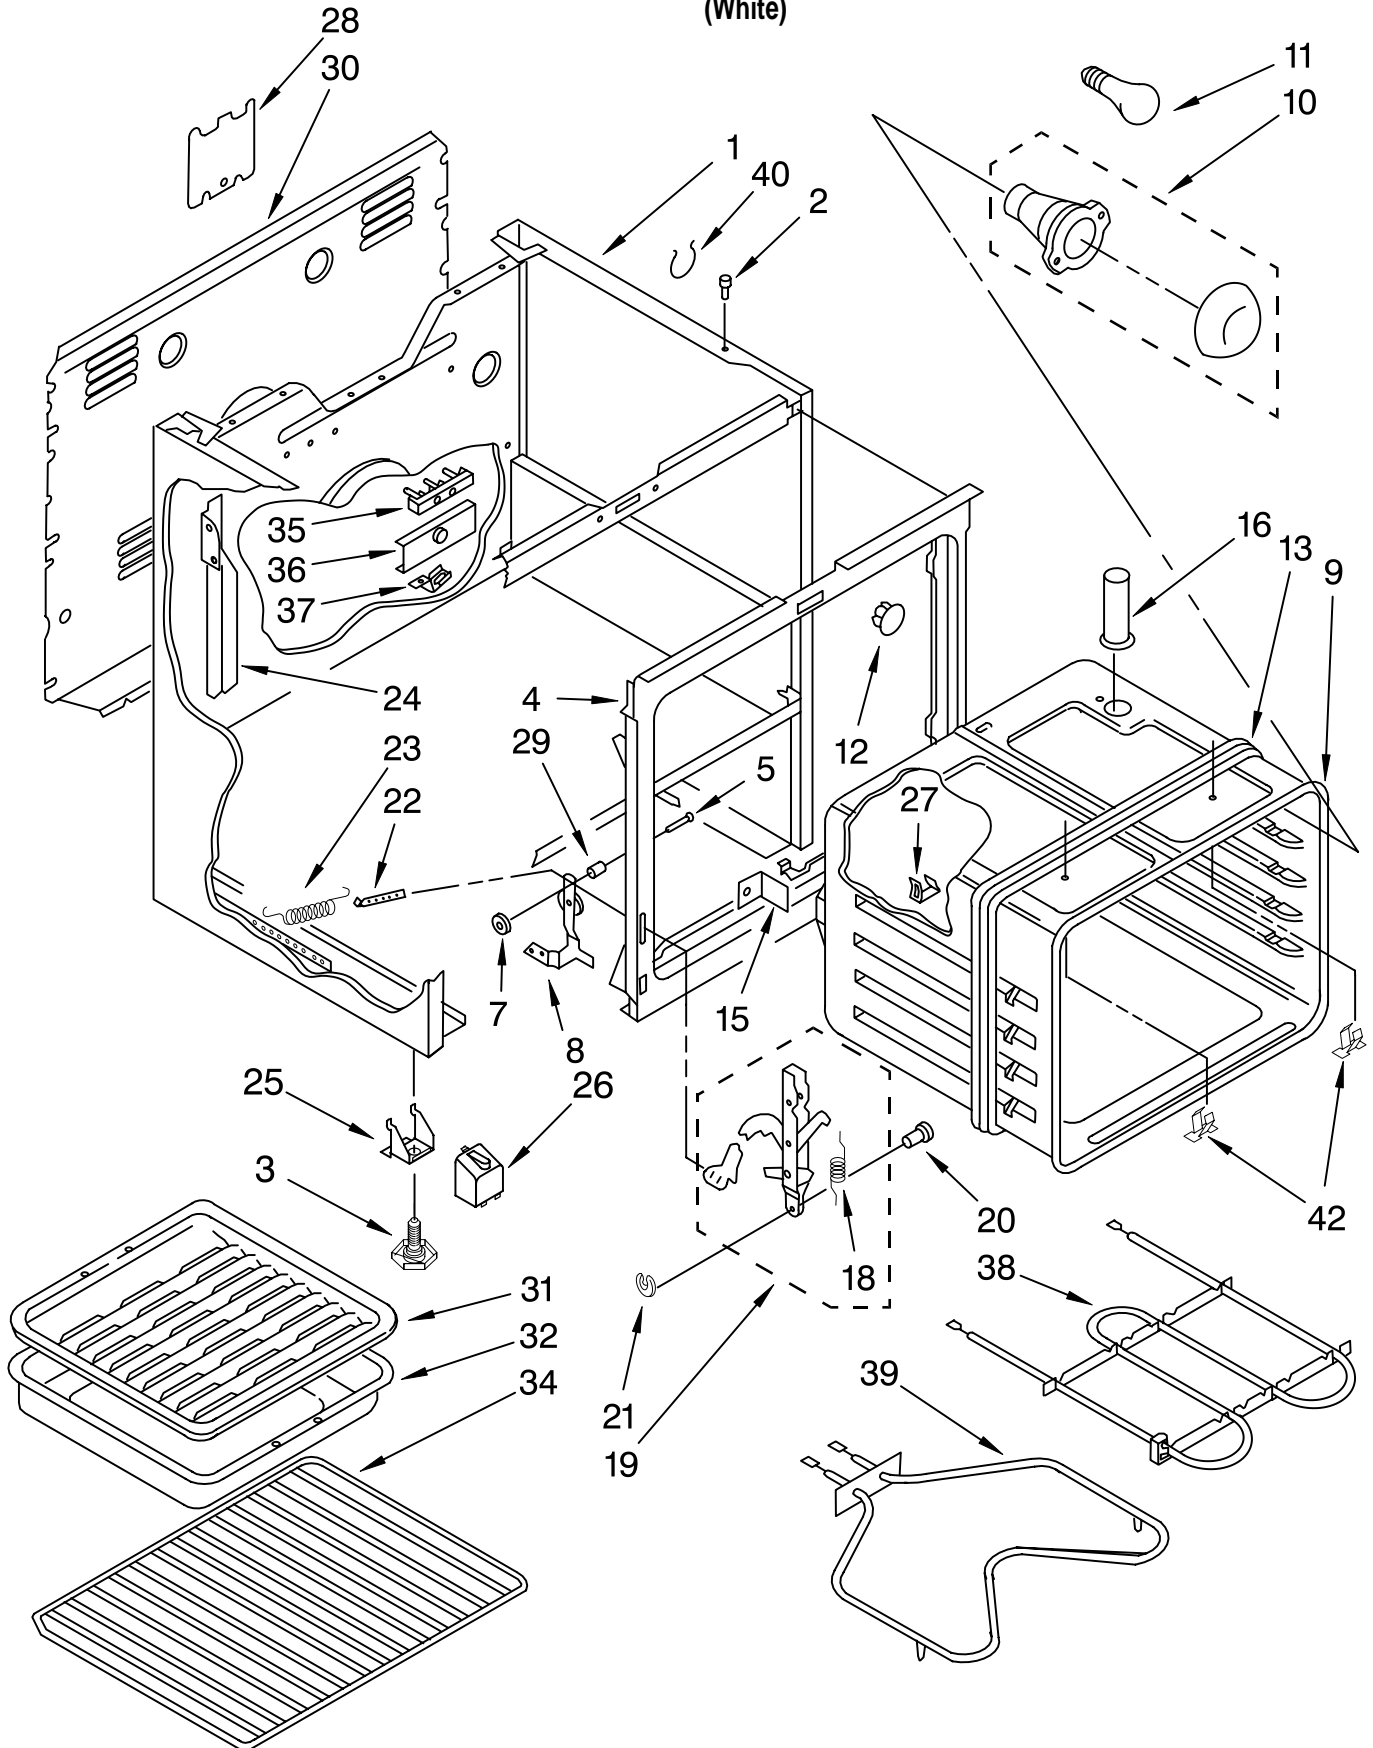

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: TER20W0DW0
(White)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1		Main Chassis
	330086	White
2	238614	Bumper, Cooktop (2)
3	3169499	Leg Leveling (4)
4	3176714	Frame, Front
	3150537	Screw
5	307985	Pin, Hinge (2)
7	308306	Pushnut (2)
8	3176710	Hinge, R.H.
	3176711	Hinge, L.H.
	343641	Screw, 10-16 x 1/2 (4)
9	3176612	Oven (30" Conv.)
10	3150505	Socket Assembly
11	311255	Bulb, Oven Light

Illus. No.	Part No.	DESCRIPTION
12	308535	Plug, Button
13	3169283	Seal, Heat
15	311220	Bracket, Oven Mounting
	343641	Screw, 10-16 x 1/2 (4)
16	3169143	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
18	308207	Spring, Stop
19	3176708	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308127	Spring, Door (2)
23	308125	Anchor, Spring (2)
24		Support, Channel
	313196	L.H.
	313197	R.H.
	343641	Screw
25	3169418	Support, Foot (2)
	343641	Screw (2)
26	3169448	Cover, Foot (2)
27	313382	Clip, Bulb (2)

Illus. No.	Part No.	DESCRIPTION
28	307972	Plate, Service
	343641	Screw (2)
29	309111	Snubber, Door (2)
30	3148975	Cover, Rear
	343641	Screw (8)
31	3147563	Grid, Broiler
32	3169076	Pan, Broiler
34	308173	Oven Rack (2)
35	258076	Block, Terminal
	98884	Screw (2)
	112432	Nut (2)
36	3150190	Bracket, Service
	343641	Screw (2)
37	308498	Ground Strap
	690989	Screw
	313660	Clip
38	660579	Element, Broil
	3150532	Screw, 10-32 x 7/16 (2)
39	661170	Element, Bake
	3150532	Screw, 10-32 x 7/16 (2)
40	313438	Clip, Harness
42	3169107	Plug Button(2)


Following Parts Not Illustrated

309961	Insulation, Oven Wrap
814091	Anti-Tip Kit (Floor Mount)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

 For Model: TER20W0DW0
(White)

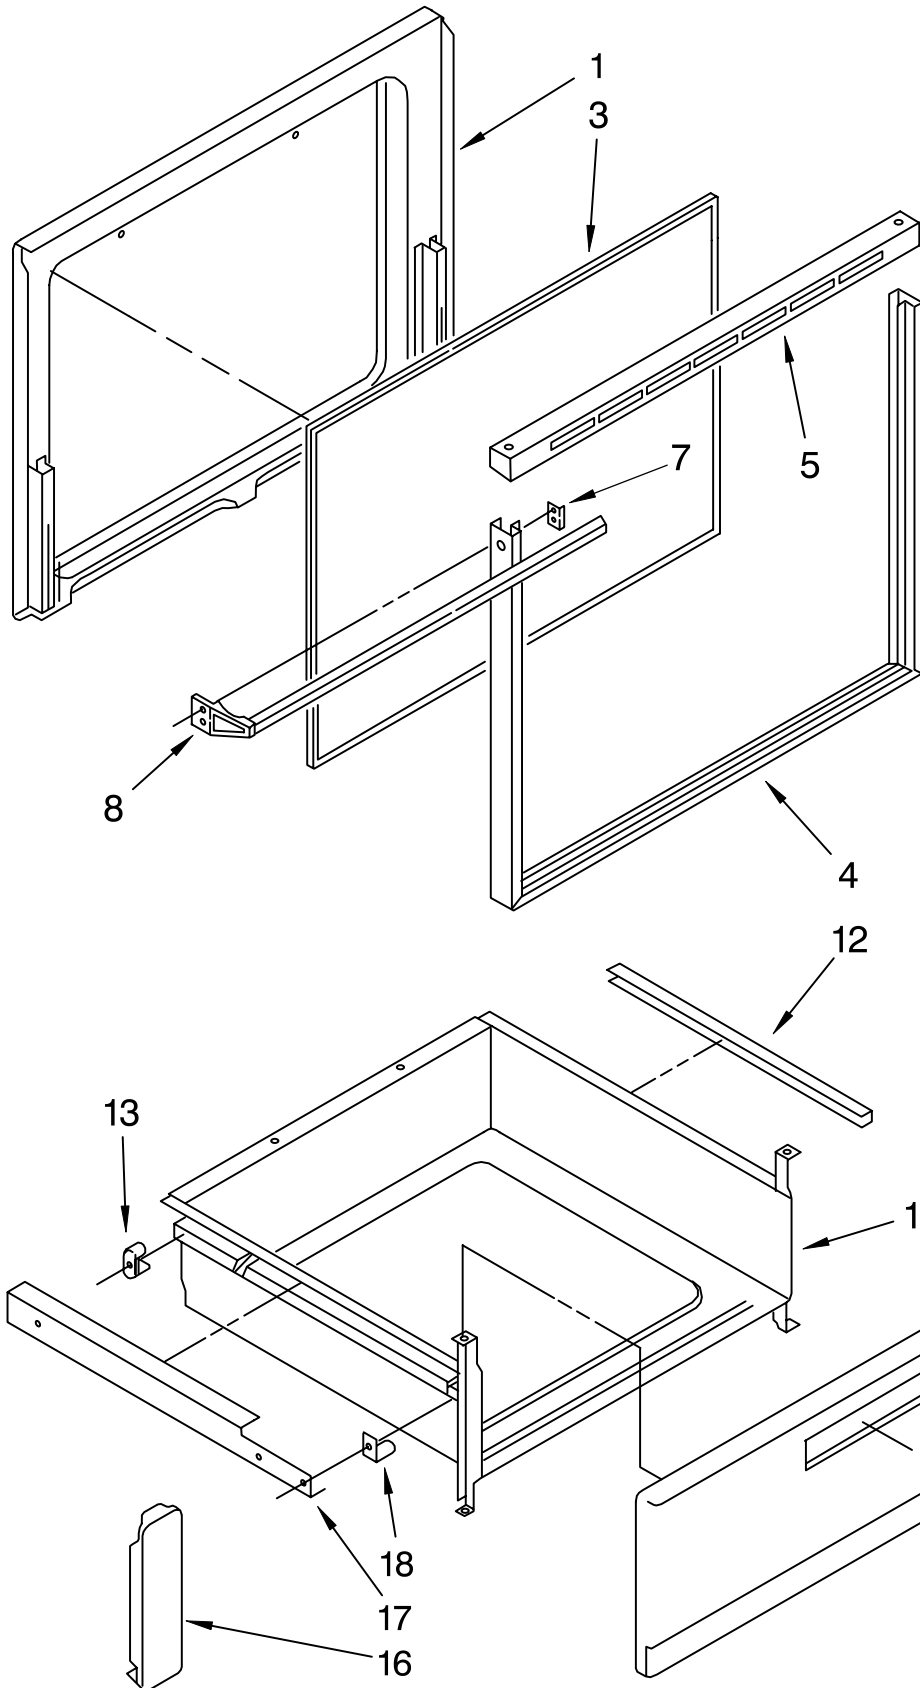

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172221	Liner, Door
	3149333	Screw
3		Outer Glass Panel
	3148186	Black Glass
4	3188997	Frame, Panel
	3149253	Screw (4)
	3149333	Screw (3)
5	3188692	Top, Door Vent
	3149333	Screw (2)
7	3148282	Clip, Handle (2)
8		Handle, Door
	3188695	Black color
	3169474	Screw (2)
11	327887	Drawer, Utility
12	309329	Protector, Drawer Slide (2)
13	307980	Glide, Rear (2)
	313349	Screw, 8-18 x 1/2 (3)
14		Panel, Drawer
	3169430	White
	313349	Screw, 8-18 x 1/2 (2)
15		Handle, Snap-In
	3150612	White
16	3169420	Bracket, Rail (2)
17		Rail, Slide
	3149255	R.H.
	3149256	L.H.
		(Includes No. 18)
	307748	Screw (2)
18	3149257	Glide, Front (2)
	307748	Screw (2)



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

 For Model: TER20W0DW0
(White)

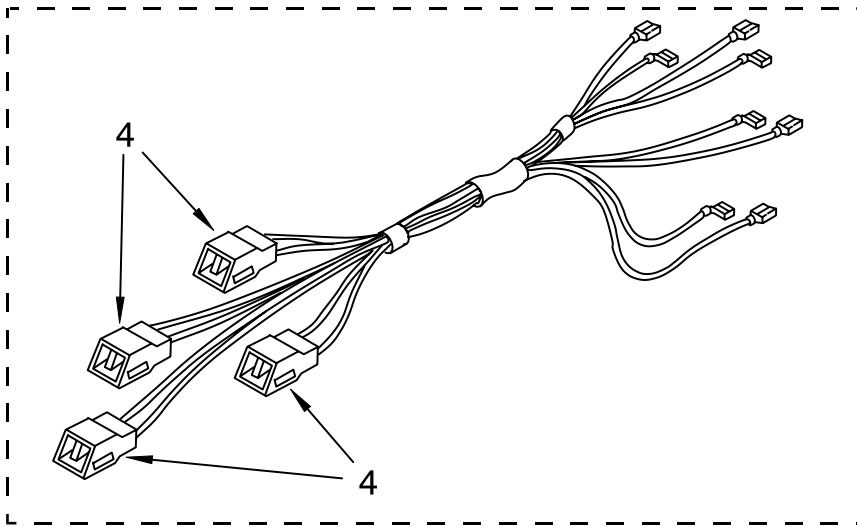

Illus. No.	Part No.	DESCRIPTION
1	3149881	Harness, Wire (Surface Units)
2	3190492	Harness, Wire (Oven)
3	3169449	Clip, Snap-In
4	330031	Receptacle

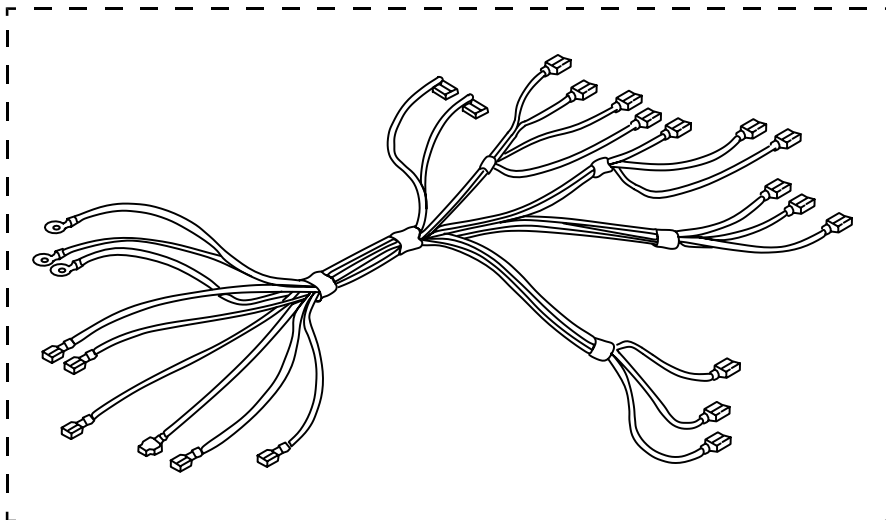  

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LITERATURE AND OPTIONAL PARTS

For Model: TER20W0DW0
(White)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
		12 Ga. 150°c
242820		Wire, Black
		14 Ga. 150°c
242821		Wire, Blue
		14 Ga. 150°c
242822		Wire, Brown
		14 Ga. 150°c
242830		Wire, Brown
		14 Ga. 200°c
242823		Wire, Green
		14 Ga. 150°c
242824		Wire, Orange
		14 Ga. 150°c
242829		Wire, Red
		12 Ga. 150°c
242825		Wire, Red
		14 Ga. 150°c
242831		Wire, Red
		14 Ga. 200°c
242826		Wire, White
		14 Ga. 150°c
242827		Wire, Yellow
		14 Ga. 150°c
242832		Wire, Yellow
		14 Ga. 200°c
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
	72112	Toast
	72113	Platinum
**	511873	White Porcelain (2 Oz.)

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, PRESSURIZED SPRAY (13 oz.)</u>		
	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285365	Toast
	285366	Platinum
	285006	Superior Black
	206922	Primer (White)
	206925	Leveler (Thinner) (2 Oz.)
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Harvest Gold (Uncut)
	285367	Toast (Uncut)
	285368	Platinum (Uncut)
**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.		
<u>REFINISHING MATERIAL</u>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean (1/2 Pt.)
	261582	Grease

Illus. No.	Part No.	DESCRIPTION
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25")
<u>OPTIONAL PARTS NOT INCLUDED</u>		
	814234	Anti-Tip Kit (Wall Mount)
<u>Following May Be Purchased</u>		
<u>DO-IT-YOURSELF REPAIR MANUALS</u>		
	LIT677973	Manual, Range (Do-It-Yourself)
<u>LITERATURE PARTS</u>		
	LIT3169413	Wiring Diagram
	LIT3189985	Instructions, Installation
	LIT3150400	Installation Instr (Templet)
	LIT3190496	Guide, Use & Care

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>