




# COOKTOP PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
 (White) (Black) (Stainless)

30" ELECTRIC FREESTANDING  
 STANDARD CLEAN RANGE

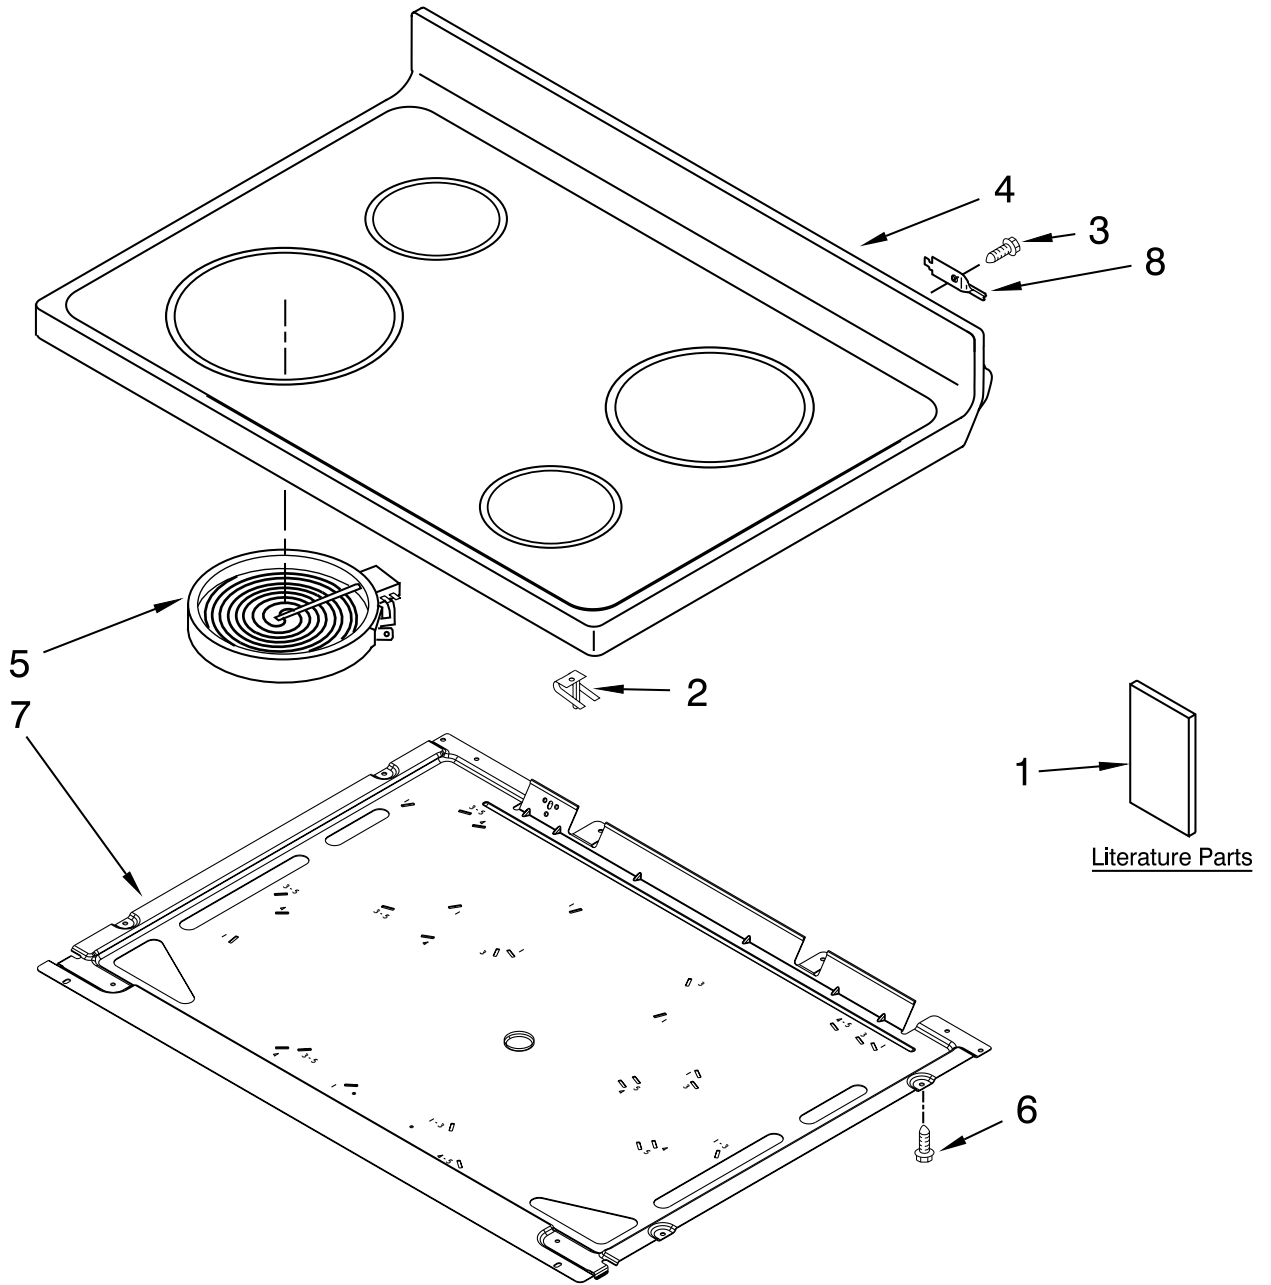

Illus. No.	Part No.	DESCRIPTION
1		Literature
	W10403812	Instructions Installations
	W10394386	Owners Manual Tech Sheet
	W10384447	English
	W10384462	French
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10225448	Spring, Locator
3	3196178	Screw
4		Cooktop
	W10380658	White
	W10380659	Black

Illus. No.	Part No.	DESCRIPTION
5		Element, Surface
	W10178016	3000/1400W - LF
	8273994	1200W - LR/RR
	8273993	1800W - RF
6	3196169	Screw
7	W10106409	Pan, Radiant
8	3195060	Hinge, Cooktop

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
(White) (Black) (Stainless)

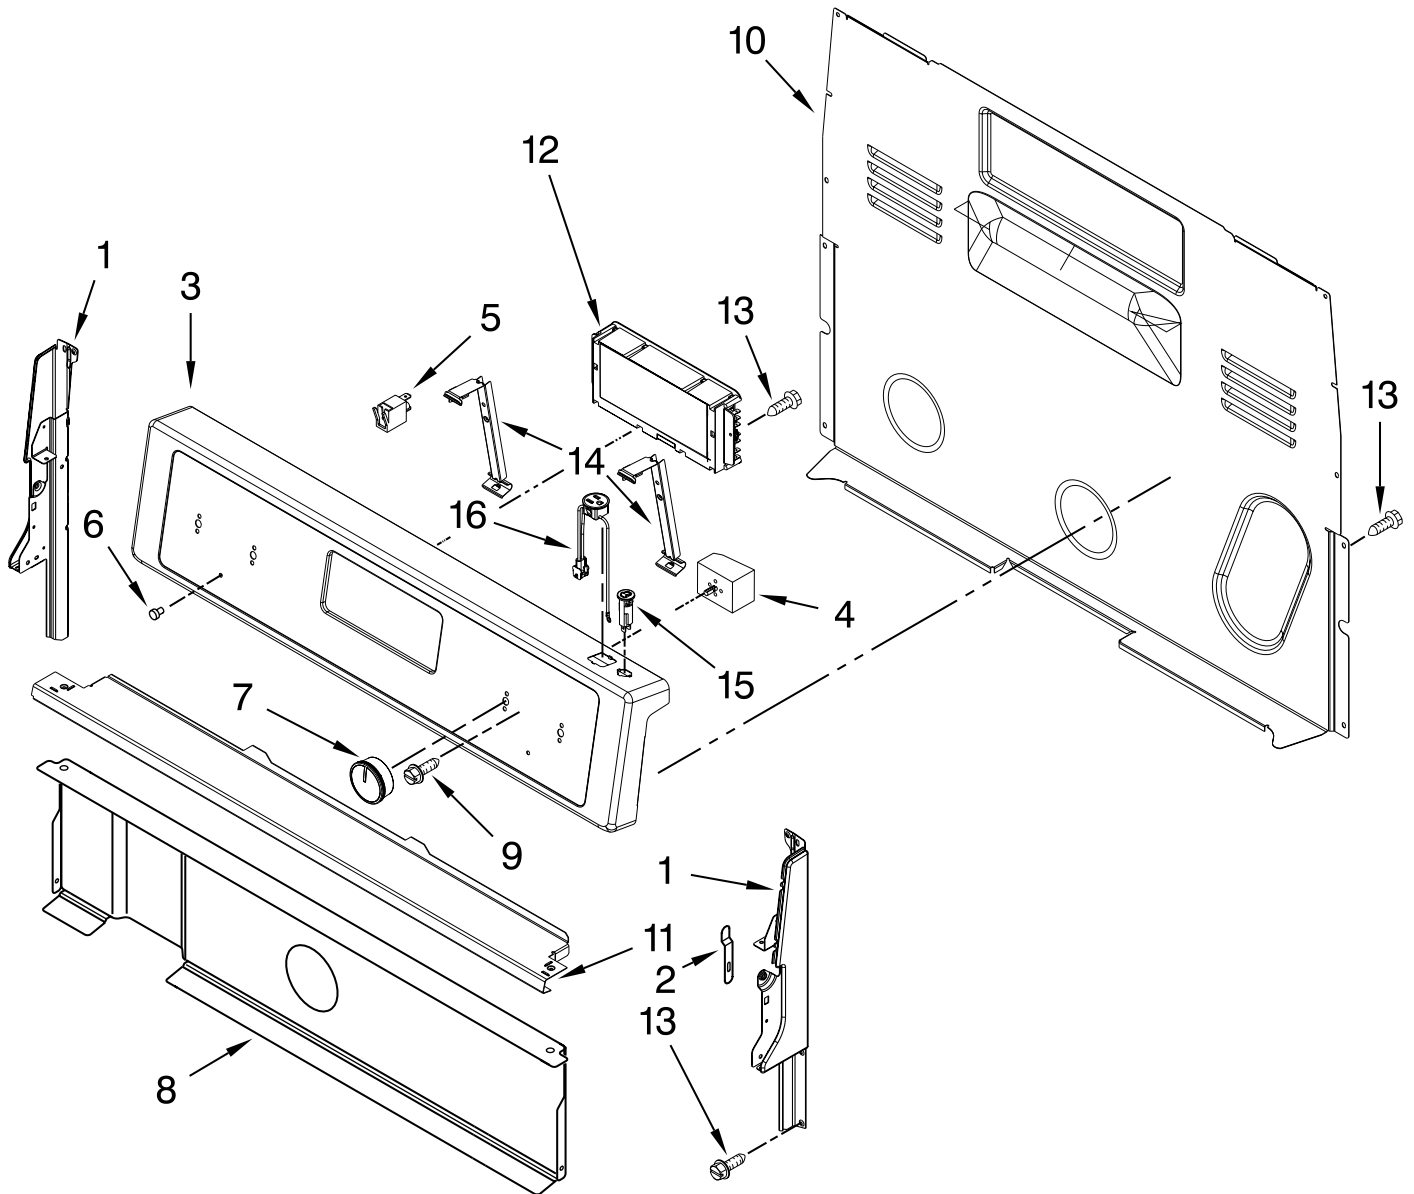

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10184433	White LH
	W10184434	White RH
	W10184437	Black LH
	W10184438	Black RH
2	3196200	Clip, Spring
3		Panel, Backguard
	W10370107	White
	W10370105	Black
	W10339406	Stainless


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	W10167742	Left Front
	3148951	Left & Right Rear
	3148953	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob
	W10339426	White
	W10339425	Black
8	W10134247	Shield, Heat
9	3400882	Screw
10	8272473	Cover, Upper
11	W10182322	Brkt-Mntg, Console

Illus. No.	Part No.	DESCRIPTION
12		Control, Range (LCC190)
	W10348618	White
	W10348617	Black
	W10424885	Stainless
13	3196178	Screw
14	W10324410	Brkt-Mntg, EOC
15		Breaker, Circuit
	9757601	White
	9757602	Black
16		Receptacle, Fused
	W10203476	White
	W10203475	Black

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
 (White) (Black) (Stainless)

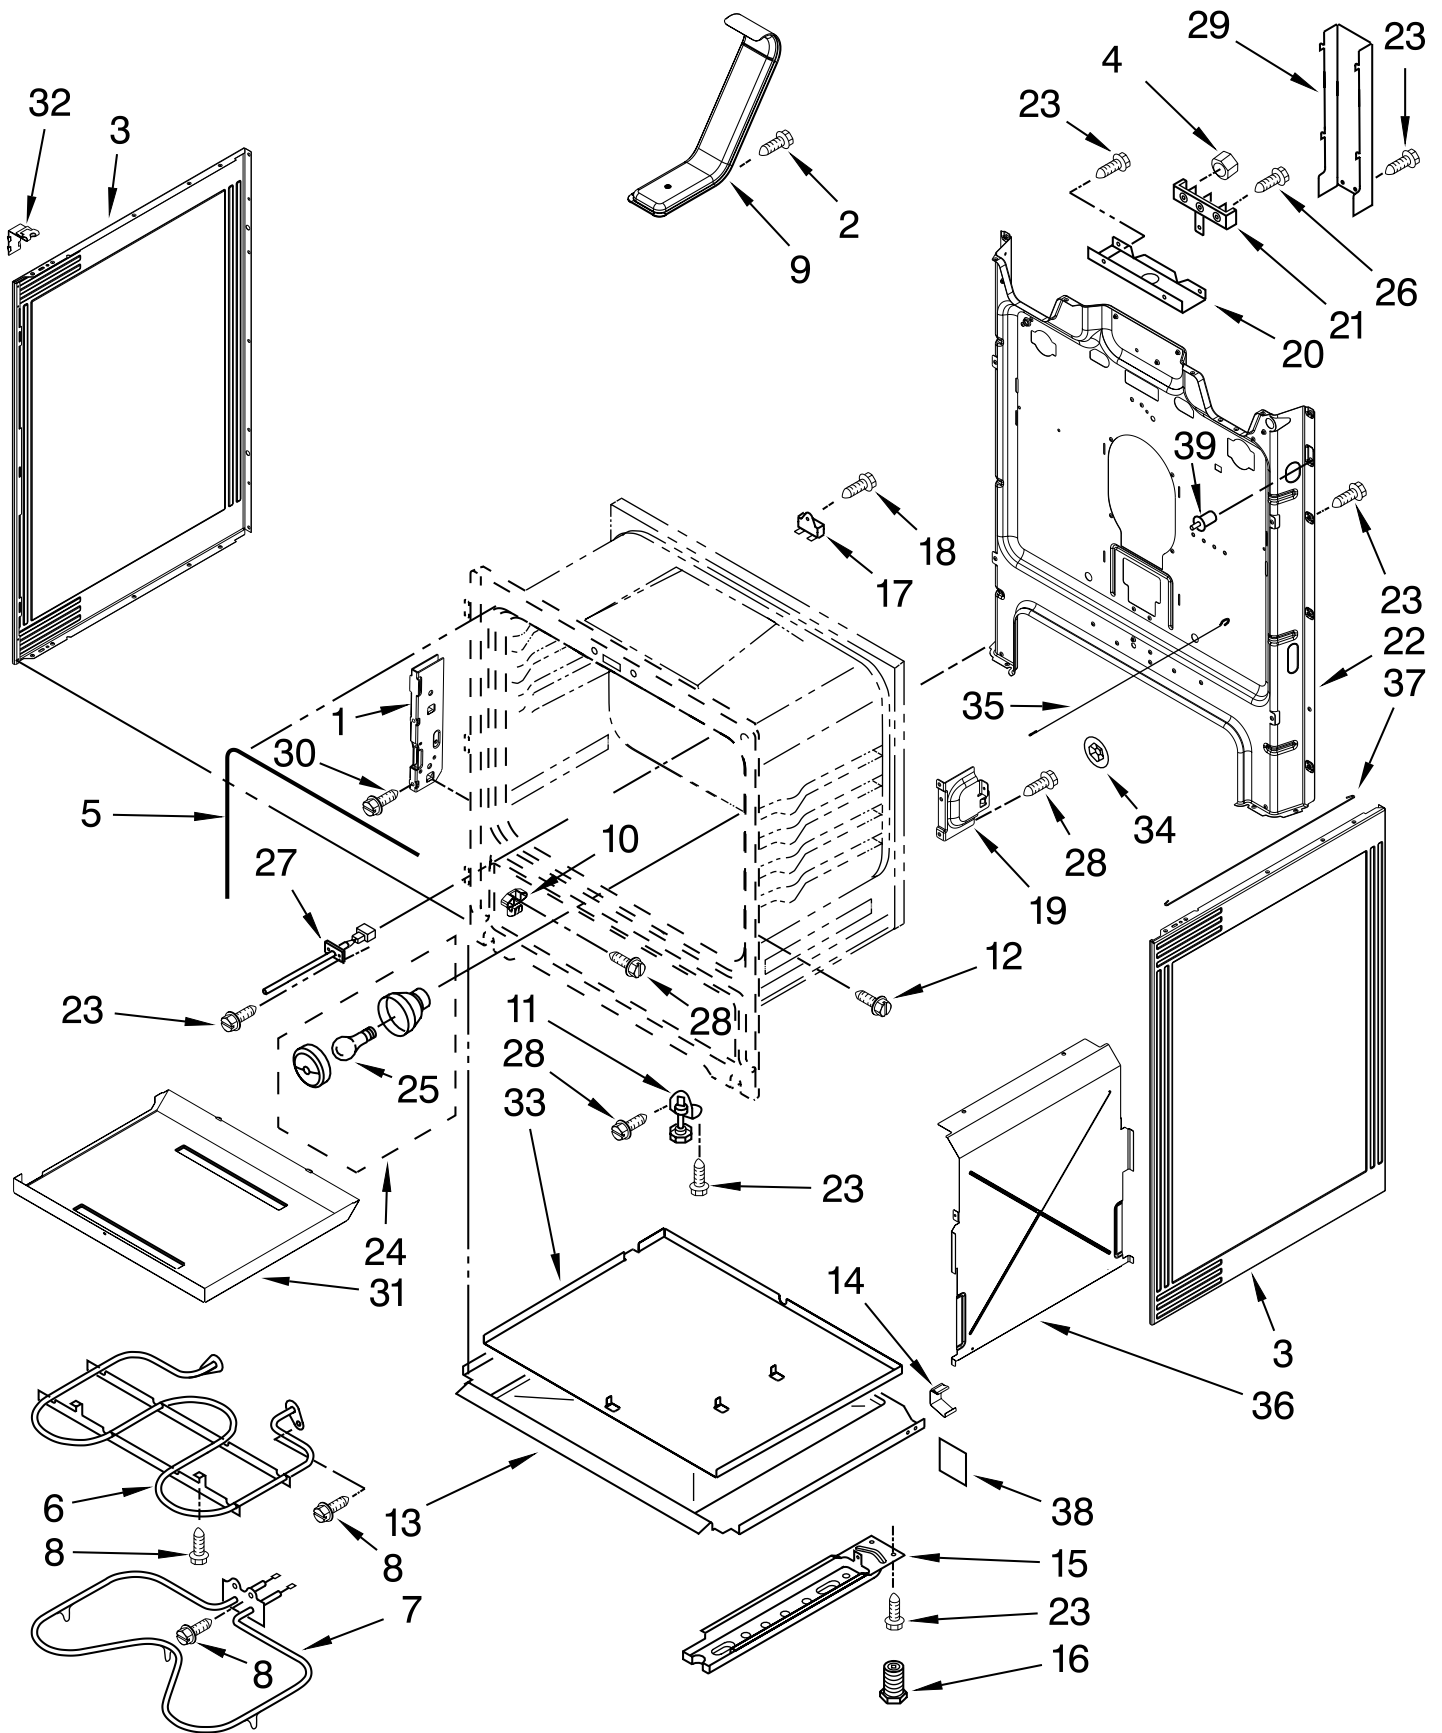

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
(White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	W10289077	Receiver, Hinge
2	3196154	Screw
3		Panel, Side
	W10322769	White-Textured
	W10322770	Black
4	7103P027-60	Nut
5	8522416	Seal, Oven Door
6	W10308476	Element, Broil
7	W10308474	Element, Bake
8	3196174	Screw
9	W10134285	Flue
10	W10317898	Glide, Drawer Frnt
11	W10341186	Foot, Front
12	W10067840	Screw
13	W10134121	Tray, Insulation
14	W10137382	Clip, Panel

Illus. No.	Part No.	DESCRIPTION
15		Rail, Base
	W10390007	Left Hand
	W10390008	Right Hand
16	W10058460	Foot, Rear
17	3196548	Thermal, Fuse
18	3196172	Screw
19	W10355173	Support, Oven
20	3186034	Bracket, Service
21	W10246624	Block, Terminal
22	W10289149	Back, Main
23	3196178	Screw
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	3400016	Screw
27	W10181986	Sensor, Oven
28	3196169	Screw
29	W10326122	Cover, Terminal Box


Illus. No.	Part No.	DESCRIPTION
30	W10031780	Screw
31	W10183712	Tray, Hidden-Bake Element
32	W10183541	Clip, Spring Steel
33	W10134125	Heat Shield
34	3400968	Nut
35	9757239	Rod, Door Switch-Rear Mount
36	9758238	Retainer, Side
37	W10196451	Rod-Insul Retainer
38	9759689	Card-Insulator
39	9757262	Switch, Door

## INSULATION

8273263	Insulation, Wrap
8272611	Insulation, Back
W10333344	Insulation, Flue

# DRAWER & BROILER PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
 (White) (Black) (Stainless)

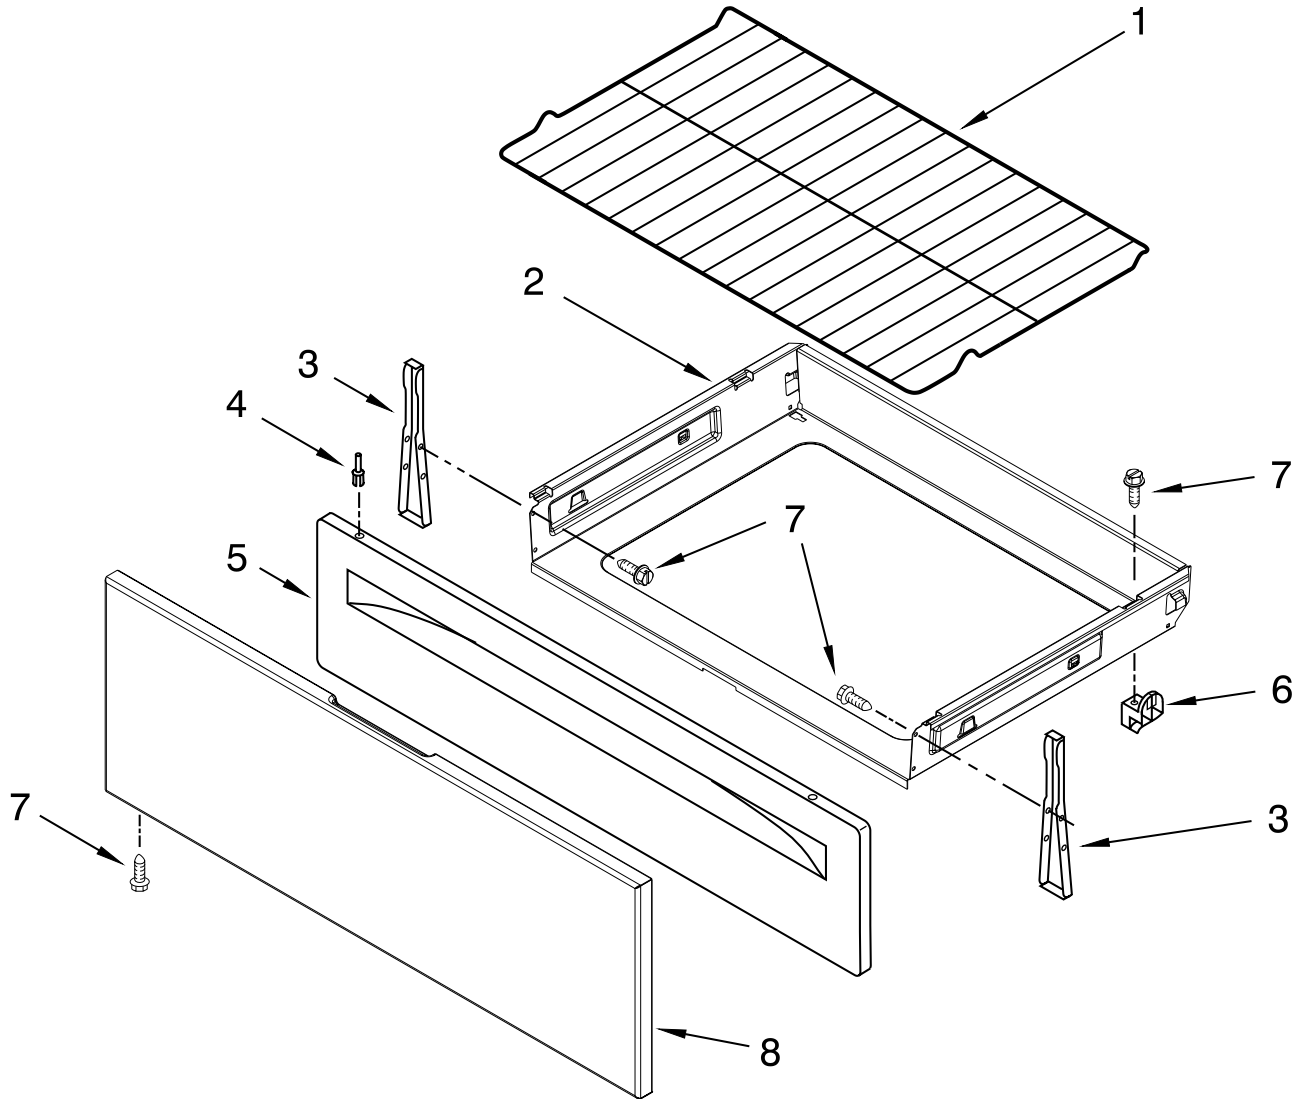


Illus. No.	Part No.	DESCRIPTION
1	W10268578	Rack, Oven
2	W10300032	Drawer, Storage
3	W10462912	Bracket, Drawer
	W10462910	Wht & Blk Models
	W10462910	Stainless Model
4		Rivet, Push
	3196814	White
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8053341	Black
6	W10317899	Glide, Drawer
7	3196165	Screw
8	W10330070	Panel (Stls. Mdl)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
 (White) (Black) (Stainless)

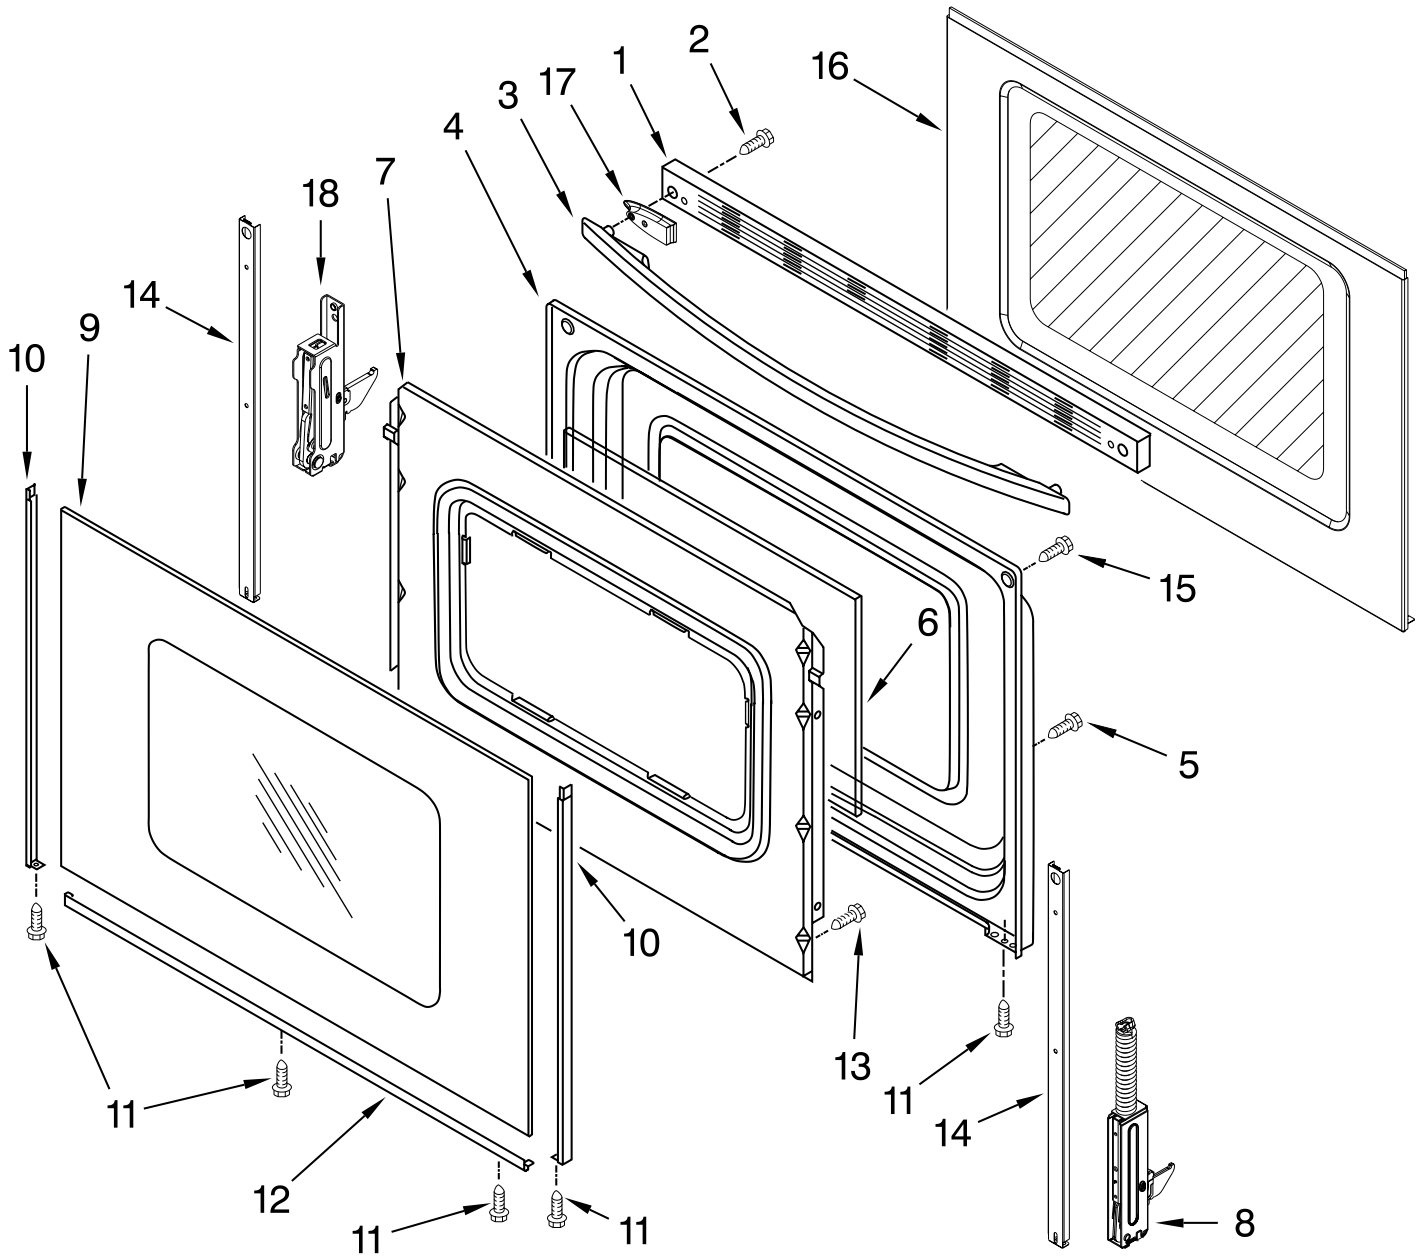

Illus. No.	Part No.	DESCRIPTION
1	W10310920	Trim, Top White
	W10310922	Black
2	W10465148	Screw
3	W10300489	Handle, Door White
	W10300490	Black
	W10254687	Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Window, Inner
7	9761501	Retainer, Insul.

Illus. No.	Part No.	DESCRIPTION
8	W10299225	Hinge Active (Wht & Blk Models)
	W10299226	Active (Stainless Models)
9	W10409945	Glass, Outer White
	W10409946	Black
10	8523172	Trim, Side White Left Hand
	8523166	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12	8523175	Trim, Lower White
	8523177	Black
13	W10031780	Screw
14	W10113759	Strap, Door
15	W10200660	Screw
16	W10330077	Door, Outer (Stainless Only)
17	W10410341	Standoff, Handle (Stainless Only)
18	W10299227	Hinge, Passive

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: YWFE330W0AW0, YWFE330W0AB0, YWFE330W0AS0  
(White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

3196520 Clip, Wire

## REFINISHING MATERIAL

242756 Touch-Up Self-Clean(1/2 Pt)  
9757339 Harness, Wire (Bake Hidden)

## INSULATION

261514 Insulation, Fiberglass (1-1/2" x 24" x 120")  
240132 Insulation, Fiberglass (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2oz.)

72017 White  
511873 White Porcelain (2 Oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White  
285006 Superior Black  
206922 Primer (White)

## PAINT, BULK (1 qt.)

799344 White (Uncut)

## ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25')  
3191048 Cleaner, Glass  
4396923 Pan, Broiler  
31605 Kit, Cooktop Care  
31463A Protectant, Cooktop  
W10355049 Wipes, Cleaning (Stainless Steel)  
W10355016 Cleaner, Stainless Steel  
W10355051 Cleaner, Cooktop  
W10355010 Cleaner, Kitchen/Appliance  
WA906B Scraper, Cooktop  
W10275756 Cleaner & Polish (Granite)  
31617A Cleaner (Gas Grate & Drip Pan)  
4396096RB Griddle, Gourmet  
W10268578 Rack, Oven (Standard Flat)  
4396923 Broiler Pan & Grid (Porcelain)  
W10123240 Broiler Pan & Roasting Rack

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## ANTI-TIP KIT

W10306542 Anti-Tip Kit  
7101P485-60 Screw, Anti-Tip

## WIRING HARNESS PARTS

W10273581 Harness, Wire (Cooktop Left)  
W10273584 Harness, Wire (Cooktop Right)  
W10083650 Harness, Wire (Sensor/Dr Switch)  
3196154 Screw  
W10349660 Harness, Wire (Main)  
W10244925 Cord, Power  
3196173 Screw  
3196174 Screw (Grnd Wire / Back)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>