




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 6600 SL. You'll find the answers to all your questions on the WHIRLPOOL ADP 6600 SL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADP 6600 SL  
User guide WHIRLPOOL ADP 6600 SL  
Operating instructions WHIRLPOOL ADP 6600 SL  
Instructions for use WHIRLPOOL ADP 6600 SL  
Instruction manual WHIRLPOOL ADP 6600 SL

GB ADP 2656

### Quick Reference Guide

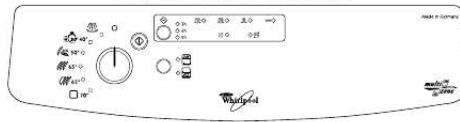

Further indications are given in the pages to follow and in the user instructions.

- Programme selector**
- Start button**  
Indicator lamp lit while the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.
- Delayed start button**  
The wash cycle can be programmed to start after 3-6-9 hours. Then press the Start button. The dishwasher will start at the set time.
- Options**
  - Rinse aid level indicator**  
Add rinse aid.
  - Salt level indicator**  
Add regeneration salt; only add regeneration salt immediately before starting a wash programme.
  - Half Load / Multizone button**  
Load the upper or lower rack only. This function can be used with any programme. Press once = upper rack (the indicator lamp comes on) Press twice = lower rack (the indicator lamp comes on) Press 3 times = Off (half load function deactivated).
- Programme progress indicator**
  - Pre-rinse / Pre-wash
  - Washing
  - Drying
  - End Programme end

Programme Symbol and Temperature	Programme selection and recommended load type	Place the detergent in the:		Consumption <sup>1)</sup>		
		small compartment	large compartment	Water (Litres)	Energy (kWh)	Time (Min.)
Pre-wash	Crockery to be washed later.	-	-	5.0 (4.2)	0.02 (0.02)	9 (9)
Rapid 40° C	Lightly soiled crockery with no dried-on food.	-	X	13.0 (13.0)	0.85 (0.75)	30 (30)
Bio-Eco 50° C	Normally or heavily soiled crockery with dried-on food.	X	X	16.0 (14.6)	1.26 (1.05)	133 (125)
Universal 65° C	Normally soiled crockery.	-	X	13.0 (11.0)	1.45 (1.38)	73 (71)
Normal 65° C	Normally or heavily soiled crockery.	X	X	16.0 (14.0)	1.60 (1.40)	86 (83)
Intensive 70° C	Heavily soiled pans and saucepans.	X	X	21.5 (18.2)	1.70 (1.60)	93 (90)

1) Values may vary in relation to usage, e.g.: different loads, water temperature > above or below 15 °C - as well as water hardness and power supply voltage, etc.  
 2) Programme recommended when using detergents of type B (enzyme-based detergents).  
 3) Programme recommended when using detergents of type A (non enzyme-based detergents).

**5019 100 91303**  
(We reserve the right to make technical modifications)



[Your user manual](#)  
[WHIRLPOOL ADP 6600 SL](#)

**Manual abstract:**

g. oil used for frying) or candle wax. If a fault occurs or you wish to change the current programme, press the **START** button for about 5 seconds until the Start indicator lamp switches off! If regeneration salt is to be added, immediately start a wash programme in order to eliminate any residual salt (rinsing alone is not sufficient). Sometimes even though the regeneration salt container has been filled, the corresponding indicator lamp (if fitted) will light up during the first wash cycle after filling with salt.

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem: The dishwasher is not working:

- Is the plug properly inserted in the wall socket?
- Is there a power failure?
- Is the dishwasher switched on?
- Has the Start button been pressed?
- Has the delayed start timer been set (if fitted)?
- Is the water supply tap on?
- Is the flow of water obstructed by impurities? If so, close the water supply tap, detach the water hose and clean the filter. Then re-connect the water hose to the tap and open the water tap once again.
- Are the filters clogged? (See **Care and maintenance** chapter in the user instructions).
- Is the door closed properly?
- Is a fault indicated? (The Start indicator lamp flashes). Start the programme again from the beginning: press the Start button for about 5 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button.

Your full address and telephone number. Please read the user instructions carefully. Dishwasher loading instructions **UPPER RACK LOWER RACK Half Load / Multizone** Depending on the model, rack features may vary (see **Upper and lower rack** description)..



[Your user manual](#)  
[WHIRLPOOL ADP 6600 SL](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>