



---

# Service Manual

## Horizontal Freezer

### CF 41 T

---

<b>Model Version</b>		<b>Page</b>
CF 41 T		
8549 530 66000		
	Technical data	2
	Spare part list	3
	Exploded view	4
	Circuit and Wiring diagram	5

---

This documentation is only intended for qualified technicians who are aware of the respective safety regulations.

Date: 22.04.1999

Document-No.: 4812 710 15548

Subject to modification

## Technical data

### Dimensions

Height	88.4	cm
Width	112	cm
Depth	64.2	cm

### Capacity

gross	390	l
-------	-----	---

### Electrical connection

Voltage	110 - 127	V
Frequency	50 - 60	Hz

### Compressor

Type	B 1116 Z	
Capacity (CECOMAF)	136	W

### Refrigerant

Type	R 134 a	
Quantity	145	g

### Thermostat switching value


Switch on temperature min.	- 14	°C
Switch on temperature max.	- 23.5	°C
Switch off temperature min.	- 20	°C
Switch off temperature max.	- 29.5	°C

## Spare part list

Model CF 41 T  
Service No. 854953066000  
Version 854953066000


Pos. No.	12NC Code	Description
012 0	<b>4819 528 78036</b>	Foot
040 0	<b>4819 417 19607</b>	Hinge
040 7	<b>4819 462 58187</b>	Cover,hinge
040 8	<b>4819 462 58354</b>	Cover,hinge
070 7	<b>4819 458 58384</b>	Grid,air
101 0	<b>4819 442 69253</b>	Door,freezer
111 0	<b>4819 498 78464</b>	Handle,door
111 1	<b>4819 462 88135</b>	Handle,cover
130 2	<b>4819 417 38118</b>	Lock
130 3	<b>4819 401 18332</b>	Hook
130 4	<b>4819 532 58291</b>	Washer
130 5	<b>4819 462 58402</b>	Cover ,lock
130 6	<b>4819 404 79522</b>	Support
191 4	<b>4819 468 18201</b>	Gasket
204 3	<b>4819 442 78468</b>	Separator
241 0	<b>4819 458 68203</b>	Basket
252 0	<b>4819 464 18155</b>	Casing
301 0	<b>4819 459 48702</b>	Control cover
321 0	<b>4819 381 18108</b>	Lens red
321 1	<b>4819 381 18246</b>	Lens
335 0	<b>4819 411 28789</b>	Knob thermostat
350 0	<b>4819 134 48511</b>	Pilot lamp
402 0	<b>4819 360 38628</b>	Compressor B1116Z
442 0	<b>4819 361 78222</b>	Motor,fan 115v
442 1	<b>4819 404 79496</b>	Bracket
443 0	<b>4819 515 38001</b>	Fan wheel
491 0	<b>4819 462 79046</b>	Lid f. connection block
561 0	<b>4812 280 68316</b>	Monoblock AD41FR4
561 2	<b>4819 290 68198</b>	Connectionblock
566 2	<b>4819 271 28766</b>	Thermostat A 1082 R4523
614 0	<b>4819 280 68211</b>	Relay 115 V
740 0	<b>4819 511 48648</b>	Condenser
740 4	<b>4819 404 79545</b>	Holder
764 0	<b>4819 480 28144</b>	Dryer
781 0	<b>4819 462 88134</b>	Panel f.drain
934 2	<b>4819 492 68431</b>	Spring

### Exploded view

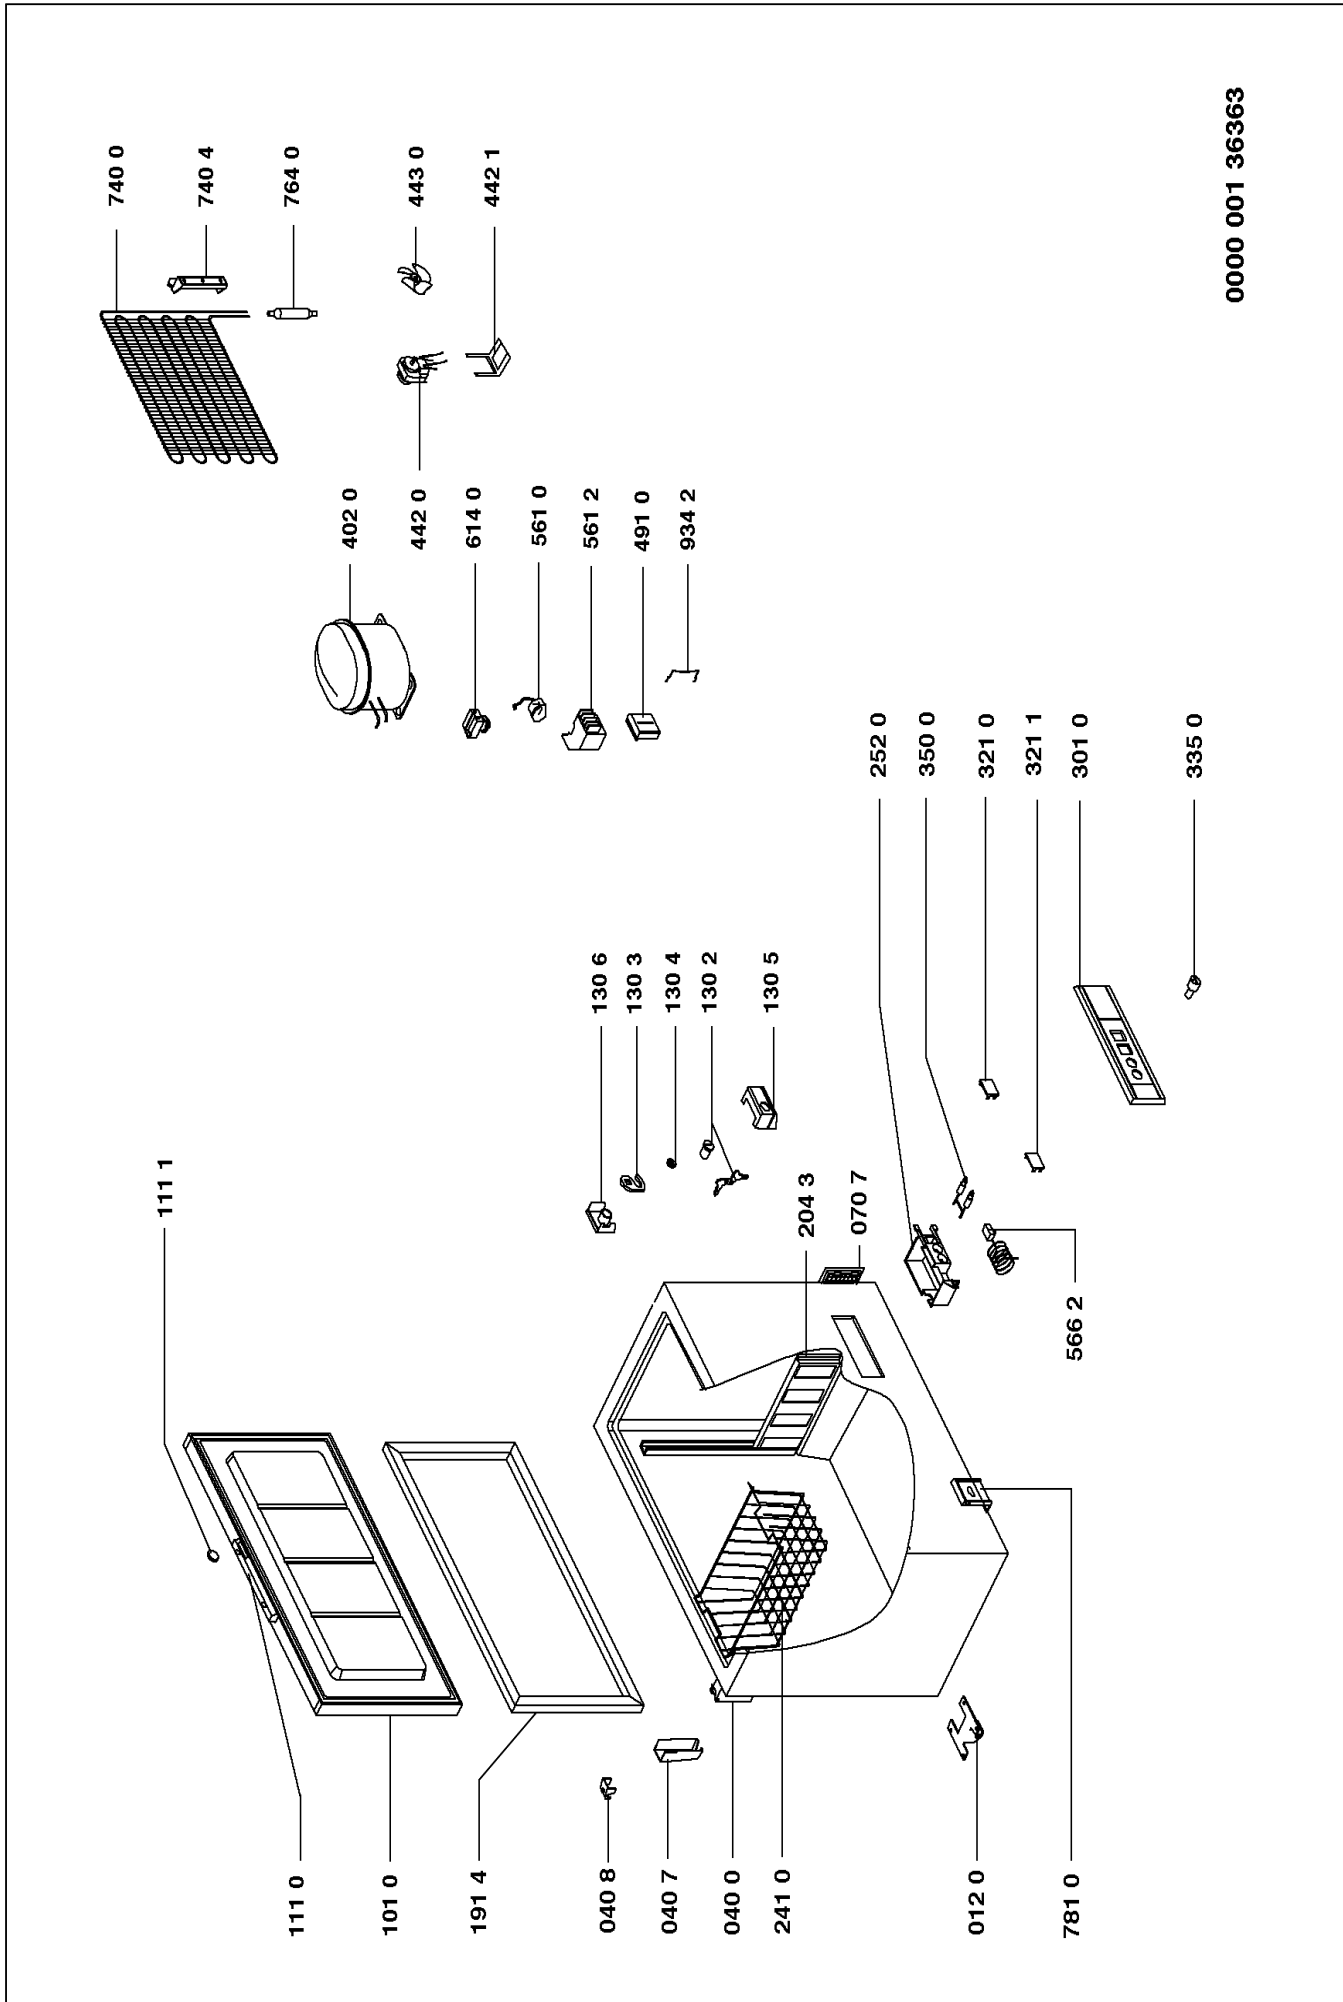

0000 001 36363

**Circuit and Wiring diagram**

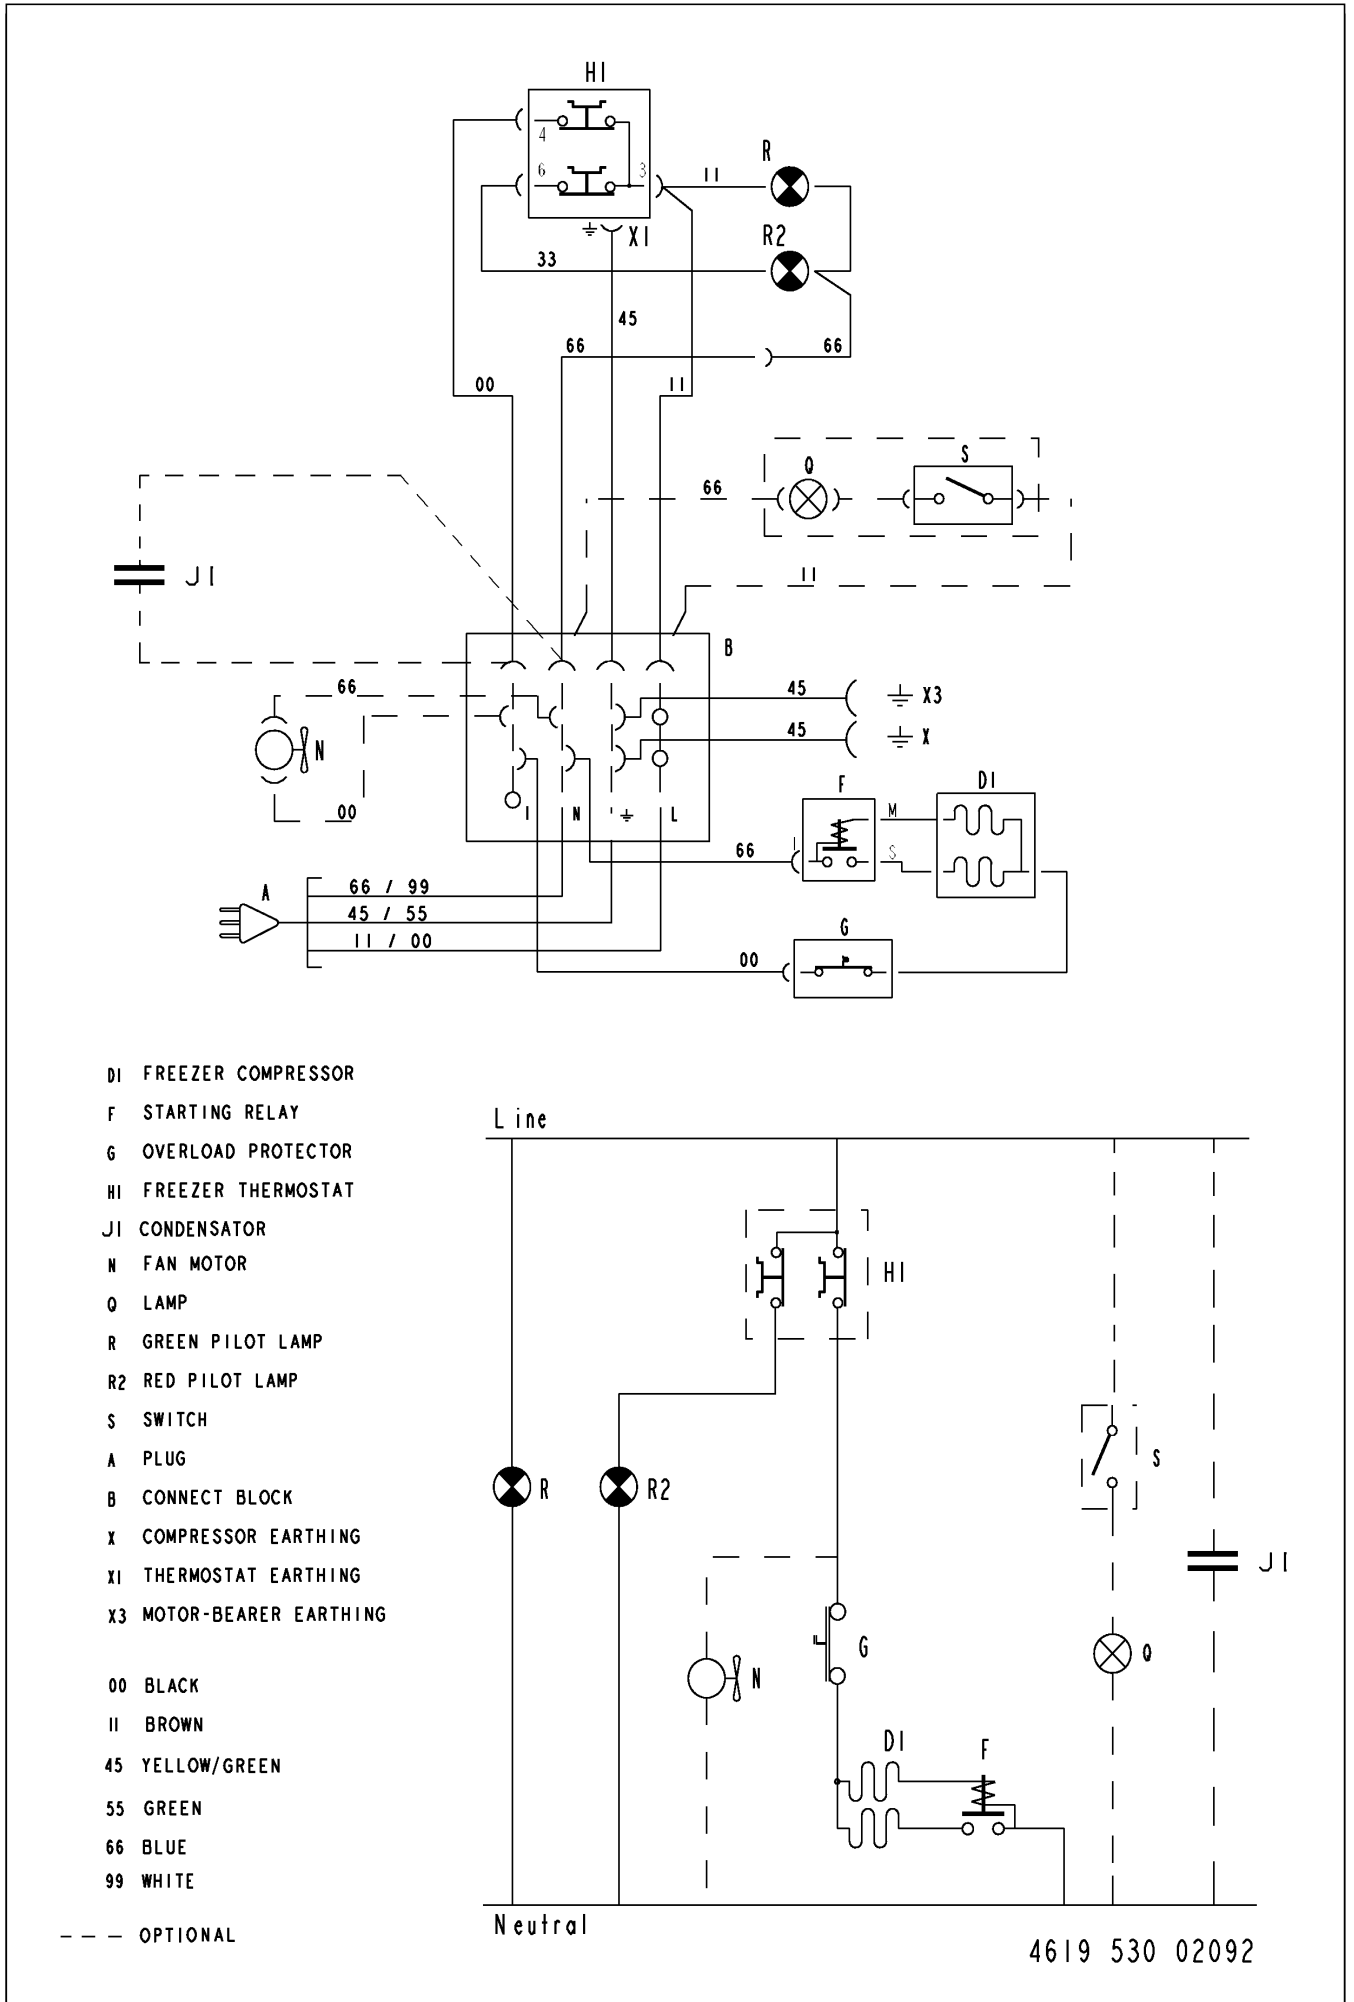

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>