



---

# Service Manual

## Horizontal Freezer

### CF 51 T

---

<b>Model Version</b>		<b>Page</b>
CF 51 T		
8549 540 71000		
	Technical data	2
	Spare part list	3
	Exploded view	4
	Circuit and Wiring diagram	5

---

This documentation is only intended for qualified technicians who are aware of the respective safety regulations.

Date: 09.11.1998

Document-No.: 4812 710 14955

Subject to modification

## Technical data

### Dimensions

Height	88.4	cm
Width	134.5	cm
Depth	64.2	cm

### Capacity

gross	478	l
-------	-----	---

### Electrical connection

Voltage	220 - 240	V
Frequency	50	Hz

### Compressor

Type	B 1119 Z	
Capacity (CECOMAF)	96	W

### Refrigerant

Type	R 134 a	
Quantity	145	g

### Thermostat switching value


Switch on temperature min.	- 14	°C
Switch on temperature max.	- 23.5	°C
Switch off temperature min.	- 20	°C
Switch off temperature max.	- 29.5	°C

## Spare part list

**Model** CF 51 T  
**Service No.** 854954071000  
**Version** 854954071000


Pos. No.	12NC Code	Description	from	to
012 0	<b>4819 528 78036</b>	Foot		
040 0	<b>4819 417 19585</b>	Hinge		
040 7	<b>4819 462 58187</b>	Cover,hinge		
040 8	<b>4819 462 58354</b>	Cover,hinge		
070 7	<b>4819 458 58384</b>	Grid,air		
101 0	<b>4819 442 69325</b>	Door,freezer		
111 0	<b>4819 498 78464</b>	Handle,door		
111 1	<b>4819 462 88135</b>	Handle,cover		
130 2	<b>4819 417 38118</b>	Lock		
130 3	<b>4819 401 18332</b>	Hook		
130 4	<b>4819 532 58291</b>	Washer		
130 5	<b>4819 462 58402</b>	Cover ,lock		
130 6	<b>4819 404 79522</b>	Support		
191 4	<b>4819 468 18197</b>	Gasket		
204 3	<b>4819 442 78229</b>	Separator		
241 0	<b>4819 458 68203</b>	Basket		
252 0	<b>4819 464 18155</b>	Casing		
301 0	<b>4819 459 48702</b>	Control cover		
321 0	<b>4819 381 18108</b>	Lens red		
321 1	<b>4819 381 18246</b>	Lens green		
335 0	<b>4819 411 28789</b>	Knob thermostat		
350 0	<b>4819 134 48513</b>	Pilot lamp		
402 0	<b>4819 360 38615</b>	Compressor NB1119Z		
442 0	<b>4819 361 78227</b>	Propeller,motor		
442 1	<b>4819 404 79496</b>	Bracket		
443 0	<b>4819 515 38001</b>	Fan wheel 220 V		
491 0	<b>4819 462 79046</b>	Lid f. connection block		
561 0	<b>4819 282 28594</b>	Protect,motor		
561 2	<b>4819 290 68198</b>	Connectionblock		
566 2	<b>4819 271 28766</b>	Thermostat A 1082 R4523		
614 0	<b>4819 280 68047</b>	Relay , PTC		
740 0	<b>4819 511 48651</b>	Condenser		
740 4	<b>4819 404 49922</b>	Bracket		
764 0	<b>4819 480 28144</b>	Dryer		
781 0	<b>4819 462 88134</b>	Panel f.drain		
934 2	<b>4819 492 68431</b>	Spring		

**Exploded view**

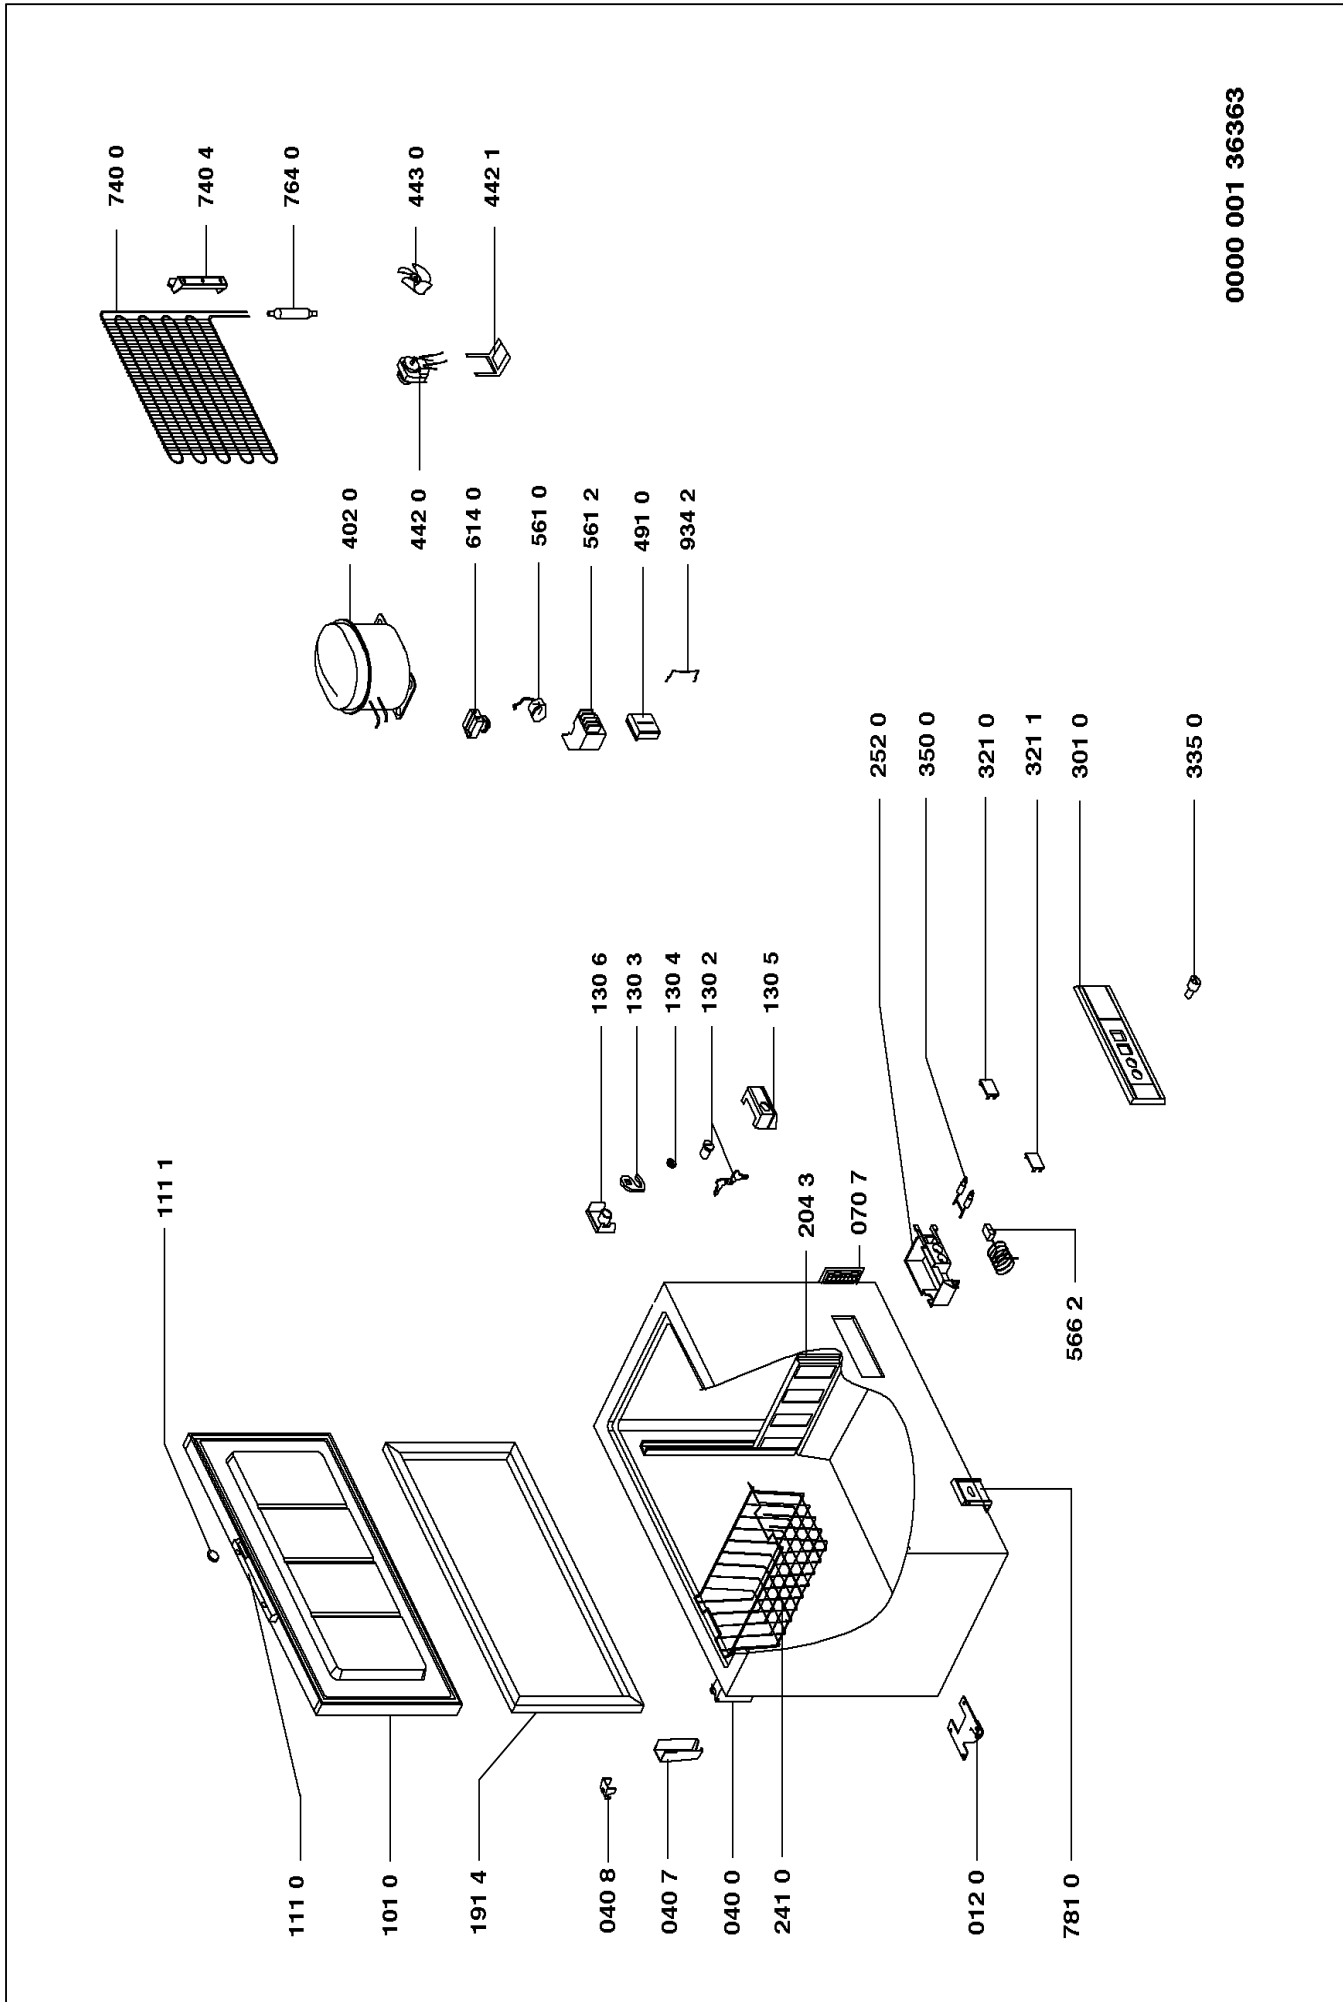

0000 001 36363

## Circuit and Wiring diagram

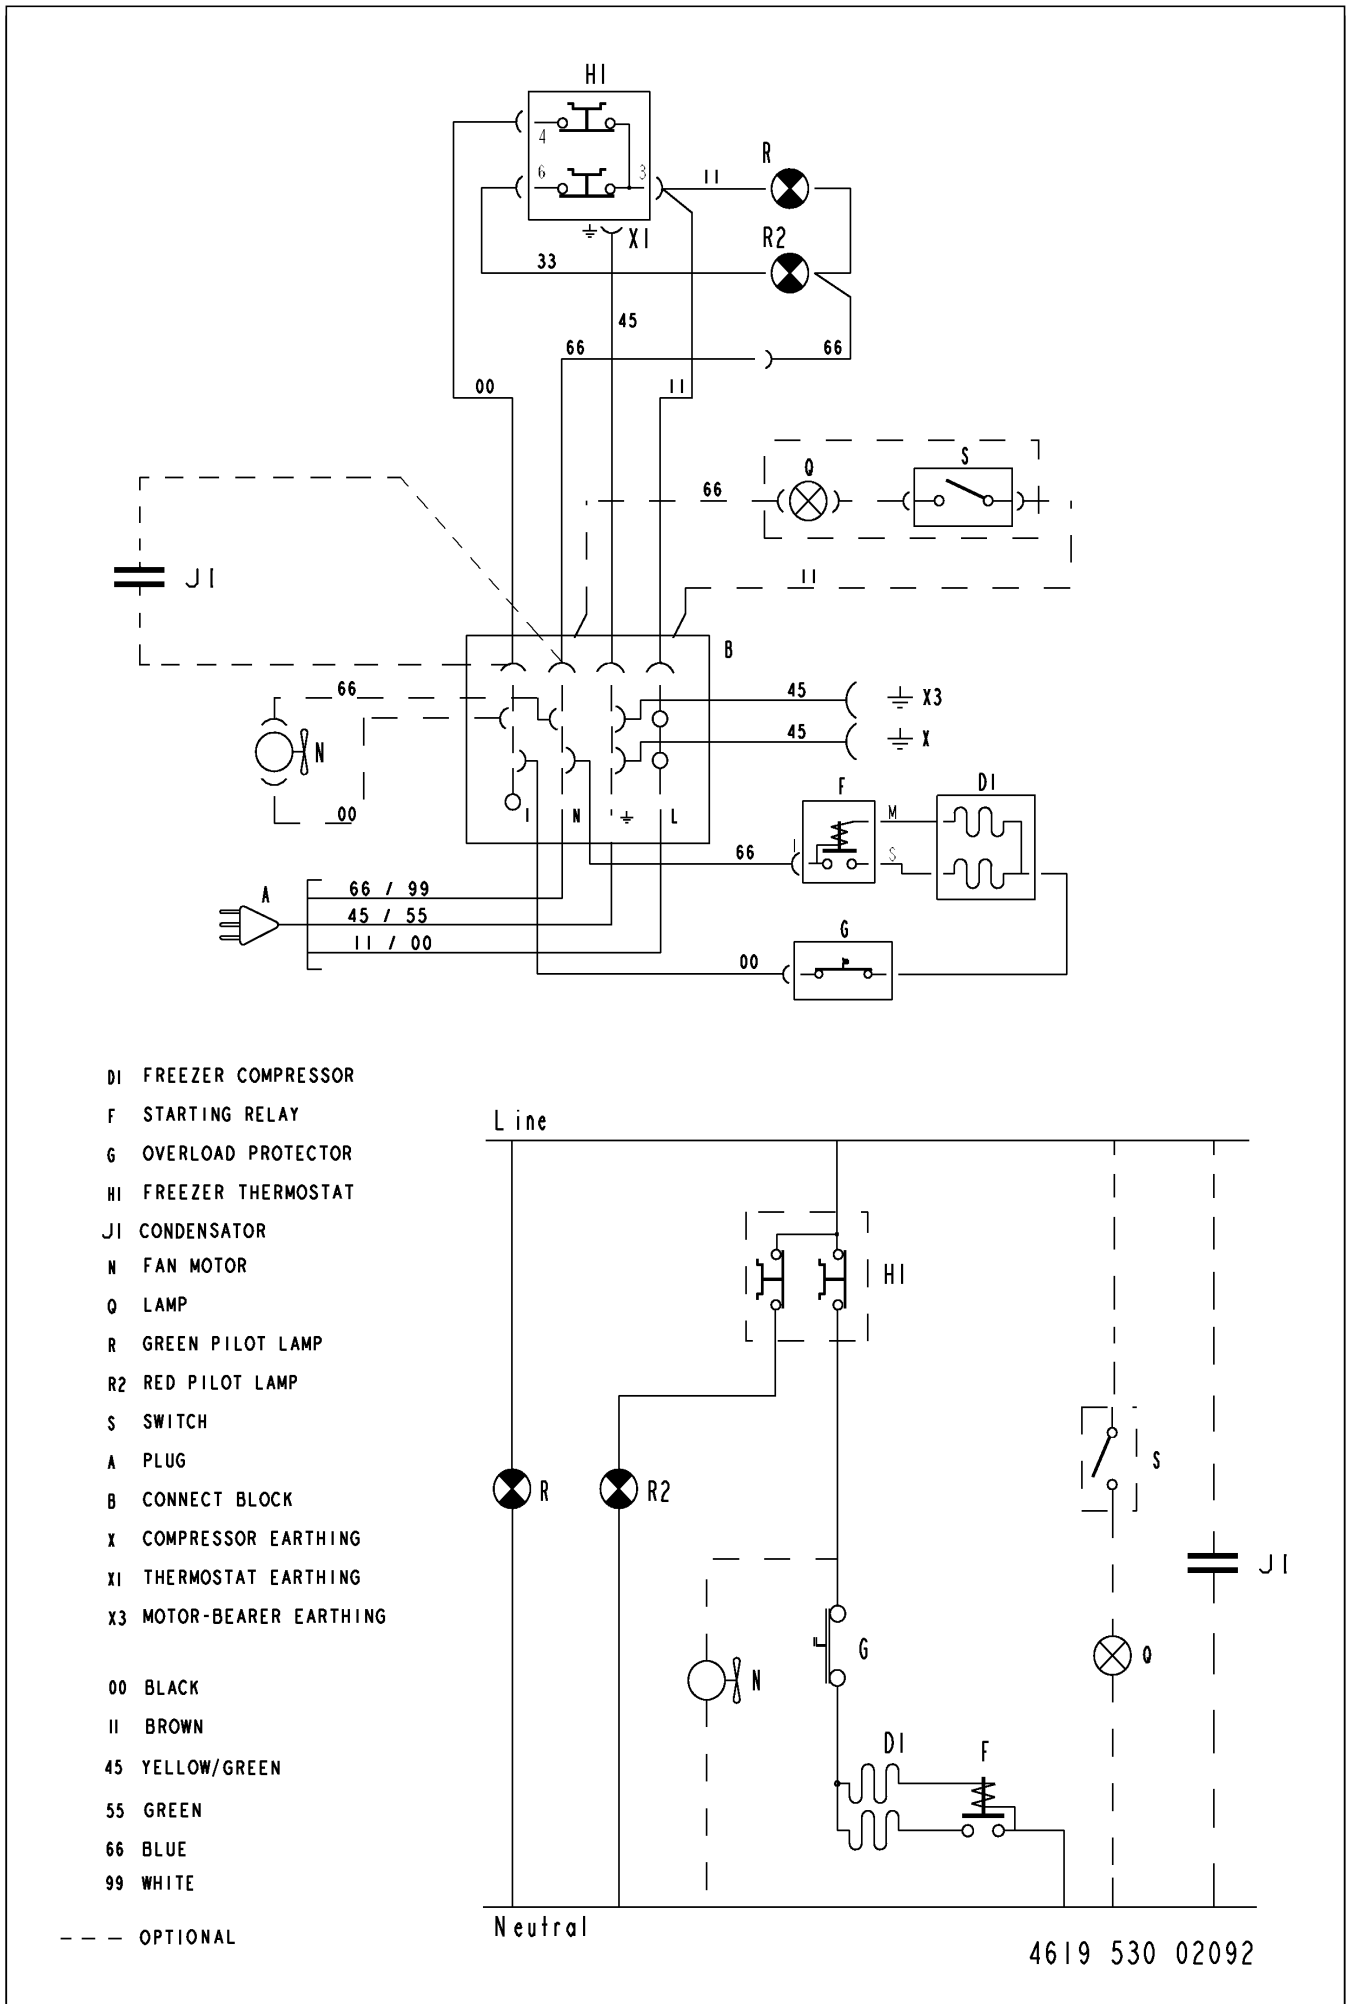

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>