




Use And Care

G U I D E

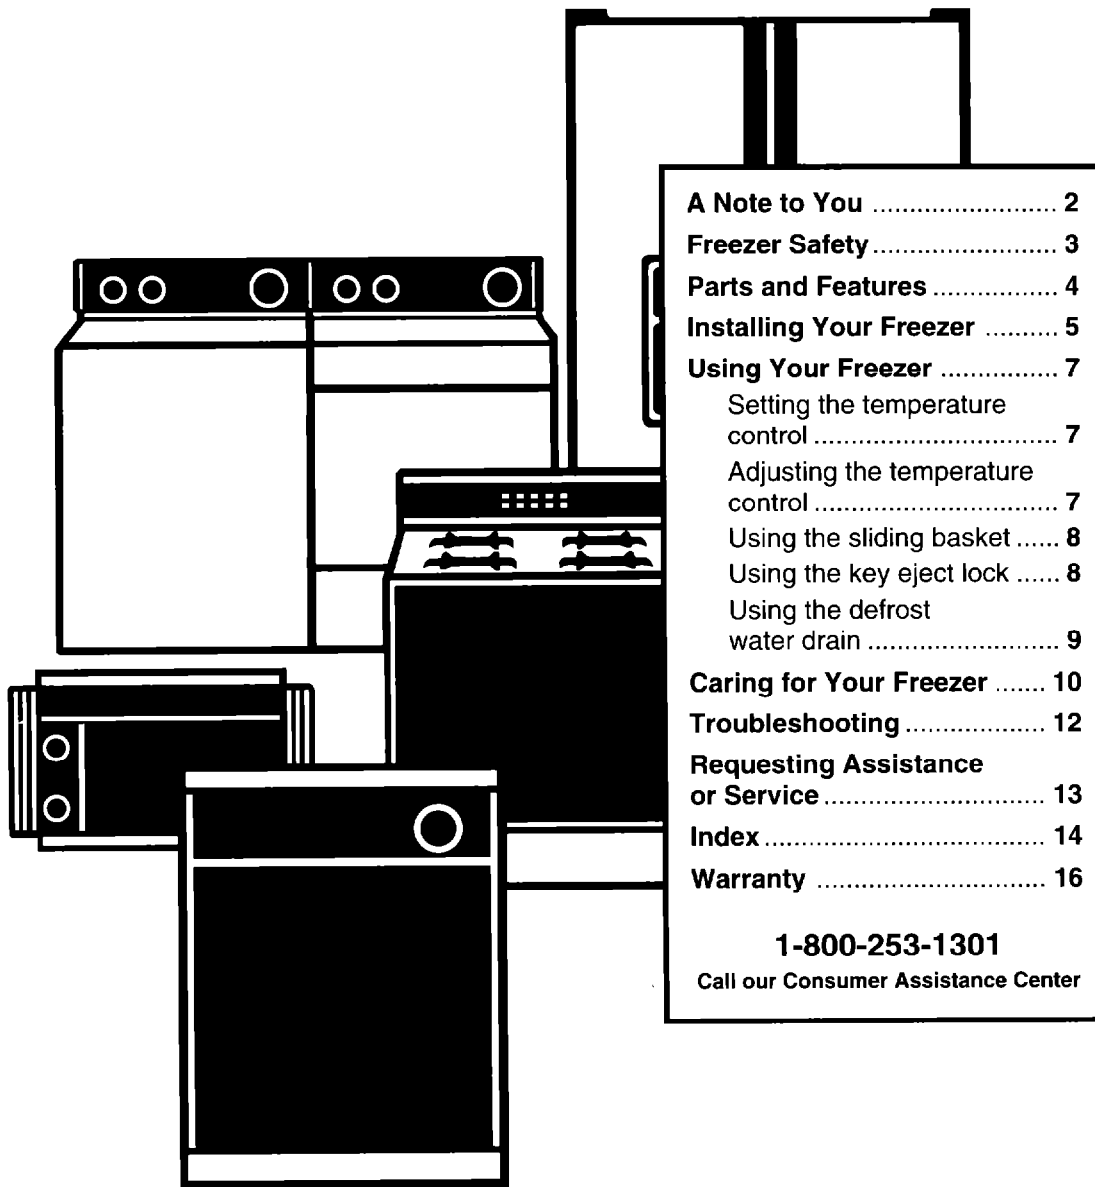

A Note to You	2
Freezer Safety	3
Parts and Features	4
Installing Your Freezer	5
Using Your Freezer	7
Setting the temperature control	7
Adjusting the temperature control	7
Using the sliding basket	8
Using the key eject lock	8
Using the defrost water drain	9
Caring for Your Freezer	10
Troubleshooting	12
Requesting Assistance or Service	13
Index	14
Warranty	16

1-800-253-1301

Call our Consumer Assistance Center

CHEST FREEZERS

PART NO. 3-24308-037 Rev.

4356394

6-98

A Note to You

Thank you for buying an ESTATE® appliance.

ESTATE appliances give you all the functionality of name brand appliances at a value price. To ensure you enjoy years of trouble-free operation, we developed this Use and Care Guide. It contains valuable information about how to operate and maintain your appliance properly and safely. Please read it carefully. Also, please complete and mail the Ownership Registration Card provided with your appliance. This card helps us notify you about any new information on your appliance.

Please record your model's information.

Whenever you call to request service for your appliance, you need to know your complete model number and serial number. You can find this information on the model and serial number label (see diagram on page 4 for location of label).

Please also record the purchase date of your appliance and your dealer's name, address, and telephone number.

Model Number _____

Serial Number _____

Purchase Date _____

Dealer Name _____

Dealer Address _____

Dealer Phone _____

Keep this book and the sales slip together in a safe place for future reference.

**Our toll-free number is
available from anywhere
in the U.S.A. 24 hours a day.**

1-800-253-1301

Freezer Safety

Your safety is important to us.

This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the warning symbol.

WARNING

This symbol alerts you to such dangers as fire, electrical shock, burns, and personal injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electrical shock, or injury when using your freezer, follow these basic precautions:

- Read all operating instructions before using your freezer.
- Child entrapment and suffocations are not problems of the past. Junked or abandoned freezers are still dangerous, even if they will “just sit in the garage for a few days.”

If you are getting rid of your old freezer, do it safely. Please read the enclosed safety booklet from the Association of Home Appliance Manufacturers. Help prevent accidents.

- Never allow children to operate, play with, or crawl inside the freezer.
- Never clean freezer parts with flammable fluids. The fumes can create a fire hazard or explosion.

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.

– SAVE THESE INSTRUCTIONS –

Help us help you

Please:

- Install and level the freezer on a floor that will hold the weight, and in an area suitable for its size and use.
- Do not install the freezer near an oven, radiator, or other heat source.
- Use the freezer only in an area where the temperature will not exceed 110°F (43.3°C) or drop below 55°F (13°C).
- Keep the freezer out of the weather.
- Connect the freezer only to the proper kind of outlet, with the correct electrical supply and grounding. (See “Locating the proper electrical supply” on page 5.)
- Do not load the freezer with food before it has time to get properly cold.
- Use the freezer only to do what home freezers are designed to do.
- Properly maintain the freezer.
- Make sure the freezer is not used by anyone unable to operate it properly.

Also, if your freezer has a Consumer Buy Guide Label, remove it, any packaging materials, tape, and inside labels (except the model and serial number label) before using the freezer.

To remove any remaining glue:


- Rub briskly with thumb to make a ball, then remove.
- OR**
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners. These can damage the material. See “Important Safety Instructions” above.

NOTE: Do not remove the Tech Sheet located on the back of the freezer.

Parts and Features

This section contains captioned illustrations of your appliance. Use them to become familiar with where all parts and features are located and what they look like.

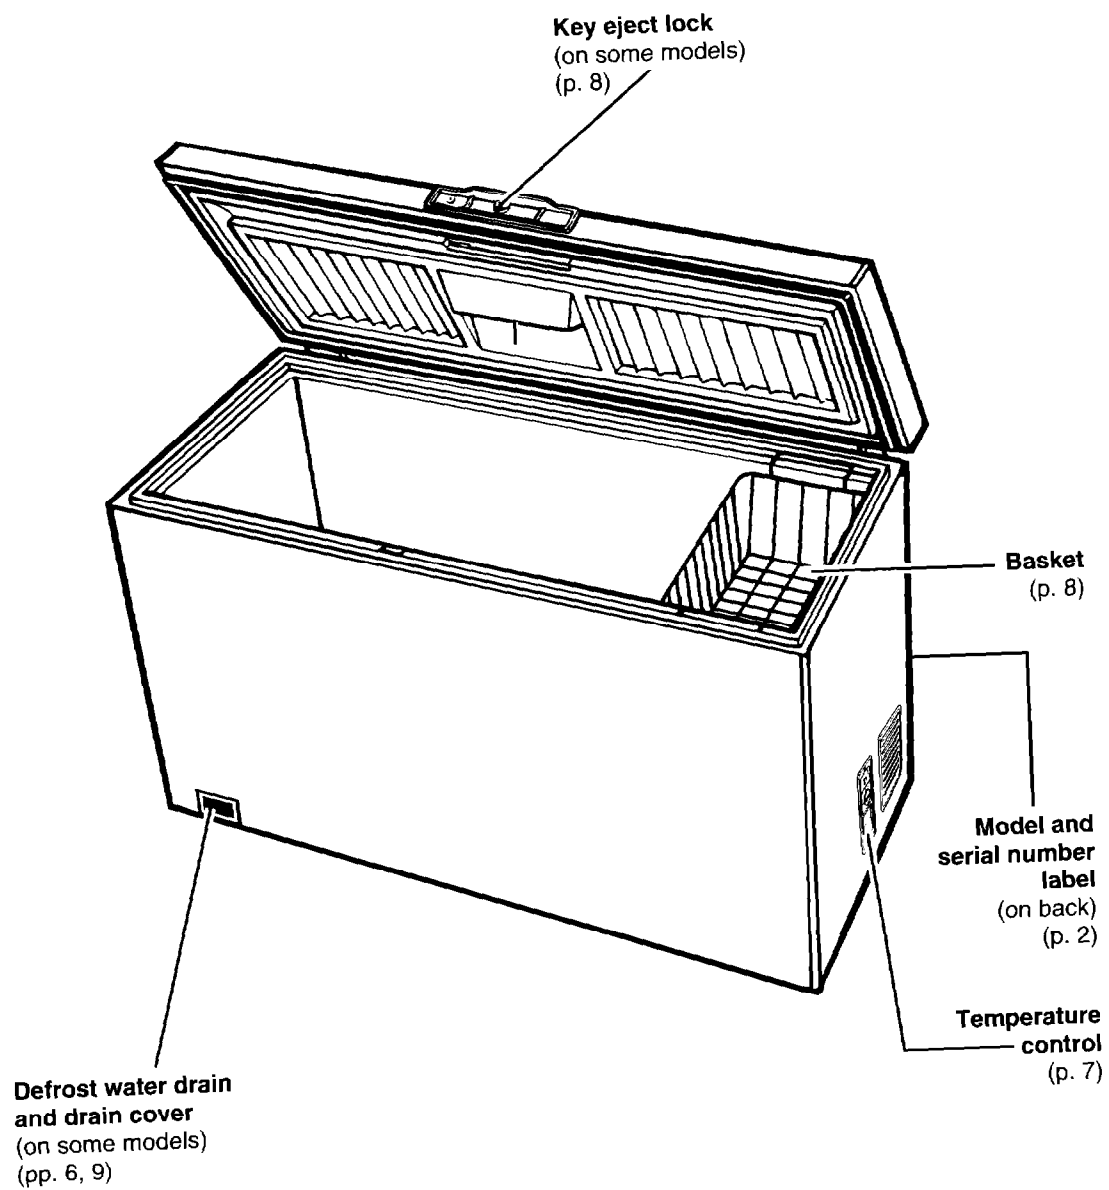

Installing Your Freezer

Proper installation of any appliance is very important. This section will tell you everything you need to know to install your freezer properly.


Cleaning your freezer

Clean your freezer thoroughly before using it.

1. Use a sponge, cloth, or paper towel and mild detergent in warm water to clean outside and inside of freezer, door liner, and gasket.
2. Wipe and dry thoroughly.

Locating the proper electrical supply


⚠ WARNING



Fire Hazard

Do not use an extension cord.
Doing so can result in death, fire, or electrical shock.

⚠ WARNING




Electrical Shock Hazard

Plug into a grounded three prong outlet.
Do not remove ground prong.
Do not use an adapter.
Failure to follow these instructions can cause death, fire, or electrical shock.

Recommended Grounding Method

A 115 Volt, 60 Hz., AC only 15 or 20 ampere fused and properly grounded electrical supply is required. It is recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

Attach power cord lock, from literature package inside the freezer, over power cord plug. See Electrical Requirements and Grounding Instructions Sheet in literature package for complete details.

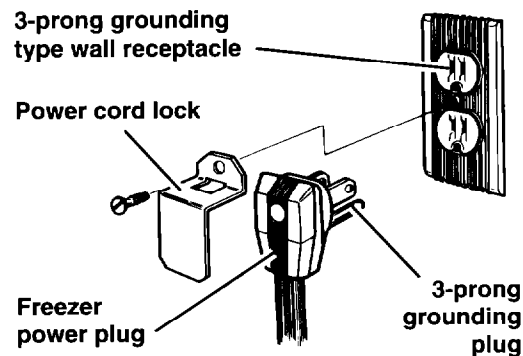


INSTALLING YOUR FREEZER

Choosing the proper location

Read the following items before choosing the freezer location. See "Completing the installation" below **before** sliding freezer into place.


1. Pick a safe place, indoors, away from flammables such as gasoline.
2. Check the strength of the floor. It should hold the weight of a fully loaded freezer.
3. Allow at least 3 inches (7.5 cm) of air space on both sides of the freezer and 2 inches (5 cm) between the back of the freezer and the wall. Leave room above the freezer to open the lid.
4. It should not be necessary to remove the lid during installation. If, for any reason, the hinges need adjustment, see the label on the back of your freezer and contact an authorized Whirlpool service company.

NOTE: Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

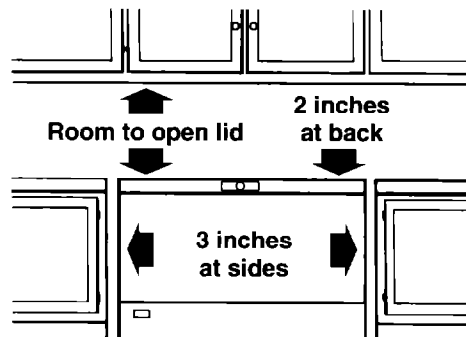

Completing the installation


Level the freezer from side to side and front to back so that the lid will seal properly. Use shim(s) to level the freezer if necessary.

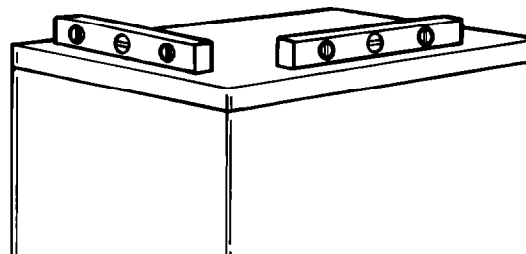

Installing the defrost drain cover

(on some models)

1. Remove defrost drain cover from the literature package.
2. Push drain cover into drain hole as illustrated.

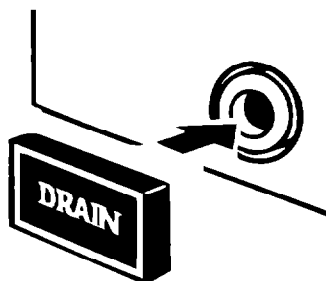

Using Your Freezer

In order to obtain the best possible results from your freezer, you must operate it properly. This section will tell you how to do just that.

Setting the temperature control


Turn the control to 4. This setting is designed to maintain the temperature at or near 0°F (-17.8°C) under normal operating conditions.

Allow the freezer to cool 6 to 8 hours before filling with frozen food. Let the freezer cool overnight before adding large amounts of unfrozen food. Never add more than 2 to 3 pounds of unfrozen food per cubic foot of freezer space.

NOTE: When the freezer is first started, the compressor will run constantly until the cabinet is cooled. It may take up to 6 to 8 hours or longer, depending on room temperature and the number of times the freezer door is opened.

After the cabinet is cooled, the compressor will turn on and off as needed to keep the freezer at the proper temperature.

The outside of your freezer may feel warm. This is normal. The freezer's design and main function is to remove heat from packages and air space inside the freezer. This heat is transferred to the room air, so the outside of the freezer may feel warm.

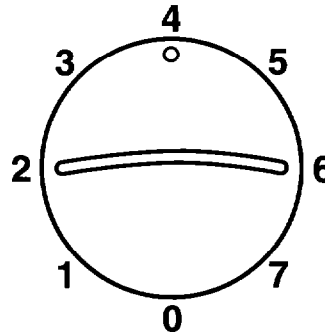

Adjusting the temperature control

- Turn control to a higher number for colder temperatures.
- Turn control to a lower number for less cold temperatures.

Using the sliding basket

Store small packages in the basket to avoid losing them in the bottom of the freezer.


The basket can be moved from side to side, or it can be removed when loading or unloading food below it.

To remove basket:

- Lift basket straight up and out.

To replace basket:

- Lower basket into place.

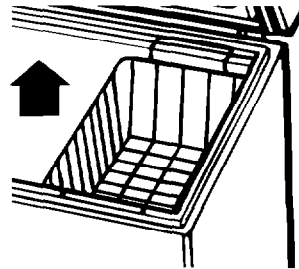

Lift straight up and out.

Using the key eject lock (on some models)

⚠ WARNING

Entrapment Hazard


Keep key away from children.

Failure to do so can result in death, suffocation, or frostbite.

If your freezer is equipped with a lock, it can help reduce the hazard of child entrapment.

To lock or unlock the freezer, you must hold the key in the lock while turning. The lock is spring loaded, so the key cannot be left in the lock.

If the key is lost, contact your Estate dealer for a replacement. Always give the complete model and serial number of your freezer when requesting a replacement key.

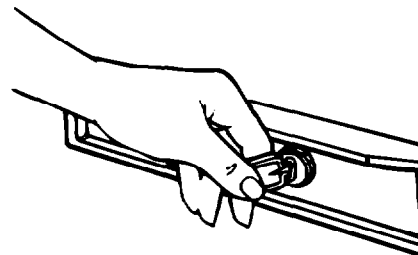

Using the defrost water drain (on some models)

Use the defrost water drain when defrosting and cleaning your freezer. Replace defrost water drain cover when you are finished defrosting.


To open drain for use:

1. Remove drain cover by pulling it straight out.
2. Insert the hose adapter (provided) into the drain outlet.
3. Remove the rubber stopper from inside the bottom of the freezer.

NOTE: Place a pan under the drain, or attach a hose to the threaded end of the hose adapter and direct the water into a separate drain.

To close drain after use:

1. Remove the hose adapter.
2. Replace the rubber stopper in bottom of freezer.
3. Replace the drain cover.

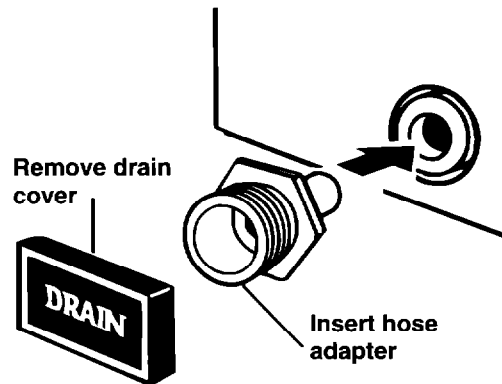


Caring for Your Freezer

Your freezer is designed to give you years of dependable service. However, there are a few things you can do to ensure a long product life. This section will tell you how to care for your freezer properly.

Defrosting and cleaning your freezer

Defrost and clean your freezer when frost has built up to about ¼ inch (6 mm) thickness. Complete defrosting and cleaning should be done at least once a year. In high humidity areas, a freezer may need more frequent defrosting and cleaning. Do not use abrasive cleaners on your freezer. Do not use cleaning waxes, concentrated detergents, bleaches, or cleaners containing petroleum on plastic parts. Damage can occur.

⚠ WARNING



Electrical Shock Hazard
Unplug freezer before cleaning or defrosting.
Do not place electrical devices such as fans or hair dryers in freezer when defrosting.
Failure to do so can result in death or electrical shock.

1. Turn Temperature Control to 0 and unplug power cord.
2. Remove all frozen food. Wrap frozen food in several layers of newspaper and cover with a blanket. Food will stay frozen for several hours.
OR
Store frozen food in a cooler, additional refrigerator-freezer, or in a cool area.
3. **For models with a defrost water drain:** Open the defrost water drain. (See page 9.)

NOTE: Check the drain pan frequently to avoid water overflow. Have a second pan handy for easier emptying of drain pan.

For models without a defrost water drain: Use a large sponge or plastic baster to remove water from the freezer bottom. You might want to have a pan close by to wring the sponge or empty the baster into.

4. Place pans of hot water in freezer with lid open to speed melting. Directing air from an electric fan into freezer will also help. Do not place fan or any electrical device in freezer.
5. Use a plastic scraper to remove frost. Do not use an ice pick, knife, or other sharp-pointed tool to defrost freezer. Damage can occur.
6. Wipe water from walls with a towel or sponge.
7. Wash the inside walls with a solution of 2 tablespoons (26 mg) baking soda to 1 quart (0.95 L) warm water.
8. Wipe and dry thoroughly.
9. Use a sponge, cloth, or paper towel and mild detergent in warm water to clean outside of freezer, door liner, and gasket.
10. Wipe and dry thoroughly.
11. Wax painted metal surfaces outside of freezer to provide rust protection.
NOTE: Do not use wax on plastic parts. Wax may damage them.
12. **For models with a defrost water drain:** Close the defrost water drain. (See page 9.)
13. Replace all frozen food.
14. Plug in power cord and refer to "Setting the temperature control" on page 7.

What to do during power outages

1. **Call the power company.**
Ask how long power will be off.
2. **Keep freezer closed if service is to be interrupted 24 hours or less.**
This will help food stay frozen.
3. **If service is to be interrupted longer than 24 hours, do this:**
Remove all frozen food and store in a frozen food locker.
OR
Place 2 lbs. (0.9 kg) of dry ice in freezer for every cubic foot of freezer space. This will keep foods frozen for 2 to 4 days.
OR
If dry ice or a food locker is not available, use or can perishable food at once.

⚠ WARNING

Burn Hazard

**Wear gloves when handling dry ice.
Failure to do so can result in burns.**

NOTE: A full freezer stays cold longer than a partly filled one. A freezer full of meat stays cold longer than a freezer full of baked goods.

Food containing ice crystals may be safely refrozen, but the quality and flavor of the food may be affected.

Use refrozen food quickly. If the condition of the food is poor, or you feel it is unsafe to eat, dispose of it immediately.

Moving care

Remove all frozen food and pack it in dry ice. Unplug the freezer and clean it thoroughly. Tape the lid shut and tape electrical cord to the cabinet.

When you get to your new home, refer to pages 5-7 for information on installation and setting controls.

Troubleshooting

Performance problems often result from little things you can fix without tools. Please read through “Before calling for assistance ...” below before calling for service on your appliance.

Before calling for assistance ...

Listed in this chart are the most common problems consumers run into with their appliances. Please read through this and see if it can solve your problem.

PROBLEM	CHECK THE FOLLOWING
Freezer stops running	<ul style="list-style-type: none">• Is the power cord plugged into a live circuit with the proper voltage?• Is there a blown fuse or tripped circuit breaker?• Has local power failed?• Is the Temperature Control set to a numbered setting?
Motor seems to run too long	<ul style="list-style-type: none">• Is there excessive frost or a package preventing the door from closing? Defrost and clean freezer or move package so door closes properly.• Has a large amount of unfrozen food been added to the freezer? The motor will naturally run longer. Add no more unfrozen food at one time than will freeze in 24 hours – approximately 2-3 lbs. per cubic foot of freezer space.• Is the day hot and muggy or the room too warm? The motor will naturally run longer to provide the correct amount of cooling.• Is there enough air circulation space around the freezer? See “Choosing the proper location” on page 6.

Requesting Assistance or Service

Before calling for assistance or service, please check "Troubleshooting" on page 12. It may save you the cost of a service call. If you still need help, follow the instructions below.

1. If you need assistance* ...

Call the Whirlpool Consumer



Assistance Center telephone number. Dial free from anywhere in the U.S.A.: 1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Center
Whirlpool Corporation
2000 North M-63
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

2. If you need service* ...

Whirlpool has a nationwide network of authorized service companies. Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 1) or look in your telephone directory Yellow Pages under:



**• APPLIANCE-HOUSEHOLD-
MAJOR, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

**• WASHING MACHINES &
DRYERS, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

3. If you need FSP® replacement parts ...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your ESTATE® appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new ESTATE appliance.

To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1.

4. If you are not satisfied with how the problem was solved ...

- Contact the Major Appliance Consumer Action Program (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer, and Whirlpool have failed to resolve your problem.
Major Appliance Consumer Action Program
20 North Wacker Drive
Chicago, IL 60606
- MACAP will in turn inform us of your action.

*When asking for help or service:

Please provide a detailed description of the problem, your appliance's complete model and serial numbers, and the purchase date. (See page 2.) This information will help us respond properly to your request.

Index

This index is alphabetical. Look for the word or phrase you are interested in, then look for the page number.

TOPIC	PAGE	TOPIC	PAGE
ASSISTANCE		LOCK	
Requesting	13	Using key eject lock	8
BASKET		MOVING CARE	11
Sliding basket	8	PARTS/FEATURES	4
CLEANING	10	POWER OUTAGES	11
Before using	5	RESPONSIBILITIES	
CONTROL	7	Owner	3
DEFROST DRAIN COVER	6	SAFETY	3
DEFROSTING	9, 10	SERVICE	
DEFROST WATER DRAIN	9	Requesting	13
ELECTRICAL REQUIREMENTS		TEMPERATURE CONTROL	
Locating proper supply	5	Adjusting	7
FEATURES/PARTS	4	Setting	7
INSTALLING		TROUBLESHOOTING	12
Choosing proper location	6	WARRANTY	16
Defrost drain cover	6		
Leveling	6		

ESTATE[®]

Domestic Freezer Warranty

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE YEAR WARRANTY From Date of Purchase	FSP [®] replacement parts and repair labor to correct defects in materials or workmanship.
FULL FIVE YEAR WARRANTY From Date of Purchase	FSP replacement parts and repair labor to correct defects in materials or workmanship in the sealed refrigeration system. These parts are: 1. Compressor 4. Drier 2. Evaporator 5. Connecting Tubing 3. Condenser
WHIRLPOOL WILL NOT PAY FOR	
A. Service calls to: 1. Correct the installation of your freezer. 2. Instruct you how to use your freezer. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace light bulbs or batteries. B. Pickup and delivery. Your freezer is designed to be repaired in the home. C. Damage to your freezer caused by accident, misuse, fire, flood, acts of God, or use of products not approved by Whirlpool. D. Food loss coverage for freezers used in commercial applications. E. Repairs to parts or systems caused by unauthorized modifications made to the appliance.	

5/93

Limited domestic food loss coverage. See below for details on limited domestic food loss protection plan. Service under the full warranties must be provided by an authorized Whirlpool service company.

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may also apply. For details, contact your authorized Whirlpool dealer.

LIMITED DOMESTIC FOOD LOSS COVERAGE REIMBURSEMENT FOR FOOD LOSSES.

During the first year of ownership, the ESTATE Freezer warranty provides reimbursement as stated below for food actually spoiled while stored in the freezer as a result of defects in materials or workmanship.

During the second through fifth years of ownership, reimbursement will be made as stated below for food actually spoiled while stored in the freezer as a result of a **FAILURE OF THE SEALED REFRIGERATION SYSTEM.**

Food spoilage losses must be verified by Whirlpool or an authorized Whirlpool service company. Reimbursement of losses will be based on domestic use and freezer size up to the total cumulative amount shown for the five-year warranty period.

9.9 cubic feet or smaller	up to \$150.00 maximum payment
10.0 to 16.0 cubic feet	up to \$300.00 maximum payment
16.1 cubic feet or larger	up to \$400.00 maximum payment

The reimbursement amounts shown may or may not cover the actual replacement cost of the contents of your freezer. They are, however, the maximum payments that will be paid and they are cumulative for the five-year warranty period.

Sorry, but Whirlpool is not responsible for food losses caused by natural spoilage, misuse, or negligent care of the freezer, or by accidental or intentional disconnecting of the electrical power cord, power interruption, inadequate power, fire damage, water damage, theft, riots, strikes, war, or acts of God.

If you need service, first see the "Troubleshooting" section of this book. After checking "Troubleshooting," additional help can be found by checking the "Requesting Assistance or Service" section or by calling our Consumer Assistance Center telephone number **1-800-253-1301**, from anywhere in the U.S.A.

PART NO. 3-24308-037 Rev

4356394

© 1995 Whirlpool Corporation

® Registered Trademark/™ Trademark of Whirlpool, U.S.A.

12/95

Printed in U.S.A.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>