



SinkSpa™

JETTED SINK

Use & Care Guide

For questions about features, operation/performance, parts accessories
or service call: 1-800-253-1301
or visit our website at... www.whirlpool.com

Table of Contents	2
-------------------------	---

TABLE OF CONTENTS

JETTED SINK SAFETY	2	Storing	4
PARTS AND FEATURES	3	TROUBLESHOOTING	4
JETTED SINK USE	3	ASSISTANCE OR SERVICE	5
Loading.....	3	In the U.S.A.	5
Starting Your Jetted Sink.....	3	WARRANTY	6
Jet Speed Control	4		
Normal Sounds	4		
JETTED SINK CARE	4		
Cleaning Your Jetted Sink	4		



JETTED SINK SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.


All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

- Disconnect power before servicing.
- Replace all parts and panels before operating.
- Use two or more people to move and install jetted sink.
- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.

SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

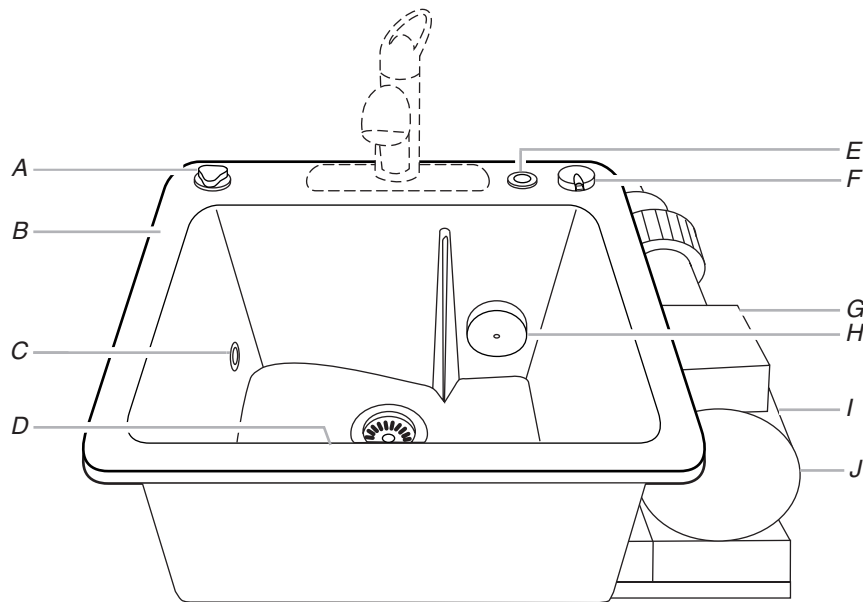

Standard features

- A. Automatic pop-up drain control
- B. High-gloss acrylic sink
- C. Micro-jets (3)
- D. Washboard front (not shown)
- E. On/off button

- F. Jet speed control
- G. Timer
- H. Suction cover
- I. Pump/motor
- J. Model/serial number label (not shown)

Parts not included

Faucet

JETTED SINK USE

The jetted sink is to be used for washing delicate clothing such as lingerie, hosiery, blouses or a single sweater.

IMPORTANT:

- The jetted sink should not be used for bathing infants or pets.
- The jetted sink should not be used for cleaning or soaking unusually dirty, or clay-ridden clothing, household tools or other items that may damage the inner plumbing system and pump.
- Do not overfill with laundry. The jetted sink is not designed to replace a washing machine.
- Do not run the pump/motor on the jetted sink while the suction cover is off or without water in the jetted sink. This could cause damage to the pump/motor or internal seals and could void the warranty.

Loading


Dye transfer can occur when mixing whites and colors in a load. Sort dark clothes from whites and lights.

Only clothing labeled as hand or machine washable should be loaded.

Suggested Loads for Jetted Sink

Clothing	Number of Pieces
Bulky sweaters	1
Fine knits, blouses, swim wear	3
Lingerie, hosiery	3-5

Starting Your Jetted Sink

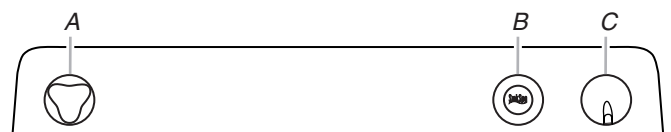

- A. Pop-up drain control knob
- B. On/off button
- C. Jet speed control knob

NOTE: Before washing, pretreat stains on clothing according to the recommendations on the garment care label.

1. Turn the pop-up drain control knob counterclockwise to close the drain.
2. Fill jetted sink with water to just above the suction cover.

IMPORTANT:

- The water must completely cover the suction cover.
- The water temperature should be what is recommended for the garments being washed.

3. Add a few drops of low-sudsing, delicate washing liquid detergent or 1 tsp (4.9 mL) of a low-sudsing powder at any time after you have started running water into the jetted sink. You may add more if necessary.

NOTES:

- Some delicate wash detergents foam excessively when agitated. It may be necessary to rinse the jet system and clothing with clean water after use.
- Do not use fabric softener.

4. Load a few small items of delicate clothing or a sweater into the jetted sink.
5. Set the jet speed control for desired water force/speed. See "Jet Speed Control."
6. Press the on/off button to start the pump/motor and to set the 10-minute timer. The on/off button sets the timer to shut off automatically in 10 minutes, but the on/off button can also override the timer and stop the pump/motor at any time.

IMPORTANT: Starting the pump when there is no water in the jetted sink could result in damage to the pump or internal seals and could void the warranty.

7. After wash is finished, turn pop-up drain control knob clockwise to open the drain.
8. Gently squeeze water from garment(s) without twisting or wringing.
9. Close the drain again, turning the pop-up drain control knob counterclockwise as before. Fill the jetted sink with clean water, reset the jet speed control, and push the on/off button to begin another 10-minute cycle to rinse garment(s).

10. After rinse is finished, drain the rinse water from the jetted sink and gently squeeze water from garment without twisting or wringing. Additional water can be removed by laying garments flat on a clean, dry towel. Roll up the towel, then gently squeeze out excess water. Follow recommendations on the garment care label for drying.

Jet Speed Control

Water pressure in the jetted sink may be adjusted from a very high agitation (H) to a low, swirling action (L) by turning the jet speed control dial.

Normal Sounds

Your jetted sink may make sounds that are unfamiliar to you.

The normal sounds are:

During washing

You will hear the sound of the pump and motor operating.

During draining

You will hear the sound of water draining from the sink.

JETTED SINK CARE

Cleaning Your Jetted Sink

Acrylic is a renewable surface. If the acrylic surface is damaged, minor cuts or scratches usually can be buffed or polished out of the finish with a paste wax or automobile rubbing compound.

To clean your jetted sink:

- Clean the acrylic surface with a mild, liquid detergent and a damp cloth or sponge. Rinse and wipe dry with a soft cloth.
- Do not use abrasive cleaners such as scouring cleansers or harsh cleaning tools such as scouring pads. These can scratch or damage materials.

To flush your jetted sink:

Flush the jetted sink at least once every 90 days.

1. Fill the jetted sink with hot water and add 2 tsp (9.8 mL) of non-sudsing laundry detergent.
2. Run the system for 10 minutes, then drain the jetted sink.
3. Fill jetted sink with cold water and run for 10 minutes to rinse the system, then drain the jetted sink.

Storing

To winterize your jetted sink:

IMPORTANT: The jetted sink must be filled to a level above the suction cover.

1. Fill the jetted sink with an R.V.-type antifreeze solution to just above the suction cover.
2. Run the jetted sink for a 10-minute cycle.
3. Unplug jetted sink or disconnect power.
4. Shut off the water faucet.
5. Disconnect the water inlet hoses from faucets and then drain.

To use your jetted sink again:

1. Flush the water pipes.
 2. Reconnect the water inlet hoses to faucets.
 3. Turn on both water faucets.
 4. Plug in jetted sink or reconnect power.
 5. Run the jetted sink through a 10-minute cycle with ¼ the normal recommended amount of detergent to clean out the antifreeze.
-

TROUBLESHOOTING

First try the solutions suggested here and possibly avoid the cost of a service call...

Jetted sink pump/motor won't turn on

- **Is the power cord plugged into the timer control box outlet?**
- **Is the timer control box plugged into the wall outlet?**
- **Has a fuse blown, or has the circuit breaker tripped?** If problem continues, call electrician.
- **Is there power at the plug?** Check electrical source or call electrician.

- **Is the clear air-line hose connected to both the bottom of the timer control box and the bottom of the on/off button?**
- **Is the reset button on the GFCI tripped?**

Jetted sink won't drain

- **Is the drain clogged?**
- **Is the drain plug adjusted correctly?** Adjust the drain plug height by turning the adjusting screw on the bottom of the drain plug. See Installation Instructions.

Jetted sink makes noise

- **Is the pump/motor plugged into an outlet?** The on/off button will make a clicking noise if you push the button when the power cord is not plugged into the timer control box outlet.
- **Is the water level too low?**

Jetted sink leaks

- **Check caulking around jetted sink for leaks.**
- **Check household plumbing for leaks.**
- **Is the drain clogged?**
- **Is water deflecting off the jetted sink or the load?** The jetted sink should not be overloaded. The incoming water might deflect off the load.
- **Did you fill the jetted sink with too much water?** The jetted sink should be filled to just above the suction cover.

Stains on clothing

- **Is there above average iron (rust) in water?** You may need to install an iron filter.
- **Did you properly sort the load?** Sort dark clothes from whites and lights.
- **Did you unload the jetted sink promptly?** To avoid dye transfer, unload the jetted sink as soon as it stops.
- **Was the jetted sink used for household cleanup and not cleaned properly?** See "Cleaning Your Jetted Sink."

Gray whites, dingy colors

- **Did you properly sort the load?** Dye transfer can occur when mixing whites and colors in a load. Sort dark clothes from whites and lights.
- **Was the proper amount and type of detergent used?** Use a few drops of low-sudsing, delicate washing liquid detergent or 1 tsp (4.9 mL) of a low-sudsing powder.
- **Did you use the proper water temperature?** Follow the garment manufacturer's care label instructions.

Garment damage

- **Check the following:**
 - Were sharp items removed from pockets before washing?
 - Empty pockets, zip zippers, and snap or hook fasteners before washing.
 - Were strings and sashes tied to prevent tangling?
- **Were items damaged before washing?** Mend rips and broken threads in seams before washing.
- **Was chlorine bleach used in the jetted sink?** Rinse the jetted sink well and wipe up bleach spills which could transfer to clothing causing damage.
- **Did you overload the jetted sink?** The jetted sink must not be overloaded. Clothes should move freely during washing.
- **Did you follow the garment manufacturer's care label instructions?**

ASSISTANCE OR SERVICE

Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If you still need help, follow the instructions below.

When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request.

If you need replacement parts

If you need to order replacement parts, we recommend that you use only FSP® replacement parts. FSP® replacement parts will fit right and work right because they are made with the same precision used to build every new WHIRLPOOL® appliance.

To locate FSP® replacement parts in your area, call our Customer eXperience Center telephone number or your nearest Whirlpool designated service center.

In the U.S.A.

Call the Whirlpool Customer eXperience Center toll free: **1-800-253-1301**.

Our consultants provide assistance with:

- Features and specifications on our full line of appliances.
- Installation information.
- Use and maintenance procedures.

- Accessory and repair parts sales.
- Specialized customer assistance (Spanish speaking, hearing impaired, limited vision, etc.).
- Referrals to local dealers, repair parts distributors, and service companies. Whirlpool designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States.

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages.

For further assistance

If you need further assistance, you can write to Whirlpool Corporation with any questions or concerns at:

Whirlpool Brand Home Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

WHIRLPOOL™ JETTED SINK WARRANTY

ONE-YEAR LIMITED WARRANTY

For one year from the date of purchase, when this jetted sink is operated and maintained according to instructions attached to or furnished with the product, Whirlpool Corporation will replace defective parts with factory authorized parts to correct defects in materials or workmanship, when presented to the selling distributor, together with proof of purchase, during the warranty period. Service must be provided by a Whirlpool designated service company.

Whirlpool Corporation will not pay for:

1. Service calls to correct the installation of your jetted sink, to instruct you on how to use your jetted sink, or to replace house fuses or correct house wiring or plumbing.
 2. Repairs when your jetted sink is used in other than normal, single-family household use.
 3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with local electrical and plumbing codes, or use of products not approved by Whirlpool Corporation.
 4. Damage resulting from activating the whirlpool jet action with no water in the jetted sink or with water level below the jets.
 5. Damage caused by failure to test the unit properly prior to complete enclosure.
 6. Any labor costs during the limited warranty period.
 7. Replacement parts or repair labor costs for units operated outside the United States.
 8. Pickup and delivery. This product is designed to be repaired in the home.
 9. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
 10. Products classified as options or accessories, although they may be covered under their own manufacturers' warranties.
-

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Outside the 50 United States, this warranty does not apply. Contact your authorized Whirlpool dealer to determine if another warranty applies.

If you need service, first see "Troubleshooting." Additional help can be found by checking "Assistance or Service," or by calling our Customer eXperience Center at **1-800-253-1301**, from anywhere in the U.S.A., or write: Whirlpool Brand Home Appliances, Customer eXperience Center, 553 Benson Road, Benton Harbor, MI 49022-2692.

10/02

Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your jetted sink to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label/plate, located on the pump/motor underneath the countertop.

Dealer name _____
Address _____
Phone number _____
Model number _____
Serial number _____
Purchase date _____

8537099B

© 2004 Whirlpool Corporation.
All rights reserved.

© Registered Trademark/TM Trademark of Whirlpool, U.S.A.

7/04
Printed in U.S.A.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>