




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL WFG381LVS. You'll find the answers to all your questions on the WHIRLPOOL WFG381LVS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL WFG381LVS
User guide WHIRLPOOL WFG381LVS
Operating instructions WHIRLPOOL WFG381LVS
Instructions for use WHIRLPOOL WFG381LVS
Instruction manual WHIRLPOOL WFG381LVS

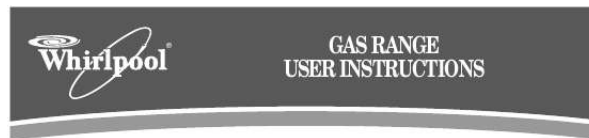

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING, please visit our website at www.whirlpool.ca for additional information. If you still need assistance, call us at 1-800-807-6777. You will need your model and serial number located on the oven frame behind the storage drawer panel.

Table of Contents

RANGE SAFETY.....	2
The Anti-Tip Bracket.....	3
FEATURE GUIDE.....	4
COOKTOP USE.....	5
Sealed Surface Burners.....	5
OVEN USE.....	6
Electronic Oven Controls.....	6
Aluminum Foil.....	6
Positioning Racks and Bakeware.....	7
Oven Vent.....	7
Baking and Roasting.....	7
Broiling.....	7
Timed Cooking (on some models).....	8
RANGE CARE.....	8
Self-Cleaning Cycle (on some models).....	8
General Cleaning.....	9
Oven Light.....	9
TROUBLESHOOTING.....	10
ACCESSORIES.....	11
WARRANTY.....	12

W10196152B



[Your user manual](#)
[WHIRLPOOL WFG381LVS](#)

Manual abstract:

Proper Installation The range, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70. In Canada, the range must be electrically grounded in accordance with Canadian Electrical Code. Be sure the range is properly installed and grounded by a qualified technician. This range is equipped with a three-prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded receptacle. Do not cut or remove the grounding prong from this plug. Disconnect power before servicing. Injuries may result from the misuse of appliance doors or drawers such as stepping, leaning, or sitting on the doors or drawers.

Maintenance Keep range area clear and free from combustible materials, gasoline, and other flammable vapors and liquids. Storage in or on the Range Flammable materials should not be stored in an oven or near surface units. Top burner flame size should be adjusted so it does not extend beyond the edge of the cooking utensil.

For self-cleaning ranges Before Self-Cleaning the Oven Remove broiler pan and other utensils. Wipe off all excessive spillage before initiating the cleaning cycle. SAVE THESE INSTRUCTIONS 3 FEATURE GUIDE This manual covers several models. Your model may have some or all of the items listed. Refer to this manual or the Customer Care section of our website at www.whirlpool.ca for more detailed instructions.

WARNING Food Poisoning Hazard Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness. **KEYPAD OVEN LIGHT FEATURE** Oven cavity light **INSTRUCTIONS** While the oven door is closed, press **OVEN LIGHT** to turn the light on and off.

The oven light will come on when the oven door is opened. The oven light will not come on during the Self-Clean cycle. See the "Range Care" section. 1. 2. 3. 4. Check that the oven is off. Press and hold the **TO LOCK HOLD 3 SEC** keypad for 3 seconds. A tone will sound, and "Loc" will be displayed.

Repeat to unlock. Only the **CLOCK** and **TIMER** keypads will function with the controls locked. **SELF-CLEAN TO LOCK HOLD 3 SEC** Self-clean cycle Oven control lockout **CLOCK** Clock The Clock uses a 12-hour cycle with a.m. and p.m. 1. Check that the oven is off. 2. Press **CLOCK**.

3. Press **TEMP/TIME "+"** or **"-"** arrow pads to set the time of day, including a.m. or p.m.

4. Press **SET CLOCK** or **START**. The Timer can be set in hours or minutes up to 12 hours and 59 minutes. 1. Press **TIMER**.

2. Press **TEMP/TIME "+"** or **"-"** arrow pads to set the length of time. 3. Press **START** to begin the countdown. If enabled, end-of-cycle tones will sound at end of countdown. 4. Press **TIMER** twice to cancel the Timer. Do not press the **CANCEL/OFF** keypad because the oven will turn off. 5. If the **TIMER** is running, but not in the display, press **TIMER** to display the countdown for 5 seconds.

1. Press **BAKE**. 2. Press **TEMP/TIME "+"** or **"-"** arrow pads to set a temperature other than 350°F (175°C) in 5° increments between 170°F and 525°F (75°C and 275°C). 3. Press **START**. 4. To change the temperature repeat Step 2. Press **START** or wait 5 seconds for the change to take effect. 5. Press **CANCEL/OFF** when finished. 1. Position cookware in oven and close the oven door. 2. Press **BROIL**.

3. Press **TEMP/TIME "+"** or **"-"** arrow pads to change the temperature in 5°F (5°C) increments between 300°F and 525°F (150°C and 275°C). 4. Press **START**. 5. Press **CANCEL/OFF** when finished. Food must be at serving temperature before placing it in the warmed oven. 1. Press **WARM**. 2. Temperature is set at 170°F (75°C) for 60 minutes (1.00 hour). 3. Press **START**. 4.

Press **CANCEL/OFF** when finished. **TIMER SET/OFF** Oven timer **BAKE** Baking and roasting **BROIL** Broiling **WARM** Hold warm 4 **KEYPAD COOK TIME FEATURE** Timed cooking **INSTRUCTIONS** Timed Cooking allows the oven to be set to turn on at a certain time of day, cook for a set length of time, and/or shut off automatically. Delay start should not be used for foods such as breads and cakes because they may not bake properly. To set a Timed Cook or a Delayed Timed Cook see "Timed Cooking" section..



[Your user manual](#)
[WHIRLPOOL WFG381LVS](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>