

use&care guide

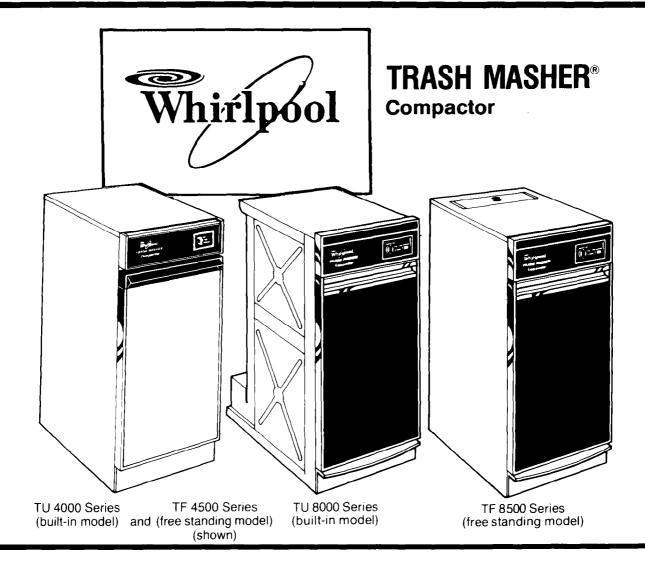

s, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumid

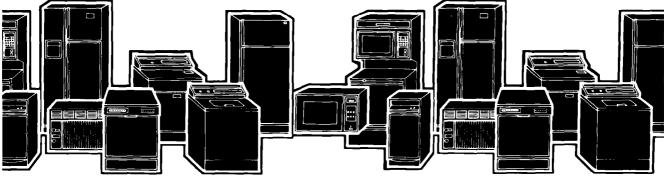

Download from Www.Somanuals.com. All Manuals Search And Download.

Using Your TRASH MASHER 4 If You Need Service or Compactor 5 Assistance 11 How the Compactor Works 6 6 11	Safety First Installation Safety Before You Use Your Compactor Parts and Features Using Your TRASH MASHER Compactor How the Compactor Works	2 2 3 4 5	Installing a New Bag Caring for Your TRASH MASHER Compactor Changing Your Compactor's Color If You Need Service or	8 10
---	---	-----------------------	---	---------

Safety First

c 1985 Whirlpool Corporation

- Read all instructions before using your compactor.
- **Do not** let children operate or play with your compactor. Anything placed in the unit will be crushed or compacted.
- Keep the compactor locked when it's not in use. Remove the key knob to a safe place.
- Always place glass bottles, etc., on their sides in the center of the drawer so the wastepaper below and beside the bottle can help keep broken glass near the center of the bag, away from bag sides.
- Always handle a filled compactor bag with care. Never lift it by the sides. Broken glass or other sharp objects in the bag can cause injury.
- Always carry a filled compactor bag by the folded top or a bag carrier. Watch out for glass that may have cut through the bag sides.
- Always use the compactor only for the purpose it was designed to do.
- Do not use the compactor as a counter for electrical cooking appliances nor as a cutting board.
- Do not set hot pans, etc., on the compactor top.
- Do not spill any liquids on compactor top.
- Always wipe off any broken glass before touching the ram cover.

Do not shove items down into the compactor with hands or feet. To avoid being cut, let the compactor do the compacting.

Do not compact any container or material which might contain poisonous or explosive products.

Do not compact cloths or cans containing paint liquids, thinners, etc. which could create a fire hazard.

Installation Safety

- OBSERVE ALL GOVERNING ELECTRICAL CODES AND ORDINANCES.
- Be sure your compactor is electrically grounded in an approved manner.
- Do not remove the power supply cord ground prong.
- Do not use an extension cord.
- Use care when leveling your compactor, so that the unit does not drop on your hand.
- Use care when changing front panels. As with any cut metal edges, they could cause injury if handled carelessly.
- Never operate the compactor when the drawer handle is removed.
- **Be sure** your compactor is properly installed in an appropriate level area and a place suitable for the size, function and protection of the compactor.
- SAVE THE INSTALLATION INSTRUCTIONS FOR FUTURE REFERENCE.

Before You Use Your Compactor

It is your personal responsibility and obligation to be sure your compactor:

- Has been installed where it is protected from the elements.
- Has been installed on a floor strong enough to support its weight.
- Is properly maintained.
- Has not been installed where flammable materials are stored or used. Fumes from these
 materials may result in a fire or explosion.

SAFETY BEFORE YOU USE PARTS AND FEATURES Your TRASH MASHER® Compactor **TF/TU Model Series** Restart Light (TU 4000 Series) Restart Light. Key-Knob Air Freshener Start-Off Switch Compartment (TF 8500/TU 8000 Series) Model-Serial Number Plate Drawer Handle **Bag Retainers** (TF 8500/TU 8000 Series). Color Front Panel Pack Air Freshener Compartment (TF 4500/TU4000 Series) Bag Carrier Handle -(TF 8500/TU 8000 Series) Lever-Action Lock "Touch-Toe Bar" Drawer Opener (TF 8500/TU 8000 Series) Adjustable Toe Plate -Literature Storage (TF 8500 TU 8000 Series) Now is the time...to fill in the spaces below. You will need this information if you call for service or assistance. Record all letters and numbers. There is no warranty registration card to be returned. Model No Ser al No Furchase Date

Service Company Telephone No


SAVE THESE INSTRUCTIONS

Download from Www.Somanuals.com. All Manuals Search And Download.

Using Your TRASH MASHER[®] Compactor

1. Open the drawer.

Lift and pull the handle or press the Touch-Toe Bar (TF 8500'TU 8000 Model Series) to open the drawer.

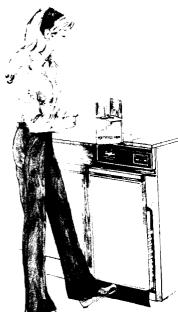





2. Put in the trash.

- · Load almost any kind of trash.
- Wrap or cover wet or messy trash.
- Load bottles or cans on their sides in the center of the drawer.

DO NOT compact:

  
- Any container or aerosol cans which might contain poisonous or explosive products.
- Cloths or cans containing paint liquids, thinners, etc. which would create a fire hazard.
- Items that may develop offensive odors such as raw meat. fish. grapefruit rinds, disposable diapers, or personal hygiene items.





3. Close the drawer; turn the key-knob to START; let the knob go.

- The compactor will stop at the end of the cycle.
- To remove the key-knob, turn it to LOCK/OFF.
- Remove and store in safe place out of children's reach.
- To stop the compactor during a cycle, turn the key-knob to LOCK/OFF. Then turn it to ON. The compacting ram will rise. When it stops rising, you can open the drawer.

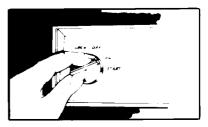


RESTARI

The RESTART Light will glow and the compactor will shut off if a can or bottle wedges the drawer open slightly. The ram will be in a partly down position.

To raise the ram:

- Push and hold the drawer shut.
- Turn the key-knob to START: let it go.
- After the ram rises and the compactor stops, open the drawer: carefully rearrange the load.
- If compactor stops before the light goes out, repeat.



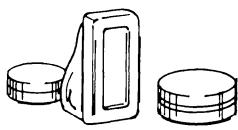


Air Fresheners

The Air Freshener Control is designed to help control odors that might develop in the trash. There are many solid air fresheners available on the market.



TF 8500/TU 8000 Model Series

- Raise the door
- Put in solid air freshener
- Set dial to NORMAL
- Move to MAXimum or MINimum if needed

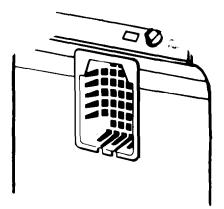


TF 4500/TU 4000 Model Series


- Put "adjustable" air freshener in compartment
- · Adjust according to directions

Check air freshener occasionally. It should last 4 to 6 weeks.


How the compactor works

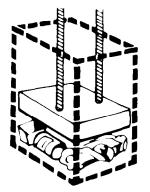

compacting of the first few loadings.

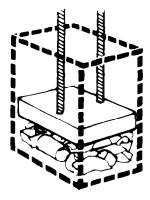


The compacting ram does not go to Compaction starts after the drawer is The trash in a full compactor bag will the drawer bottom. You will not see about 13 full. You may hear a noise be about 1/4 the size of its original when glass breaks. Strong glass bottles may not break at all.

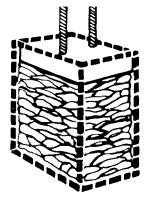

bulk.

Removing a filled bag

TF 8500/TU 8000 Model Series

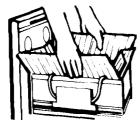


Pull all four bag cuffs up




Tuck in slotted sides



Bring top edges together and roll or fold to close bag

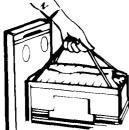


Remove bag carrier handles from side retainers and hold.

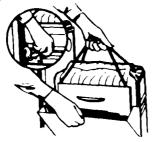


Push side-lock latch down and tilt drawer side open

Use bag carrier to lift out bag and carry it away. Be careful Bits of glass may stick through the bag 6

TF 4500/TU 4000 Model Series

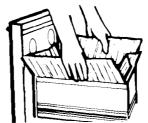


Pull all four bag cuffs up

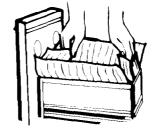

Tuck in slotted sides.



Bring top edges together and fold to close bag.

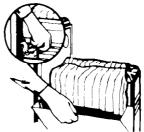

Push side-lock lever down and tilt drawer side open.



Using both hands on the fold, remove the bag.


Carry the bag only by the folded top. Be careful when removing and carrying the filled bag. Bits of glass may stick through the sides of the bag.

Installing a new bag

Before installing a new bag, be sure:

- 1. The drawer side is securely locked.
- 2. The container is clean and free of sharp debris that may have punctured the bag.
 - sha mat may have punctured the bag


TF 8500/TU 8000 Model Series

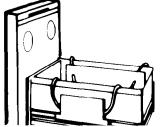


Fit the bag caddy in the drawer. Tuck the rope handles behind the bag retainers as shown.



Put unopened bag in drawer as shown Spread front bag corners and slide cuff over right-front corner.

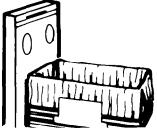

Spread rear bag corners and slide cuff over left-rear corner. Tuck cuffs behind bag retainers as shown.

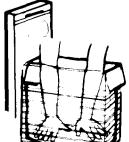


Press inside of bag against drawer bottom sides and corners for smooth fit


If you have a TF 8500 Model Series, store extra bags in the bag storage compartment in the top at the back




TF 4500/TU 4000 Model Series

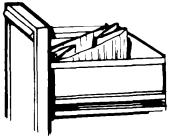

Put unopened bag in drawer as shown Spread front bag corners and slide cuff over right-front corner

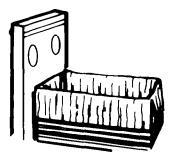

Spread rear bag corners and slide cuff over left-rear corner.

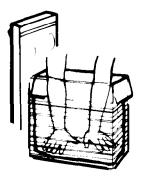

Press inside of bag against drawer bottom, sides and corners for smooth fit.

DO NOT USE ANY KIND OF BAG OTHER THAN THE PLASTIC-LINED PAPER BAGS DESIGNED ESPECIALLY FOR USE IN YOUR COMPACTOR. TRASH

MASHER* Compactor bags may be purchased from your Whirlpool Appliance Dealer (Part No. 675186) or from Whirlpool Corporation, LaPorte Division, 1900 Whirlpool Drive, LaPorte, Indiana 46350


Caring for Your TRASH MASHER® Compactor

As is true of most appliances proper care is needed to give you continued satisfaction.




Clean exterior surfaces

- Wipe with warm, sudsy water and a damp cloth. Rinse. Dry with a soft cloth.
- Wipe up spills right away. Some foods can mar the finish if left on the top.

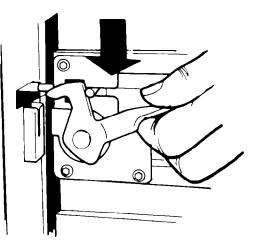


Tilt the drawer side open

- Press side-lock latch down.
- Hold latch and tilt side of drawer until the latch clears the drawer front.

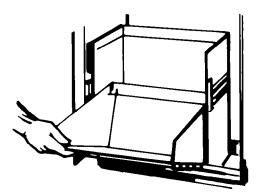

Clean inside the drawer

- Wear rubber gloves. There may be bits of glass in the drawer
- Wash with a damp cloth using warm, sudsy water. Rinse. Dry with a soft cloth.

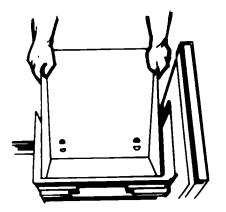


Removing and replacing the drawer side


- To remove the drawer side, tilt it out. Then lift it out.
- To replace it, slide it back, tilted. Press the latch down while pushing the side to upright position.
- Lock the latch.


If you will be away for more than a couple of days, remove the compactor bag. Lock the compactor and remove the key-knob. Store the keyknob in a safe place.

(TF 4500/TU 4000 Model Series)

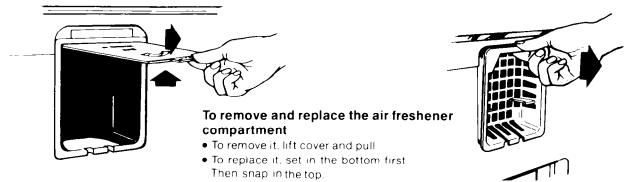

:TF 8500-TU 8000 Model Series)

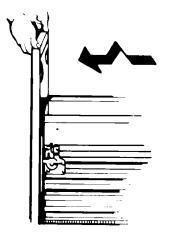

 


- Pull the drawer out until it stops
- Note the tracks in which the drawer rollers move
- Lift the front to clear the drawer stops.



Wipe off the ram cover

- WEAR RUBBER GLOVES
- Wipe glass particles off ram cover with a cloth or paper towels
- Use warm sudsy water to remove foods Rinse. Dry with soft cloth

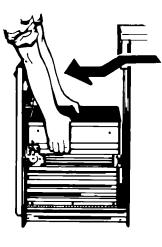

- Grasp the drawer on the sides.
- Pull it out the rest of the way.
- Set it down gently.




- WEAR RUBBER GLOVES.
- Vacuum inside of cabinet.
- Wash, rinse and dry inside.
- Replace drawer.

Changing your compactor's color

Behind the color panel on the front of your compactor's drawer is another color. There may also be one or two extra panels, depending on the model you have. The panels have a different color on each side, so you can have a choice of two to six colors for the front. The Consumer Buy Guide label lists the color choices.

To change the color of your compactor's front panel, follow the directions below. All you need is a medium-sized screwdriver.

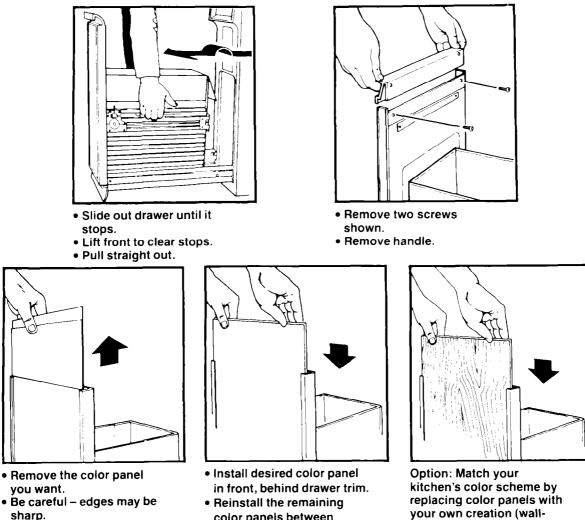

- color panels between cardboard spacers.
- Make sure panels are all the way down.
- Replace handle and screws.
- WARNING: REPLACE HANDLE BEFORE Replace the drawer: OPERATING COMPACTOR TO AVOID INJURY FROM MOVING PARTS.

 - -Put drawer rollers over stops in the drawer quides.

paper, panelling). See "In-

stallation Instructions."

- —Slide drawer back to stops.
- -Lift front of drawer to clear stops.
- —Slide it all the way in.

If you need service or assistance, we suggest you follow these four steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind

If the compactor won't operate:

- Is the electric cord securely plugged in?
- Have you checked the main fuse or circuit breaker box?
- Is the drawer completely closed?
- Is the key-knob turned all the way to START before it is released?

If compactor stops during operation:

 Is the RESTART light on? Push drawer in while turning key-knob to start. Repeat if necessary. Rearrange trash load-do not load rigid items at front of drawer.

Trash not compacted:

 Drawer must be at least 13 full to see compaction

Not enough compaction or force:

 Compacting works best when only a few items are loaded. Use the compacting cycle frequently.

Bottles don't break:

 Not all bottles will break every time. depending upon trash load below it.

Drawer won't open:

- Drawer will open only when ram is all the way up
- To raise the ram, push drawer in firmly; turn key-knob to START; release key-knob.
- Open drawer lay cans and bottles flat in center of drawer.
- Start compactor again.



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance **FSP** replacement parts

will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance

- 2. If you need assistance
- Call Whirlpool COOL-LINE® service assistance telephone numbers. Dial free from:

Continental U.S.	(800) 253-1301
Michigan	(800) 632-2243
AL 1 A 11 H	1000 000 4404

Alaska & Hawaii (800) 253-1121 and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service com-



3. If you need service

Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies. TECH-CARE service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES—HOUSEHOLD— MAJOR—SERVICE & REPAIR

123 Maple

123 Maple

- WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE
- SERVICE COMPANIES

OR

- WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE SERVICE COMPANIES XYZ SERVICE CO

999-9999

999-9999

- OR WASHING MACHINES, DRYERS & IRONERS -SERVICING
- WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES XYZ SERVICE CO 123 Maple 999-9999

If you have a problem¹...


Call our COOL-LINE * service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to: Mr. Stephen E. Upton Senior Vice President Whirlpool Corporation Administrative Center 2000 US-33 North Benton Harbor, MI 49022 If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.



Making your world a little easier.

Part No. 780212 Rev. C © 1985 Whirlpool Corporation Printed in U.S.A.

Makers, Dishwashers, Built-In Ovens, and Surface Units, Ranges, Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dry

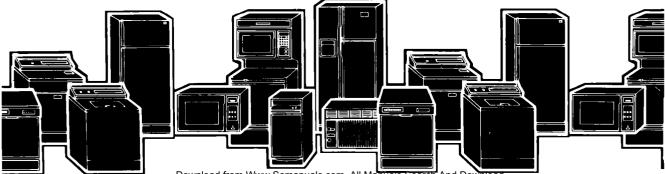

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com