


use & care guide




Whirlpool

COMPACTORS

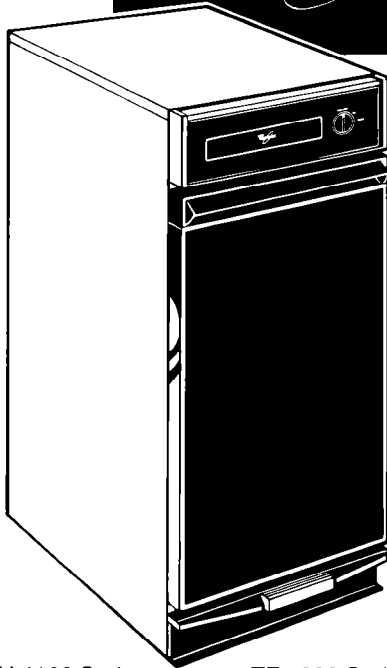

TU 4100 Series
(built-in model) and TF 4600 Series
(free standing model)
(shown)

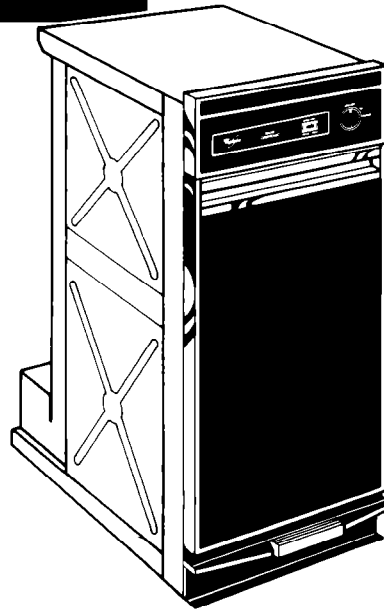

TU 8100 Series
(built-in model)



Contents

	Page		Page
Safety First	2	Removing a filled bag	6
Installation Safety	2	Installing a new bag	7
Before You Use Your Compactor	2	Caring for Your Compactor	8
Parts and Features	3	Changing Your Compactor's Colour	10
Using Your Compactor	4	If You Need Service or Assistance	11
How the compactor works	5	Warranty for Your Waste Compactor	12

Safety First

- **Read** all instructions before using your compactor.
- **CAUTION: Do not let children operate or play with your compactor. Anything placed in the unit will be crushed or compacted.**
- **Keep** the compactor locked when it's not in use. Remove the key-knob to a safe place.
- **WARNING: Always place glass bottles, etc., on their sides in the center of the drawer so the wastepaper below and beside the bottle can help keep broken glass near the center of the bag, away from the sides. Never lift the bag by the sides. Broken glass or other sharp objects in the bag can cause injury.**
- **Always** carry a filled compactor bag by the folded top or a bag carrier. Watch out for glass that may have cut through the bag sides.
- **Always** use the compactor only for the job it was designed to do.
- **Do not** use the compactor as a counter for electrical cooking appliances nor as a cutting board.
- **Do not** set hot pans, etc., on the compactor top.
- **Do not** spill any liquids on compactor top.
- **WARNING: Always wipe off any broken glass before touching the ram cover.**
- **Do not** shove items down into the compactor with hands or feet. To avoid being cut, let the compactor do the compacting.
- **WARNING: Do not compact any container or material which might contain poisonous or explosive products.**
- **WARNING: Do not compact cloths or cans containing paint liquids, thinners, etc. which could create a fire hazard.**

Installation Safety

- **OBSERVE ALL GOVERNING ELECTRICAL CODES AND ORDINANCES.**
- **Be sure** your compactor is electrically grounded in an approved manner.
- **Do not** remove the power supply cord ground prong.
- **Do not** use an extension cord.
- **Use care** when leveling your compactor, so that the unit does not drop on your hand.
- **Use care** when changing front panels. As with any cut metal edges, they could cause injury if handled carelessly.
- **Never** operate the compactor when the drawer handle is removed.
- **Be sure** your compactor is properly installed in an appropriate level area and a place suitable for the size, function and protection of the compactor.
- **SEE INSTALLATION INSTRUCTIONS FOR COMPLETE DETAIL.**


Before You Use Your Compactor

It is your responsibility and obligation to be sure your compactor:

- Has been installed where it is protected from the elements.
- Has been installed on a floor strong enough to support its weight.
- Is properly maintained.
- Has not been installed where flammable materials are stored or used. Fumes from these materials may result in a fire or explosion.

Compactor

TF/TU Model Series

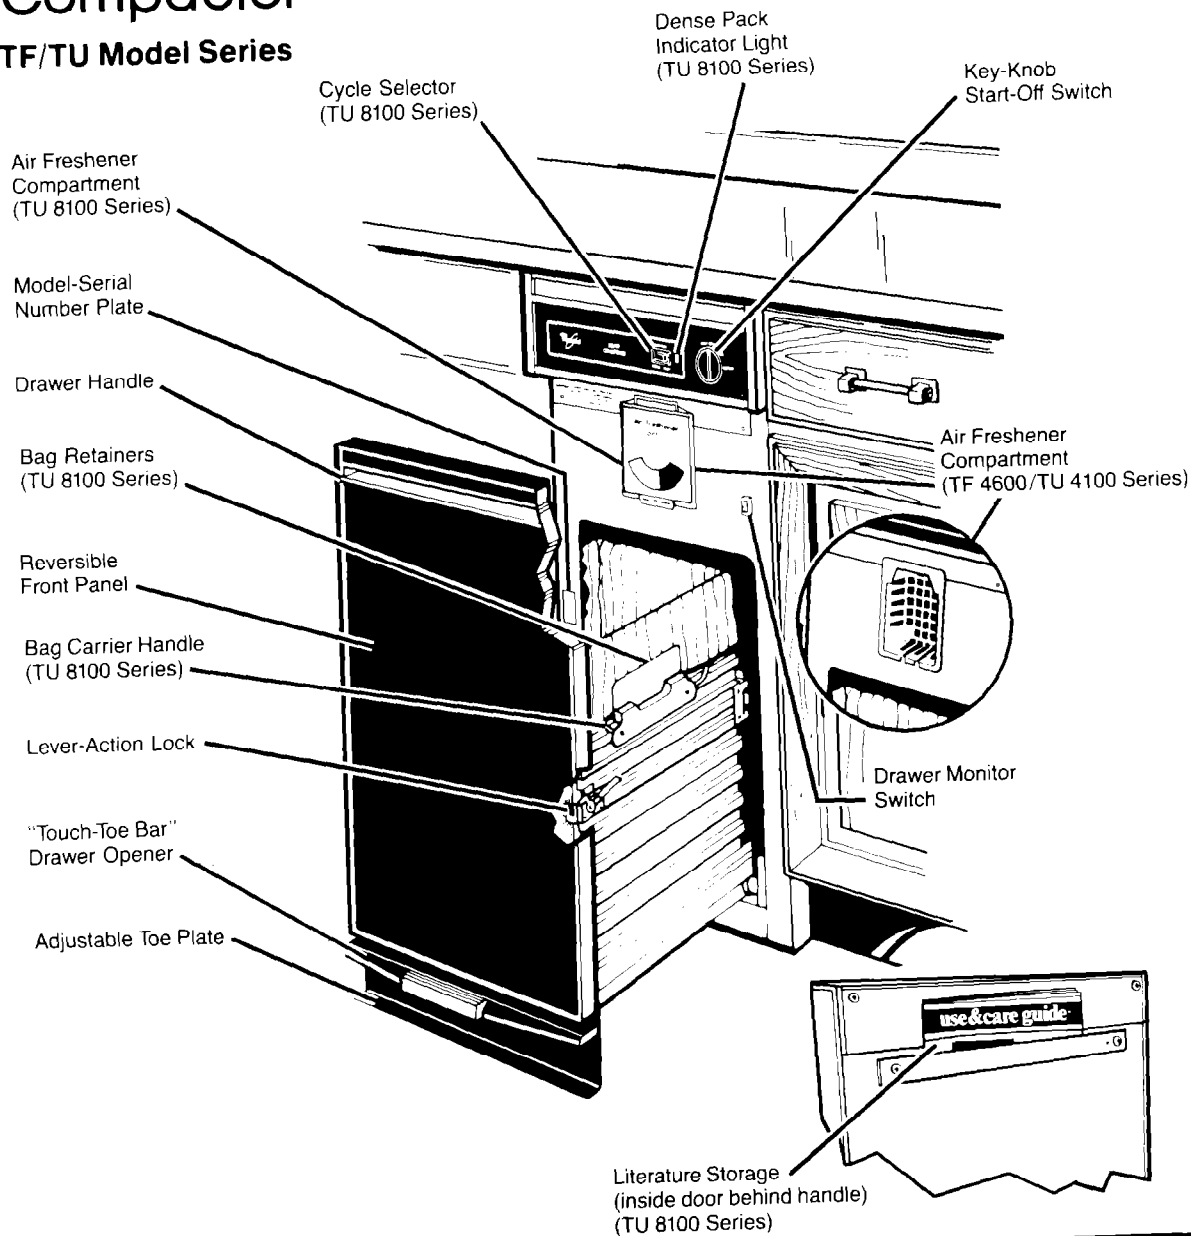

SAFETY • BEFORE YOU USE • PARTS AND FEATURES

Copy your Model and Serial Numbers here...

When you need service or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate located as shown).
2. Purchase date from sales slip.

Copy this information in these spaces. Keep this book, your warranty and sales slip together in a handy place.

There is no warranty card to be returned.

Model Number

Serial Number


Purchase Date

Service Company Telephone Number

Using Your Compactor

1. Open the drawer.

Lift and pull the handle or press the Touch-Toe Bar to open the drawer.

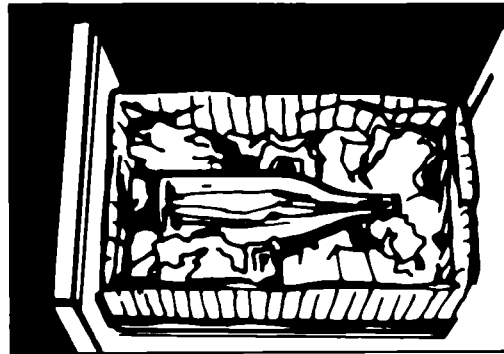

2. Put in the trash.

- Load almost any kind of trash.
- Wrap or cover wet or messy trash.
- Load bottles or cans on their sides in the **center** of the drawer.



DANGER: DO NOT compact

- Any container or aerosol cans which might contain insecticide, hair spray, engine starting fluid or any other poisonous or explosive products.
- Cloths or cans containing paint liquids, thinners, etc. which would create a fire hazard.
- Items that may develop offensive odors such as raw meat, fish, grapefruit rinds, disposable diapers, or personal hygiene items.

NOTE: Your Compactor is designed for household use only.

3. Close the drawer; position cycle selector to **NORMAL (TU 8100 Series only)**; turn the key-knob to **START**; let the knob go.

- **The compactor will stop** at the end of the cycle.
- **To remove the key-knob**, turn it to **LOCK/OFF**. **Remove and store in a safe place out of children's reach.**
- **To stop the compactor** during a cycle, turn the key-knob to **LOCK/OFF**. Then turn it to **ON**. The compacting ram will rise. When it stops rising, you can open the drawer.



The DENSE PACK cycle (TU 8100 Series only)


The DENSE PACK Cycle is a convenience feature that allows you to use fewer bags by extending the use of a bag. This cycle puts constant pressure on trash to keep it from springing back. Regular use of this feature can increase bag capacity up to 20%. **NOTE: The cycle selector should be in the NORMAL position when DENSE PACK-HEAVY setting is not being used.**

To use DENSE PACK Cycle:

- Move cycle selector from the **NORMAL** to **HEAVY** setting.
- Turn the key-knob to **START** and release.
- The ram will stay in the down position for extra compacting and the **DENSE PACK** indicator light will come on. **Remember, the drawer can not be opened when ram is down and the DENSE PACK light is on.**
- For best results, use **DENSE PACK-HEAVY** setting for at least one half hour each time the cycle is used.
- **To raise the ram**, turn key-knob to **START** or move the cycle selector back to the **NORMAL** position.

NOTE: Fully compacted trash bags will be heavier than normal. Handle with care.

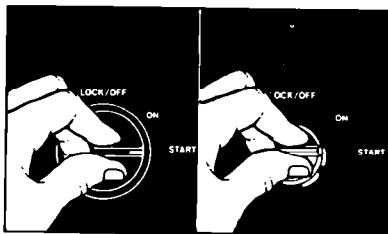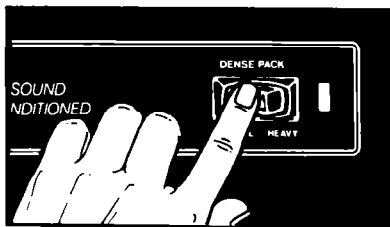

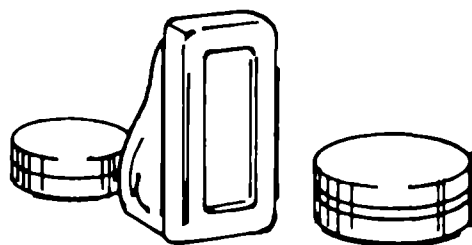


Air Fresheners

The Air Freshener Control is designed to help control odors that might develop in the trash. There are many **solid air fresheners** available on the market.



TU 8100 Model Series


- Raise the door
- Put in solid air freshener
- Set dial to NORMAL
- Move to MAXimum or MINimum if needed

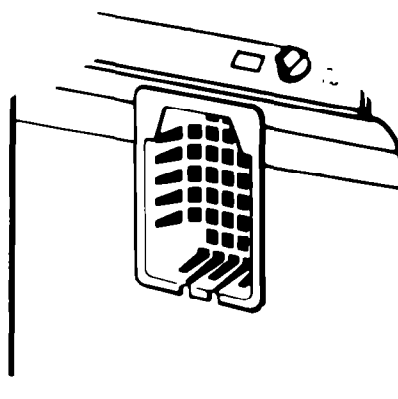


TF 4600/TU 4100 Model Series

- Put "adjustable" air freshener in compartment
- Adjust according to directions
- Check air freshener occasionally, it should last 4 to 6 weeks


How the compactor works (in NORMAL Cycle)

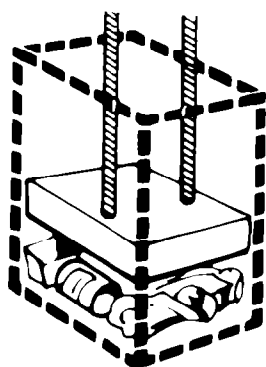

The compacting ram does not go to the drawer bottom. You will not see compacting of the first few loadings.

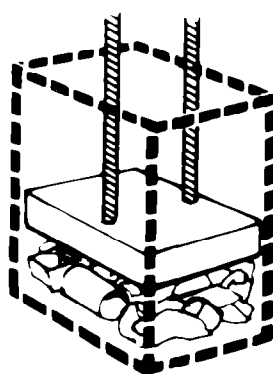

Compaction starts after the drawer is about $\frac{1}{3}$ full. You may hear a noise when glass breaks. **Strong glass bottles may not break at all.**

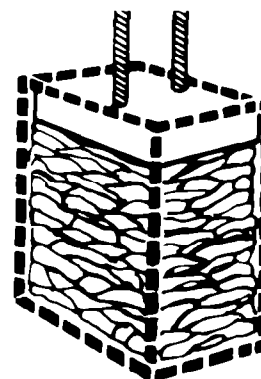


The trash in a full compactor bag will be about $\frac{1}{4}$ the size of its original bulk.


Bottles or cans not placed in center may become caught between the ram and the drawer. The Drawer Monitor Switch senses a "misload," and will cause the ram to return to the "up" position without compacting. Load bulky trash, bottles and cans in the **center** of the drawer.

Removing a filled bag


TU 8100 Model Series

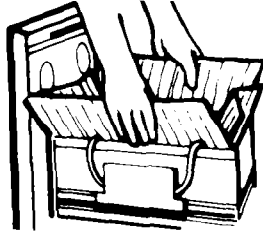


Pull all four bag cuffs up.

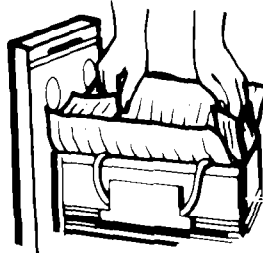

Tuck in slotted sides.

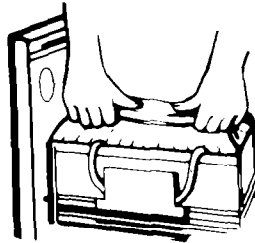

Bring top edges together and roll or fold to close bag.

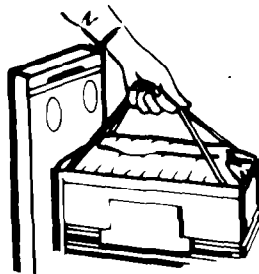

Remove bag carrier handles from side retainers and hold.




Push side-lock latch down and tilt drawer side open.


WARNING: To avoid personal injury from broken glass sticking through the bag, use bag carrier to carefully remove and carry the bag.

6


TF 4600/TU 4100 Model Series

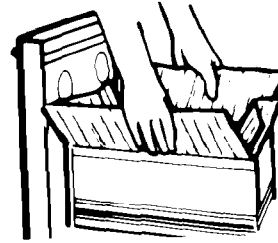


Pull all four bag cuffs up.

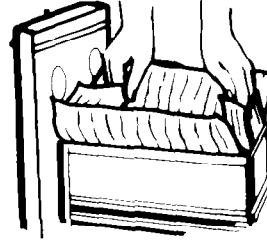


Tuck in slotted sides.

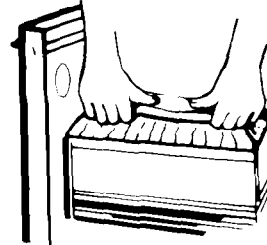

Bring top edges together and fold to close bag.

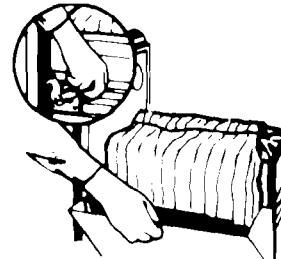

Push side-lock lever down and tilt drawer side open.

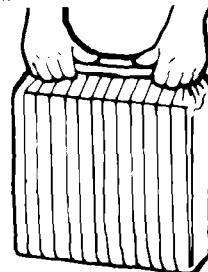

Using both hands on the fold, remove the bag.


WARNING: To avoid personal injury from broken glass sticking through the bag carefully remove and carry the filled bag only by the folded top.

Installing a new bag


Before installing a new bag, be sure:

1. The drawer side is securely locked.
2. The container is clean and free of sharp debris that may have punctured the bag.


TU 8100 Model Series

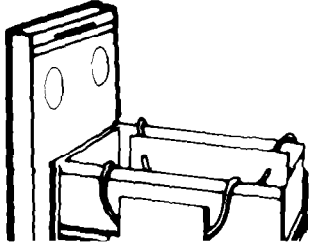


Fit the bag caddy in the drawer. Tuck the rope handles behind the bag retainers as shown.

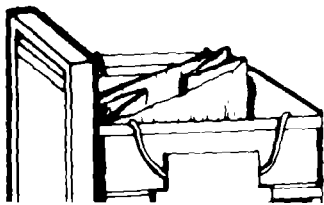

Put unopened bag in drawer as shown. Spread front bag corners and slide cuff over right-front corner.

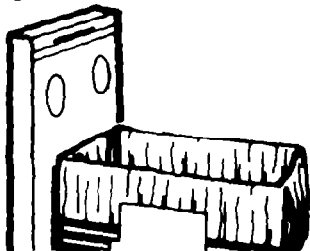


Spread rear bag corners and slide cuff over left rear corner. Tuck cuffs behind bag retainers as shown.

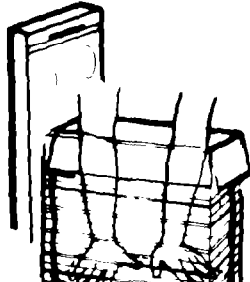


Press inside of bag against drawer bottom, sides and corners for smooth fit.


TF 4600/TU 4100 Model Series

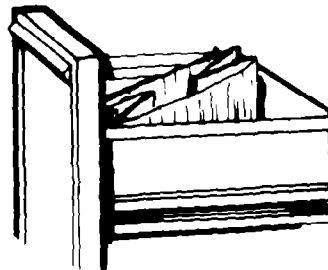

Put unopened bag in drawer as shown. Spread front bag corners and slide cuff over right-front corner.

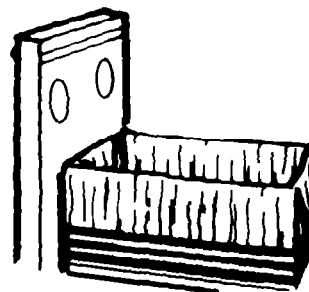

Spread rear bag corners and slide cuff over left-rear corner.

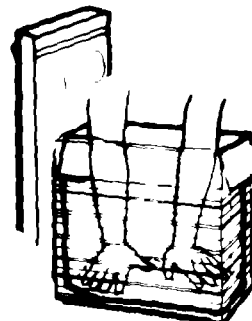

Press inside of bag against drawer bottom, sides and corners for smooth fit.

DO NOT USE ANY KIND OF BAG OTHER THAN THOSE DESIGNED ESPECIALLY FOR USE IN YOUR COMPACTOR.

Compactor bags may be purchased from the dealer from whom you purchased your appliance, your Inglis Factory Direct Service Branch, or the nearest Inglis-authorized service organization. Ask for part no. 675186.

Caring for Your Compactor


As is true of most appliances, proper care is needed to give you continued satisfaction.

Before cleaning the compactor, turn the key knob to the OFF position and remove.




Clean exterior surfaces

- Wipe with warm, sudsy water and a damp cloth. Rinse. Dry with a soft cloth.
- Wipe up spills right away. Some foods can mar the finish if left on the compactor surface.

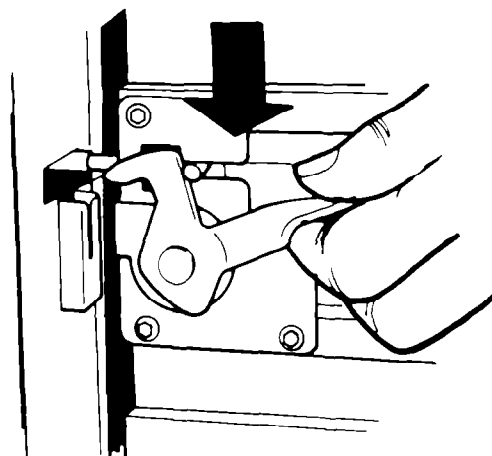

Tilt the drawer side open


- Press side-lock latch down.
- Hold latch and tilt side of drawer until the latch clears the drawer front.

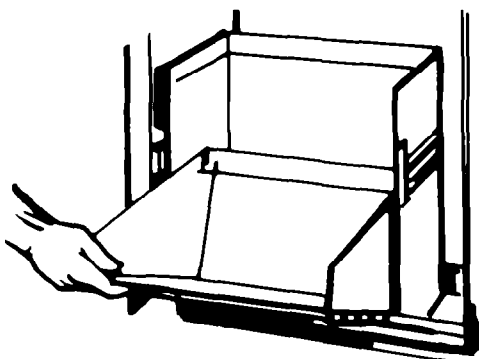

Clean inside the drawer

WARNING: To avoid personal injury from broken glass in the drawer, wear rubber gloves when cleaning.


- Wash with a damp cloth using warm, sudsy water. Rinse. Dry with a soft cloth.

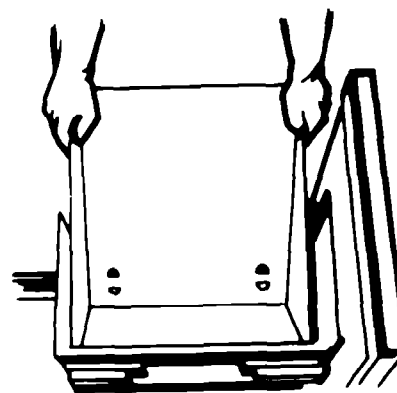

Removing and replacing the drawer side

- To remove the drawer side, tilt it out. Then lift it out.
- To replace it, slide it back, tilted. Press the latch down while pushing the side to upright position.
- Lock the latch.


If you will be away for more than a couple of days, remove the compactor bag. Lock the compactor and remove the key-knob. Store the key-knob in a safe place.

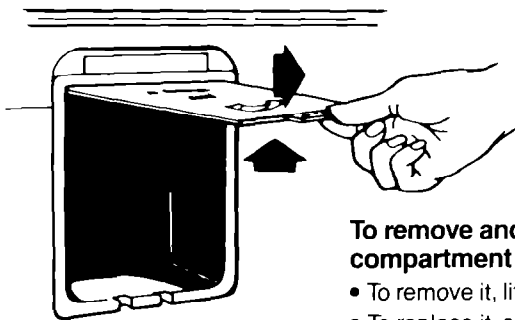


(TU 8100 Model Series)

To remove and replace the air freshener compartment for cleaning

- To remove it, lift cover and pull.
- To replace it, set in the bottom first. Then snap it at the top.

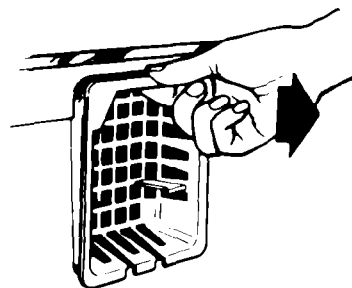


(TF 4600/TU 4100 Model Series)

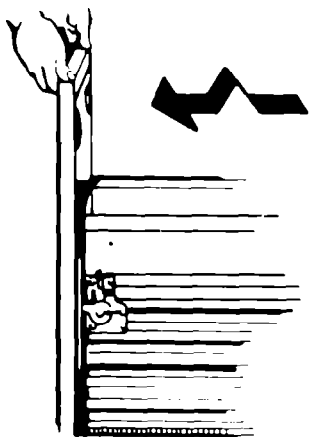


To clean inside the cabinet, remove the drawer

- Pull the drawer out until it stops.
- Note the tracks in which the drawer rollers move.
- Lift the front to clear the drawer stops.

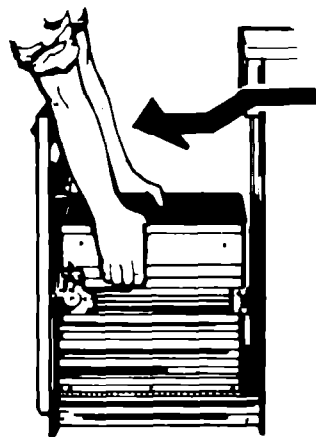

- Grasp the drawer on the sides.
- Pull it out the rest of the way.
- Set it down gently.

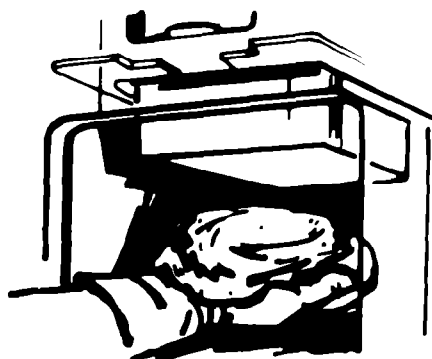

Wipe off the ram cover

WARNING: To avoid personal injury from broken glass on the ram cover, wear rubber gloves.

- Wipe glass particles off ram cover with a cloth or paper towels.
- Use warm sudsy water to remove foods. Rinse. Dry with soft cloth.




Clean inside the cabinet

- WEAR RUBBER GLOVES.
- Vacuum inside of cabinet. **Liquid spills or wet trash should be cleaned up by hand, or use a vacuum designed to pick up liquids.**
- Wash, rinse and dry inside.
- Replace drawer.


Changing Your Compactor's Colour

The **colour panel** on the front of your compactor's drawer reverses to another colour.


To change the colour of your compactor's front panel, follow the directions below. All you need is a medium-sized screwdriver.

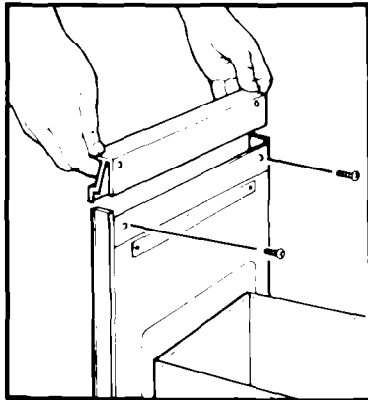


- Slide drawer out.
- Remove two screws shown.
- Remove handle.

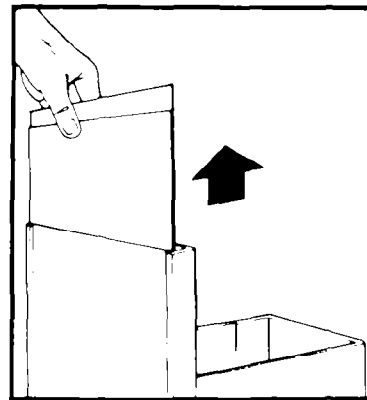


- Be careful – edges may be sharp.
- Remove colour panel and reverse.

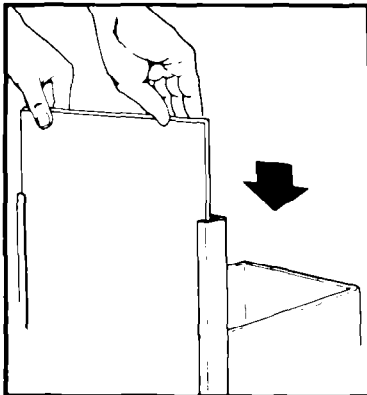

- Make sure panel is all the way down.
- Be sure to replace cardboard spacer in its former position.
- Replace handle and screws.

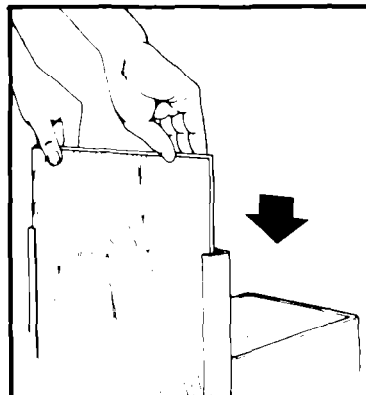

Option: Match your kitchen's colour scheme by replacing colour panel with your own creation (wallpaper, panelling). See Installation Instructions.

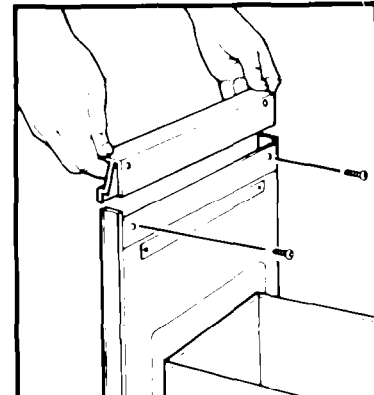

- **WARNING: REPLACE HANDLE BEFORE OPERATING COMPACTOR TO AVOID INJURY FROM MOVING PARTS.**
- Slide drawer back in.

If You Need Service or Assistance We Suggest You Follow These Steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your compactor won't operate:

- Is the power cord plugged into a live circuit with the proper voltage?
- Have you checked your home's main fuses or circuit breaker box?
- Is the drawer completely closed?
- Is the key-knob turned all the way to START before it is released?

Drawer won't open:

- Drawer will open only when ram is all the way up.
- To raise the ram, turn the key-knob to START and release or move the DENSE PACK switch back to NORMAL (TU 8100 Series only).

If trash is not compacting:

- Is the drawer loaded properly? If anything gets between the ram and the drawer, the ram will return to the "up" position without compacting.
- Drawer must be at least $\frac{1}{3}$ full before compactor will compact.

Not enough compaction or force:

- Compacting works best when only a few items are loaded. Use the compacting cycle frequently. **DENSE PACK can be used on TU 8100 Series compactors, see page 4.**

Bottles don't break:

- Not all bottles break every time, depending on bottle and trash load below it.

2. If you need service...

It's reassuring to know that Inglis Limited stands behind your Whirlpool appliance with its network of Branches and Service Depots. Service by Inglis is designed to fulfill your Warranty and provide after-warranty service and maintenance to keep your new Whirlpool appliance in top-notch condition, anywhere in Canada. Inglis wants you to get the service that you would expect on quality Whirlpool home appliances.

To obtain service:

1. Contact the appliance dealer from whom you purchased your appliance.

or

2. Contact your nearest Inglis Factory Direct Service Branch, listed in the Yellow Pages.

3. If you move...

To make sure that your Whirlpool appliance is correctly installed and to ensure its continued satisfactory operation, please telephone your nearest Inglis Direct Factory Service Branch, or the nearest Service Organization authorized by Inglis to service Whirlpool products. Normal service charges will apply.

REMEMBER: Please include the complete model and serial number of your appliance when requesting service. Also, retain your sales slip and Warranty to verify your Warranty status.

WARRANTY FOR YOUR WASTE COMPACTOR

During your first year after purchase, all parts of the appliance which prove to be defective in materials or workmanship will be repaired or replaced free of charge (parts and labour).

For any home service beyond 32km (20 miles) from the nearest Company-authorized service organization, there will be a charge for the cost of transportation and travelling expenses for the excess distance.

Parts repaired or replaced under this warranty are warranted throughout the remainder of the original warranty period only.

This protection covers your home use of the appliance. The same protection applies to any subsequent owner during the applicable warranty period based on the original owner's purchase date.

This warranty does not cover damage by accident, misuse, improper installation, fire, flood, or acts of God.

This is the only warranty covering this appliance given by the manufacturer.

The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation.




Distributed by: Inglis Limited,
1901 Minnesota Court, Mississauga,
Ontario L5N 3A7 Branches across Canada

Trademark in Canada, Used by Authority of
Canadian Trademark Owner,
WHIRLPOOL CORPORATION, U.S.A.

Part No. 4152836

Printed in U.S.A.

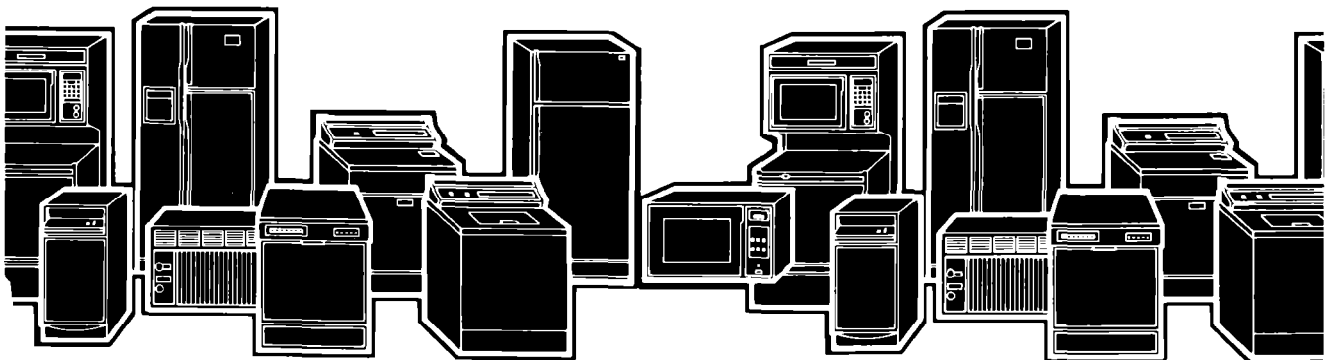

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>