



# use & care guide

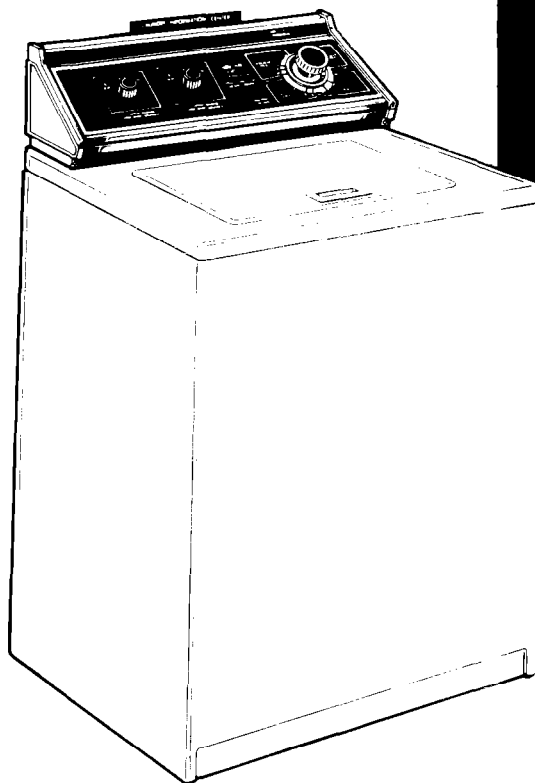


## **AUTOMATIC WASHER**

**Design 2000  
Large Capacity  
Model  
LA7450XM**

rowave Ovens. Trash Compactors. Room Air Conditioners. Dehumidifiers. Automatic Washers. Clothes Dryers. Freezers. Refrigerator-Freezers.

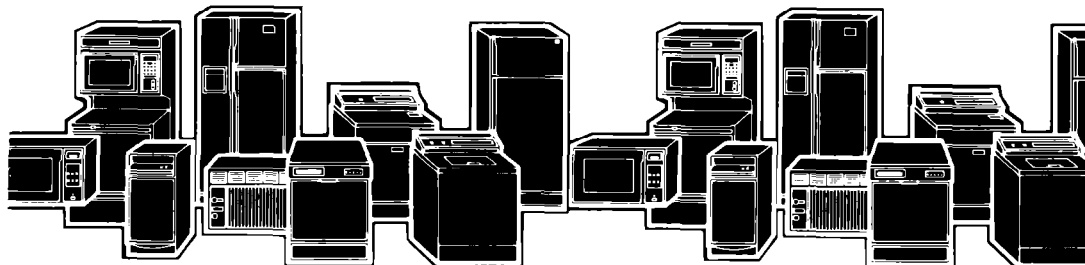

# Parts and features

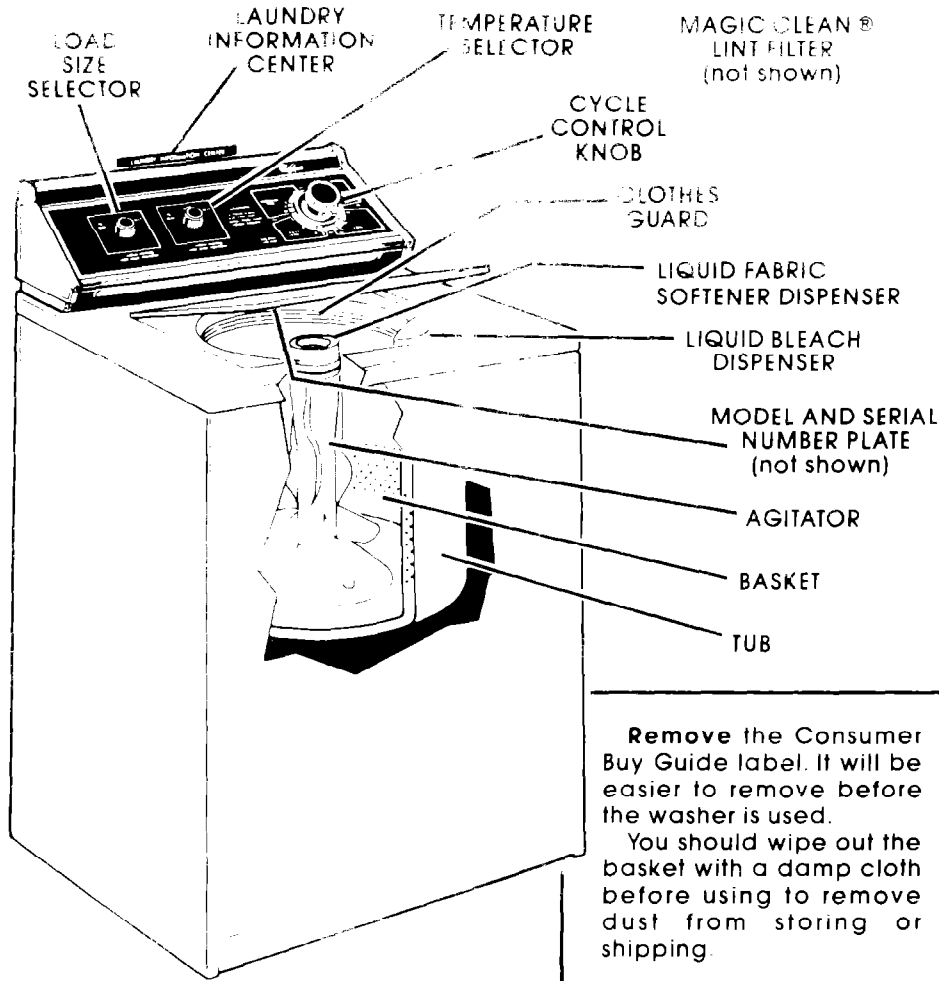

## Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready.

1. Complete Model and Serial Numbers (from plate under the lid near the hinge).
2. Purchase date from sales slip

Copy this information in these spaces. Keep this book in the Laundry Information Center with your "Laundry Guide," sales slip and warranty.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Purchase Date \_\_\_\_\_

Service Company  
Phone Number \_\_\_\_\_

There is no warranty registration to return. Proof-of-purchase is all that is required for in-warranty service.

## Your responsibilities

Read this "Use and Care Guide" and your "Laundry Guide" carefully for important use and safety information.

You are personally responsible for making sure that your washer...

- is installed by a qualified installer.
- is properly installed and leveled on a floor that can support the weight.
- is connected to the right kind of outlet, electric supply, water supply and drain.
- is properly grounded.
- is used only for jobs normally expected of home automatic washers.
- is properly maintained.
- is protected from the weather and kept where the temperature will not fall below freezing.
- is not run by children or anyone unable to operate it properly.

See the "Installation Instructions" for complete information.

## Contents

|                                   | Page |
|-----------------------------------|------|
| PARTS AND FEATURES                | 2    |
| YOUR RESPONSIBILITIES             | 3    |
| SAFETY FIRST                      | 3    |
| STARTING YOUR WASHER              | 4    |
| WHAT HAPPENS IN EACH CYCLE        | 5    |
| OTHER OPERATING INSTRUCTIONS      | 8    |
| For a Rinse and Spin              | 8    |
| For a Drain and Spin              | 9    |
| For a Soak or Pre-Wash            | 8    |
| Liquid Bleach Dispenser           | 9    |
| Liquid Fabric Softener Dispenser  | 9    |
| MAGIC CLEAN® Lint Filter          | 9    |
| CARING FOR YOUR WASHER            | 10   |
| IF YOU NEED SERVICE OR ASSISTANCE | 11   |

## Safety first

**ALWAYS** unplug the power supply cord before attempting to service the washer.

**NEVER** put flammable fluids (dry-cleaning solvents, gasoline, kerosene) into your washer. **NEVER** use them near your washer.

**ALWAYS** hand launder or air dry fabrics treated with flammable fluids before putting them into your washer.

**NEVER** put your hands into the washer until all motion stops. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.

**DO NOT** allow children to operate or play with the washer.

**ALWAYS** store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet, if possible.

**ALWAYS** read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.

**POISON GAS** can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.

**DO NOT** machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.


**SPECIAL CAUTION:** If hot water has not been used recently (usually two weeks or longer), flammable hydrogen gases may build up in the water heater and hot water pipes. To prevent injury or damage, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. Do not smoke or use any open flame near the faucet while it is open.

# Starting your washer


Before starting your washer



1. Measure and add detergent.
2. Place sorted load in washer.
3. Start washer.

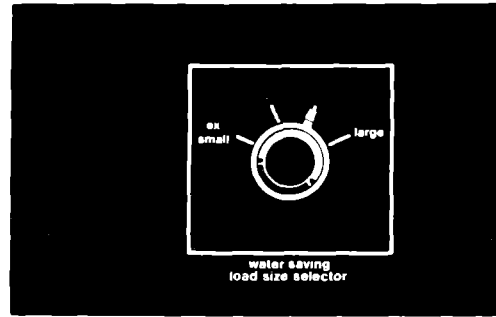

## Select a 1. LOAD SIZE

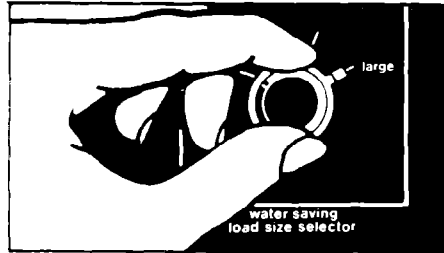

- Turn the knob to point at a setting that describes the size of load you want to wash.
- Set the knob on or between EX SMALL (a few items) and LARGE (a full load).




### DO NOT OVERLOAD WASHER

See pages 6 and 7 of your "Laundry Guide."

NOTE: Use the LARGE water level for best permanent press results.

## Select WATER 2. TEMPERATURES

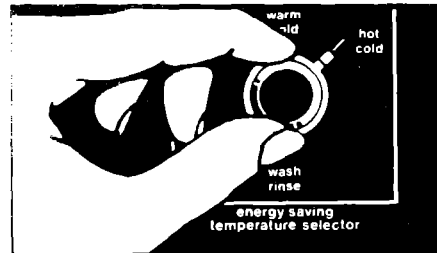

- Match the wash water temperature to the type of fabrics and soils being washed.
- All rinses are cold. Cold rinses save energy and help prevent wrinkles from setting into fabrics.


Recommended wash temperatures can be found in your "Laundry Guide" and printed under the washer lid.

**IMPORTANT: Use warm water with the PERM'T PRESS OR KNITS/ GENTLE Cycles. For heavily soiled permanent press or knit clothes, pre-wash or pre-soak before washing in warm water.**

## LOAD SIZES AND WATER LEVELS


For best cleaning results, the load must be able to move freely in the water. Too big a load or too little water can tear items.

\*Approximate fill with load.

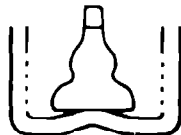


**IMPORTANT: The EX SMALL setting in the REG/HEAVY Cycle may cause water to splash over the tub. If this happens, move the Load Size Selector to a higher water level.**


LARGE (17.3 gals./65.5 L)\*  
(14.7 gals./55.7 L)\*  
(12.1 gals./45.8 L)\*  
EX SMALL (9.5 gals./36.0 L)\*

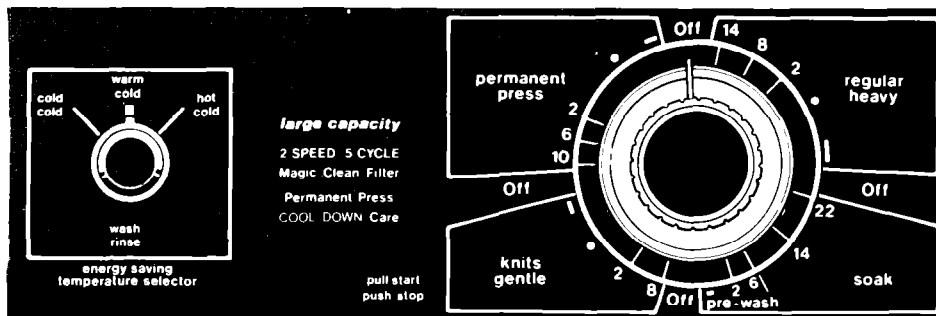


### Select CYCLE and WASH TIME; 3. Start the washer

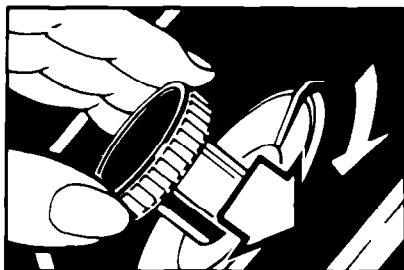


**A.** Push in the Control Knob and turn it to the right. It must be pushed in and turned only clockwise.

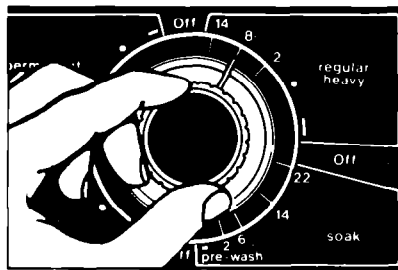

**B.** Stop on a number in the cycle you want. The numbers are minutes of wash time. The drawing shows 8 minutes of agitation in the REGULAR HEAVY cycle.

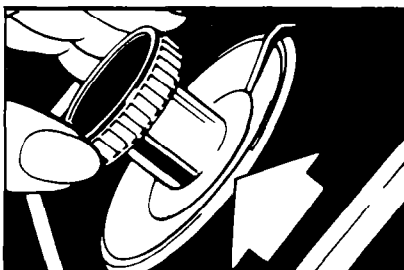

**C.** Start the washer by pulling out the Control Knob. The washer will fill to the level you set with wash water of the selected temperature. After filling, the washer will agitate for the selected number of minutes.

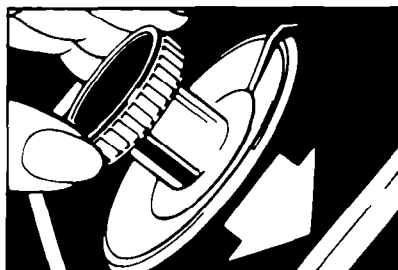


**D.** To stop the washer at any time push in the Control Knob. To restart the washer, pull out the Control Knob. To set the controls for a rinse and spin, a drain and spin, or a soak or pre-wash, see page 8.

# What happens in each cycle

Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.

When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns

## REGULAR HEAVY Cycle

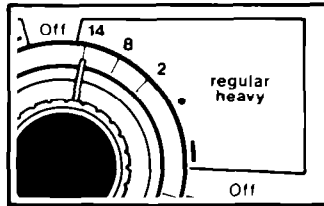


High agitation and spin speeds help remove heavy soils and spin water from heavy or sturdy cotton fabrics.

FILL  
to  
Selected  
Level

WASH  
High  
Speed;  
Selected  
Time

## PERMANENT PRESS Cycle

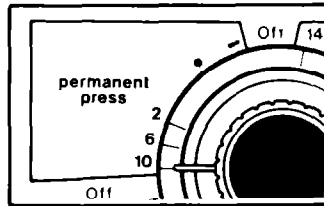


High-speed agitation, low-speed spin and cooling of the wash water before the spin help clean clothing and keep wrinkles from setting into permanent press fabrics.

FILL  
to  
Selected  
Level

WASH  
High  
Speed;  
Selected  
Time

## KNITS/GENTLE Cycle

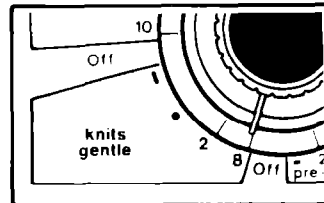


Low agitation and spin speeds and shorter wash time gently wash delicate items and washable synthetic knits.

FILL  
to  
Selected  
Level

WASH  
Low  
Speed;  
Selected  
Time

## SOAK AND PRE-WASH Cycles

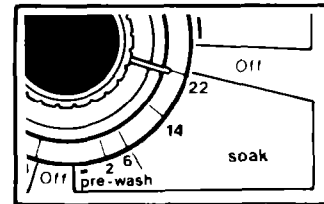

Periods of agitation and soaking time clean stained, well-worn, gray or heavily soiled laundry. Use recommended amount of detergent.


FILL  
to  
Selected  
Level

WASH  
High  
Speed;  
2  
Minutes

**\* IMPORTANT: The washer will pause briefly at different times in every cycle. These pauses are normal. They allow for the reversing of the motor, normal washer operations and the cool-down portion of the PERM'T PRESS cycle.**

clockwise until it points to OFF and the cycle ends.

**NOTE:** You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, cold water is sprayed on the spinning load to help with the rinsing.

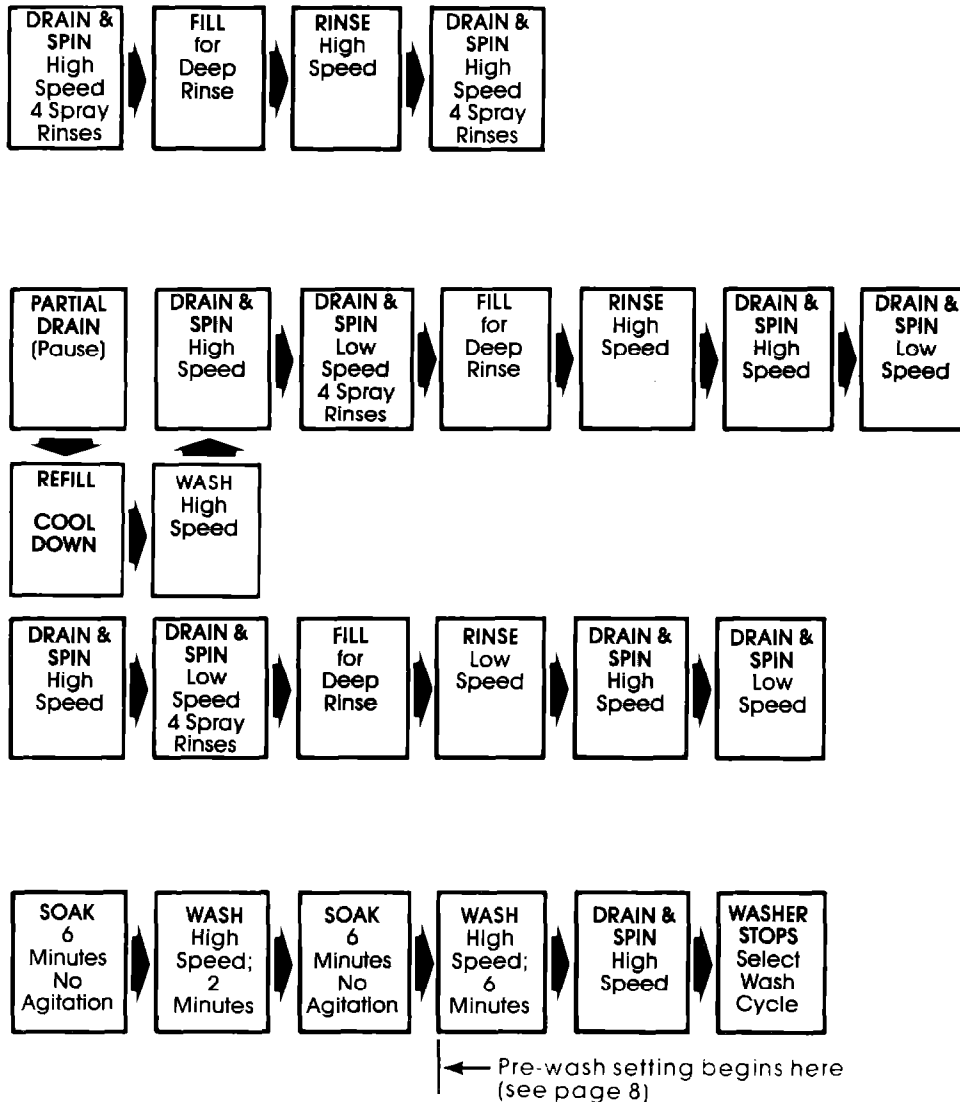



Special care is needed when soaking or pre-washing laundry. See your "Laundry Guide" for proper use of this cycle.





## Liquid bleach dispenser


**Always measure bleach.** Do not guess. Follow directions on the bottle for the amount to use. **Never use more than 1 cup (250 mL) for a full load.** Use less with lower water level settings. Use a cup with a pouring spout to avoid spilling.

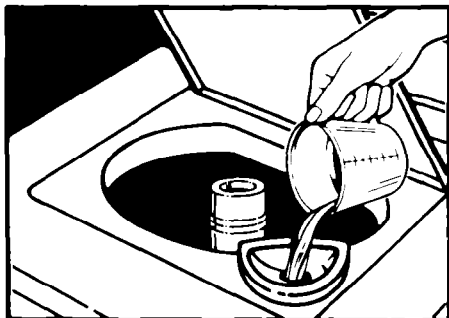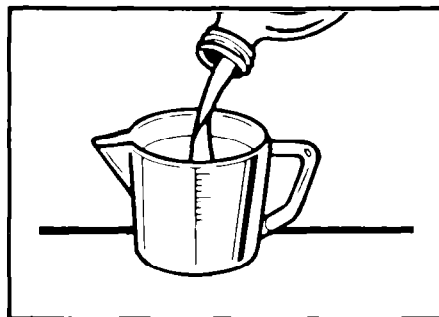

For more information on bleaching, see "Laundry Guide" page 11.

1. Load the washer first.
2. Pour **measured** bleach carefully into dispenser. **DO NOT** let bleach splash, drip or run down into the washer basket. **Undiluted bleach will damage any fabric it touches.**
3. Start the washer. Bleach will be diluted automatically during the wash part of the cycle.

## Liquid fabric softener dispenser

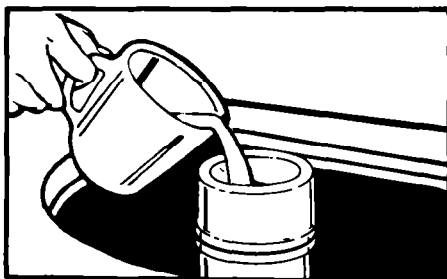


1. Add detergent and load to the basket.
2. Add liquid fabric softener to the dispenser using the amount recommended on the bottle.
3. Avoid dripping or spilling any fabric softener on the load.
4. **Dilute** fabric softener with hot water. Add enough hot water to fill the dispenser up to the opening.
5. Start the washer. Diluted liquid fabric softener will be added to the load during the deep rinse portion of the cycle.  
**NOTE: Do not stop the washer during this time.** If you do, the softener will mix with the remaining soapy wash water. This will cause stains. **Do not put detergent in the liquid fabric softener dispenser.**
6. If dispenser needs cleaning, flush with hot water. **NOTE: Do not wash clothes with dispenser removed.**

## MAGIC CLEAN® lint filter


The lint filter in your washer cleans itself. Collected lint is drained away with the wash and rinse water.

If your washer drains into a tub, remove any lint collected in the drain or strainer.


# Caring for your washer

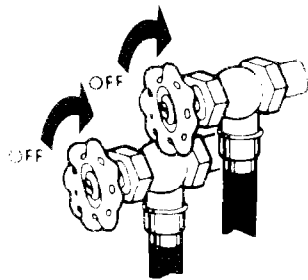


**WHEN NOT WASHING**, keep both water faucets turned off. This takes the pressure off the water inlet valve and hoses.

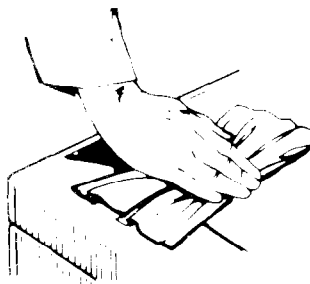

**AFTER WASHING**, use a soft dry cloth to wipe the outside and inside dry. Leave the lid up until the basket is dry. **Wipe up spills right away.** Spills can dull or damage the finish.

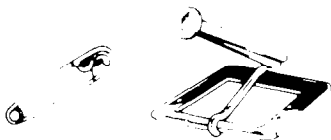

**REMOVE SHARP OBJECTS** such as pins, buckles, etc., from clothes before washing. Close metal zippers.

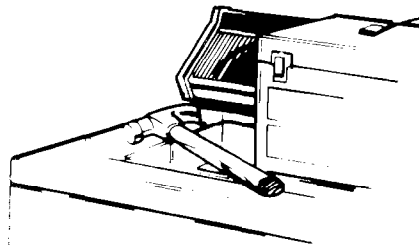


**SHARP OR HEAVY OBJECTS** should never be put on or in the washer. Check pockets for bolts, nuts, tools, etc.



## **NEVER USE THE WASHER TO...**

- store wet or dry laundry.
- soak for more than 2 hours.
- soak with chlorine bleach.
- soak with vinegar or other acids.
- soak or store urine soaked clothes.

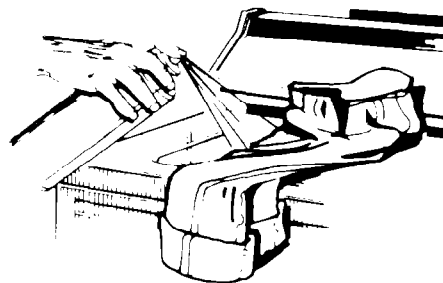

**SOME PRETREATMENT PRODUCTS** can damage washer and dryer dials, consoles and finishes. Do not use these products on or near your washer or dryer.

**Service or performance problems caused by the use of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.**

# If you need service or assistance, we suggest you follow these four steps:

## 1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

### IF YOUR WASHER DOES NOT FILL:

- Is the power supply cord plugged in?
- Are both water faucets open?
- Are fuses blown or circuit-breaker tripped?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

### IF YOUR WASHER DOES NOT SPIN:

- Is the lid closed?
- Is the power supply cord plugged in?
- Is a fuse blown or circuit-breaker tripped?

### IF YOUR WASHER STOPS DURING A CYCLE:

- Remember, the washer pauses briefly at different times in each cycle. These pauses are normal.

### IF WASHER FILLS AND DRAINS WITHOUT RUNNING:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

### MAKE SURE THE DRAIN HOSE IS HIGHER THAN THE WATER LEVEL IN THE WASHER. IF IT ISN'T...

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See "Installation Instructions.")

## 2. If you need assistance\*...

Call Whirlpool COOL-LINE<sup>®</sup> service assistance telephone number. Dial free from:

Continental U.S. . . (800) 253-1301  
Michigan . . . . . (800) 632-2243  
Alaska & Hawaii (800) 253-1121

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory op-

eration from your appliance or, if service is necessary, recommend a qualified service company in your area.

## 3. If you need service\*...



Whirlpool has a nationwide network of franchised TECH-CARE<sup>®</sup> Service Companies. TECH-CARE service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

|  |    |  |
|--|----|--|
| APPLIANCES - HOUSEHOLD -<br>MAJOR - SERVICE & REPAIR | OR | ELECTRICAL APPLIANCES<br>MAJOR - REPAIRING & PARTS   |
| WHIRLPOOL APPLIANCES<br>FRANCHISED TECH-CARE SERVICE |    | WHIRLPOOL APPLIANCES<br>FRANCHISED TECH-CARE SERVICE |
| SERVICE COMPANIES                                    |    |  |
| XYZ SERVICE CO<br>123 Maple . . . . . 999-9999       |    | XYZ SERVICE CO<br>123 Maple . . . . . 999-9999       |
| OR   |    |  |
| WASHING MACHINES, DRYERS<br>& IRONERS - SERVICING    |    |  |
| WHIRLPOOL APPLIANCES<br>FRANCHISED TECH-CARE SERVICE |    |  |
| SERVICE COMPANIES                                    |    |  |
| XYZ SERVICE CO<br>123 Maple . . . . . 999-9999       |    |  |

## 4. If you have a problem\*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert F. Gunts, Vice President  
Whirlpool Corporation  
Administrative Center  
2000 US-33 North  
Benton Harbor, MI 49022

\*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.




Making your world a little easier.

Part No. 385042 Rev. A  
©1984 Whirlpool Corporation

Printed in U.S.A.

---

Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwaves

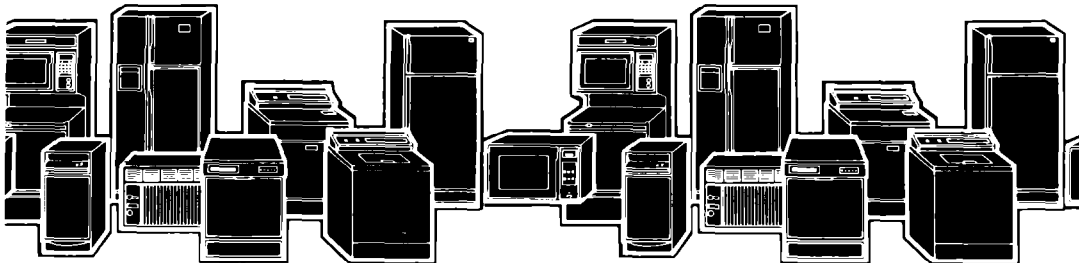

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>