


Model LB3000XK
Space Saver, 24-inch


Whirlpool AUTOMATIC WASHER
**Use & Care
Guide**

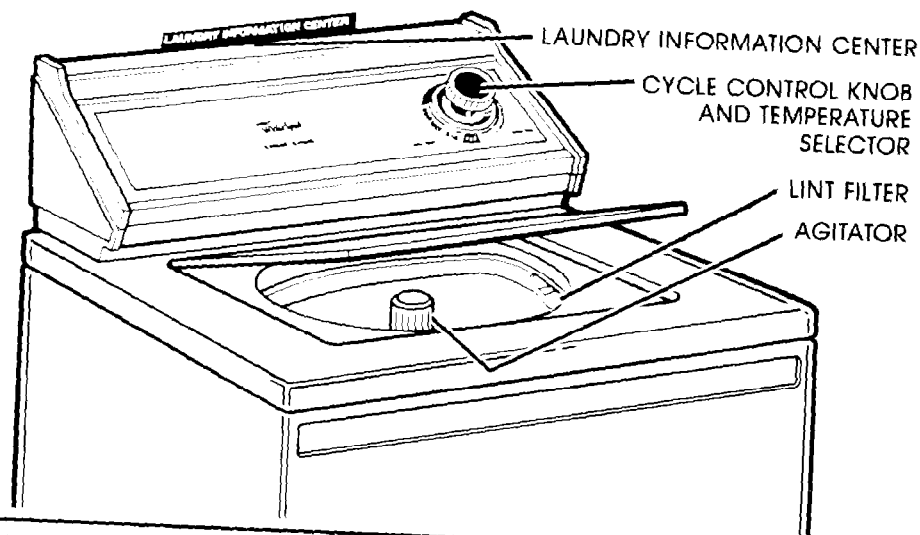

Copy Your Model and Serial Numbers Here

When you need service, or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate under the lid near the hinge).
2. Purchase date from sales slip (or date installed).

Copy this information in these spaces. Keep this book in the Laundry Information Center with your *Laundry Guide*, sales slip and warranty.

Model Number

Serial Number

Purchase Installation Date

Service Company and Phone Number

Before using your Washer

Please read this booklet to be sure your washer is installed and used properly. It will help you get the best results and longest life your washer was designed to give.

You are personally responsible for making sure that your washer...

- Is installed by a qualified installer.
- Is properly installed and leveled on a floor that can support the weight.
- Is connected to the right kind of outlet, electric supply, water supply and drain.
- Is properly electrically grounded.
- Is used only for jobs normally expected of home automatic washers.
- Is properly maintained.
- Is protected from the weather.
- Is not run by children or anyone unable to operate it properly.

Remove the Consumer Buy Guide label. It will be easier to remove before the washer is used.

You may want to wipe out the basket with a damp cloth before using to remove dust from storing or shipping.

SPECIAL INSTRUCTIONS: See the Laundry Guide for tips on detergents, other laundry aids and instructions for washing special items.

See the Installation Instructions for complete information.

SAFETY FIRST

Do not permit children to operate or play with the washer.

CAUTION: Store laundry detergent and additives in a cool, dry place where children can't reach them.

SPINNING SAFETY

If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds. DO NOT ADD OR REMOVE ITEMS UNTIL THE BASKET STOPS COMPLETELY.

SPECIAL CAUTION

Flammable gases may build up in hot water pipes and heater. This can happen when hot water hasn't been used for a while (usually two weeks or more).

To prevent injury or damage, allow any gases to escape by running hot water from the faucet nearest the washer for several minutes. Don't smoke near the faucet while it is open, and turn off any open flame.

Contents

Before Using Your Washer	2
Loading Your Washer	3
Understanding Your Washer	3
Cleaning the Lint Filter	3
Using Your Washer	4
Important Detergent Information ..	6
For a Soak or Pre Wash	6
Cycle Operation	8
REGULAR HEAVY	8
KNIT GENTLE	8
For Rinsing Only	8
For Spinning Only	9
If You Need Service or Help	10
1. Before Calling for Service	10
2. If You Need Service	11
3. If You Have a Problem	11

Loading your Washer



For best washing results and energy savings, sort the laundry carefully.

1. Sort the Laundry into Loads.

- Group the laundry into loads that can be washed and dried together. See the Laundry Guide for information and samples of typical loads.
- Try to mix large and small items for best movement in the washer.

2. Measure Detergent; Add to Washer Basket.

- See detergent information on page 6 and in Section IV of the Laundry Guide.
- Add dry bleach or water conditioner (not fabric softener) if used. Follow the package directions carefully.

3. Dilute Liquid Bleach Before Adding to the Washer Basket.

- See the "Laundry Aids" section of the Laundry Guide for more information.

4. Load the Washer.

- Spread the load evenly. (Don't put all the towels on one side and a few wash cloths on the other.) An unbalanced load can cause the washer to shake during spinning.
- Load without packing so items can move freely for best cleaning and least wrinkling.

5. Add Diluted Fabric Softener Only to the Deep Rinse Cycle.

- **DO NOT ADD FABRIC SOFTENER TO THE WASH.** Fabric softeners can combine with soap or detergent to make greasy stains on fabrics.


Understanding Your Washer

This automatic washer has cycle settings with different agitation and spin speeds for different fabric types. For example, the REGULAR HEAVY Cycle has high agitation and spin speeds; KNIT GENTLE has low agitation and spin speeds.

You can control the wash water temperature and the amount that fills the washer by moving the control dial according to instructions on page 4.

Sections in this *Use & Care Guide* go into detail on the "what and why" of each setting. Read this and the *Laundry Guide* carefully to get the best cleaning results.

Cleaning the Lint Filter

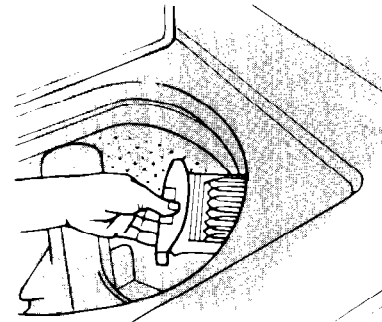

Water runs through the lint filter whenever the washer agitates. Check it often to make sure it's clean and filtering at its best.

To remove it for cleaning, press the release and pull straight out. Instructions for cleaning are printed on the bottom of the filter.

Using Your Washer



2 SPEED 2 CYCLE


Your automatic washer is easy to use. To make it even easier, read the following steps before starting your first load.

Start your washer after you put in detergent, the load, and any other laundry aids according to information on page 3.


1. Select a cycle and start the washer.

- Push the Cycle Control Knob in and turn it to the right (clockwise).
- Stop when the pointer is on the *number of minutes* you want in the cycle you want.
- Instructions for which cycles to use for each fabric type are under the lid.
- To start the washer, pull the Cycle Control Knob out. When the cycle is over, the washer will stop.
- **To stop the washer at any time during a cycle, push the Control Knob in.** Pull it out to restart the washer.
- **To change a setting,** push the Control Knob in to stop the washer. Then turn the Control Knob to the right (clockwise) to the setting you want. Pull the knob out to start the washer.


2. To adjust the wash water temperature.

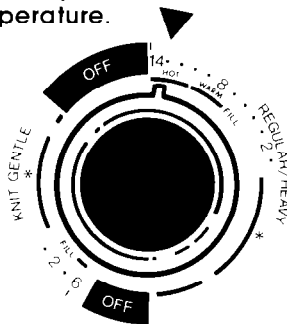

- **Hot wash** can be selected only in the REGULAR HEAVY Cycle. Push in and turn the Cycle Control Knob so the pointer is on from 10 to 14 minutes in the REGULAR HEAVY Cycle. Pull the Control Knob out to start.

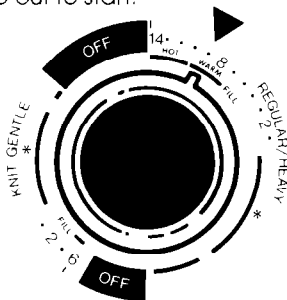

- **Warm wash** can be selected in the REGULAR HEAVY Cycle. Push in and turn the Cycle Control Knob so the pointer is on from 7 to 9 minutes. Pull the Control Knob out to start.

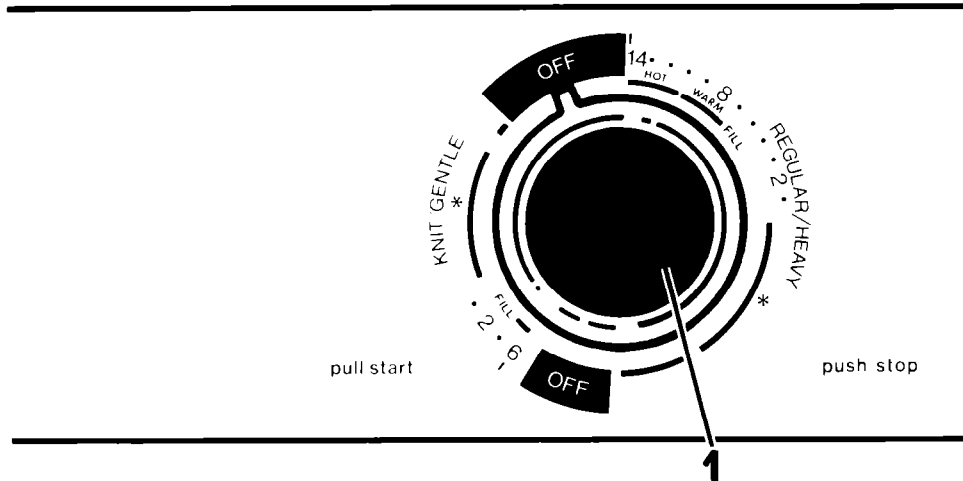


A warm wash is pre-set in the KNIT GENTLE Cycle. Push in and turn the Control Knob so the pointer is on from 4 to 6 minutes. Pull the Control Knob out to start.

All rinses use cold water.

3. To use less wash water.

When you have only a few items to wash, you may want to use less water to help save energy. *Setting the washer to fill with less water also sets it for a shorter agitation time.*

- The washer will fill to its highest level (about 15.3 gallons or 59.9 liters) when the Control Knob points to a fill area.
- To use less water, push the Control Knob in and turn to the right (clockwise) to a fill area in the cycle you want.
- Pull the Control Knob out; the washer will start to fill.

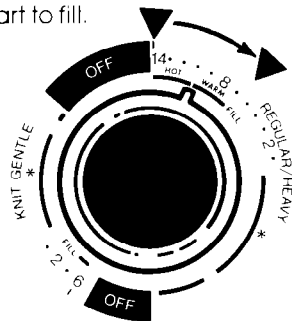


- When there is as much water as you want in the washer, push the Control Knob in. **SLOWLY** turn it to the right, past the fill area. Pull the Control Knob out.

- You can have as many as 6 minutes of agitation, or as few as 2 minutes with a low water level in the REGULAR HEAVY Cycle. In the KNIT GENTLE Cycle, you will have about 2 minutes of agitation.
- For the rinse, the washer fills to its highest level with cold water.

4. Load sizes.

For the best cleaning results, the load should move freely in the water. Watch for rollover. An item (like a sock) should sink and come up again later.

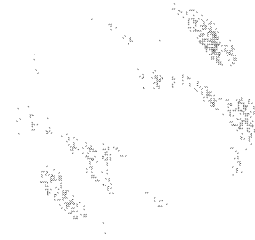

Important Detergent Information

Detergents and soaps clean by loosening soil, and by holding it in the water so it drains away. If not enough detergent is used, soil and lint can settle back on the items in the load.

SOAP works best in *soft water* (0-4 grains hardness). In harder water, both the wash and rinse water should be softened. Use enough soap to make about 1½ to 2 inches (3.8 to 5.5 cm) of suds.

DETERGENT works in *hard or soft water*. Package directions are usually based on soft water and

washers with normal-size tubs. **Use more detergent...**

1. for hard water.
2. for heavy greasy or oily soils.
3. if the detergent is low phosphate.
4. for cold-water washes.

DETERGENT SUDS. There are high, normal and low sudsing powdered detergents. If the recommended amount of detergent makes too much suds, switch to a lower sudsing brand. **DO NOT REDUCE THE AMOUNT** of detergent.

Use the following chart as beginning suggestions for powdered and liquid detergent amounts. **See your Laundry Guide for more information (pages 14-22).**

RECOMMENDED AMOUNT OF DETERGENT* – FULL TUB

	WATER HARDNESS IN GRAINS		
	0-4 Grains	4-10 Grains	10-20 Grains
Powdered Detergents			
Low Suds	¾ cup (175 mL)	1¼ cups (250-300 mL)	1¼-1½ cups (300-350 mL)
Normal Suds	1¼ cups (300 mL)	1¾ cups (425 mL)	2-2¼ cups (475-525 mL)
High Suds	1-1¼ cups (300-350 mL)	2 cups (475 mL)	2½ cups (600 mL)
No phosphate	– Follow package recommendations –		
Liquid Detergents	¼ to 1 cup (60 to 250 mL), depending on the brand and amount of soil. Follow package recommendations.		

* These recommendations do not apply...

- In areas where phosphates are banned.
- In areas with laws limiting (by weight or percentage) the amount of detergent used in a wash load.

For a Soak or Pre Wash


Some stains, heavy soil or other laundry problems are best removed with a soak or a double wash. You can work the Cycle Control Knob for these added cleaning operations.

SOAK


- Add detergent or pre-soak product to washer basket. **Always dissolve enzyme pre-soak and detergent powders to help prevent spot fading on colored items.**
- Add load.

- Push Cycle Control Knob in and turn right (clockwise) to a fill area in the REGULAR HEAVY Cycle.

FILL HOT

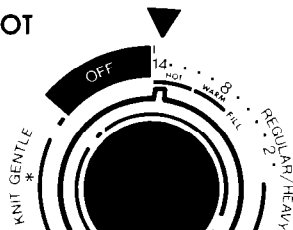


FILL WARM

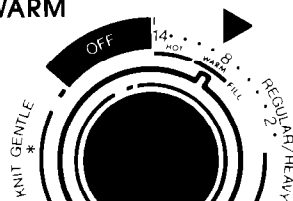


- The washer fills *only* when the Control Knob points to one of these fill areas. For a lower water level, see page 5.
- Warm water is suggested for most soaking.
- After the washer fills, push in the Control Knob. **SLOWLY** turn the Control Knob to the 2-minute setting; pull it out.
- Let the washer agitate for about one minute, then push the Control Knob in to stop the washer.
- Soak for the time needed. **NEVER SOAK FOR MORE THAN TWO HOURS.** Follow package recommendations on the pre-soak product.
- Pull the Control Knob out to let the washer finish agitating.
- After the washer drains and spins, but before it refills for the rinse, push the Control Knob in to stop the washer.
- Add detergent for the wash. **Always dissolve powdered detergent in a quart of warm water before adding to a wet load.** (Or use undiluted liquid detergent.)
- Turn the Control Knob to the right (clockwise) to the cycle and number of minutes you want.
- Pull the Control Knob out to start the washer.
- **Use chlorine bleach only in a full wash cycle, not in a soak.**

PRE WASH

- Add detergent to the washer basket.
- Add load.
- Push Cycle Control Knob in and turn right (clockwise) to the FILL WARM or FILL HOT area in the REGULAR HEAVY Cycle.
- Use warm water for stained fabrics. Use hot for heavily soiled or greasy loads.
- Pull the Control Knob out to start the washer filling.
- When the washer has filled to the level you want, push in the Control Knob. **SLOWLY** turn the Control Knob right (clockwise) to the wash time needed for the load (usually 4 to 6 minutes). Pull it out to start.

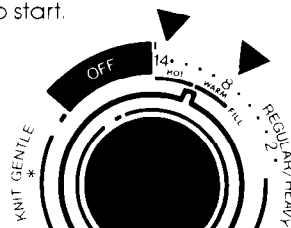

1. FILL WARM OR HOT

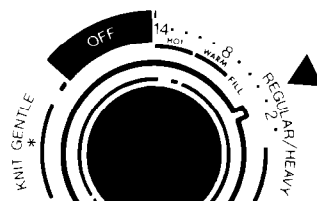

2. 2 TO 6 MINUTES AGITATION

- After the washer agitates, drains and spins, push the Control Knob in to stop the washer before it refills for the rinse.
- Add detergent for the second wash. **Always dissolve powdered detergent in a quart of warm water before adding to a wet load.** (Or use undiluted liquid detergent.)
- Turn the Control Knob to the right (clockwise) to the cycle and number of minutes you want.
- Pull the Control Knob out to start the washer.
- **Use chlorine bleach only in a full wash cycle, not in a pre wash.**


Cycle Operation

Your washer has two cycles. The numbers in each cycle are for the num-

ber of minutes you want the washer to agitate before it drains and fills for the rinse. You will want to use the longer agitation times for more heavily soiled loads.


You can adjust the wash water

WHAT HAPPENS IN EACH CYCLE:

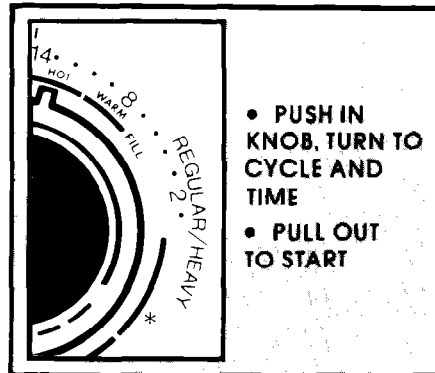

REGULAR / HEAVY CYCLE

Use for sturdy white and colorfast cottons, and for heavy work clothes. High agitation and spin speeds help get the best cleaning results.

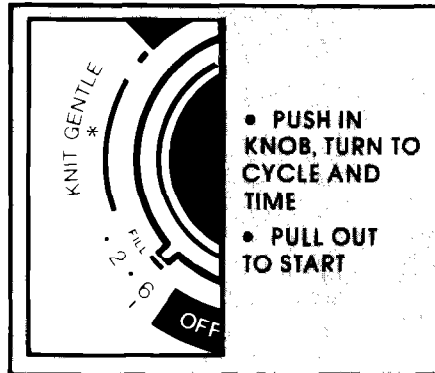

KNIT / GENTLE CYCLE

Use for delicate items and washable synthetic knits such as polyester, nylon, acrylic. Wash nylon hose or panty hose in a net laundry bag.



For Rinsing Only


Your washer can be set to rinse only. Use the setting for an extra rinse, or for laundry that only needs a rinse and spin.

There is an asterisk (*) just after the numbers in both cycles. If you push in on the Cycle Control Knob, turn the pointer to one of those asterisks and pull the Control Knob out, the washer will fill, agitate, drain and spin.

For high agitation and spin speeds, use the asterisk in the REGULAR HEAVY Cycle. The KNIT


GENTLE Cycle has low agitation and spin speeds.

The washer fills with cold water. Water level and temperature can't be adjusted in this setting.

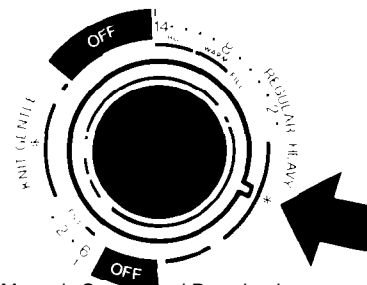

temperature in the REGULAR HEAVY Cycle. You can also work the Cycle Control Knob to use less water when washing small loads. (See page 5.)

If you turn to a cycle and start the washer, but change your mind, push in on the Cycle Control Knob and turn to the right (clockwise) to the setting you want. Then pull out to start.

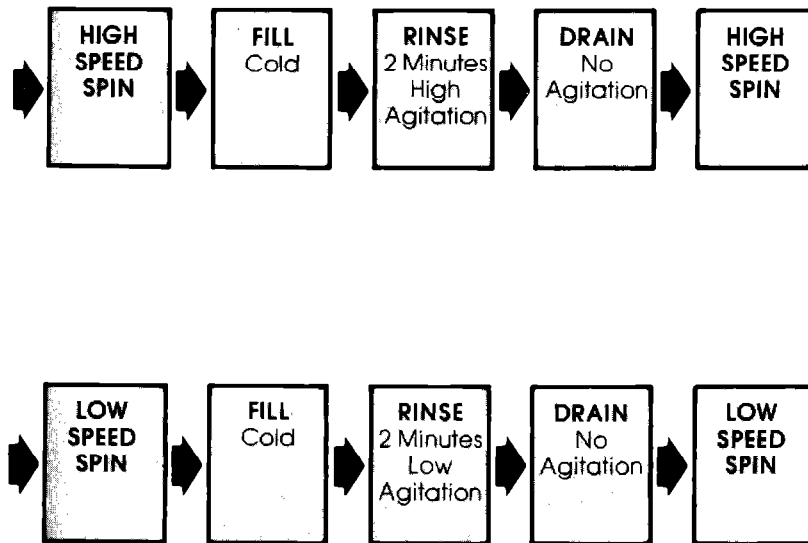


For Spinning Only

There may be times when you want to drain out all the wash water and start over. To stop the washer at any time, just push in on the Cycle Control Knob.

To set the washer so it drains and spins water out of the load, push in on the Control Knob, turn the dial to the right (clockwise) so the pointer is touch-

ing the bar just before OFF in any cycle. The washer will drain, spin out water and stop.

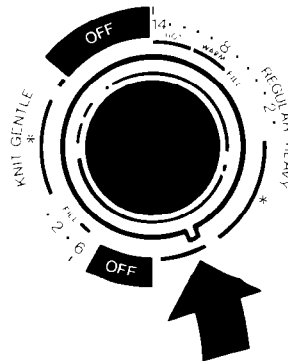


If You Need Service or Help, We suggest You Follow These Three Steps:


1. Before calling for service* ...

Problems are sometimes caused by little things you can correct without tools. Check this list before you call for service:

IF YOUR WASHER DOES NOT FILL:

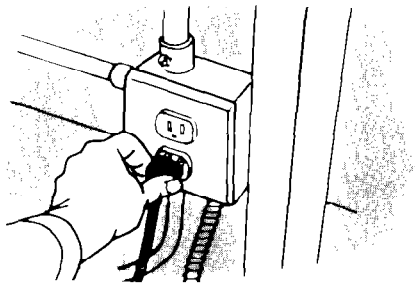

- Is the power supply cord plugged in?
- Are both water faucets open?

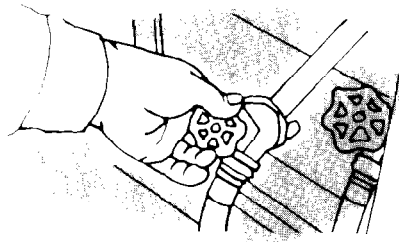

- Is a fuse blown or circuit-breaker tripped?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

IF YOUR WASHER DOES NOT SPIN:

- Is the lid closed?
- Is the power supply cord plugged in?
- Is a fuse blown or circuit-breaker tripped?

IF WASHER FILLS AND DRAINS WITHOUT RUNNING:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

MAKE SURE THE DRAIN HOSE IS HIGHER THAN THE WATER LEVEL IN THE WASHER. IF IT ISN'T...

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See Installation Instructions.)

2. If you need service :



If your WHIRLPOOL® appliance ever needs service anywhere in the United States, help is just a phone call away... to your nearest Whirlpool franchised TECH-CARE® service representative.

Whirlpool maintains a nationwide network of franchised TECH-CARE service companies to fulfill your warranty and provide after-warranty service and maintenance to keep your WHIRLPOOL appliance in peak condition.

You'll find your nearest TECH-CARE service company listed in your local telephone book Yellow Pages under APPLIANCES — HOUSEHOLD — MAJOR SERVICE & REPAIR. **Should you not find a listing, dial free, the Whirlpool COOL-LINE® service assistance telephone number.**

When calling from:

Michigan (800) 632-2243
Alaska &
Hawaii (800) 253-1121
All other
states (800) 253-1301

If you move... To make sure that your appliance is correctly installed and to insure its continued satisfactory operation, please telephone your nearest TECH-CARE® service company for installation or to get the name of a qualified installer. (Installation cost will, of course, be paid by you.)

Helpful hints... You can help your TECH-CARE service representative give you faster service if you include the model and serial number of your appliance when requesting service. Also, retain your sales slip and warranty to verify your warranty status.

Remember... Your TECH-CARE service representative is specially trained in the expert repairing and servicing of your WHIRLPOOL appliances. He can help you maintain the quality originally built into your WHIRLPOOL appliance. So why not take the time, now, to look up his telephone number and jot it down in the space provided on the cover.

3. If you have a problem :

Call Whirlpool Corporation in Benton Harbor at the COOL-LINE service assistance telephone number (see Step 2) or write:

Mr. Guy Turner, Vice President
Whirlpool Corporation
Administrative Center
2000 U.S. 33 North
Benton Harbor, Michigan 49022

If you must call or write, please provide: your name, address, telephone number, type of appliance, brand, model, serial number, date of purchase, the dealer's name, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

BEFORE CALLING FOR SERVICE



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts

will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.



Benton Harbor, Michigan. Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-in Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Central Heating and Air Conditioning Systems.

Quality. Our way of life.

Part No. 382599 Rev. A

Printed in U.S.A.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>