



**Wintal**<sup>®</sup>  
Digital Living

Model: **32L05**

**32"**



**16:9 Digital LCD Television/ PC Monitor**

## Operating Manual



<http://wintal.com.au>





## TABLE OF CONTENTS

---

<b>1.</b>	<b>PreFace</b>	<b>1</b>
<b>2.</b>	<b>Safety Precautions</b>	<b>1</b>
<b>3.</b>	<b>Front, Back Connections</b>	<b>2</b>
<b>4.</b>	<b>TV Installation Guide</b>	<b>3</b>
4.1	Connecting Antennas	3
4.2	AV Video Input	3
4.3	S-Video Input	3
4.4	YCbCr Connection	4
4.5	YPbPr Connection	4
4.6	PC (VGA) Connection	4
4.7	AV Video Out Connection	5
4.8	DVI Connection	5
<b>5.</b>	<b>Configuration</b>	<b>6</b>
5.1	Picture Setting	6
5.2	AUDIO SETTING	6
5.3	SOURCE SETTING	7
5.4	TV CHANNEL SEARCH	7
<b>6.</b>	<b>Remote Control Instructions</b>	<b>8</b>
<b>7.</b>	<b>Remote Control Setup</b>	<b>9</b>
7.1	Battery Usage Caution	9
<b>8.</b>	<b>Accessories</b>	<b>9</b>
<b>9.</b>	<b>Troubleshooting &amp; Advice</b>	<b>10</b>
<b>10.</b>	<b>Specifications</b>	<b>11</b>



## 1. PREFACE

---

 
Congratulations on your purchase of a Wintal LCD! Please read this manual thoroughly before operating the monitor. Make sure the monitor was not damaged in transit. Should the monitor be damaged, do not install it and contact your dealer. Check that you have all the accessories according to the model.

## 2. SAFETY PRECAUTIONS


---




Place the Monitor on a stable surface.



 Do not use the monitor with other fixations than those provided or suggested by the manufacturer.  
Do not place any material on the monitor.




 Do not block or cover the ventilation openings on the monitor.  
If you have a wall mount, check that it is steady.



### Power source

 The monitor must be plugged with a voltage source of 220/240 volts and 50 Hz.



### Connection cable

 
Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the monitor to fall.



### Heating sources and humidity

Keep the monitor dry and away from humidity.

Keep the monitor away from heat sources



### Cleaning and maintenance

Unplug the monitor before cleaning it. Do not use solvents or liquids to clean the monitor.

Only clean the monitor with a soft and dry cloth.



In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using incorrect spare parts can lead to electric shocks, short-circuits fire or other incidents.



 
### Lightning/ Holidays

Unplug the LCD during lightning storms or when not used for long periods of time.



### 3. FRONT, BACK CONNECTIONS


#### Front View and Controls

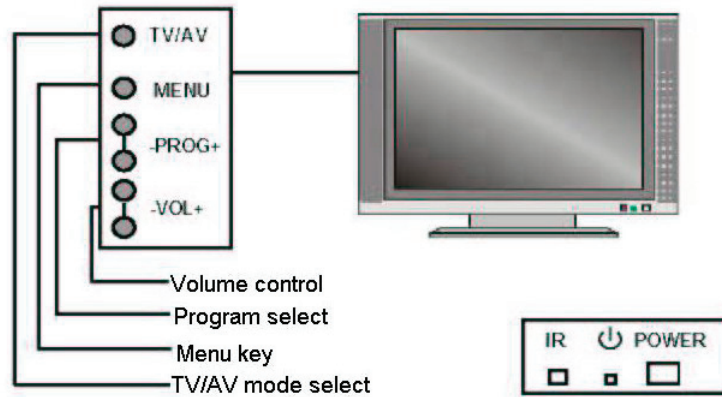

#### Back View



 
#### Rear Connections

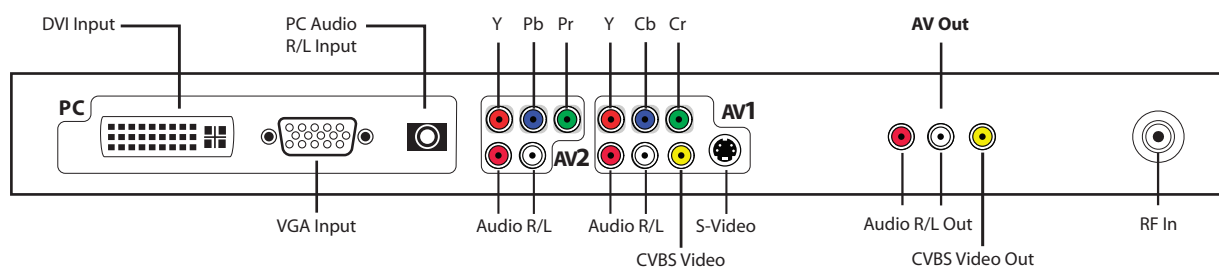




## 4. TV INSTALLATION GUIDE
 
### 4.1 Connecting Antennas

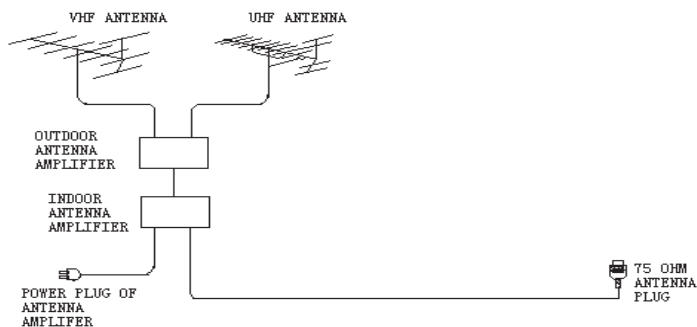


To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as shown.

### 4.2 AV Video Input

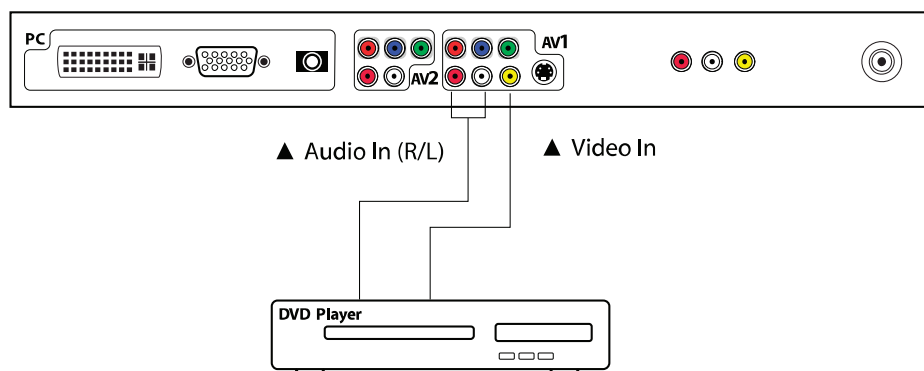 


### 4.3 S-Video Input

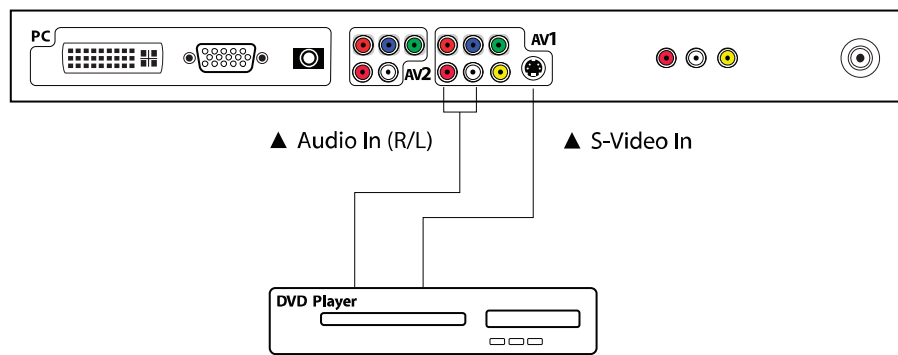 





#### 4.4 YCbCr Connection

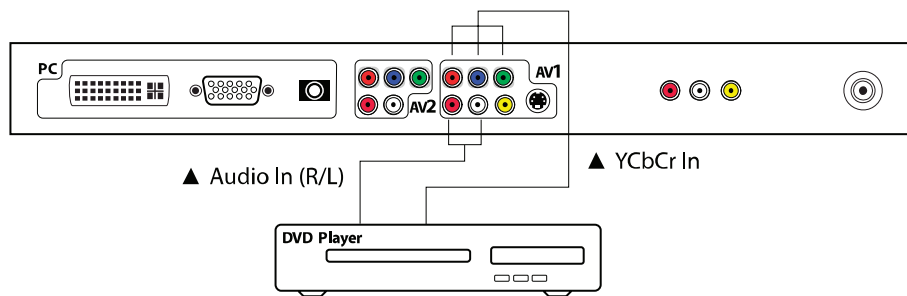 

#### 4.5 YPbPr Connection

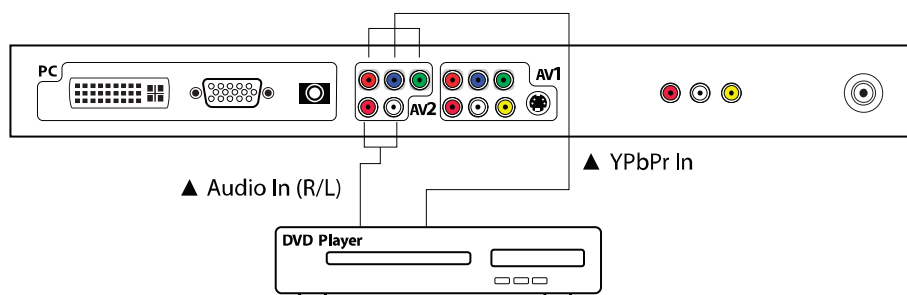 


#### 4.6 PC (VGA) Connection

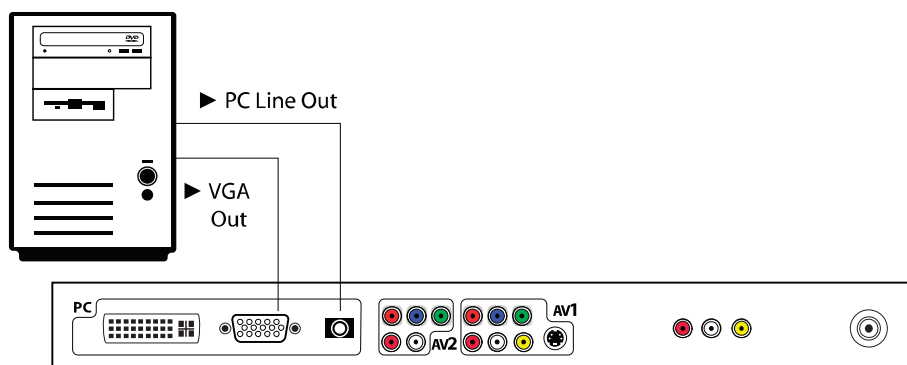 




## 4.7 AV Video Out Connection

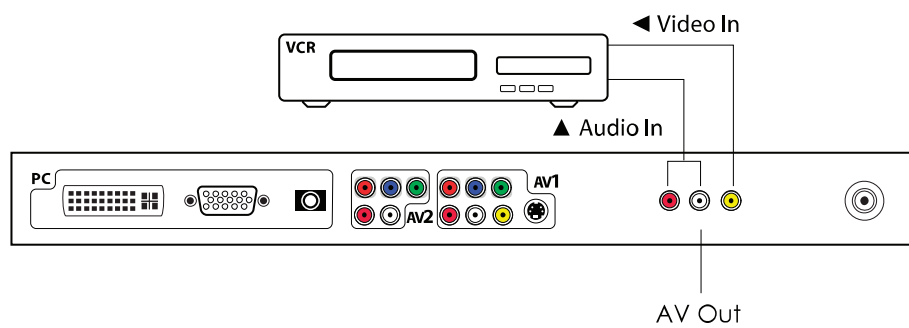 

## 4.8 DVI Connection

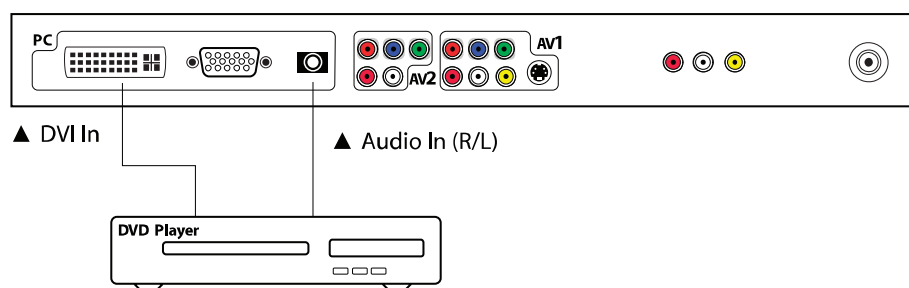 




## 5. CONFIGURATION

### 5.1 Picture Setting

Press <SYS MENU> key until the screen displays as below.

 
- a. Press ► key to access image adjusting programmer. Press ▲ or ▼ key to select Mode, Bright, Contrast, Colour and Sharpness for required adjusting option. Press ◀ or ▶ key to adjust the setting selected.

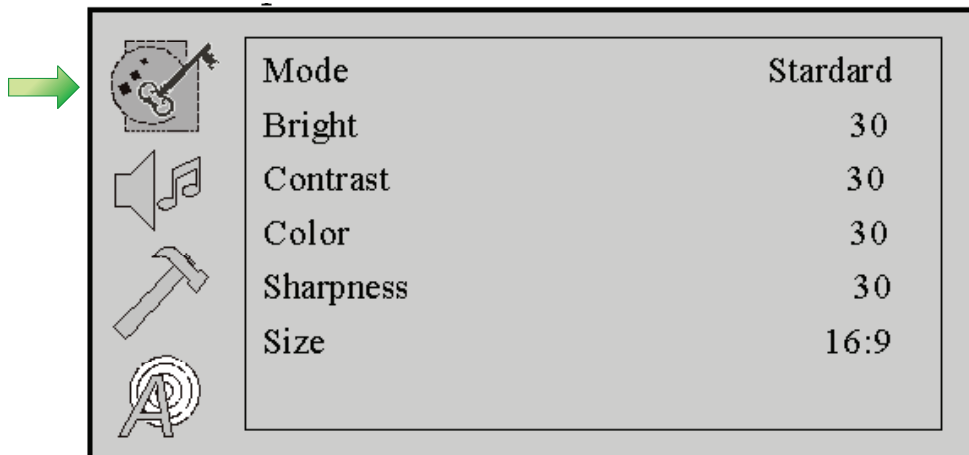

### 5.2 AUDIO SETTING

Press <SYS MENU> key until the screen displays as below.

 - a. Press ► key enter into audio menu press ▲ or ▼ key to select Mode, Volume, Treble, Bass, Balance and Surround for required adjusting option.
- b. Press ◀ or ▶ key to adjust the setting selected.

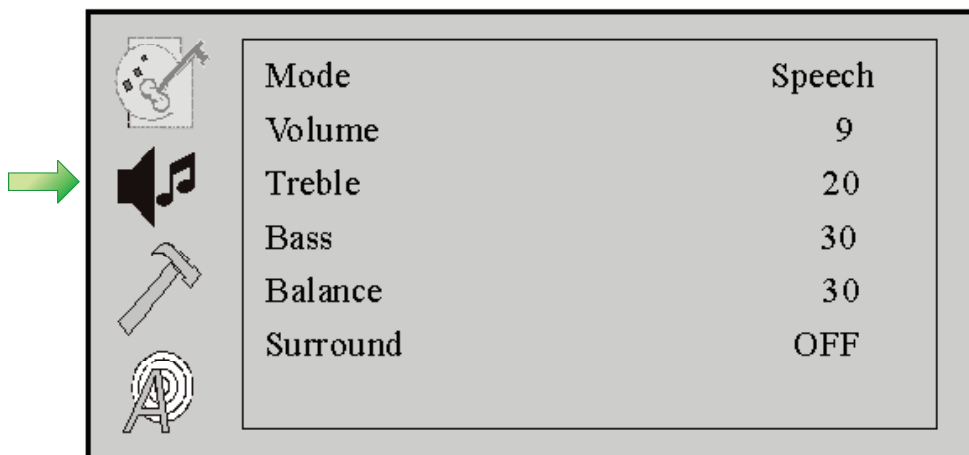



### 5.3 SOURCE SETTING

 
Press <SYS MENU> key until the screen displays as below.

- Press ► key to access Input Group –Blue Screen –Language—Reset menu setting.
- Press ▲ or ▼ key to select exact menu setting.
- Select <Input Group> menu, press ► key to access TV-SCART-DVD-PC for choose input source.

In <SCART> menu, will access to choose terminal-select in sub-menu SCART CVBS or SCART RGB for input source.

- Press ▲ or ▼ key to access OSD <Language>, select your language. Press ▲ or ▼ key to access the <Reset> function which will reset your LCD back to default factory settings.

e.

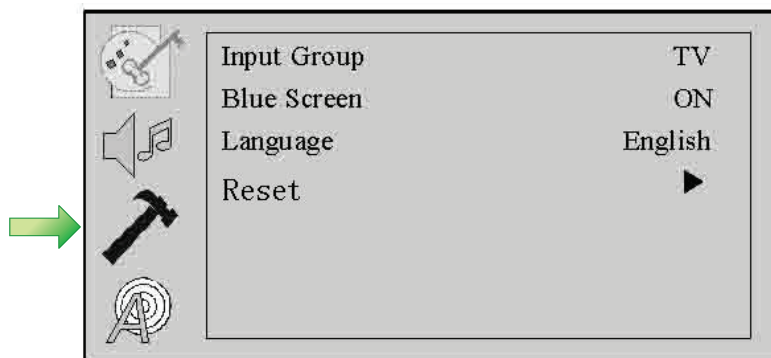


### 5.4 TV CHANNEL SEARCH


Press <SYS MENU> key until the screen displays as below.

- Press ► key to access Auto Tune – Manu Tune – Fine Tune – Sort – Add/skip– Color System –Sound System menu setting.
- Press ▲ or ▼ key to select exact menu setting.
- Press ▲ or ▼ key to select <Manu Tune> or <Fine Tune > menu to adjust the TV.
- Press ▲ or ▼ key to access <Sort> to exchange channel.
- Press ▲ or ▼ key to access <add/skip> to add or skip the channel.

 \* Before tuning in the TV, please choose the correct colour system and sound system for your country. After that, choose the auto tune to start searching.

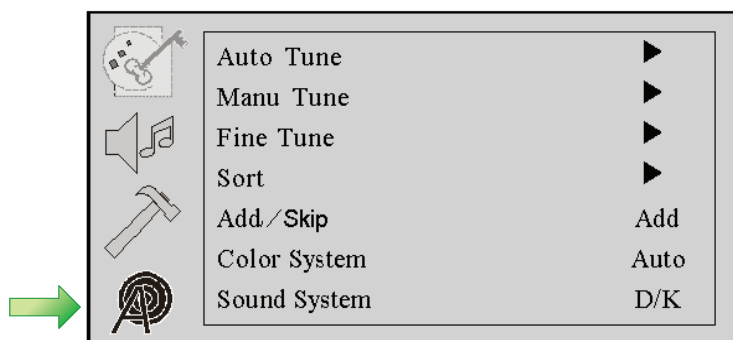

## 6. REMOTE CONTROL INSTRUCTIONS

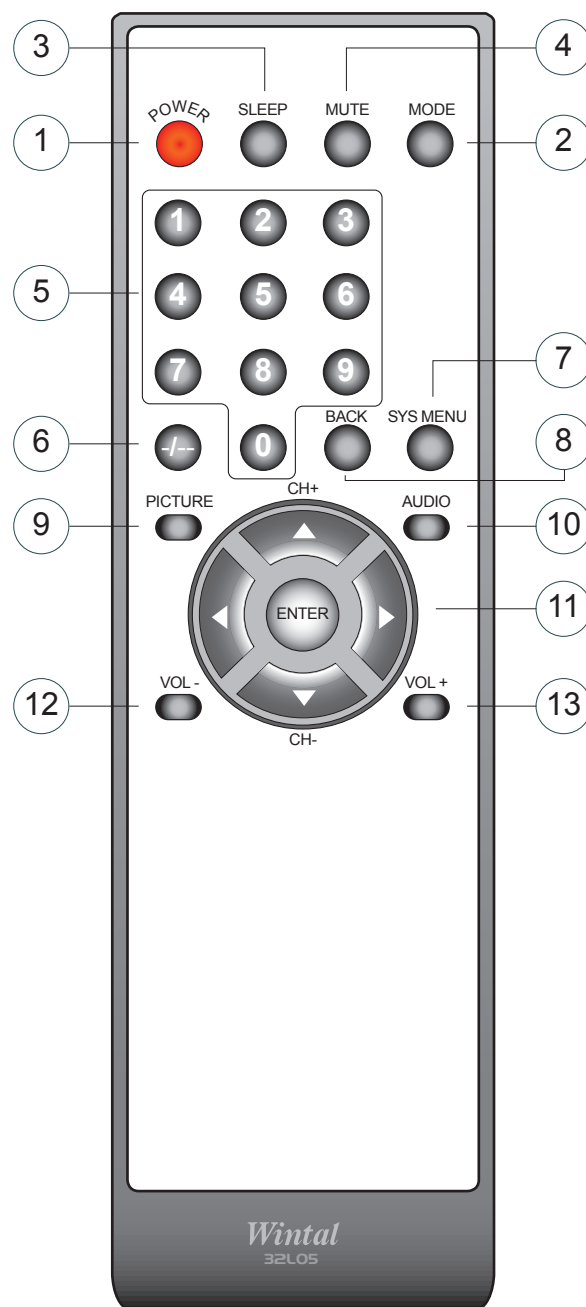 

- 1 Power ON/OFF
- 2 TV/AV/PC Mode
- 3 Sleep Timer
- 4 Mute
- 5 Number keys
- 6 Access to several numbers program
- 7 System setting menu key
- 8 Return to the previous program
- 9 Picture mode
- 10 Audio mode
- 11 Channel control and menu item execute key
- 12 Decrease volume control key
- 13 Increase volume control key



## 7. REMOTE CONTROL SETUP

 
---

- a. Open the cover
- b. Insert the supplied "AA" size batteries  
When inserting the batteries, make sure correct polarities as per the "+" and "-" marks on the batteries are correct
- c. Replace the battery cover

### 7.1 Battery Usage Caution

To prevent battery leakage which may result in injury or damage to the remote:

1. Install all batteries correctly, and as marked on the remote control
2. Do not mix batteries: (OLD and NEW or CARBON and ALKALINE, etc.)
3. Remove batteries when the remote is not used for a long time

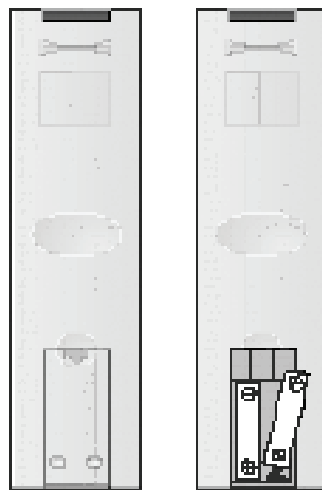

## 8. ACCESSORIES

---

Included with your Wintal LCD are the following accessories:

1. AC/DC Power Adapter
2. One Remote Control
3. 2x 1.5V "AA" batteries
4. One User Manual
5. AV Cable





## 9. TROUBLESHOOTING & ADVICE

---

Before calling our Customer Centre, please check if you can the following suggestions will solve your problem.

<b>Troubleshooting</b>	<b>Control</b>
No signal	Please check that all cables and connectors are correctly plugged in.
Incorrect colour shades	Adjust the contrast, the colour and the brightness
Double or multiple image display	May be the result of an electrical wave disturbance from another TV, Computer, Game console, or Radio
Bad/ Snowy picture	The cables of the antenna are not correctly plugged in.
The remote control does not work	Please check that the batteries are inserted correctly. Check that the IR of the remote control is not hidden by something.
No sound	Make sure that you have not pressed the MUTE button on the front panel or on the remote control.

## 10. SPECIFICATIONS

<b>Screen Size</b>	32 Inch	
<b>Display Type</b>	TFT LCD	
<b>Resolution(Pixel)</b>	1366*768	
<b>Brightness</b>	550nits	
<b>Color</b>	24bit (16.7m)	
<b>Contrast Ratio</b>	800:1	
<b>View Angle(H/V)</b>	170	
<b>Aspect Ratio</b>	16:9	
<b>Power Source</b>	100-240VAC,50/60HZ. ≤200W	
<b>TV System</b>	PAL/SECAM	
<b>Video Input Fromat</b>	PAL/ NTSC	
<b>Antenna Input</b>	Standard antenna socket 75Ω	
<b>Audio Output</b>	L/R 10W*2	
<b>VGA Input Format</b>	640*480/60Hz, 800*600/60Hz, 1024*768/60Hz	
<b>Input</b>	<b>RGB</b>	0.7VP-P 75Ω
	<b>VIDEO</b>	CVBS:1.0VP-P, 75Ω; RCA
	<b>AV</b>	Video1.0Vp-p, 75Ω;Audio20kΩ; RCA
	<b>YCbCr</b>	1.0VP-P75Ω; RCA
	<b>YpbPr</b>	1.0VP-P75Ω; RCA
	<b>DVI</b>	640*480/60Hz, 800*600/60Hz, 1024*768/60Hz
<b>Ouput</b>	<b>VIDEO 1</b>	CVBS:1.0VP-P, 75Ω; RCA
	<b>AUDIO L/R</b>	200mVrms,20kΩ (max.3.0VP-P); RCA
<b>IR remote control</b>	< 6m	
<b>Weight</b>	24 kg	
<b>Dimensions</b>	1000 (L) x 522 (H) x 110 (W) mm	

The manual is only for your reference, any change to the design and specification will not be advise.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>