

IMPORTANT NOTICE

PLEASE DO NOT RETURN TO STORE.
If you have any problems with this unit,
contact Consumer Relations for service

PHONE: 1-800-275-8273 or

visit our website at wppotsandpans.com

Please read operating instructions
before using this product.

Please keep original box and packing materials
in the event that service is required.

W.P. APPLIANCES, INC. Toll Free (800) 275-8273
Model BCBG0012 Printed in China REV 1.0

All trademarks, service marks and trade names (collectively the "Marks") are proprietary
to Wolfgang Puck World Wide.



Wolfgang Puck

Coffee Grinder
Use and Care



wolfgang puck
Bistro
collection

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury.

- 1 Read all instructions carefully.**
- 2** To protect against risk of electrical shock, do not put grinder base, cord, or plug in water or other liquid.
- 3** Close supervision is necessary when any appliance is used by or near children.
- 4** Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 5** Avoid contact with moving parts.
- 6** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.
- 7** The use of accessory attachments is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or personal injury.
- 8** Do not use outdoors.
- 9** Do not let cord hang over edge of table or counter, or touch hot surface.
- 10** Do not use appliance for other than intended use.
- 11** Check Grinder Bowl for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

ADDITIONAL SAFETY INFORMATION

This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. **Do not attempt to defeat this safety feature.**

SHORT POWER CORD

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over, a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the grinder. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

- 1** Make sure the cover is securely in place before grinding coffee.
- 2** Do not remove cover until blade has completely stopped.
- 3** Do not attempt operation without ensuring that the cover is in place.

BEFORE YOUR FIRST USE

Carefully unpack your coffee grinder and remove all packing material. To remove any dust that may have accumulated during packaging, wipe the stainless steel bowl, blades and cover with a damp lint-free cloth or sponge. Dry thoroughly. Use extreme care as the blades are sharp. Never immerse the grinder base in water or other liquid.



Wolfgang Puck, owner of the famous Spago restaurants and one of the most influential chef-restauranteurs in America, is credited with reviving California's rich culinary heritage. His cooking innovations, a result of blending fresh

California ingredients with his classical French techniques, are enjoyed by world leaders, stars and fellow chefs alike. He established other trend-setting restaurants like Postrio in San Francisco, Chinois on Main in Santa Monica, Vert and Trattoria del Lupo, and his latest creation, Cut, a gourmet steakhouse in the Beverly Wilshire Hotel. Home chefs can also share Mr. Puck's talents through his cookbooks and, of course, through his appliances!

Table of Contents

Important Safeguards	1
Before Your First Use	2
About Wolfgang Puck	3
Know Your coffee grinder	5
Using Your Coffee Grinder	7
Grinding Tips	8
Care & Cleaning	9
Limited Warranty	12
Contact Information	back cover

Know Your Coffee Grinder

Lid Tab and Safety Switch Slot

Grinder Base

Cover, with Built-in Measuring Cup

Stainless Steel Grinder Bowl
(not shown)

Grind Indicator Lights

Cup Selector Dial

On/Off Button

Cord Winder

5

6

Using Your Coffee Grinder

- 1 Remove cover and pour the desired amount of coffee beans into the cover. Use the convenient cup markings as a guide. For example, if you plan to brew 4 cups of coffee, fill with beans to the "4" line.

Note: Since coffee flavor is a matter of personal taste, experiment with different amounts of beans to use per cup.

- 2 Pour measured coffee beans into grinder bowl. Place cover on grinder with the triangle positioned above the lid tab and safety switch slot. Turn. The lid will not fit into any other position, but will drop easily into place when correctly positioned.
- 3 Move cup selector to number of cups you want to grind.
- 4 Plug cord into outlet.
- 5 Press and hold the on/off button to begin operation.

Note: As a safety feature, the grinder will not operate unless the cover is securely in place with tab in the safety switch slot. When the on/off button is released, the grinder will stop and the cover can be removed.

IMPORTANT: If removing the cover to check consistency of coffee grounds, make sure the inner rim is free of coffee particles. Be sure to shake the grounds into the center. Failure to do this may prevent the appliance from operating. If this is the case, remove the lid, clear the grounds from the rim as noted above, and replace cover.

DO NOT ATTEMPT TO REMOVE COVER UNTIL BLADES COME TO A COMPLETE STOP.

- 6 Continue to press the on/off button to reach desired grind consistency. Once a coarse grind has been reached, the COARSE indicator will illuminate. If a finer grind is desired, continue pressing the on/off button to achieve a MEDIUM grind. When all three lights are illuminated, this indicates a FINE grind has been achieved.

NOTE: The amount of time required for grinding will vary with the amount of beans used.

- 7 When beans are ground to desired consistency, release the On/Off button and allow blades to stop.
- 8 Unplug unit from outlet.
- 9 Transfer the coffee grounds from the container to your coffee maker.
- 10 Store ground coffee in a covered container. Refrigerate.

Note: Do not operate this appliance continuously for more than 2 minutes. Allow appliance to cool down for 10 minutes before using again.

Grinding Tips

- 1 A COARSE grind is recommended when using a percolator or the French press method. MEDIUM grind is best for use in automatic drip coffeemakers and steam-type espresso machines. Use a FINE grind for espresso machines with an electric pump.
- 2 Your coffee grinder needs to cool after each 60 seconds of use. This cooling period protects your ground coffee from becoming overheated before it is brewed.
- 3 Vary the grinding times to suit your taste and type of beans you grind.
- 4 For the freshest, most flavorful coffee, grind only enough beans for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding bowl, blades and cover after each use.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>