# VCR Commander & FloodCam (Install your FloodCam before getting started.)



Connect the power supply to the VCR Commander and plug it into a wall outlet.

### **Learn VCR Commands**



Press and hold REC until the LED stays on.

#### **Connect Infrared Emitter Cable**





Plug the IR emitter cable into the back of the VCŘ Commander.

## **Configure Motion Sensor Code**



Press and hold PLAY until the LED stays on.



Have someone walk in front of your FloodCam within 30 seconds of your pressing PLAY. The LED on the VCR Commander will go out.



Place your remote control 1 inch away from the VCR Commander.

Press REC on the VCR Commander and release it. The LED will blink quickly and then stay on. Press the Record button on your remote and keep pressing it until the LED on the VCR Commander briefly goes out and comes back on solid. This means that Record has been learned.

Repeat these steps again for the STOP function.



Press the emitter onto the VCR you are going to control, after removing the plastic from the adhesive backing.



**GUIDE:** IN62A



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com