

## Add-on Audio Video Receiver

### PLEASE READ

These instructions are intended to complement the instructions provided for each component in this kit. Please read each instruction sheet or manual provided.

The VK42A lets you display audio and video from X10 video senders anywhere in your home. With the VK42A you can listen to MP3 Anywhere all over your home, watch DVD Anywhere in the living room and on your bedroom TV, or monitor your XCam Anywhere from more than one TV. To use the VK40A you must have one of these kits already.



### Configuring the Video Receiver

The first step in setting up your new video receiver (model VR30A) is configuring it to work with the video transmitter (model VT30A) you should have already installed as part of an X10 Anywhere kit. Check the "Channel" (A-D) setting on the bottom of your VT30A and set the switch on the new VR30A to match. If these settings do not match, your audio or video will not be displayed correctly.



### Connecting the Video Receiver to your TV or VCR (DVD & XCam Anywhere and Video Sender users)

These steps will guide you through connecting the VR30A video receiver to your TV or VCR so that you can watch video picture on your TV. Here's how you do it:

1. Plug the yellow video plug on the supplied RCA cable (the one with yellow, red and white connectors on both ends) into the Video Out jack on the VR30A Video Sender receiver. Connect the other end into the yellow video input jack on your TV or VCR.

2. Connect the red and white plugs on the RCA cable to the respective Audio In connections on the video receiver. Plug the other ends of these into the audio inputs on your TV or VCR.

Note: If your TV or VCR doesn't have RCA video and audio inputs, you can connect the output of the receiver to the TV using the provided coaxial cable.

3. Plug the PR30A power supply into any 120V AC outlet.

4. Plug the power output of the PR30A into the DC 12V plug on the VR30A.



### Connect the Audio Receiver to Your Stereo (MP3 Anywhere users)

These steps will guide you through connecting the VR30A video receiver to your stereo. Here's how you do it:

1. Connect the red and white plugs on the supplied RCA cable to the respective Audio In connections on the video receiver. Plug the other ends of these into the appropriate audio inputs on your stereo.

2. Plug the PR30A power supply into any 120V AC outlet.

3. Plug the power output of the PR30A into the DC 12V plug on the VR30A.

To listen to your MP3 audio, simply select the correct input setting on your stereo to listen to your MP3 files.

Notes:

www.x10.com

MODEL  
NUMBER:  
IN19A 0



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>