

Quick Setup

1



Unpack these items. Disconnect your game system from your TV.

2



Connect the wireless video receiver to power and plug it into a wall outlet.

3

On Your TV



Connect the video receiver to your TV where your game system was connected.

4



Connect the video transmitter to your game system, plug it into power, and turn it on.

5



Select your TV's video input just like you would for your game system. Your game should appear on screen.

6

Adjust the antennas on the transmitter and receiver to improve the picture on your TV. Point the sides marked with 4 squares towards each other.

You can get more help from the X10 technical support web site:

<http://www.x10.com/support>



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>