

OK

Radio / CD

Las Vegas CD32

San Diego CD32

Santa Fe CD32

Operating and installation instructions
Notice d'emploi et de montage
Instrucciones de manejo e instalación
Instruções de serviço e de montagem

 


<http://www.blaupunkt.com>

BLAUPUNKT

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Open here
Ouvrir s.v.p.
Por favor, abrir
Favor abrir

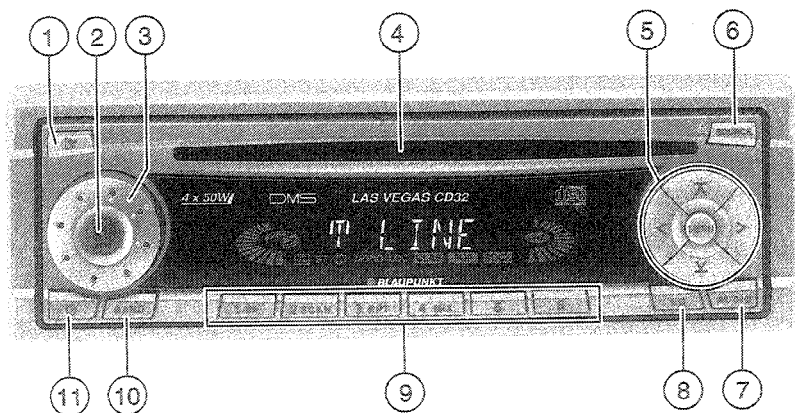

CONTROLS

- ① **[X]** button to release the control panel.
- ② Button to switch the unit on/off.
- ③ Volume control.
- ④ CD compartment.
- ⑤ Arrow buttons.
MENU button to open the basic settings menu.
- ⑥ Short press: **SOURCE** button, to select the CD, radio and CD changer sources.
Long press: CD eject.
- ⑦ **AUDIO** button to adjust the bass, treble, balance and fader settings.
- ⑧ Short press: **EQ** button to select the sound presets.
Long press: **X-BASS**, X-Bass function.
- ⑨ Keys **1 - 6**.
- ⑩ Short press: **BAND** button to select the FM memory bank and the AM waveband, source selection to radio mode.
Long press: **TS**, starts the Travelstore function.
- ⑪ **[G]** button to display the time.


Notes and accessories	6	CD changer mode	13
Road safety	6	Switching to CD changer mode	13
Installation	6	Selecting CDs	13
Accessories	6	Selecting tracks	13
Removable control panel	7	Fast searching (audible)	14
Theft protection	7	Repeating individual tracks or whole CDs (REPEAT)	14
Detaching the control panel	7	Random track play (MIX)	14
Attaching the control panel	7	Scanning all tracks on all CDs (SCAN)	14
Switching on/off	8	Pausing playback (PAUSE)	15
Adjusting the volume	9	Clock - Time	15
Setting the power-on volume	9	Displaying the time	15
Instantaneously reducing the volume (mute)	9	Setting the clock	15
Mute while telephoning	9	Selecting 12/24-hour clock mode ..	15
Radio mode	10	Displaying the time when the unit is off and the ignition is on	16
Switching to radio mode	10	Sound and volume	
Selecting the frequency band / memory bank	10	distribution settings	16
Tuning into a station	10	Adjusting the bass	16
Setting the sensitivity of station seek tuning	10	Adjusting the treble	16
Storing station presets	10	Adjusting the balance settings	17
Storing stations automatically (Travelstore)	11	Adjusting the fader settings	17
Listening to station presets	11	Equalizer and X-BASS	18
CD mode	11	X-BASS	18
Switching to CD mode	11	Selecting preset sound effect	18
Selecting tracks	12	Specifications	18
Fast track selection	12	Amplifier	18
Fast searching (audible)	12	Tuner	18
Random track play (MIX)	12	CD	18
Scanning tracks (SCAN)	12	Pre-Amp Out	18
Repeating tracks (Repeat)	12	Installation instructions	65
Pausing playback (PAUSE)	13		
Removing the CD from the unit	13		

NOTES AND ACCESSORIES

Thank you for deciding to use a Blaupunkt product. We hope you enjoy using this new piece of equipment.

Please read these operating instructions before using the equipment for the first time. The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the equipment, please contact your dealer or the telephone hotline for your country. You will find the hotline telephone numbers printed at the back of this booklet.

Road safety

 Road safety has absolute priority. Only operate your radio unit if the road and traffic conditions allow you to do so. Familiarize yourself with the unit before setting off on your journey.

You should always be able to hear police, fire and ambulance sirens from far. For this reason, set the volume of the program you are listening to at a reasonable level.

Installation

If you want to install your car radio by yourself, please read the installation and connection instructions that follow these operating instructions.

Accessories

Only use accessories approved by Blaupunkt.

Remote control

The supplied RC 04 remote control allows you to operate the main functions of your car radio safely and conveniently (only with the Las Vegas CD32).

The RC 04 remote control is optionally available for the Santa Fe CD32 unit.

The San Diego CD32 unit cannot be remotely controlled.

Amplifier

All Blaupunkt and Velocity amplifiers can be used.

CD changer

The Blaupunkt CD changer CDC A 01 (7607 700 022) can be connected to the Las Vegas CD32 unit. No CD changer can be connected to either the San Diego CD32 or the Santa Fe CD32 units.

Removable control panel

Theft protection

As a way of protecting your equipment against theft, the unit is equipped with a detachable control panel (release panel). Without this control panel, the car radio is worthless to a thief.

 
Protect your equipment against theft by taking the control panel with you every time you leave your vehicle. Do not leave the control panel in your vehicle - not even in a hiding place.

The control panel has been designed to be easily to use.

Note:

- Never drop the control panel.
- Never expose the control panel to direct sunlight or other heat sources.
- Avoid making direct skin contact with the control panel's contacts. If necessary, clean the contacts with a lint-free cloth and some alcohol.

Detaching the control panel

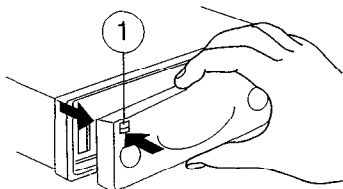


- ⇨ Press the **IV** button (1).

The control panel locking mechanism opens.

- ⇨ First, pull the control panel straight off the unit and then out towards the left.
- The unit switches off after the control panel is removed.
- All current settings of the radio are saved.
- CD already inserted in the unit remains there.

Attaching the control panel

 - ⇨ Slide the control panel from left to right into the unit's guide.
- ⇨ Press the left-hand edge of the control panel into the unit until it clicks into place.

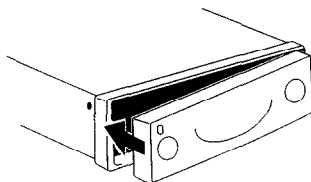

Note:

- When attaching the control panel, make sure you do not press on the display.

If the unit was still switched on when you removed the control panel, the unit will automatically switch back on with the last settings activated i.e. radio, CD or CD changer (CD changer only with the Las Vegas CD32) when the panel is reinserted.

SWITCHING ON/OFF

Switching on/off

There are various ways of switching the unit on/off:

Switching on/off using the vehicle ignition

If the unit is correctly connected to the vehicle's ignition and it was not switched off using button ②, it will switch on/off simultaneously with the ignition.

Switching on/off using the removable control panel

⇨ Remove the control panel.

The unit switches off.

⇨ Attach the control panel again.

The unit switches on. The last settings i.e. radio, CD or CD changer (CD changer only with the Las Vegas CD32) will be reactivated.

Switching on/off using button ②

⇨ To switch the unit on, press button ②.

The unit can only be switched on when the ignition is turned on.

⇨ To switch the unit off, press button ② for longer than two seconds.

The unit switches off.

Switching on by inserting a CD

If the unit is switched off and there is no CD inserted in the drive,

⇨ gently insert the CD with the printed side uppermost into the drive until you feel some resistance.

The CD is drawn into the drive automatically.

You must not obstruct or assist the drive as it draws in the CD.

Once the CD has been drawn in, the unit switches on again.

Adjusting the volume

The system volume can be adjusted in steps from 0 (off) to 100 (maximum).

To increase the system volume,

- ⇨ turn the volume control (3) clockwise.

To decrease the volume,

- ⇨ turn the volume control (3) anti-clockwise.

Setting the power-on volume

You can set the unit's default power-on volume.

- ⇨ Press the **MENU** button (5).
- ⇨ Keep pressing the **⏏** or **⏏** button (5) until "ON VOL" appears in the display.
- ⇨ Set the power-on volume using the **<** and **>** buttons (5).

To help you adjusting the volume more easily, the volume will be increased / decreased as you make your changes.

When you have finished making your changes,

- ⇨ press the **MENU** button (5) twice.

Instantaneously reducing the volume (mute)

You can instantaneously reduce the volume (mute) to a level preset by you.

- ⇨ Briefly press button (2).

"MUTE" appears in the display.

Setting the mute level

You can set the unit's mute volume level.

- ⇨ Press the **MENU** button (5).
- ⇨ Keep pressing the **⏏** or **⏏** button (5) until "MUTE LVL" appears in the display.
- ⇨ Set the mute level using the **<** and **>** buttons (5).

When you have finished making your changes,

- ⇨ press the **MENU** button (5) twice.

Mute while telephoning

If your unit is connected to a mobile telephone, the car radio's volume will be muted as soon as you "pick up" the telephone. "TEL CALL" flashes in the display.

This requires to the mobile telephone be connected to the car radio as described in the installation instructions.

The volume will be reduced to the configured mute volume level.

RADIO MODE

Radio mode

Switching to radio mode

If you are in CD or CD changer mode (CD changer only with the Las Vegas CD32),

- ⇨ keep pressing the **SOURCE** (6) button until the radio mode appears in the display together with the memory bank and frequency.

Selecting the frequency band / memory bank

This unit can receive programs broadcast over the FM and AM frequency band. There are three preset memory bank for the FM range and one for the AM range. Six stations can be stored on each memory bank.

Selecting the FM memory bank

To switch between the FM memory bank FM1, FM2 and FMT,

- ⇨ press the **BAND/TS** button (10).

Selecting the AM waveband

To select the AM waveband,

- ⇨ keep pressing the **BAND/TS** button (10) until AM appears in the display.

Tuning into a station

There are various ways of tuning to a station.

Automatic seek tuning

- ⇨ Press the **∨** or **∧** button (5).

The unit tunes to the next receivable station.

Setting the sensitivity of station seek tuning

You can choose whether to tune only to strong reception stations or to also tune to those with a weak reception.

- ⇨ Press the **MENU** button (5).
- ⇨ Keep pressing the **∨** or **∧** button (5) until "SENS HI" or "SENS LO" appears in the display

"SENS HI" means that the tuner is set high to sensitivity. "SENS LO" means it is set to the low sensitivity setting. If "SENS LO" is selected, "LOC" lights up in the display.

- ⇨ Set the required sensitivity using the **<** and **>** buttons (5).

When you have finished making your changes,

- ⇨ press the **MENU** button (5).

Tuning into stations manually

You can also tune into stations manually.

- ⇨ Press the **<** or **>** button (5).

Storing station presets

Storing stations manually

- ⇨ Select the required memory bank (FM1, FM2 or FMT) or the AM waveband.
- ⇨ Tune into the station.
- ⇨ Press one of the station buttons **1-6** (9) for longer than one second to store the station in that preset memory.

Storing stations automatically (Travelstore)

You can automatically store the six stations with the strongest reception in the region. The stations are stored in the FMT or AM memory depending on the selected frequency band.

Note:

- Any stations that were previously stored on this memory bank are deleted in the process.

- ◇ Press and hold the **BAND/TS** button (10) until seek tuning begins.


The station storing procedure begins. Once the procedure finishes, all the stored stations are played briefly.

Listening to station presets

- ◇ Select the memory bank on which the station was stored.
- ◇ Press the preset station button **1-6** (9) of the station you want to listen to.

CD mode

You can use this unit to play standard CDs with a diameter of 5 inches.

 Risk of severe damage to the CD drive!

CD singles with a diameter of 3 inches and contoured CDs (shape CDs) are not suitable for playback in this unit.

We accept no liability for any damage to the CD drive that may occur as a result of the use of unsuitable CDs.

Switching to CD mode

- If there is no CD inserted in the drive.
- ◇ Gently insert the CD with the printed side uppermost into the CD compartment until you feel some resistance.

The CD is drawn into the drive automatically.

Do not use force when inserting the CD. You must not obstruct or assist the drive as it draws in the CD.

CD playback begins.

- If a CD is already inserted in the drive.
- ◇ Keep pressing the **SOURCE** (6) button until the CD mode display appears.

Playback begins from the point at which it was last interrupted.

CD MODE

Selecting tracks

⇨ Press one of the **⏮** / **>** or **<** / **⏭** buttons (5) to select the next or previous track.

If you press the **<** / **⏭** button (5) once, the current track will be played again from the beginning.

Fast track selection

To quickly select tracks backwards or forwards,

⇨ keep one of the **⏮** / **⏭** buttons (5) pressed until fast-reverse / fast-forward track selection begins.

Fast searching (audible)

To fast search backwards or forwards,

⇨ keep one of the **<** / **>** buttons (5) pressed until fast searching backwards / forwards begins.

Random track play (MIX)

⇨ Press button **4 (MIX)** (9).

“S--MIX” and the track number appears in the display. The next randomly selected track will then be played.

Canceling MIX

⇨ Press button **4 (MIX)** (9) again.

The standard CD display appears.

Scanning tracks (SCAN)

You can play briefly all the tracks on the CD.

⇨ Press button **2 (SCAN)** (9).

Setting the scantime

You can set the scanning time to between 5 and 30 seconds in the menu.

⇨ Press the **MENU** button (5).

⇨ Keep pressing the **⏮** or **⏭** button (5) until “SCANTIME” appears in the display.

⇨ Set the required scantime using the **<** and **>** buttons (5).

When you have finished making your changes,

⇨ press the **MENU** button (5) twice.

Note:

- The set scantime also applies to scanning in CD changer mode.

Stopping SCAN and continuing playback

To stop scanning,

⇨ press button **2 (SCAN)** (9) again.

The current track will then continue to be played.

Repeating tracks (REPEAT)

If you want to repeat a track,

⇨ press button **3 (RPT)** (9).

“S--RPT” and the track number appears in the display. The track is repeated until you deactivate RPT.

Deactivating REPEAT

If you want to deactivate the repeat function,

⇨ press button **3 (RPT)** (9) again.

The standard CD display appears. Normal playback is then resumed.

Pausing playback (PAUSE)

- ◇ Press button **1** ► (9).

“S--PAUSE” appears in the display.

Canceling pause

- ◇ Press button **2** ► (9) while in pause mode.

Playback is resumed.

Removing the CD from the unit

To remove the CD from the unit,

- ◇ keep the **SOURCE** button (6) pressed until the CD is ejected.

CD changer mode

You can connect a CD changer to the Las Vegas CD32 unit. You can obtain further information on available CD changers from your dealer.

Note:

- Information on handling CDs, inserting CDs and operating the CD changer can be found in the operating instructions supplied with your CD changer.

Switching to CD changer mode

- ◇ Keep pressing the **SOURCE** (6) button until the display shows, for instance, “CDC 1--1”.

The first digit in this display represents the CD number (in this case 1), and the second digit represents the track number (in this case 1).

Playback begins with the first CD that the CD changer detects.

Selecting CDs

To move up or down to another CD,

- ◇ press the **▲** or **▼** button (5) once or several times.

Selecting tracks

To move up or down to another track on the current CD,

- ◇ press the **>** or **<** button (5) once or several times.

CD CHANGER MODE

Fast searching (audible)

To fast search backwards or forwards,

- ⇨ keep one of the <> buttons (5) pressed until fast searching backwards / forwards begins.

Repeating individual tracks or whole CDs (REPEAT)

To repeat the current track,

- ⇨ briefly press button **3 (RPT)** (9).

“S--RPT” appears briefly in the display.

To repeat the current CD,

- ⇨ keep the **3 (RPT)** button (9) pressed for longer than two seconds.

“D--RPT” appears briefly in the display.

Deactivating REPEAT

To stop the current track or current CD from being repeated,

- ⇨ press button **3 (RPT)** (9) until “S--RPT” or “D--RPT” disappears and the standard CD changer display reappears.

Random track play (MIX)

To play the tracks on the current CD in random order,

- ⇨ briefly press button **4 (MIX)** (9).

“S--MIX” appears briefly in the display.

To play the tracks on all inserted CDs in random order,

- ⇨ keep the **4 (MIX)** button (9) pressed for longer than two seconds.

“D--MIX” appears briefly in the display.

Canceling MIX

To stop the tracks from being played in random order,

- ⇨ press button **4 (MIX)** (9) until “S--MIX” or “D--MIX” disappears and the standard CD changer display reappears.

Scanning all tracks on all CDs (SCAN)

Scanning tracks on the current CD

To briefly play all the tracks on the current CD in ascending order,

- ⇨ press button **2 (SCAN)** (9).

“S--SCN” appears in the display.

Scanning the first track on all CDs

You can briefly play the first track all CDs in the CD changer.

- ⇨ keep the **2 (SCAN)** button (9) pressed for longer than two seconds.

“D--SCAN” appears in the display.

Stopping SCAN

To stop scanning,

- ⇨ briefly press the **2 (SCAN)** button **9** again.

The currently scanned track will then continue to be played normally.

Note:

- You can set the scanning time (scantime). For further details, read the section entitled "Setting the scantime" in the "CD mode" chapter.

Pausing playback (PAUSE)

- ⇨ Press button **1 (II)** **9**.

"S--PAUSE" appears in the display.

Canceling pause

- ⇨ Press button **2 (II)** **9** while in pause mode.

Playback is resumed.

CLOCK - Time**Displaying the time**

To display the time,

- ⇨ briefly press the **9** button **11**.

Setting the clock

- ⇨ Press the **MENU** button **5**.
- ⇨ Keep pressing the **↖** or **↙** button **5** until "CLOCKSET" appears in the display.
- ⇨ Press the **>** button **5**.

The time appears in the display. The minutes flash on and off and can be adjusted.

- ⇨ Adjust the minutes using the **↖**/**↙** buttons **5**.

Once the minutes are set,

- ⇨ press the **<** button **5**.

The hours flash on and off.

- ⇨ Adjust the hours using the **↖**/**↙** buttons **5**.

When you have finished making your changes,

- ⇨ press the **MENU** button **5** twice.

Selecting 12/24-hour clock mode

- ⇨ Press the **MENU** button **5**.
- ⇨ Keep pressing the **↖** or **↙** button **5** until "24 H MODE" or "12 H MODE" appears in the display.
- ⇨ Press the **<** or **>** button **5** to switch between the modes.

CLOCK - TIME

When you have finished making your changes,

- ⇨ press the **MENU** button (5).

Displaying the time when the unit is off and the ignition is on

To display the clock when the unit is off and the ignition is on,

- ⇨ press the **MENU** button (5).
- ⇨ Keep pressing the **⌂** or **⌋** button (5) until "CLOCK OFF" or "CLOCK ON" appears in the display.
- ⇨ Press the **<** or **>** button (5) to switch between the displays.

When you have finished making your changes,

- ⇨ press the **MENU** button (5).

SOUND AND VOLUME DISTRIBUTION SETTINGS

Sound and volume distribution settings

Adjusting the bass

To adjust the BASS,

- ⇨ press the **AUDIO** button (7).

"BAS" appears in the display.

To increase the bass,

- ⇨ turn the volume control (3) clockwise.

To decrease the bass,

- ⇨ turn the volume control (3) anti-clockwise.

When you have finished making your changes,

- ⇨ wait 8 seconds, the settings are saved and the audio source display appears.

Adjusting the treble

To adjust the TREBLE,

- ⇨ keep pressing the **AUDIO** (7) button until "TRE" appears in the display.

To increase the treble,

- ⇨ turn the volume control (3) clockwise.

To decrease the treble,

- ⇨ turn the volume control (3) anti-clockwise.

When you have finished making your changes,

- ⇨ wait 8 seconds, the settings are saved and the audio source display appears.

Adjusting the balance settings

To adjust the left/right volume distribution (balance),

- ⇨ keep pressing the **AUDIO** (7) button until "BAL" appears in the display.

To move the volume distribution toward the right,

- ⇨ turn the volume control (3) clockwise.

To move the volume distribution toward the left,

- ⇨ turn the volume control (3) anti-clockwise.

When you have finished making your changes,

- ⇨ wait 8 seconds, the settings are saved and the audio source display appears.

Adjusting the fader settings

To adjust the front/back volume distribution (fader),

- ⇨ keep pressing the **AUDIO** (7) button until "FAD" appears in the display.

To move the volume distribution toward the back,

- ⇨ turn the volume control (3) clockwise.

To move the volume distribution toward the front,

- ⇨ turn the volume control (3) anti-clockwise.

When you have finished making your changes,

- ⇨ wait 8 seconds, the settings are saved and the audio source display appears.

Equalizer and X-BASS

X-BASS

The X-BASS feature can be used to boost the bass at low volume levels.

To activate X-BASS,

- ⇨ keep the **EQ/X-BASS** button (8) pressed until "XBASS ON" appears in the display.

"X-BASS" appears in the display.

To deactivate X-BASS,

- ⇨ keep the **EQ/X-BASS** button (8) pressed until "XBASS OFF" appears in the display.

"X-BASS" disappears.

Selecting preset sound effect

You can select preset sound effect for the following styles of music:

- CLASSIC
- POP M
- ROCK M

The settings for these music styles have already been programmed.

To select one of the sound presets,

- ⇨ keep pressing the **EQ/X-BASS** button (8) until the required setting appears in the display.

If you want to deactivate the sound preset,

- ⇨ keep pressing the **EQ/X-BASS** button (8) until "DSP OFF" appears in the display.

Specifications

Amplifier

Output power:

Las Vegas CD32:	4 x 22 watts sine in accordance with DIN 45 324 at 14.4 V 4 x 50 watts max. power
San Diego CD32:	4 x 15 watts sine in accordance with DIN 45 324 at 14.4 V 4 x 40 watts max. power
Santa Fe CD32:	4 x 18 watts sine in accordance with DIN 45 324 at 14.4 V 4 x 45 watts max. power

Tuner

Frequency ranges US:

FM:	87.5 - 107.9 MHz
AM:	530 - 1710 kHz

FM mono sensitivity:

15 dBf

FM frequency response:

35 - 16,000 Hz

CD

Frequency response:

20 - 20,000 Hz

Pre-Amp Out

(not applicable to San Diego CD32)

Output: 1.5 V_{rms} ± 2.5 dB

Subject to changes!

(GB) ⚠ Safety precautions

Installation and connection regulations

- In the event that this equipment is installed or repaired incorrectly, this could cause malfunctions in the vehicle electronics.
- To avoid causing damage to your radio, use the corresponding Blaupunkt adapter cable to connect the 8-pin +/- ISO plug in the vehicle.

While installing and connecting this equipment, please observe the following safety notes:

- Disconnect the negative battery termina.
- Observe the car manufacturer's safety instructions.
- If you drill any holes, make sure that you do not damage any parts of the vehicle.
- The diameter of the positive/negative cable must not be less than 1.5 mm².

(F) ⚠ Indications de sécurité

Consignes de montage et de branchement

- En cas d'erreur d'installation ou d'entretien, des perturbations peuvent survenir au niveau des systèmes électroniques du véhicule.
- Pour ne pas détériorer votre autoradio, branchez le connecteur ISO +/- 8 pôles du véhicule uniquement via un câble adaptateur Blaupunkt correspondant.

Pendant le montage et le branchement, observez les consignes de sécurité suivantes :

 
 
 
 
 
- Débrancher le pôle (-) de la batterie.
- Observer ce faisant les indications de sécurité du constructeur automobile.
- Veiller à ne pas endommager les pièces du véhicule en perçant des trous.
- La section transversale du câble (+) et (-) ne doit pas être inférieure à 1,5 mm².

Supplied Mounting Hardware

Materiel de montage fourni

Ferreteria de montaje suministrada


Elementos de fixação fornecidos

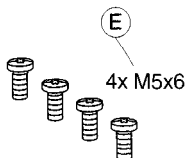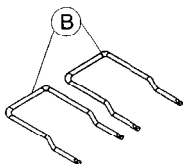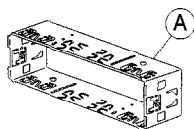


RC 04

only
Las Vegas CD32

 1.

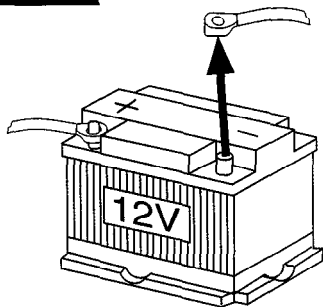

 2.

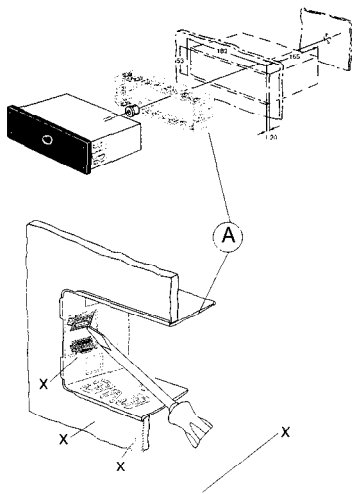


Bend as many taps as possible.

Plier si possible toutes les attaches.

Lo ideal es poder doblar todas las bridas de sujeción.

Devem ser dobradas o máximo possível de braçadeiras.

 3.

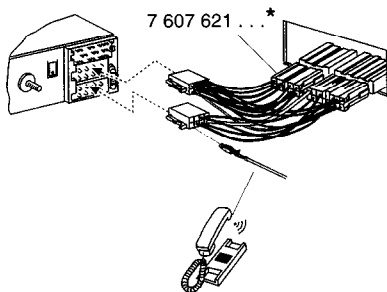


* Car-specific adapter cable which is available at your dealer.

Câble adaptateur spécifique au véhicule, disponible dans le commerce.


Adaptador específico del vehículo, el cual se puede adquirir en el comercio especializado.

Cabo de adaptação específico do automóvel que pode ser adquirido no comércio especializado.

 
4.

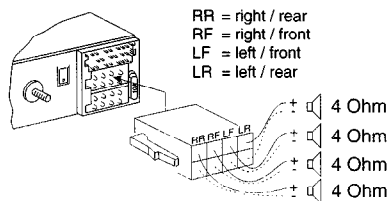

 5.

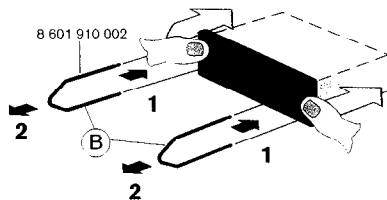


 6.

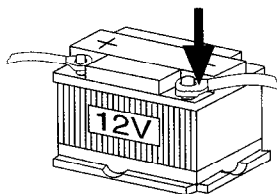


7.

 C-1 C-2 C-3

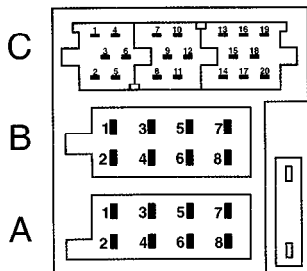


A		B	
1	—	1	Speaker out RR+
2	Telefon Mute	2	Speaker out RR-
3	nc	3	Speaker out RF+
4	Permanent +12V	4	Speaker out RF-
5	Aut. antenna	5	Speaker out LF+
6	nc	6	Speaker out LF-
7	Kl.15/Ignition	7	Speaker out LR+
8	Ground	8	Speaker out LR-

C					
C1		C2		C3	
1	Line Out LR 5V/10K	7	nc	13	Changer Bus
2	Line Out RR 5V/10K	8	nc	14	nc
3	Line Out Masse / Ground	9	nc	15	+12V
4	nc	10	nc	16	-12V
5	nc	11	nc	17	Changer GND
6	nc	12	nc	18	AF - GND
				19	Line In - L 1,2V/10K
				20	Line In - R 1,2V/10K

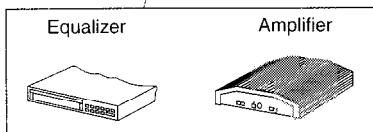 


only
Las Vegas CD32,
Santa Fe CD32

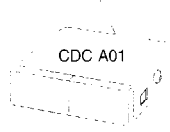 

only
Las Vegas CD32

 8.

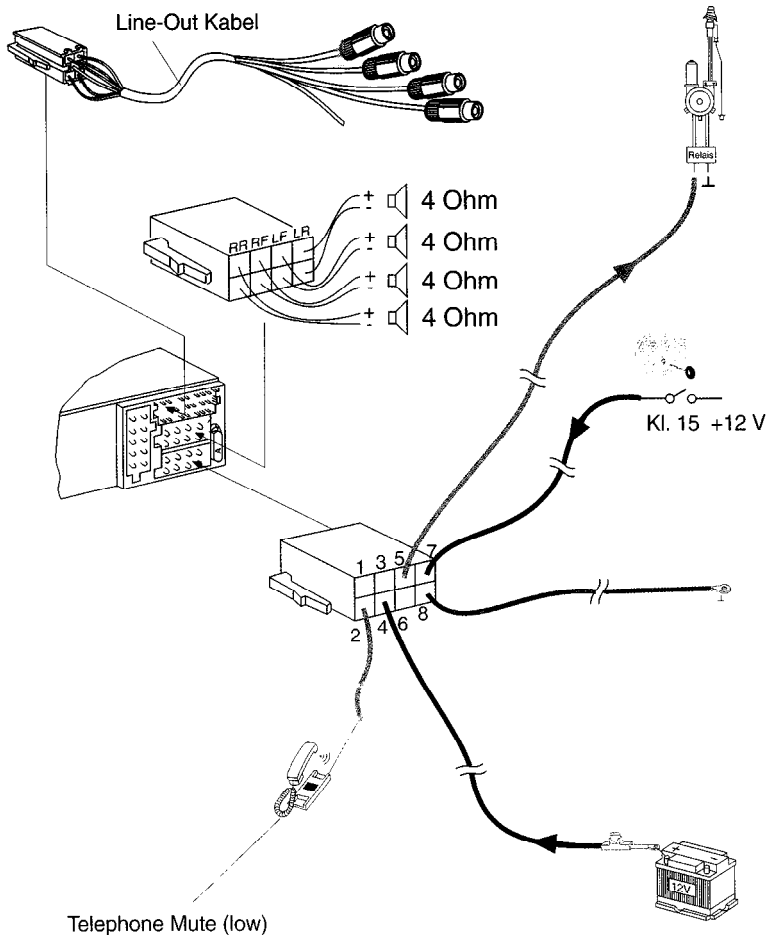

This information is subject to change without notice!

Sous réserve de modifications!

Modificacões sem aviso prévio! Wwww.Somanuals.com. All Manuals Search And Download.

Sob reserva de alterações!

Service numbers / Numéros du service après-vente / Números de servicio / Número de serviço

Country:		Phone:	Fax:	WWW:
Germany	(D)	0180-5000225	05121-49 4002	http://www.blaupunkt.com
Austria	(A)	01-610 390	01-610 393 91	
Belgium	(B)	02-525 5454	02-525 5263	
Denmark	(DK)	44 898 360	44-898 644	
Finland	(FIN)	09-435 991	09-435 99236	
France	(F)	01-4010 7007	01-4010 7320	
Great Britain	(GB)	01-89583 8880	01-89583 8394	
Greece	(GR)	0800-550 6550	01-576 9473	
Ireland	(IRL)	01-4149400	01-4598830	
Italy	(I)	02-369 6331	02-369 6464	
Luxembourg	(L)	40 4078	40 2085	
Netherland	(NL)	023-565 6348	023-565 6331	
Norway	(N)	66-817 000	66-817 157	
Portugal	(P)	01-2185 00144	01-2185 11111	
Spain	(E)	902-120234	916-467952	
Sweden	(S)	08-7501500	08-7501810	
Switzerland	(CH)	01-8471644	01-8471650	
Czech. Rep.	(CZ)	02-6130 0441	02-6130 0514	
Hungary	(H)	01-333 9575	01-324 8756	
Poland	(PL)	0800-118922	022-8771260	
Turkey	(TR)	0212-3350677	0212-3460040	
USA	(USA)	800-2662528	708-6817188	
Brasil				
(Mercosur)	(BR)	+55-19 3745 2769	+55-19 3745 2773	
Malaysia				
(Asia Pacific)	(MAL)	+604-6382 474	+604-6413 640	

Blaupunkt GmbH



Limited Warranty (United States)

Robert Bosch Corporation warrants new Blaupunkt car audio products it distributes in the United States through authorized Blaupunkt dealers, or which are imported as original vehicle equipment by the automobile manufacturer, to be free from defects in material and workmanship, in accordance with the following:

For twelve (12) months after delivery to you, the original consumer purchaser, we will repair or at our option replace at no charge to you any car audio product which, under normal conditions of use and service, proves to be defective in materials or workmanship. However, this warranty does not cover expenses incurred in the removal or reinstallation of any car audio product, whether or not proven defective, and does not cover products not purchased from an authorized Blaupunkt dealer. This warranty is limited to the original consumer purchaser and is not transferable. Repaired and replacement car audio products shall assume the identity of the original for purpose of this warranty and this warranty shall not be extended with respect to such products.

To obtain performance of this warranty, contact the nearest Blaupunkt authorized repair facility or our nearest office. A dated purchase receipt or other proof that the product is within the warranty period will be required in order to honor your claim. Carefully pack the unit and ship prepaid to the servicing location. For further information, write to the Robert Bosch Corporation, 2800 South 25th Avenue, Broadview, Illinois, 60153, attention Blaupunkt Customer Service Department or call 1-800-266-2528.

Specifically excluded from this warranty are failures caused by misuse, neglect, abuse, improper operation or installation, dropping or damaging a radio faceplate, unauthorized service or parts, or failure to follow maintenance instructions or perform normal maintenance activities. Normal maintenance activities for car audio products include but are not limited to cleaning, such as cleaning radio faceplate connectors and tape heads, tape player head demagnetization and tape player lubrication, compact disc and lens cleaning, and other minor maintenance activities and adjustments that are outlined in the owner's manual or that are normally required for continued proper operation. Also excluded from this warranty is the correction of improper installation and the elimination of any external electromagnetic interference.

This warranty sets forth your exclusive remedies with respect to the products covered by it. We shall not be liable for any incidental, consequential, special or punitive damages arising from the sale or use of any Blaupunkt car audio products, whether such claim is in contract or tort. No attempt to alter, modify, or amend this warranty shall be effective unless authorized in writing by an officer of Robert Bosch Corporation.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE AND SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESS WARRANTY IS EFFECTIVE.

In the event any provision, or any part or portion of this warranty shall be held invalid, void or otherwise unenforceable, such holding shall not affect the remaining part or portions of that provision or any other provision hereof.

NOTICE TO CALIFORNIA OWNERS

If your Blaupunkt car audio product needs warranty repair service and there is no authorized service center reasonably close to you, you can return the defective unit to the dealer from whom you purchased it, or you can return it to any dealer who sells Blaupunkt car audio products. The dealer may, at the dealer's option, replace, repair or refund the purchase price for any Blaupunkt car audio products which prove defective under conditions of normal use. If the dealer fails to repair, replace, or partially refund your money, you may take your Blaupunkt car audio product to any repair shop and they can repair your unit at our expense unless the repair cost exceeds the depreciated value of the unit, but you must contact Blaupunkt to receive authorization to do this before your car audio product is repaired.

ROBERT BOSCH CORPORATION
BLAUPUNKT CUSTOMER SERVICE
2800 SOUTH 25TH AVENUE
BROADVIEW, IL 60153

Warranty No. _____

BLAUPUNKT LIMITED WARRANTY (CANADA)

SUBJECT TO THE LIMITATIONS AND CONDITIONS SET OUT BELOW, Robert Bosch Inc. ("Robert Bosch") warrants the replacement of Blaupunkt car radio accessories, and the repair or replacement of Blaupunkt car radios or car radio parts, which, under normal conditions of use or service, are found to be defective in materials and/or workmanship within twelve (12) months from the date of installation by an authorized Blaupunkt dealer of Robert Bosch.

FOR GREATER CERTAINTY, THIS BLAUPUNKT LIMITED WARRANTY IS SUBJECT TO THE FOLLOWING LIMITATIONS AND CONDITIONS:

- For purposes of this warranty, a Blaupunkt car radio accessory is a product which enhances, or is dependent upon, the operation of a Blaupunkt car radio but does not form an integral part thereof and may be purchased independently of the car radio unit.
- With the exception of labour costs incurred in connection with the removal or installation of car radios and accessories and related activities, defective accessories will be replaced, and car radios or car radio parts will be repaired or replaced by a like item by an authorized Blaupunkt warranty service depot or authorized Blaupunkt dealer, free of labour costs related to such replacement or repair.
- This warranty does not apply to car radios and car radio parts and accessories supplied by Robert Bosch to manufacturers for installation in their products as original equipment. Such manufacturers may, in some cases, provide warranty coverage for a period different than that provided herein.
- This warranty is limited to Blaupunkt car radios and car radio parts and accessories installed in a motor vehicle by an authorized Blaupunkt warranty service depot or authorized Blaupunkt dealer and to Blaupunkt car radios and accessories in a motor vehicle, the installation of which has been approved by an authorized Blaupunkt warranty service depot or authorized Blaupunkt dealer.
- Specifically excluded from this warranty are car radios and car radio parts and accessories which have been rendered defective by misuse, negligence, modification or abuse, by improper installation, application, operation or removal, by unauthorized service or the use of unauthorized parts. Also excluded from this warranty are parts which are subject to replacement due to normal wear and tear, normal maintenance to the tape portion of car radios such as cleaning, head demagnetization, lubrication and other minor adjustments and service required to eliminate any electro-magnetic interference.
- A claim under this warranty can only be made by the original customer within twelve (12) months of the date of installation of the car radio accessory, as the case may be, and is contingent upon the presentation of the attached warranty certificate countersigned by an authorized Blaupunkt dealer of Robert Bosch within ten (10) days of the said installation date.
- This warranty is not transferable by the original consumer to subsequent owners, nor does it apply to car radio replacement parts.
- To the extent allowed by the law of the jurisdiction in which the Blaupunkt car radio or car radio accessories are purchased, this warranty sets out the only remedies available to the original consumer with respect to the car radio or car radio parts or accessories owned by him. This warranty constitutes the entire agreement between Robert Bosch and the original consumer. The only representations, oral or written, concerning the Blaupunkt car radios or car radio parts or accessories which are binding on Robert Bosch are the written representations contained in this warranty. Neither Robert Bosch nor its affiliated companies shall be liable for incidental or consequential damages which may result from defective car radios or car radio parts or accessories or from the defective installation thereof, whether or not due to the negligence of Robert Bosch. This warranty applies only to Blaupunkt car radios and car radio parts and accessories and does not cover any other motor vehicle parts.
- THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES AND CONDITIONS. ANY WARRANTY OR CONDITION IMPLIED BY LAW, WHETHER OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, IS LIMITED TO THE PERIOD THAT THIS EXPRESS WARRANTY IS EFFECTIVE and no attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of Robert Bosch.
- Some jurisdictions do not allow the imposition of limitation periods on a warranty's duration, nor do they condone the exclusion of incidental or consequential damages. You may therefore have other rights which vary between jurisdictions and you may have additional legal rights against persons other than Robert Bosch.
- Robert Bosch reserves the right to examine car radios and car radio parts and accessories alleged to be defective in materials and/or workmanship to determine the nature and cause of such defect and its decision in this regard shall be final. Robert Bosch also reserves the right to decide between repair and replacement.
- To obtain the benefits of warranty coverage contact the nearest authorized Blaupunkt warranty service depot or authorized Blaupunkt dealer, information as to the location of the nearest authorized Blaupunkt warranty service depot or authorized Blaupunkt dealer may be obtained by contacting (905) 890-1033.

EFFECTIVE the 1st day of January, 1997

Warranty No. _____

WARRANTY CERTIFICATE

INSTALLATION OR INSTALLATION APPROVAL DATE

_____ day of _____ 19 _____

COUNTERSIGNED BY AUTHORIZED DEALER OF THE BLAUPUNKT CAR RADIO DIVISION OF ROBERT BOSCH INC.

this _____ day of _____ 19 _____

Garantie N° _____

GARANTIE LIMITÉE DE BLAUPUNKT (CANADA)

SOUS RÉSERVE DES LIMITES ET CONDITIONS CI-APRÈS, Robert Bosch Inc. ("Robert Bosch") garantit le remplacement des accessoires de radios d'autos Blaupunkt et la réparation ou le remplacement des radios d'autos ou des pièces de radios d'autos Blaupunkt qui, en conditions normales d'utilisation ou de service, deviennent défectueux quant à leur matériel et/ou à leur fabrication dans les douze (12) mois de la date d'installation par un marchand Blaupunkt autorisé de Robert Bosch.

POUR PLUS DE CERTITUDE, LA PRÉSENTE GARANTIE LIMITÉE DE BLAUPUNKT EST SOUMISE AUX LIMITES ET CONDITIONS SUIVANTES

- Aux fins de la présente garantie, un accessoire de radio d'auto Blaupunkt est un produit qui rehausse le fonctionnement d'une radio d'auto Blaupunkt ou qui en dépend, mais qui n'en fait pas partie intégrante et que l'on peut acheter indépendamment de celle-ci.
- À l'exception des frais de main-d'œuvre se rapportant à la dépose ou à la pose des radios d'autos et de leurs accessoires et aux activités connexes, les accessoires défectueux seront remplacés et les radios d'autos ou leurs accessoires seront réparés ou remplacés par un article semblable par un dépôt de service Blaupunkt autorisé ou un marchand Blaupunkt autorisé, sans frais de main-d'œuvre pour ledit remplacement ou ladite réparation.
- La présente garantie ne s'applique pas aux radios d'autos, aux pièces et accessoires de radios d'autos fournis par Robert Bosch aux constructeurs pour installation dans leurs produits comme équipements d'origine. Lesdits fabricants peuvent, dans certains cas, fournir une garantie pour une période différente de celle que prévoient les présentes.
- La présente garantie est limitée aux radios d'autos, aux pièces et accessoires de radios d'autos Blaupunkt installés dans un véhicule automobile par un dépôt de service Blaupunkt autorisé ou un marchand de radios d'autos et d'accessoires Blaupunkt autorisé, dont ladite installation a été approuvée par un dépôt de service Blaupunkt autorisé ou un marchand Blaupunkt autorisé.
- Sont spécifiquement exclus de la présente garantie les radios d'autos et les pièces et accessoires de radios d'autos rendus défectueux par mauvais usage, négligence, modification ou abus, par une installation, une utilisation, un fonctionnement ou une dépose incorrecte, par un entretien non autorisé ou l'usage de pièces non autorisées. Sont également exclues de la présente garantie les pièces à remplacer par suite d'usure normale, pour l'entretien normal à la partie magnétophone des radios d'autos comme le nettoyage, la démagnétisation des têtes, la lubrification ou les autres réglages et services mineurs pour éliminer l'interférence électromagnétique.
- Toute réclamation aux termes de la présente garantie ne peut être faite que par l'acheteur original dans les douze (12) mois de la date de la pose de la radio d'auto ou de ses accessoires, selon le cas, et doit être accompagnée du certificat de garantie contresigné par un marchand Blaupunkt autorisé de Robert Bosch dans les dix (10) jours de ladite date d'installation.
- La présente garantie n'est pas cessible par l'acheteur original aux propriétaires subséquents et elle ne s'applique pas aux pièces de rechange de radios d'autos.
- Dans la limite où le permet la loi de la juridiction où la radio d'auto ou les accessoires de radios d'autos Blaupunkt sont achetés, la présente garantie énumère les seuls recours offerts à l'acheteur original en rapport avec la radio d'auto ou les pièces ou accessoires de radios d'autos achetés par lui. La présente garantie constitue l'entente totale entre Robert Bosch et l'acheteur original. Les seules représentations, verbales ou écrites, concernant les radios d'autos ou les pièces ou accessoires de radios d'autos Blaupunkt qui engagent Robert Bosch sont celles qui contiennent les présentes. Ni Robert Bosch ni ses compagnies affiliées ne sont responsables des dommages incidents et indirects qui peuvent subvenir à la suite de la défectuosité des radios d'autos ou de leurs pièces ou accessoires ou de la défectuosité de leur pose, quelle soit ou non due à la négligence de Robert Bosch. La présente garantie s'applique seulement aux radios d'autos et aux pièces et accessoires de radios d'autos Blaupunkt et ne couvre aucune autre pièce de véhicules automobiles.
- LA PRÉSENTE GARANTIE TIENT LIEU DE TOUTES AUTRES GARANTIES ET CONDITIONS EXPLICITES. TOUTE GARANTIE OU CONDITION DÉCOULANT DE LOI, QUANT À LA QUALITÉ MARCHANDE OU À LA CONVENANCE À UNE FIN PARTICULIÈRE OU TOUTE AUTRE GARANTIE OU CONDITION, SE LIMITE À LA PÉRIODE À LAQUELLE S'ÉTEND LA PRÉSENTE GARANTIE EXPLICITE et aucune altération, modification ou changement à la présente garantie n'est valable sans l'autorisation écrite d'un responsable de Robert Bosch.
- Certaines juridictions ne permettent pas de limiter la durée des garanties ni d'exclure les dommages incidents ou indirects. Vous pouvez donc, selon la juridiction où vous habitez, avoir des droits supplémentaires et posséder des recours juridiques contre des personnes autres que Robert Bosch.
- Robert Bosch se réserve le droit d'examiner les radios d'autos et les pièces et accessoires de radios d'autos que l'on dit défectueuses quant à leur matériel et/ou à leur fabrication et sa décision à ce sujet est sans appel. Robert Bosch se réserve aussi le droit de décider entre la réparation et le remplacement.
- Pour obtenir exécution des obligations de la garantie, communiquer avec le dépôt de service ou le marchand Blaupunkt autorisé le plus près. On peut en obtenir le nom et l'adresse en téléphonant à (514) 687-6311.

EN VIGUEUR le 1^{er} jour janvier, 1997

Garantie N° _____

CERTIFICAT DE GARANTIE

DATE DE LA POSE OU DE L'APPROBATION DE LA POSE:

le _____ e jour d _____ 19 _____

CONTRESIGNÉ PAR LE MARCHAND AUTORISÉ DE LA DIVISION DES RADIOS D'AUTOS BLAUPUNKT DE ROBERT BOSCH INC.

ce _____ e jour d _____ 19 _____



Bosch Group

Please send other correspondence to:

Robert Bosch Corporation Sales Group
Blaupunkt - Mobile Communications Division
2800 S. 25th Ave.
Broadview, IL 60153



Please
Place First
Class
Stamp
Here



Bosch Group

BENEFITS REGISTRATION DEPARTMENT
PO BOX 1265
DENVER CO 80201-1265



BENEFITS REGISTRATION

*By completing and returning the attached
Benefits Registration Card, you will receive these important
benefits:*

- **Insurance Referral** - We will keep the model number, warranty (serial) number, and date of purchase of your new Blaupunkt radio on file to help you refer to this information in the event of an insurance claim, such as if the car is stolen.
- **Warranty Confirmation** - Your prompt registration confirms your rights to the protection available under the terms and conditions of your Blaupunkt warranty.
- **Ownership Registration** - Returning this card is your only way to guarantee that you will be notified by Blaupunkt of any issues that arise concerning this product.



IMPORTANT!

Thank You For Buying a ● **BLAUPUNKT. Radio!**

To provide you with these important benefits, you must complete this card and mail within 10 days of purchase.

- ✓ **Insurance Referral**
- ✓ **Warranty Confirmation**
- ✓ **Ownership Registration**

Your responses will also help us refine and enhance our products and marketing programs. We greatly appreciate and value your input, and are pleased to provide you with the above benefits.

Warranty Details - Refer to your radio's warranty. **Service Information** - Please contact us at:

Robert Bosch Corporation Sales Group
Blaupunkt - Mobile Communications Division
2800 S. 25th Ave.

1-800-266-2528

Broadview, IL 60153

Download from www.Somanuals.com. All Manuals Search And Download

1 1. Mr. 2. Mrs. 3. Ms. 4. Miss 174A

Warranty Number.

First Name: _____ Initial: _____ Last Name: _____

Address: (Number and Street) _____

Apt. #: _____

City: _____

State: _____

Zip: _____

2 Phone #: _____

3 Date of Purchase: _____

Month Day Year

4 Store Name: _____

5 Where did you make your purchase?

- 1. Car audio store
- 2. Automobile dealer
- 3. Superstore
- 4. Department store
- 5. Catalogue/mail order
- 6. Other

6 Check the two (2) most important reasons you chose Blaupunkt over the competition:

- 1. Friend/Family recommendation
- 2. Salesperson recommendation
- 3. Tape player quality/features
- 4. CD player quality/features
- 5. Ease of use/location of controls
- 6. Styling/Appearance
- 7. Tuner quality/features
- 8. Blaupunkt warranty
- 9. Convenient installation
- 10. Sound quality
- 11. Blaupunkt Reputation
- 12. Detachable Face
- 13. Magazine review
- 14. Value for price
- 15. Other (Describe in comments)

7 In what vehicle will this Blaupunkt product be installed?

Make: _____ Model: _____ Year: _____
example: Ford example: Mustang example: 1965

8 How did you first learn about Blaupunkt?

- 1. Friend/relative
- 2. Salesperson
- 3. Magazine article
- 4. In-store display
- 5. Radio ad
- 6. Newspaper ad
- 7. Magazine ad
- 8. Not sure

9 When did you make your decision on which model to buy?

- 1. Before coming to the store
- 2. At the store

10 What brand was your second choice?

- 1. Alpine
- 2. Audiovox
- 3. Clarion
- 4. Eclipse
- 5. JVC
- 6. Kenwood
- 7. Panasonic
- 8. Pioneer
- 9. Rockford-Fosgate
- 10. Sony
- 11. Other
- 12. None

11 Who installed this product?

- 1. Store where the product was purchased
- 2. I did it myself
- 3. Friend or relative
- 4. Independent installer
- 5. Other

12 Which of these products do you plan to buy in the future? (check all that apply)

- 1. None
- 2. Front speakers
- 3. Rear speakers
- 4. Amplifier
- 5. Subwoofer
- 6. Equalizer
- 7. CD changer

13 Date of Your birth: _____

Month Day Year

14 Education (Please check which category applies):

- 1. High School
- 2. Some College
- 3. Completed College
- 4. Graduate School

15 Including yourself, what is the total number of people living in your household?

(EXAMPLES: 01, 02, 03, 04,....)

16 NOT including yourself, what are the AGES of other people living in your household?

Age (in years)

Male: _____

Female: _____

17 Marital Status: 1. Married 2. Single

18 Which best describes your family income?

- 1. Under \$15,000
- 2. \$15,000-\$24,999
- 3. \$25,000-\$34,999
- 4. \$35,000-\$49,999
- 5. \$50,000-\$74,999
- 6. \$75,000-\$99,999
- 7. \$100,000-149,999
- 8. Over \$150,000

19 In the last six(6) months have you or your spouse:

- 1. Purchased clothes through the mail?
- 2. Purchased gifts through the mail?
- 3. Worked in your garden?
- 4. Traveled on vacation?
- 5. Purchased a PC or PC software?
- 6. Purchased two or more books?
- 7. Purchased cassettes/CDs?
- 8. Donated to wildlife/environmental causes?
- 9. Donated to charities

Comments: _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>