 


## ■ 3-Band Equalizer

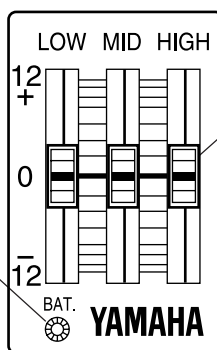

 
 
 
### BAT. (Battery Check) Indicator

This indicator will light when the battery needs to be replaced. Please replace the battery as soon as possible when the BAT. indicator lights (see battery replacement below).

### EQUALIZER Controls

- LOW : Boosts or cuts the level of the low frequencies.
- MID : Boosts or cuts the level of the middle frequencies.
- HIGH : Boosts or cuts the level of the high frequencies.

## ■ Battery Replacement

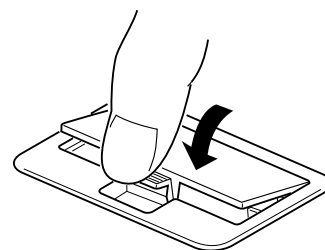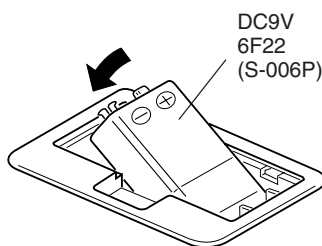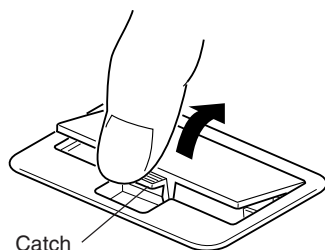

- ① Press the catch on the battery holder in the direction indicated by the arrow in the illustration in order to unlock it.
- ② Remove the old battery from the battery case, and insert the new battery making sure that the (+) and (-) terminals of the battery. Use only a DC9V, 6F22 (S-006P) or equivalent battery.
- ③ Press firmly so that the battery case locks into place.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>