

NEED HELP?
CALL 800-267-5486
OR 847-498-9000
EMAIL:
CUSTOMERSERVICE@
AMPLI.COM



## **WHATS IN THE BOX?**

- 1. Pinnacle Tabletop Lectern or Pinnacle Full Height Lectern with 2 sided panel
- 2. Electret Gooseneck Mic
- 3. Power Cord

Thank you for choosing the **Pinnacle Lectern** from AmpliVox Portable Sound Systems. Our system combines flexibility with functionality. Please refer to this user guide as you enjoy the unique capabilities of another quality product from AmpliVox Portable Sound Systems. As always, you can reach us at 800-267-5486, or at 847-489-9000, Monday - Friday 8am - 6pm CST.





3995 COMMERCIAL AVE.
NORTHBROOK, IL 60062
AMPLIVOX PORTABLE SOUND SYSTEMS
PH. 800-267-5486 OR 847-498-9000
FX. 800-267-5489 OR 847-498-6691
WEB: WWW.AMPLI.COM
EMAIL: CUSTOMERSERVICE@AMPLI.COM

## PINNACLE FULL HEIGHT ST3250:

The ST3250 Pinnacle comes with a Gooseneck Mic that installs on the cable mounted in the shock mount on the reading table. That cable is prewired to the bottom of the unit where you plug in an XLR cable to the house PA system (not included).

The LED Lamp is powered by an AC power adapter that is plugged into an outlet strip mounted inside the unit on the bottom which has its plug mounted in the bottom side of the unit. You plug in the supplied power cord from the base of the unit to house AC.

The clock/timer is battery operated (LR44 Watch Batteries, not included). The batteries can be replaced by pulling the clock out of the panel. The batteries are in the back of the timer.








**XLR CABLE TO HOUSE PA** 



DASHBOARD
WITH CLOCK TIMER
AND LED LAMP



## **PINNACLE TABLETOP ST3240:**

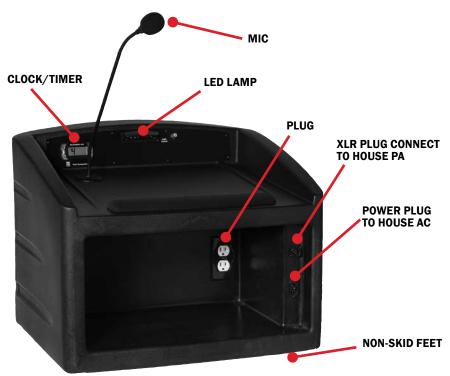

The ST3240 Pinnacle comes with a Gooseneck Mic that installs on the cable mounted in the shock mount on the reading table. That cable is prewired to the bottom of the unit where you plug in an XLR cable to the house PA system (not included).

The LED Lamp is powered by an AC power adapter that is plugged into an outlet strip mounted inside the unit on the bottom which has its plug mounted in the bottom side of the unit. You plug in the supplied power cord from the base of the unit to house AC.

The clock/timer is battery operated (LR44 Watch Batteries, not included). The batteries can be replaced by pulling the clock out of the panel. The batteries are in the back of the timer.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com