Revision E

Type ES76()

7.6-Meter ESA





7.6-Meter Earth Station Antenna

Table of Contents

Introduction	Introduction						
	Proprietary Data	4					
	Information and Assistance	4					
	Notice						
	Technical Assistance	4					
How to Use This Manual	Overview	5					
	Content	5					
Getting Started	Overview						
	Warnings	6					
	Recommended Tools	7					
	Parts Verification	8					
	Reporting Equipment Loss or Damage						
	Reporting Visible Loss or Damage						
	Reporting Concealed Damage						
	Inventory Equipment Received						
	Returning Equipment	9					
Installation	Overview	1					
Procedures	Foundation Preparation	1					
	A-325 Tensioning	11					
	Tripod Ground Mount Assembly	12					
	Azimuth Beam Assembly	12					
	Support Legs Assembly	1:					
	Panning Frame Assembly	1					
	Elevation Jackscrew Assembly	?:					
	Azimuth Jackscrew Assembly	?;					
	Mount Assembly	?;					
	Reflector/Backstructure Installation Drawing (239501)	}(
	Reflector/Backstructure Installation Drawing (239908)	3					
	Theodolite & Alignment Installation Drawing (239611A)	L					
	Subreflector and Subreflector Strut C-Band Installation Drawing (239906)	5(
	Subreflector and Subreflector Strut Ku-Band Installation Drawing (239909)	5					
Operation	Overview	54					
	Acquiring A Satellite	54					
	Subreflector Adjustment	5					
Preventive	Overview	5					
Maintenance	General Cleaning	5					
	Electrical Parts5	5					
	Mechanical Parts6	ì					
	Inspection6)(
	Local Control/Motor Drive Controller6)(
	Antenna	3					
	Drive System Voltage and Current Checks	j,					
	Preservation of Component Parts6	j.					
	Aluminum Parts	j,					
	Galvanized Surfaces	j.					
	Lubrication	j.					
	la kayayaya/Mataya						



Gear Motor/Housing Fill Drain Requirements......66

7.6-Meter Earth Station Antenna

Introduction

Like all Andrew earth station antennas, the 7.6-Meter Earth Station Antenna provides high gain and exceptional pattern characteristics. The electrical performance and exceptional versatility provides the ability to configure the antenna with your choice of linearly-or circularly-polarized 2-port or 4-port combining network. That versatility is provided at the time of initial purchase, as well as in the future, as your satellite communication requirements evolve.

The aluminum reflector is precision formed for accuracy and strength requiring minimal assembly. The reflector assembly is 25-feet (7.6-meters) in diameter and segmented in a sixteen piece configuration to reduce shipping volume and facilitate transport to remote sites. Reflector panels are chromate converted and painted with a highly reflective white paint.

The versatile tripod mount can be purchased with either manual or motorizable capabilities. The tripod mount features 180 degree azimuth coverage in three continuous 120 degree overlapping ranges and executes 90 degree continuous elevation adjustment. This large adjustment range provides non-critical foundation orientation and the ability to view geostationary satellites from horizon-to-horizon, from any location worldwide.

The motorizable tripod mount features self-aligning bearings for the elevation pivots, resulting in "zero" backlash. This mount can be operated manually, but has the ability to be upgraded for motorized operation, including steptracking/Smartrack™ applications. The motorizable mount type is indicated by the **ES76** or **ES76HS** letters within the antenna type number. The addition of the letter "HS" within the antenna type number indicates that the mount includes High-Speed azimuth/elevation machine jackscrews, instead of corresponding azimuth/elevation strut assemblies. The azimuth/elevation jackscrews are equipped for integration with the optional motor drive systems. A cross-axis grounding kit is supplied with each mount to ensure electrical interconnectivity of the complete structure.

The aluminum enclosure and hot-dipped galvanized steel mount maintain pointing accuracy and ensures durability and reliability. The antenna and standard manual mount with enclosure will survive 125 mph (200 km/h) wind, in any position of operation, without damage or permanent deformation in moderate coastal/industrial areas. Severe conditions require additional protection.

Andrew provides a complete line of available options, including motor drive systems (with power interfaces addressing domestic and international standards), remote microprocessor antenna control for motor drive systems, pressurization equipment, and interconnecting $\mathsf{HELIAX}^{\texttt{@}}$ cables and waveguide.



Proprietary Data

The technical data contained herein is proprietary to Andrew Corporation. It is intended for use in operation and maintenance of Andrew supplied equipment. This data shall not be disclosed or duplicated in whole or in part without express written consent of Andrew Corporation.

Information and Assistance

Andrew Corporation provides a world-wide technical support network. Refer to the technical assistance portion of this this manual for the contact numbers appropriate to your location.

Notice

The installation, maintenance, or removal of antenna systems requires qualified, experienced personnel. Andrew installation instructions have been written for such personnel. Antenna systems should be inspected by qualified personnel to verify proper installation, maintenance and condition of equipment.

Andrew Corporation disclaims any liability or responsibility for the results of improper or unsafe installation and maintenance practices.

All designs, specifications, and availabilities of products and services presented in this manual are subject to change without notice.

Copyright © 2005, Andrew Corporation

Technical Assistance

24-hour Technical Assistance

For technical assistance, call the following numbers at anytime.

Call From	Call To	Telephone	Fax				
North America (toll free)	U. S. A.	1-(800)-255-1479	(800)-349-5444				
Any Location (International)	U. S. A.	(708)-349-3300	(708)-349-5410				

Customer Service Center

The Andrew Customer Service Center gives you direct access to the information and personnel service you need, such as the following:

- Place or change orders
- Check price and delivery information
- Request technical literature

You can call from any of the following:

Call From	Telephone	Fax
North America	1-800-255-1479 (toll free)	1-(800)-349-5444 (toll free)
United Kingdom	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Australia	0011-800-0-255-1479 (toll free)	0011-800-0-349-5444 (toll free)
China	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
New Zealand	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Hong Kong	001-800-0-255-1479 (toll free)	001-800-0-349-5444 (toll free)



How to Use This Manual

Overview

The scope of this manual is intended to provide station personnel with the base installation, operation, and maintenance requirements necessary for a 7.6-Meter C-, X- or Ku-Band Earth Station Antenna. This manual provides a convenient reference for authorized operator/service personnel requiring technical information on general system or specific subsystem equipment.

The tables and figures presented in this manual are used as communication aids for the installation, operation, and maintenance of the 7.6-Meter Earth Station Antenna. These tables and figures instantly convey messages, as well as make the procedures easier to understand. This manual uses tables and figures for the following references:

- Tables The tables allow you to locate information quickly and easily.
- Drawings
 The drawings supplement the installation instructions by using a combination of graphics and verbage to assist you in simplifying complex procedures and clarifying components.
- Photographs The photographs compliment the installation instructions by providing actual examples of the steps being performed, which allow you to view the installation in concrete form.

Content

The manual is divided into five distinct sections, each dealing with a specific technical topic relating to either system or component subsystem information. The sections contained in this manual are described and listed under the following technical headings:

- How to Use Describes the manual's purpose, content, and communication aids.
 This Manual Additionally, this section lists the related documentation for the 7.6-Meter Earth Station Antenna.
- Getting
 Started
 Provides the preliminary information needed to perform a successful installation. This section should be reviewed prior to the installation. The warnings, recommended tools, parts verification, instructions on reporting lost or damaged equipment, and installation checklist are located in this section.
- Installation Provides the procedures for the different phases of a 7.6-Meter Earth

 Procedures Station Antenna base installation. This section will help you easily find requirements for an individual task, as well as displays the sequence for each task execution.
- Operation Describes the controls, functions, and general operating procedures required for proper operation of the 7.6-Meter Andrew Earth Station Antenna.
- Preventive Describes preventive maintenance procedures that are required to
 Maintenance maintain proper functional operation of your new Andrew Earth Station Antenna.



Getting Started

Overview

The installation, operation, and maintenance of the 7.6-Meter Earth Station Antenna requires qualified and experienced personnel. Andrew installation, operation, and maintenance instructions are illustrated for such personnel. Additionally, the antenna should be inspected by qualified personnel to verify proper installation, maintenance, and condition of equipment as described in Preventive Maintenance. The basic equipment and accessories are either manufactured or design controlled by Andrew Corporation.

The prerequisite information necessary for the 7.6-Meter Earth Station Antenna can be found in this section. Furthermore, this section should be reviewed BEFORE performing the installation, operation, or maintenance. Warnings, recommended tools, and the antenna parts can be verified and/or determined with such a review.

Warnings

When installing the 7.6-Meter Earth Station Antenna, be conscious of the warnings presented below. For further information or clarification of this information, contact the Customer Service Center. The warnings are as follows:

- 1. Electrical shock from voltages used in this antenna system may cause personal injury or death. Prior to making any electrical connections or performing maintenance or repair, ensure that the power is removed. Electrical connections should be made only by qualified personnel in accordance with local regulations.
- 2. Installation of antennas may require persons to work at elevated work stations. Whenever persons are working at eight or more feet above the ground and not on a guarded platform, they should wear safety belts with at least one (preferably two) lanyards.
- 3. Never stand underneath any object while it is being lifted.
- 4. Always wear a hard hat, especially if someone is above you.
- 5. Make sure no person is in or under the reflector while it is being lifted or positioned; personal injury can result if the reflector assembly falls.
- 6. Personnel should never be hoisted in or out of the reflector by the crane; personal injury may result.
- 7. Andrew earth station antennas supplied to standard product specifications will survive 125 mph winds in any operational position in moderate coastal/industrial areas. Severe conditions require additional protection. Should it be expected that winds will exceed 125 mph, it is recommended that Andrew antennas be steered to specific azimuth and elevation orientations to minimize wind forces upon the structure and thereby increase the probability of survival.
- 8. It is recommended that all cross-axis waveguide and coaxial cables are secure such that high winds will not cause excessive flexing. Position the antenna to an elevation of 90 degrees. The azimuth jackscrew should be placed in the center of its travel.
- 9. When the antenna is transmitting, severe eye injury or injury to other parts of the body can result from exposure to radio frequency (RF) energy. The antenna must be turned off before entering the area in front of the reflector and near the feed.



NOTE: Failure to follow an installation procedure could result in damage to equipment or personal injury.

Additional warnings will be displayed throughout this manual for your awareness. These warnings can be identified in warning boxes as shown in the following sample.



Andrew disclaims any liability or responsibility for the results of improper or unsafe installation, operation, or maintenance practices.

Recommended Tools

Andrew supplies all appropriate hardware/parts required for the installation of your 7.6-Meter Earth Station Antenna. All tools necessary for the installation process should be provided by the installation crew. Andrew recommends the following tools to be used for a proper installation of the 7.6-Meter Earth Station Antenna.

Tool	Size	Quantity
Open End or Combination Wrenches	5/16 Inch	2
	7/16 Inch	2
	9/16 Inch	2
	7/8 Inch	2
	3/4 Inch	2
	1/2 Inch	2
	1-1/4 Inch	1
Crane	15 Ton Minimum Capacity, extended end	1
Nylon Web Slings (2000 pound breaking strength		2
Rope or Cord (2000 pound breaking strength)	50 Foot	1
Shackles	5/8 Inch	2
Ladder	10 Foot Extension	1
Drive Sockets	1/16 Inch	1
	9/16 Inch	1
	7/8 Inch	1
	3/4 Inch	1
	1-1/4 Inch	1
Breaker Bar	1/2 Inch	1
Spud Wrenches	1-1/16 Inch	1
•	1-1/4 Inch	1
Screw Driver	Standard	1
	Phillips	1
Allen Wrench	7/64 Inch	1
	3/16 Inch	1
	1/4 Inch	1
Tape Measure (or other measuring device)	Standard	1
Felt-tip Marker (or other marking device)	Standard	1
Hammer	Standard	1
Rubber Mallet	Standard	1
Pry Bar	Standard	1
Tin Snips	Standard	1
Safety Gloves (each installer)	Standard	1

Table 2-1. Recommended Tools



Parts Verification

Upon receipt of your order, the shipment should be verified to ensure that all parts have reached your site. This process should occur before the installation process begins.

Andrew Corporation thoroughly inspects and carefully packs all equipment before shipment. If you find that there are missing components, please refer to page 9 for step-by-step instructions on how to properly report the equipment loss.

When you have received your order, verify that all parts contained in the shipment correspond to the parts listed on your packing list.

Reporting Equipment Loss or Damage Reporting Visible

Loss or Damage

If you find that there was damage caused to the equipment during the shipping process, a claim should be filed with the carrier. Follow the "Reporting Visible Loss or Damage" or "Reporting Concealed Damage" procedures when filing a claim with the carrier.


Make a note of any loss or evidence of external damage on the freight bill or receipt, and have it signed by the carrier's agent. Failure to adequately describe such external evidence of loss or damage may result in the carrier refusing to honor a damage claim. The form required to file such a claim will be supplied by the carrier.

Reporting Concealed Damage

Concealed damage means damage which does not become apparent until the unit has been unpacked. The contents may be damaged in transit due to rough handling, even though the carton may not show external damage. If you discover damage after unpacking the unit, make a written request for an inspection by the carrier's agent, then file a claim with the carrier since such damage is most likely the carrier's responsibility.

Inventory Equipment Received

After opening your shipment, an inventory of the parts should occur immediately. Check each item received in your shipment against the packing slip included with the shipment. If any items are missing, please notify Andrew Corporation immediately by contacting the Customer Service Center.

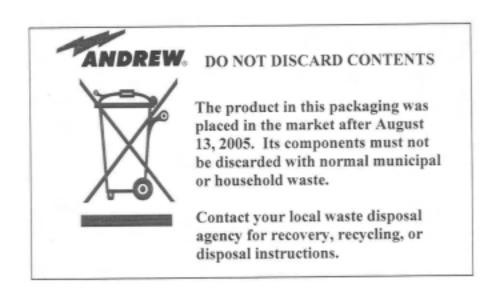



Returning Equipment

Andrew Corporation tries to ensure that all items arrive safe and in working order. Occasionally, despite these efforts, equipment is received which is not in working condition. When this occurs, and it is necessary to return the equipment to Andrew Corporation for either repair or replacement, return can be expedited by following the procedure listed below:

- Step 1
- Call the Andrew Customer Service Center and request a Return Material Authorization (RMA) number, as well as an address to forward the material to.
- Step 2
- Tag or identify the defective equipment, noting the defect or circumstances. Also, be sure to write the RMA number on the tag. It would be helpful to reference the sales order and purchase order, as well as the date the equipment was received.
- Step 3
- Pack the equipment in its original container with protective packing material. If the original container and packing material are no longer available; pack the equipment in a sturdy corrugated box, and cushion it with appropriate packing material.
- Step 4

Be sure to include the following information when returning the equipment:

- Your Company Name
- Your Company Address
- City, State, and Zip Code
- Telephone Number
- RMA Number
- Problem Description
- Contact Name

NOTE: Absence of the RMA number will cause a delay in processing your equipment for repair. Be sure to include the RMA number on all correspondence.

Step 5

Ship the equipment to Andrew Corporation using UPS, U.S. Postal Service, or other appropriate carrier; freight prepaid and insured. The material should be forwarded to the address given by the Andrew contact in Step 1.



Installation Procedures

Overview

This section provides installation procedures for the 7.6-Meter Andrew Earth Station Antenna. The installation procedures include instructions on the following antenna components:

Mount

• Reflector-to-Mount Assembly

Reflector

Subreflector

Enclosure

• Feed System (C-, X- and Ku-band)

Foundation Preparation

Before beginning the installation process on the ground mount assembly, ensure that the foundation has been prepared. Foundation specifications are provided by Andrew and may be used as a reference by civil engineering personnel when preparing the foundation for local soil conditions. These specifications are available before the shipment arrives by contacting the Customer Service Center or your Account Manager.

- Foundation should be dimensioned as detailed in Figure 1.
- Sweep foundation clear of any dirt or debris.
- To ensure smooth surface for mount, scrape foundation pads as shown in Figure 2.
- Studs should extend 3 in. above the ground and are 7/8 in. in diameter
- Apply stick wax to stud threads to ease later connections.

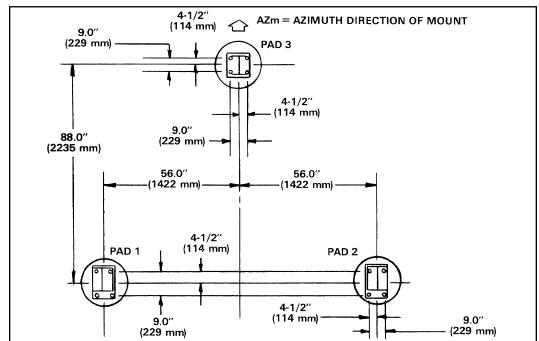


Figure 1



Figure 2



A-325 Tensioning

During the installation process, there are several references to the A-325 hardware tensioning procedure. The A-325 hardware must be properly tensioned to avoid slippage between bolted surfaces under high loads. Slippage can cause the corresponding assembly to move, causing antenna misalignment. When designated, the A-325 hardware should be tightened according to the following tensioning procedure.

NOTE: Tensioned bolts are for final connections only and should not be loosened for

- **Step 1** Lubricate the bolt threads with the provided stick wax to reduce friction.
- **Step 2** Insert the bolt, and add a flat washer—if required. **Do not** allow wax under the flat washer.
- **Step 3** Add the nut, and finger tighten.

reuse.

After the connections are complete, tighten the bolts until the surfaces are joined and the nuts are snug (for example, full effort of a person using an ordinary spud wrench). Do not proceed with Steps 5 and 6, unless the connection is final and is not intended to be loosened again.

Note: If the bolts are loosened after Steps 5 and 6, discard and replace with new hardware.

- **Step 5** Using a felt-tip marker, mark the nuts and the ends of the bolts with a straight line as shown in Figure 3-1a and Figure 3-1b.
- Step 6 Tighten the nuts further with an extra long wrench until the nuts are moved 1/3 turn (120 degrees) as shown in Figure 3-1a for bolt lengths less than four diameters and 1/2 turn (180 degrees) as shown in Figure 3-1b for bolt lengths over four diameters.

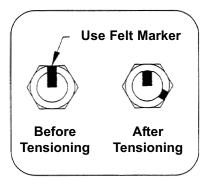


Figure 3-1a: A-325 Tensioning Procedure For bolts less than 4 diameters

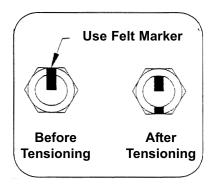


Figure 3-1b: A-325 Tensioning For bolts over four diameters



Tripod Ground Mount Assembly

The three-point mount is an elevation-over-azimuth mount optimized for geostationary satellite applications. The mount enables continuous elevation adjustment from 0 to 90°. Azimuth adjustment is ±90° and divided into three 120° ranges with 30° overlap. Follow the subsequent procedures for proper installation of tripod ground mount assembly.

Azimuth Beam Assembly

Step 1

All ground mount hardware is type A-325. Lubricate all A325 bolt threads with supplied stick wax. **Note:** Do not tighten hardware until ground mount installation is complete unless otherwise instructed.

Step 2

Attach 200056 and 200057 supports to upper portion of 201408 beam assembly as shown in Figure 3.

• Use 7/8 x 2-1/4 in (57 mm) hardware

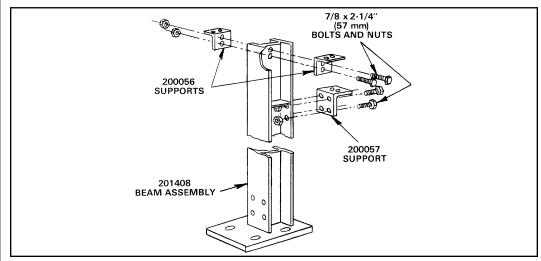


Figure 3

Step 3

Raise 201408 azimuth beam assembly and attach to front foundation pad as shown in Figure 4.

• Use 7/8 in, flatwashers and hex nuts

Note: Hex nuts and flatwashers supplied with 201630 anchor bolt kit

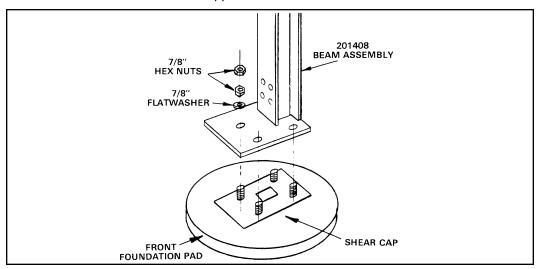


Figure 4



Support Legs Assembly

Step 1

Attach 201327A joint assembly to 201313A beam assembly as shown in Figure 5. Attach 200083 angles to 201313A beam assembly as shown in Figure 5.

• Use 7/8 x 2-1/4 in (57 mm) bolts and nuts for each connection

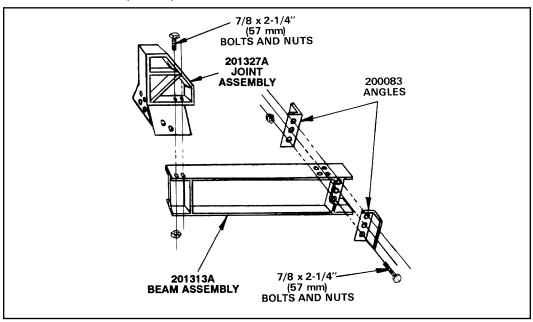


Figure 5

Step 2

Attach 200088A joint assembly to 201313A beam assembly as shown in Figure 6.

• Use 7/8 x 2-1/4 in (57 mm) bolts and nuts

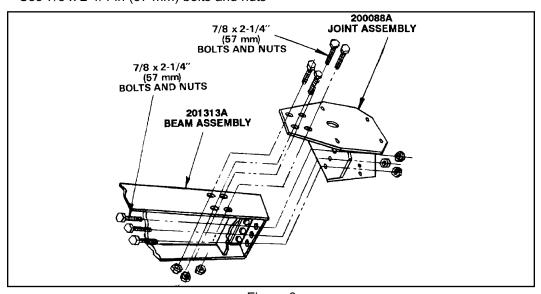


Figure 6



Raise 201313A beam assembly to upright position and attach 201315 supports to 201327A joint assembly as shown in Figure 7.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts.
- Insert bolts from 201327A joint assembly to supports.
- Supports should be installed back-to-back with the flat of angle facing upwards.
- Tighten supports until assembly can support itself.



Figure 7

Step 4

Attach 201301/201302 rear pad assembly to 201315 supports as shown in Figure 8.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts
- Insert bolt from inside of rear pad assembly to outside of support
- Supports should be installed back-to-back with the edges forward and the flats of angles facing rear



Figure 8



Attach 201314 supports to 201301/201302 rear pad assemblies and 200884 joint assembly as shown in Figure 9.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts
- Insert bolt from inside of joint assembly to outside of support
- Supports should be installed back-to-back with the edges forward and the flats of angles facing rear



Figure 9

Step 6

Attach 201317 supports between angle pairs as shown in Figure 10. Select corresponding mounting holes so that 201317 supports are parallel to 201313A beam assembly.

- Use 7/8 x 2-1/4 in. (57 mm) hardware
- Supports attached with edges inward and flats facing up.

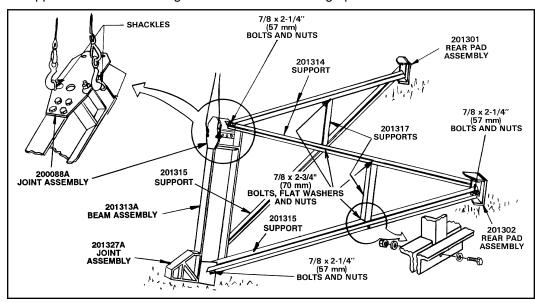


Figure 10



Panning Frame Assembly

Step 1

Attach 201487 panning frame to 221384 azimuth pivot assembly as shown in Figures 11 and 12.

- Use 7/8 x 2-1/4 in. (57 mm) hardware
- Bolts should connect from panning frame to pivot assembly



Figure 11

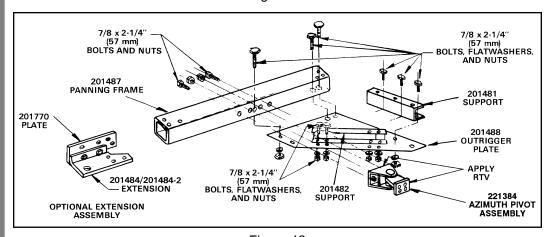


Figure 12



Step 2 Attach 221608 joint assemblies to panning frame as shown in Figures 13 and 14.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from panning frame to joint assembly



Figure 13

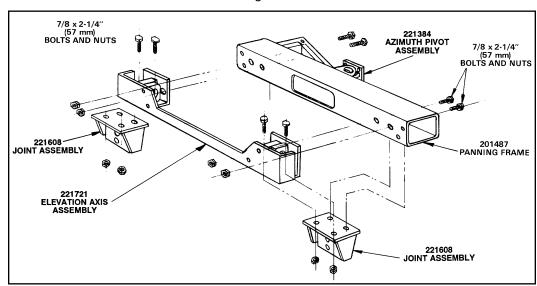


Figure 14



Attach 201316 support pairs to 221608 joint assemblies as shown in Figure 15.

- Place supports back-to-back with edges out and flat of angle inward
- Install 45967 spacer at midpoints of support pairs
- Use 7/8 x 2-1/4 in (57 mm) hardware for each connection



Figure 15

Step 4

Attach 221345 azimuth pivot assembly to 201316 support pairs. Attach 201596 mounting plates to 201458 azimuth pivot assembly tab as shown in Figure 16.

- Use 7/8 x 2-1/4 in (57 mm) hardware for each connection
- Insert bolts from rear of pivot assembly to connect supports



Figure 16



Attach 201770 plate connecting 201484/201484-2 extension assembly to 201487 panning frame as pictured in Figure 17.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from inside panning frame assembly

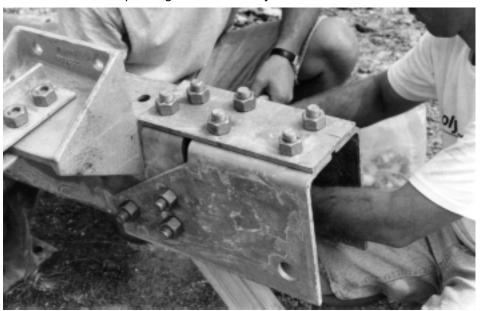


Figure 17

Step 6

Attach 201488 outrigger plate to opposite end of 201487 panning assembly. Attach 201481/201482 supports to outrigger plate as shown in Figure 18.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from supports to the outrigger plate



Figure 18



Attach second 201488 outrigger plate to 201487 panning frame assembly as shown in Figure 19.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from inside assembly to outrigger plate



Figure 19

Step 8

Attach 221721 elevation axis assembly to 201487 panning frame assembly and 221608 joint assemblies as shown in Figures 20 and 21.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from elevation axis assembly to panning frame assembly and joint assembly



Figure 20



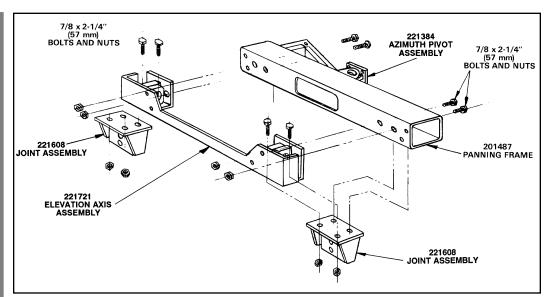


Figure 21

Attach 301741/301742 tripod joint bracket to 221721 elevation axis assembly as shown in Figure 22.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher under bolt and under nut, and nut
- Insert bolts from elevation axis assembly to tripod joint bracket



Figure 22



Attach 300026 tripod channel legs to 301741/301742 tripod joint bracket as shown in Figure 23.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher and nut
- Insert bolts from channel leg to joint bracket



Figure 23

Step 11

Attach 301725 tripod tube weldment to 300026 tripod channel legs as shown in Figure 24.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher and nut
- Insert bolt from channel leg to tube weldment



Figure 24



Elevation Jackscrew Assembly Step 1

Attach 301771/301736 elevation jackscrew assembly to 201596 mounting plates as shown in Figure 25. Tighten connection.

• Use 7/8 x 2-1/2 bolts and nuts



Figure 25

Step 2

Loosen rubber boot from end of jackscrew. Turn elevation drive screw to extend jack to dimension 67.7 in (1719 mm) as shown in Figure 26. Apply grease to screw shaft. Reattach rubber boot.



Figure 26



Step 3 Prop 301771/301736 elevation jackscrew up to align with 301725 tripod tube weldment as shown in Figure 27.



Figure 27

Step 4

Attach 301771/301736 elevation jackscrew to 301725 tripod tube weldment as shown in Figure 28.

• Use 7/8 x 5-1/4 (133 mm) bolt. Fasten with heavy hex nut and flatwasher according to A-325 procedure with the exception of tightening the nut 1/2 turn from snug condition. Tighten jam nut in accordance with A-325 procedure. Apply supplied Loctite to threads to act as locking nut.



Figure 28



Azimuth Jackscrew Assembly

Step 1

Insert 221923/223180 azimuth jackscrew tube into 221738 azimuth pivot assembly as shown in Figure 29. Insert jack carefully to prevent scratching jackscrew tube. **Note:** Ensure jackscrew assembly remains fully retracted at this time.

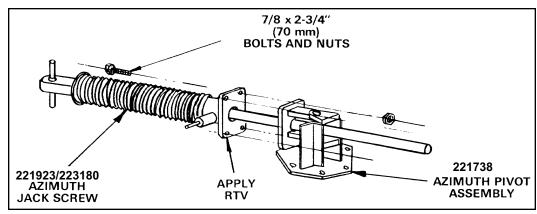


Figure 29

Step 2

Apply RTV to flange surface as shown in Figure 29. Fasten jack to pivot using $7/8 \times 2-3/4$ in (70 mm) bolts and nuts. Mounting hardware is included with corresponding jack assembly hardware kit.

Mount Assembly

Step 1

Attach shackles to beam assembly as shown in Figure 30.



Figure 30

Step 2 Lift supp

Lift support legs to azimuth beam assembly.



Step 3 Attach rear pad assemblies to rear foundation pads as pictured in Figure 31.

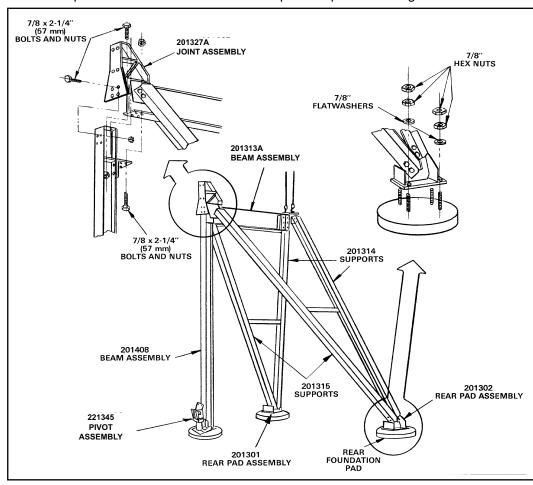


Figure 31

Step 4 Connect beam assembly using 7/8 x 2-1/4 in (57 mm) hardware. Tighten supports to beam assembly per A-325 tensioning procedure.



Hoist elevation jackscrew assembly to mount. Attach 221384 azimuth pivot assembly to 221608 joint assembly with $7/8 \times 2-1/4$ hardware from pivot assembly to joint assembly as shown in Figure 32.

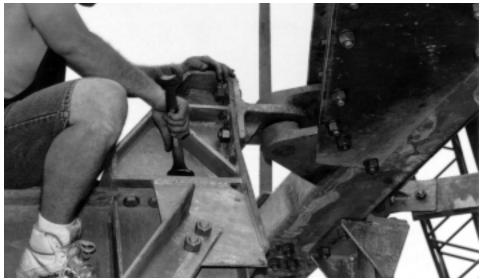


Figure 32

Step 6

Attach 221435 azimuth pivot assembly to 201408 beam assembly with a line of RTV around the plate and four $7/8 \times 2-1/4$ in (57 mm) holts inserted from pivot assembly to beam assembly as shown in Figure 33.

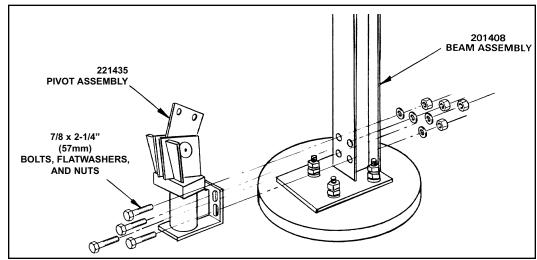


Figure 33



Note: If optional motor drive system is included, install motors at this point. Refer to installation instructions provided with motor kits.

Step 7

Refer to Figure 34. Position hoisting ropes on azimuth motor jack assembly so jack will not roll when hoisted. Attach one rope to motor frame next to gearbox to balance assembly. Tie up loose conduit before lifting jack.



Figure 34

Step 8

Refer to Figure 34. Position hoisting ropes on motor/jack assembly so jack will not roll when hoisted. Attach one rope to large motor frame next to gearbox to balance assembly; do not attach rope to small motor. Tie up loose conduit before lifting jack.

Step 9

Raise 221923/223180 azimuth jackscrew and attach 221738 pivot assembly to 201327A joint assembly with 1 x 2-1/2 in (63 mm) hardware. **Note:** Mounting position of azimuth pivot jackscrew assembly is dependent upon azimuth range requirements and corresponds with mounting position of 201488 outrigger plate or extension assembly.



Extend jackscrew to meet outrigger assembly. Loosely re-attach outrigger plate to pin assembly in azimuth jackscrew as shown in Figure 35. **Note:** Realignment of panning frame/pivot assembly may be necessary to ensure proper alignment of azimuth jackscrew pin. Snug panning frame/pivot assembly hardware and fully extend azimuth jackscrew to ensure binding does not occur throughout entire azimuth pivot range.

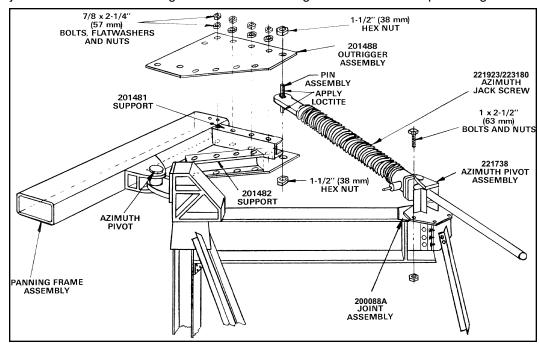


Figure 35

Step 11

Loosen both setscrews in upper and lower collars of pin assembly at end of azimuth jack. **Do not retighten these collars**. Apply supplied Loctite to pin threads and nuts. Attach 1-1/2 in (38 mm) hex nuts to top and bottom of azimuth jackscrew pin assembly and securely tighten mounting hardware using 6 foot (1.8 m) lever arm. Reattach rubber boot. Tighten an outrigger plate hardware.


The tripod ground mount assembly is now completed with the necessary operational essentials. All ground mount options have separate instructional bulletins located in the parts kit that contain the option.

The next step in the installation process is the reflector assembly. Proceed to the next page to begin installation of the reflector.




	O O	STACE	1	DMENT	CCRT CC (SST)	ଜାରାନ	S S S	★	325	S S S S S S S S S S S S S S S S S S S				CE SEE	CES CES	CISSTO GRAD GRAD GRAD		★]
1	25F EB92			RIGHT MAPON JUNI WELLPRIN TRIPOD CHANNEL LEG SHORT STRUT LONG STRUT		ALLEN WRENCH(0.25) ALLEN WRENCH(0.312)		DACKING PLATE LIFTING TAB 0.75 FLATWASHER(A325)	0.625 FLATWASHERCA325) 070-1005, ED 15 BET 1, NJ 4831		0.25-200NL HEX NOT USE IN 0.25-200NC 125 LG HICKOST 0.50 LDCKWASHER(SST 0.50 LDCKWASHER(SST 0.50 LDCKWASHER(SST 0.50 LDCKWASHER(SST 0.50 LDCKWASHER(SST 0.50 LDCKWASHER)			ПП	U.SUXUSU LIB SHUDULEK BILLIK O.SILZ LDCKWASHER(S O.SILZ FLATWASHER(S	0.312-18UNC HEX NUT(SST) 0.32-19JIC ROAD IEAD STRY, 151 LBXXT	Ш.	ANDREW ECHPORATION 2701 Mayell Read Denter, Texas U.S.A.	7.6 METRE REFLECTOR/BACK STRUCTURE INSTALLATION INSTRUCTIONS	239501	
239501 #1	REVISIONS RESSERVED RESSERVED REVISION REV	3 FET 5 3 FET 10 T 46 5 1 T 5 T 5 T 5 T 5 T 5 T 5 T 5 T 5 T 5	300027 222618	301/41 301772 300026 220915 300020	222673 222677 222617 220911 209565 200852 9963-165	9903-15 222618 9903-11 222618	9997-236	209957 206278 9997-202	9997-227 15980-28	45980-18 45980-7 9997-131	9999-57 222618 9963-76 222618 9974-64 222618	9963-129 222618 9997-65 222618	EA 9997-145 222618 EA 9974-63 222618	9999-60 222618 9858-18 222618	9858-19 9974-17 9997-56	9999-59 222618 9959-11 222618	209765-1		1350/30 7.6 METRE STRUCTU	D 84147	2 mas 6(2)9 mm Ai
244 644	NF ZONE REV SHE SHE SHE SHE SHE SHE SHE		1 -	1 41 EA 16 EA 16 EA 16 EA 16 EA 16 EA 16 EA 39 EA 38 EA 38 EA	37 33 33 31 31 32 32 33	4 4 29 EA	25 27	3 4 4 8 2 8 EA EA EA	CU #4	3 5 6 6	18 16 EA 69 15 EA	티웨일	158 11 EA	0 00	17 7 EA 1267 6 EA 140 5 EA	20 0 4 EA EA	\neg	$\perp \perp \perp$	APPO DATA		
3		TT NARKER									LEFT TRIPOD JOINT VELDMENT	WASHER - FLAT	FULLY THREADED ROD LOAD PLATE	OKES-TUNIX 250 LG ROLT & NUT ASSY OKES-TUNIX 1,75 LG ROLT & NUT ASSY	STRIP SPACER 0875-9UNC HEAVY HEX JPM NUT 0.875 FLATVASHER(A325)	OBTODINCACTIC BOLT INTO ASSY OKES-TONIX 300 LG BOLT INTO ASSY CAST REVIEW WASHER	CLIPPED WASHER	MATERIAL	PND	.	n
		CUSE FELT MARKER COST FILE TO MARKER FILE TO THE MARKER FILE THE FELT MARKER FILE THE FILE THE MARKER FILE THE FILE	FIG. N FIFR TEASTORING								- 1	222618 222618		222618 222618			PART OF	UNITED CITETATES SPECIFED DIMENBIONS ARE IN INCHES	1 PLACE DECINALS ± .03 2 PLACE DECINALS ± .03 3 PLACE DECINALS ± .01 AMOLE ± 0.05	ALL BESARDS CRALTEL ATTUTO STORE SEED SMELKS TO 239352	
4		TENSIDENG PROCEDURES 4-325 HARDWARE K VAX OTEN 22) TO REDUCE TLAY WORSEN THORITON BOLT'S WITH SMOIL, PALLY EFFORT OF THE NATIONAL PROCED WITH SITES 3 & 4 MALE TO STON SMOLL DESCRIPTION SMOLL DESCRIPTION SMOLL DESCRIPTION	TIGURE L. ER WRENCH UNTIL NUTS AND INCLUDINS I LENGTHS DVER								1 58 EA 3	1 2 2	53 EA EA EA	52 EA 51 EA	16 50 EA 3 1 49 EA 99 1 48 EA 99	1 47 EA 45 5 46 EA 45	4 ja			222618 NEXT ASSY USED ON ABBUILDING	4
→		NSIDMINS PROCEDURE AAX CITEM 320 TO 6 AAT VASHER, GATEN BOLTS WITH, NUG, IR, FULL EFFOR DO NOT PROCED W L. JF BOLTS ARE L VITH NEV HARDWAR	RAIGHT LINE, SEE F 46 WRENCH OR POW LT LENSTHS UP TO 380°±30°> FOR BOLT																	#	•
ភ		TENSIDING PROJECTIONS AND THE ALL THE	3. MRR. NUTS AND DOIL OF EXLITS WITH STRAIGHT LINE, SEE FROME L. 4. REL BUCKLO. 10 HORACOSTON. TRE, AUTO, EXCHANGE FOR POLICY WITH ANITS 4. REL BUCKLO. 10 HORACOSTON. TRE, AUT. LENSING, DE D. AND PRILLING 4. MANTERS, SEE FROME. N. L'E TURN GOP-SRY FOR BUIL LENSING DATE. 4. MANTERS, SEE FROME. N. L'E TURN GOP-SRY FOR BUIL LENSING DATE.																	ARTES COPTANISA, Al advantate cortained hands which is not been my select, to other it is established to troop from the problems; term names to reproduced, oughed or med on the bank for treordisates or nate of space	ı,
		1. LUBRICATE B FRECTION OF S. AFTER CONNIC SURFACES AR PERSON USIN BELLOY UNICS STEPS 3 AND REPEAT ALL	3. MARK NUTS A 4. TIGHTEN NUT: ARE MOVED 1 4. DIAMETERS. 4. DIAMETERS.																	feer on the perpenty of ARTERI CAT is confidented complete my school to dependent/on except to reproduce	ES07401G
ю					ATTE		<u> </u>													MITC. Twee design and specificates on its property of parenty is in the fold of AMEN' and its confincial county to effect the AMEN', twee design and specifications range and state, which parents.	60
		CA. FOLLOW THE DALLOW THE PROPER OWNER TO THE BLE INJURY TO	J.	THE CONTENTS MGE OR ISTALLATION,	AVTENNA EV INSTALLATION SE INSPECTED RIDER INSTALLATION OF IMPRIDER IR	ASTALLATION	2	WRENCH WRENCH RENCH						- I	DIA> DIA>	4RY SUPPORTS		BLOCKS			_
7		NERAL. SEQUENCES TOR PROPER ASSENSIT. TOLLOW SEQUENCES TOR PROPER ASSENSIT. AND OPERATION. THE WARRING TO THE SEQUENTY AND PROSERSE THAT THE PROPERTY AND PROSERSE THAT WAS PROSERVED THAT WAS PROPERTY AND PROSERVED THAT WAS PROPERTY	MULTICE WHITH THAT SHOULD BE READ BETORE PROCEEDING.	PACKING SHOULD REDUCE ALL PARTS PROM SHIPPING EDICE, THE CONTENTS SHOULD CHORESPON VITH THE PARTS LEST: ANY DAMAGE NO SHOULD CHORESPON VITH THE PARTS LEST: ANY DAMAGE NO SHOULD CHORESPON VITH THE PARTS LEST: ANY DAMAGE NO SHOULD CHORESPON VITH THE PARTS NO SHOU	THE INSTALATION, MANIBANEE OF REHOVAL OF AN ANTENNA PROMESS DAMITION CHARLES OF REHOVAL OF AN ANTENNA PROMESS DAMITION CHARLES OF REHOVAL OF AN ANTENNA PROMESS OF AN ANTENNA PROMESS OF AN ANTENNA PROMESS OF AN ANTENNA ANTI-LANTITY WHE REAL WAITHING TO CONTINUE OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF AN CONTINUE OF CONTINUES UNGAFE DATA ANTENNA PROMESS OF THE PROMESS OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF THE PROMESS OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF THE PROMESS OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF THE PROMESS OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF THE PROMESS OF THE PROMESS UNGAFE DATA ANTENNA PROMESS OF THE PROM	TOOLS RECOMMENDED FOR PROPER INSTALLATION	DESCRIPTION ANE	3/16 HEX SOCKET (ALLEN) WRENCH 3/16 HEX SOCKET (ALLEN) WRENCH 1/4 HEX SOCKET (ALLEN) WRENCH		7 L L	1 7/16 SOCKET 1/2 DRIVE RATCHET 1/2 DRIVE EXTENSION 1/2 DRIVE EXTENSION	NATION WRENCH	VATION VRENCH VATION VRENCH DINATION VOENCH	SINATION WRENCH	N CHEKER (3/8' N CHEKER (3/8'	FOLLER HULS // J LUN 2×4×8 FT LUMBER (TEMPORARY SUPPORT) 5/8 SHACKLES 20 FT TAG I TNF	FT CHOKER (1/2" DIA) FT STEP LADDER FT EXTENSION LADDER	ADJUSTABLE WRENCH APORARY WOOD SUPPORT BLOCKS		RES	7
	WINE SPECIFIED) FOR CHIES WHICH THE SPECIFIED	NSTRUCTIONS THERE FUR PREDER ASSEM S WARNING INDICATE CEDURE AT THIS FE ENNA AND UTHER	THIS INDICATES SHOULD BE REA	REMOVE ALL PARTS RECEDONO VITH THE ATLL PREVENT SATIVITION OF THE ANTENN	LATION, MANTENAN MALTINE, ECPREIEN WAYE BEEN WET. BY HAVE BEEN WET. BY HAVE BEEN WET. BY HAVE BEEN WET. TECHNIC AND CONDITION TITY OR RESPONSTRU.	S RECOMMENDED		5/16 HEX 3 3/16 HEX 3 1/4 HEX 5	7.16 SICKE 9.16 SICKE 1.72 SICKET	3/4 SICKE 7/8 SICKE 1 1/16 SICK 1 1/4 SICK	1 7/16 SDC 1/2 DRIVE 1/2 DRIVE	7.16 COMBIN 1/2 COMBIN 9/16 COMBIN	3/4 COMBIN 7/8 COMBIN	1 1/4 COMB	3 FT NYLD	2×4×8 FT 5/8 SHACK	15 FT STEP 15 FT STEP 15 FT STEP 15 FT STEP	8' ADJUSTA TEMPORARY	CTION	SPECIFICATIONS	
8	NOTES: (IAILESS OTHERWISE SPECIFIE): 1. INCOME, LIBITOR AND ADMINISTRATION OF A CHARLES OF THE ACTURE AND A CHARLE	GENERAL READ THE IN SEQUENCES THIS		UNPACKING CAREFULLY SHOUD COR SHORTAGE N AND DECRAT	THE DISTA THE DISTA PERGUENS O DISTALLATE DISTALLATE ATTOM, MAIN ANY LIMBELT UNGAFE DISTA	TOOLS	RUANIII Y	। च च च	ณณณ	លលល់	เผณเกต	ขณณ						+	MFG INSPE	PROCESSES PROCEDURES PROCEDURES AUSA SPECIFICATIONS	E
	Zagi	۵		<u> </u>	v						m							∢		£	⅃




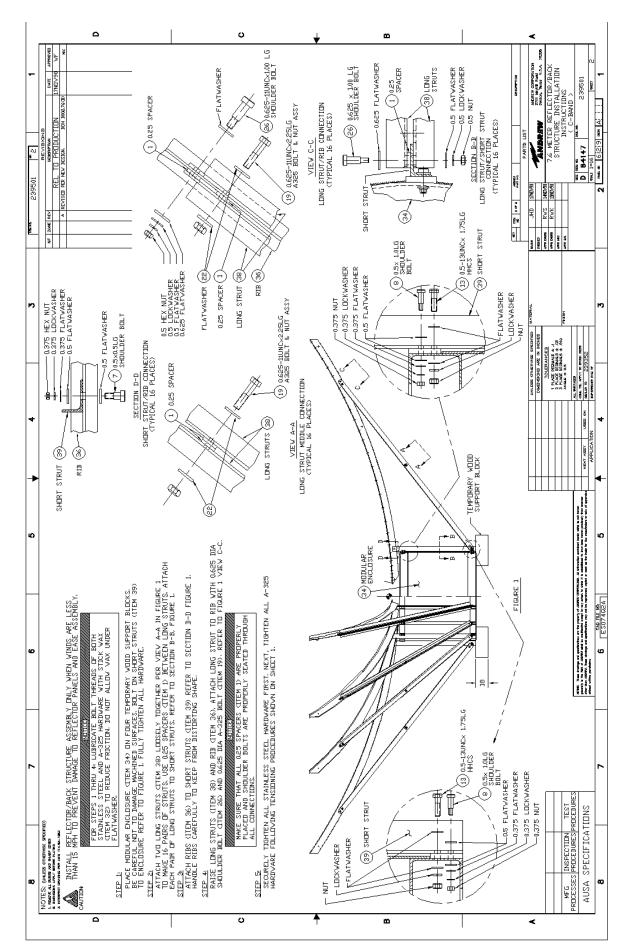




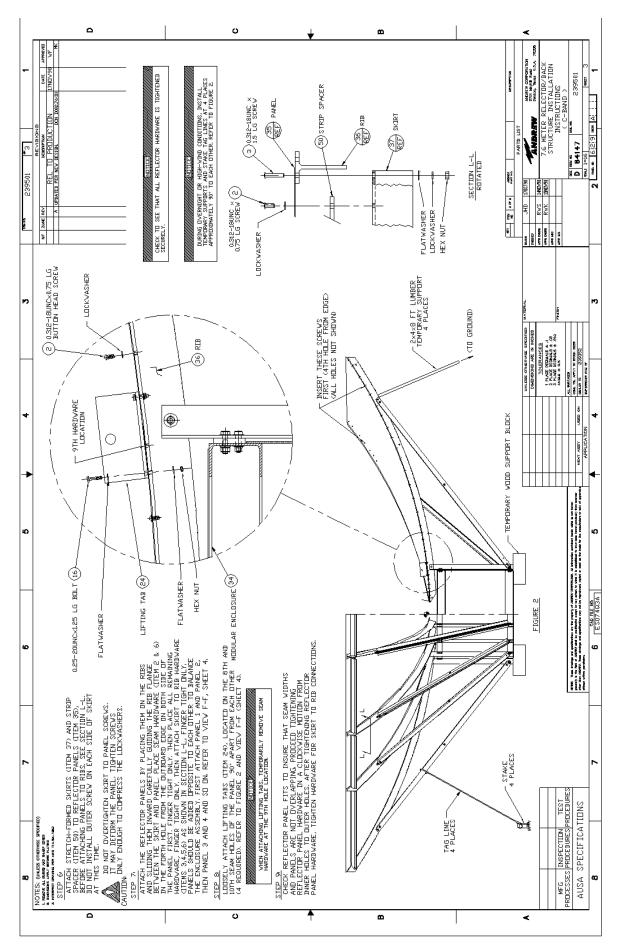




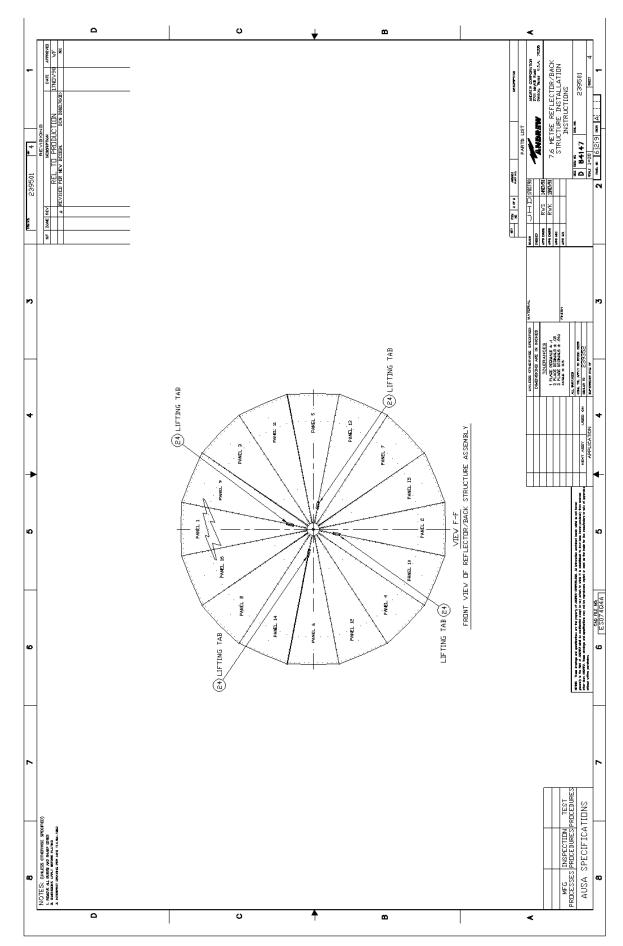




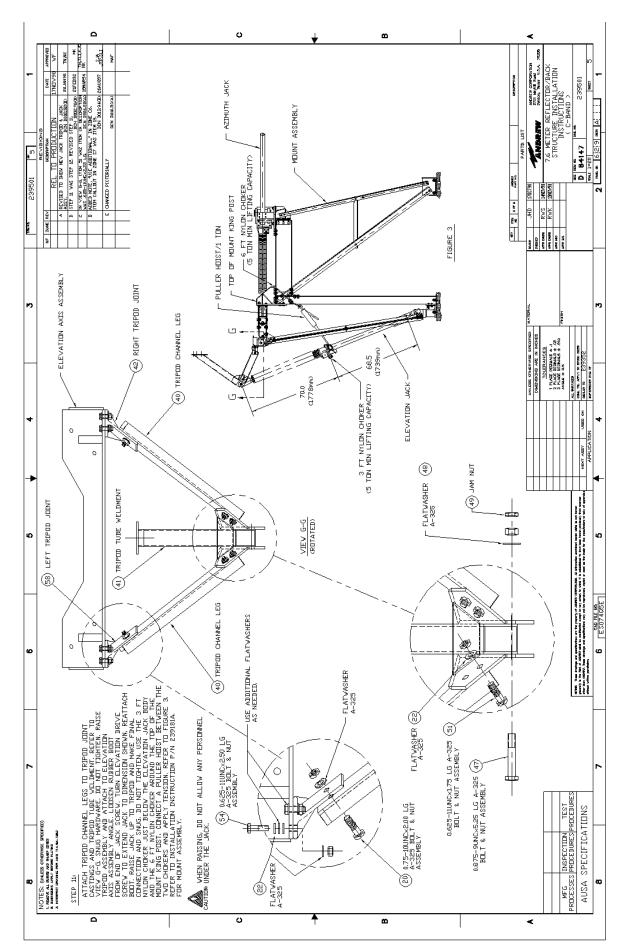




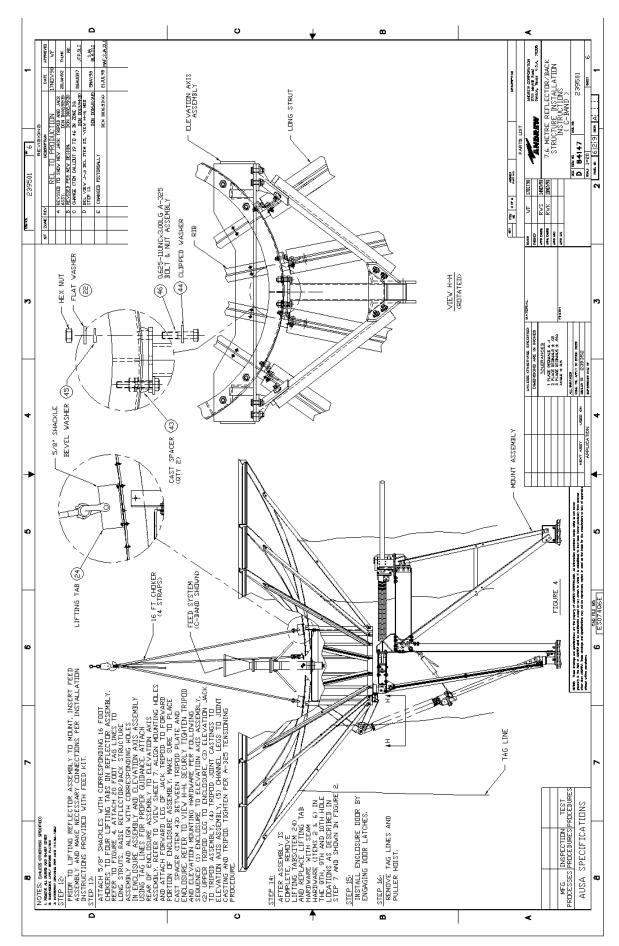




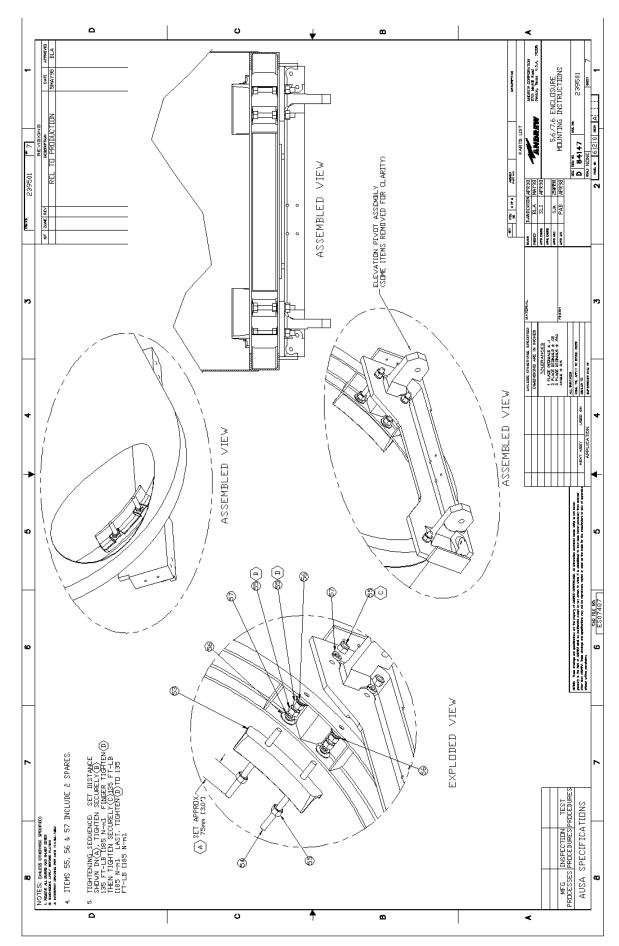




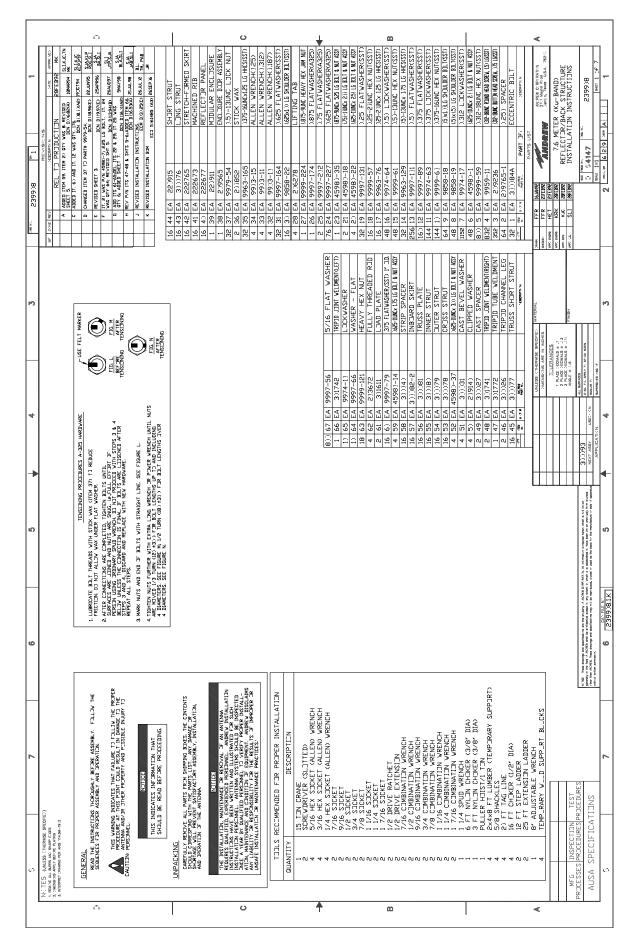




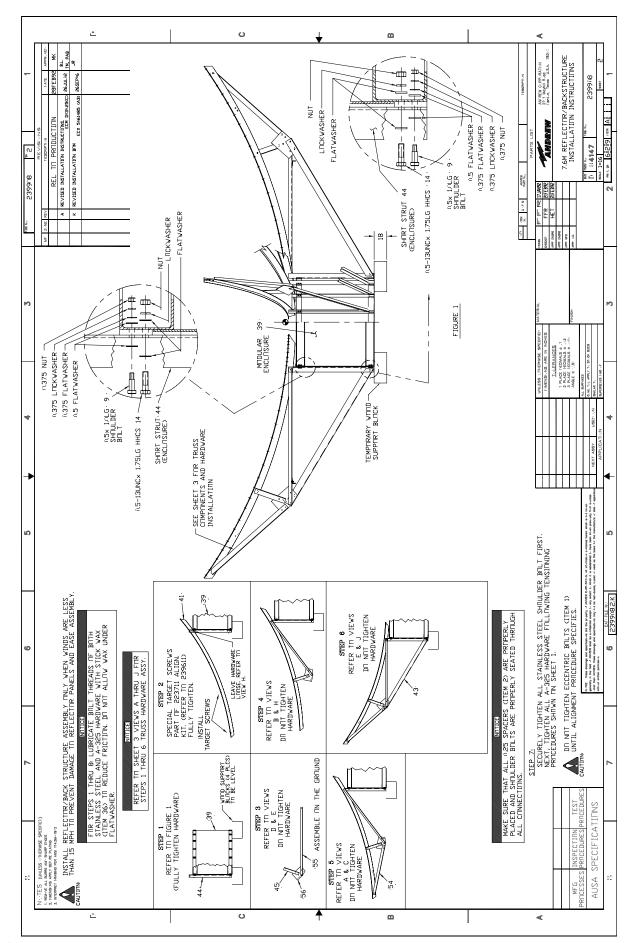




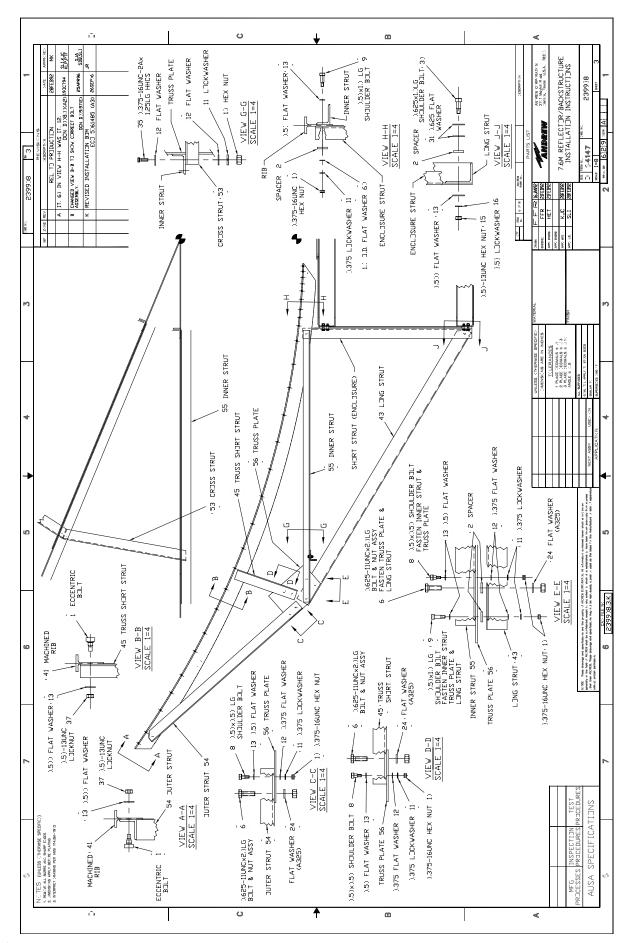




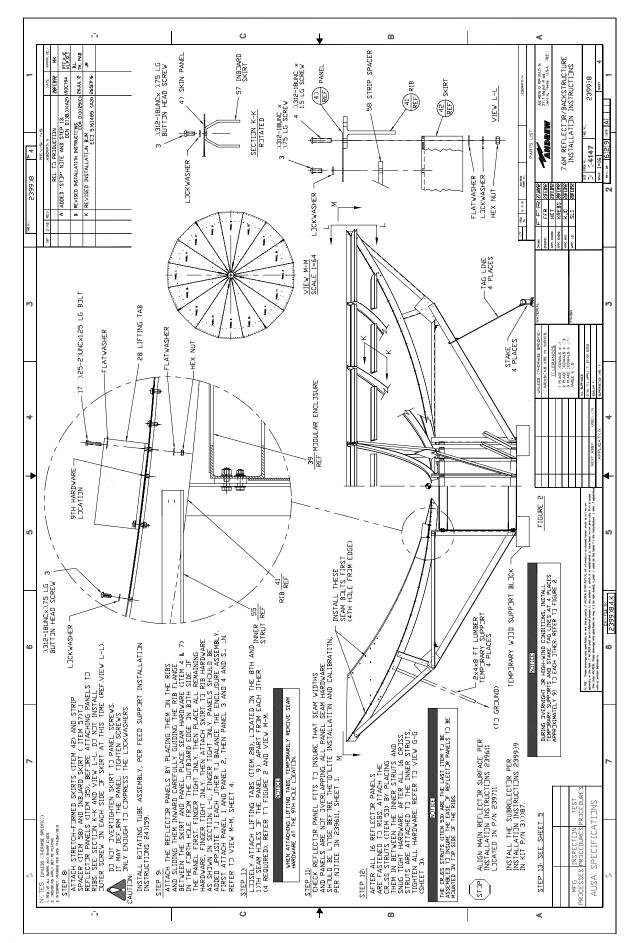




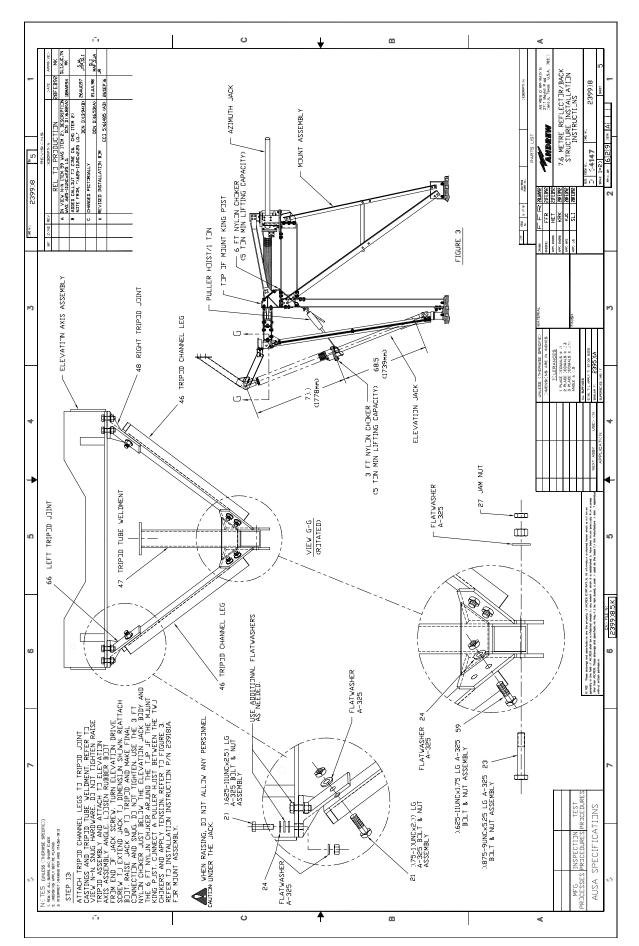




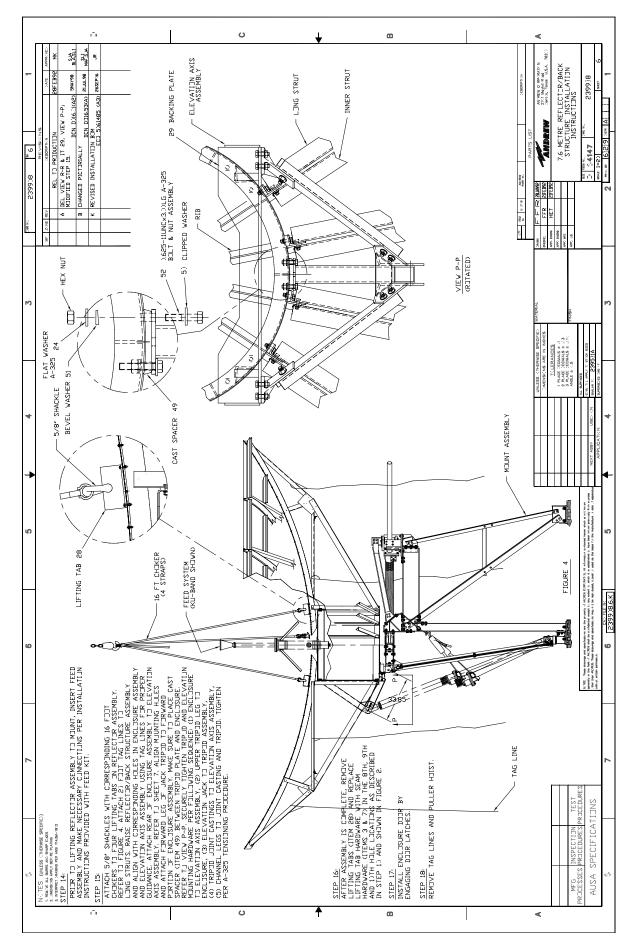



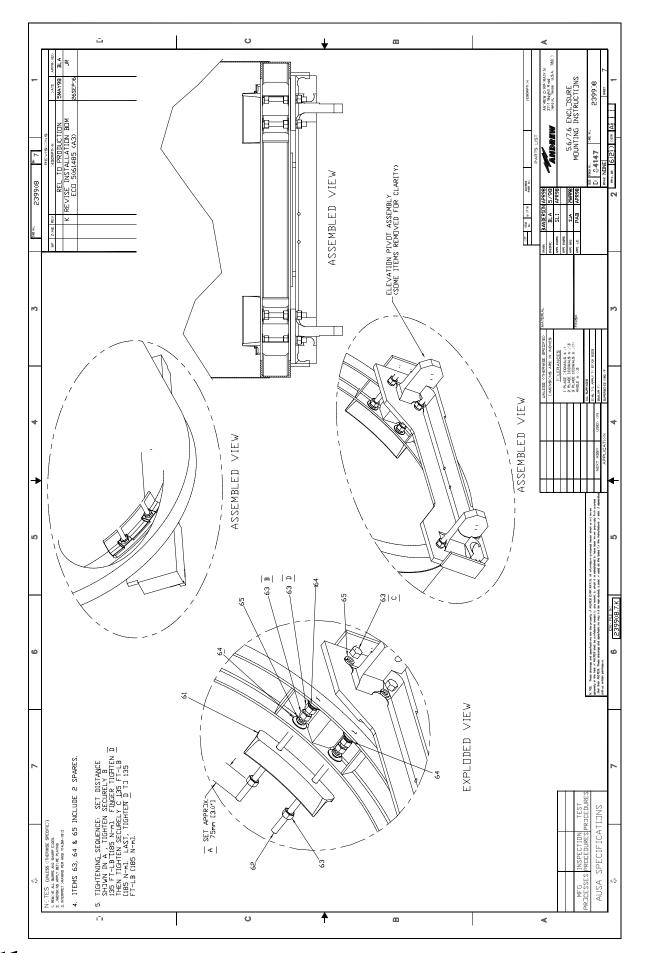



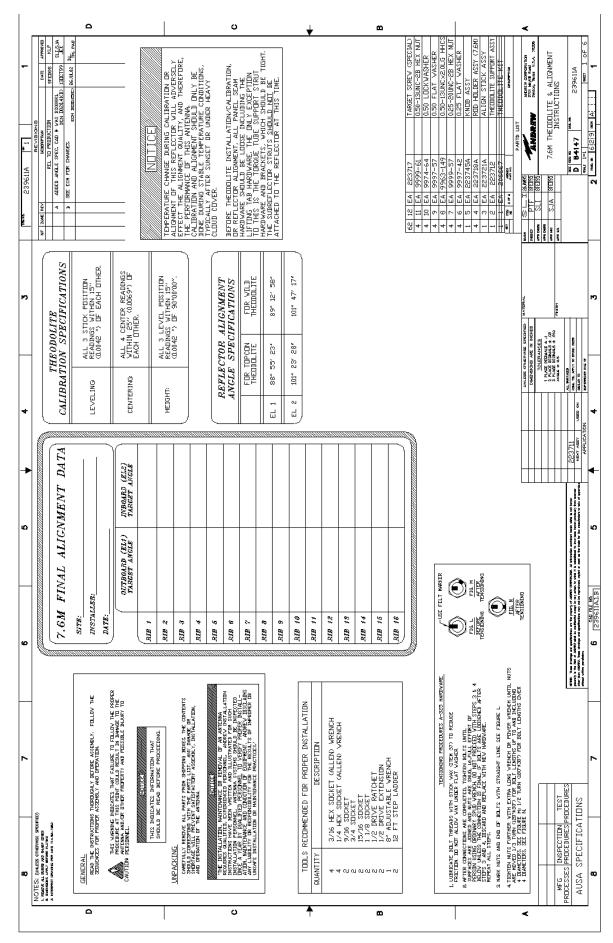




	۵	0	\	m		
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		HEIGHT ADJUSTMENT OF THE THEODILLIE IS OFFICENCE OF THE THEODILLIE IS OFFICENCE OF THE THEODILLIE IS OFFICENCE OF THE THEODILLIE TO THE DESIRED HEIGHT BY ROTATING THE LABGE RIM LOCATED AT THE CENTER OF THE OFFICENCE OF THE CONFIENCE OF THE CONFIENCE OF THE CONFIENCE OF THE CONFIENCE OF THE THEODILLIE MAST BE ADJUSTED ACCOMPLISHED THE THEODILLIE MAST BE ADJUSTED ALIGNMENT STICK. ALIGNMENT STICK. THE ELEVATION ANGLE OF THE THEODILLIE OF THE ELECTROLITY SO DECREES ON MANUES AND ON SCORDING MANUE. THE THEODILLIE IS SETT OF THE ANGLE.			CERD TO	
£ 3	AT THE END OF THE INITIAL LEVELING PROCEDURE ANNLES (A.R. P. A. S. SHOLLO BE WITHAN 1 TO 2 ANULES (A.B. TO A) BIGGRESS OF EACH DITHER, THIS IS ACCEPTABLE AT THIS STAGE DALE, FURTHER FINE ELEVELING, ALL BE DONE DUNES SUCCESSIVE SEQUENCES, SECHENCES, AFFER OF THAL LEVELING SECURICATIONS ON SHEET I FOR FINAL LEVELING REQUIREMENTS. AFTER LEVELING, ADJUST THE CENTERING AS INDICATED BELOW, A.S. GENTERING ENTRYPHYC. A.S. GENTERING ENTRYPHYC. A.HIGHOLITE IS ACCOMPLISHED WITH THE X-Y DUAL AND THE SHALATION STAGE REFERE MITH THE X-Y DUAL AND THE SHALATION STAGE REFERE	AND 2 STETS OF LOUGHUS SERVENS DEPOSED AT 90 DEGREES, DURING INITIAL ADJUSTMENT MAKE SURGENS ARE UNSCREVEN WERE UNSCREVEN THE UDGING SOFRENS ARE UNSCREVENT OF THE LOUGH SOFRENS WILL BE USED TO LOCK THE BEYONE. THE SCREW'S WILL BE USED TO LOCK THE BEYONE THE CENTERING IS COMPLETED BY FOCUSING TO THE BOTTON A DEPOSED THE MELES AND PARK. HOLESN REMOVE THE SEAM SOREN'S FROM SEAM HOLES, REMOVE THE SEAM SOREN'S FROM WITH THE X-Y TRANSLATION STAGE AND. THE YERS ALLOWED.	THE JOHNAN TO STREET 6, RIB ## 3, 1, 5, 9, 8, 13 WOULD BE SELECTED. FOCUS AND ADJUST THE THEODOLITE ELEVATION UNTIL THE BUTTON EDGE TO A THEODOLITE ELEVATION UNTIL THE BUTTON EDGE TO A THEODOLITE ELEVATION UNTIL THE SOUTHON EDGE TO AND THAN OF THE THEOTOLITE STORE THE HOLE IS PRECEDURE 180 DEGREE APART AND TE CAND DIVIDE BY 2, RECORD THIS WHERE AS T3, ADJUST THE ELEVATION AND SMIGHE OF THE THEODOLITE TO THE STANDARD THE MICRORIER ADJUSTMENT OF THE X-Y TRANDARDION STARE THAN 13 ALICHAED WITH THESE TO SIGNATION STARE THAN 13 ALICHAED WITH THESE TO SIGNATION.	ROTATE THE THEODOLITE 189 DEGREES AND RESIGHT, FOR INTIAL CONTENDARS, THIS SHOULD BE WITHIN 1 TO ACCEPTABLE AT THIS STACKED BY A CONTENDAR AT THIS STACKED THIS STACKED THIS STOUCH WITHING WITH BE DINE DURING SUCCESSIVE SECURITERING WITH CALLERATION SPECFICATIONS ON SHEET I TO THE CALLERATION REQUIREMENTS. REPER THE ABOVE PROCEDURE FOR THE OTHER AXIS	DE THE X-Y TRANSLATION STAGE 90 DEGREES TO THE FIRST DNE. AFTER CENTERING, ADJUST THE THEODOLITE HEIGHT AS INDICATED BELOW. A INDICATED BELOW.	1 CASE CONTACT 1 CA
9	"CLOCK" THE THEODOLITE ASSEMBLY: ER TO SHEFE 6. THE THEODOLITE SUPPORT DERS SUCH THAT TWO IT THE BRACS ROID DERS SUCH THAT TWO OF THE PRESENCE THE VENERALE OF THE PRESENCE THE OFFICE SUCH THAT TWO OF THE PRESENCE OF THE OFFICE SUCH THAT TWO OF THE THE PLANGE OF THE ODEL THE WITH THE THE FLANGE OF THE ODEL THE ASSEMBLY. "LALBRATION: ALL THE HARDWARE CONNECTING THE TRATE ALL THAT ALL THE HARDWARE CONNECTING THE TRADEL THAT ALL THE HARDWARE CONNECTING THE TRADEL THAT ALL THE HARDWARE CONNECTING THE TRADEL THAT ALL THE SELECTION ARE TRADEL. THEODOLITE ALGAMENT.	A. TALEMENTON SEQUENCES: 1. LEVELING C. CENTERNOR C. CECT. E.S. A. REPEAT 1-3 AS LECESSAR A. REPEAT 1-4 AS LECESSAR A. REPEAT 1-5 AS LECESSAR C. CALIBRATION SPECIFICATIONS. 5. READY FOR REFLECTOR ALIGNMENT 2. LEYZLING: DE SURE TO USE THE PROPER SCRIBE LINE, DEPONING ON THE MAKE OF THEODOLITE CSEE SHEET 5). NETESSARV TO ILEY THENDOLITE CSEE SHEET 5). NETESSARV TO ILEY THENDOLITE CSEE SHEET 5).	SHED BY ADJUSTING TWO OF SCREWS OF THE PRIBRACH. 18 #2, FOULS AND ADJUST THE AND AS THE SCREBE LINE AND AS THE SCREBE LINE STATE THEODOLITE. LEVATION TO THE SCREBE LINE STATE THEODOLITE. LEVATION TO THE SCREBE LINE STATE THEODOLITE. 18 #40, FOULD AS THE SCREBE LINE STATE THEODOLITE. LEVATION TO THE SCREBE LINE STATE THEODOLITE. LEVATION TO THE SCREBE LINE STATE THEODOLITE.	6 A	THEODOLITE ELEVATION SET TO F44', ADJUST THE TRIBRACH LEVELING SCREW #3 OKEAREST THE ALIGMENT STICK, WHICH SHOULD BE IN RIDE #7. SEE SHEET 6) UP OR DOWN UNTIL THE THEODOLITE IS SIGHTED ON THE SCRIBE LINE. GOD NOT MOVE LEVELING SCREWS #1 OR #2) RECORD THE CURRENT ELEVATION (R4) ANGLE AS R. RELOCATE THE STICK TO RISS #2 AND #10, SIGHT THE SCRIBE LINE, ADJUST AND RECORD ANGLES RI AND R3 AGAIN.	1945
7		PE PETETRAL MINISTRAL PARTE SEMILAR PARTE	BEFORE INSTALLING THE THEODOLITE SUPPORT KIT ON TO THE TOROLE TO BE MAKE SUPE TO SET THE HEIGHT OF THE SUPPORT THEODOLITE ASSEMBLY AS ILLUSTRATED ON SHEET 4. THIS WILL HELP IN THE SUBSEQUENT ADJUSTMENTS. ASSEMBLE THEODOLITE SUPPORT KIT IN TOP OF TOROLE TUBE AS ILLUSTRATED ON SHEET 4. VIEW A AND SHEET 5. 1.2. ASSEMBLE ALIGNMENT STICK. THE ALIGNMENT STICK COMES IN THREE SECTIONS, SKEV THE SECTIONS, SKEV THE SECTIONS.	LETTERS IN THE ENDS OF THE MODIVIDUAL SECTIONS. 1.3 INSTALL BRASS ROD BOLDERS. INSTALL BRASS ROD BOLDERS. INSTALL BRASS ROD HOLDERS IN SEAH HOLE #11 DN RIB# 1.6 x 8. II. AS ILLUSTRAFIED DN SHEFTES 5 AND 6 (RELECTION SEAM STREAM, WAS INSTEAD BE BENDYCED IN THESE LOATIONS, MAKE SUBJECT BE BENDYCED ROD HOLDERS ARE SITTING FLUSH DN THE RELECTION FARELS AND THEY REP POINTED TOWARD THE THEODOLITE ASSEMBLY. ATTACH THE ALIGNMENT STICK TO THE ROD HOLDER IN		NEG INSPECTION TEST
	Ž - H 1	O	↑	m	<	111 2




	<u> </u>	o	↓	m	<u> </u>
700 NA PS 20 C 114 M 3 1	Mark	TEMERATURE CHANGE DIRENG CALIBRATION OR ALIGNMENT OF THE REFLICTURE MILL ADVERSELY PIEFECT THE ALIGNMENT OF THE REFLICTURE MILL ADVERSELY THE EFFECT THE ALIGNMENT SHIPLING AND WIN THE CALIBRATION AND ALIGNMENT SHIPLING THE CALIBRATION AND ALICH A		TDR	
כיו	3.6 FIXE INBOLED LILGUALINT. MUTE. DIREGUED SEAN HERDWARE THENDING AS DESCRIBED IN FINE INBOARD ALIGNMENT. TAKE EXTRA PRECAUTION INT TO SIFE ON THE CENTER OF THE PRACES. AS YORK VEIGHT VILL DISPLACE THE PANEL DURING TIGHTENING. TRY TO SIFE DIRECTLY UN THE TIBLY PANEL OF THE SEAN HARDWARE. MEDI-PANEL CONNECTION NEAR THE SEAN HARDWARE. ADJUST THEODOLITE ELEVATION HANGE TO THE ELE VALUE. THE THEODOLITE AGAIN TO THE ELEVATION AND FIGURE THE THEODOLITE AGAIN TO THE ELEVATION OF THE PROPERTY AGAIN TO AGAIN THE THEODOLITE AGAIN TO AGAIN THE WITH THE PRESENCE OF THE THROUGH A THOSE THE PROPERTY SITUATED WITH THE PRESENCE AGAIN THE MASSES THE OF THE PHENDIAL CONSINGENING SOURCE DEGREES. THE OF THE PHENDIAL DISPLACEMENT OF THE PHENDIAL PROSECUED STREET THE PHENDIAL DISPLACEMENT OF THE PHENDIAL D	CARBOLI NOT UN THE TELEM PRODUCTION. 36.1 REPEAT THE PROCEDURE DESCRIBED IN 36 FOR ALL 16. INBORD TARGET SCREWS AT LOCATION ELE. 36.2 REPEAT ALL 16 ADJUSTMENTS AGAIN, THIS TIME, AFTER EACH INDIVIDUAL ADJUSTMENT, FULLY TIGHTEN THE CAMBOLT NUT ON THE REB BEING ADJUSTED. 36.3 REPEAT ALL 16 ADJUSTMENTS AGAIN, THIS TIME, AFTER EACH INDIVIDUAL ADJUSTMENT, FULLY TIGHTEN SEAM HARDWARE #23, #22, #21, #20, #19, 8 #18 ON THE RIB BEING ADJUSTED. THE INNER RING OF THE REFLECTOR IS NOW "LOCKED" IN PLACE.	3.64 REPEAT ALL IS ADUSTNERTY AGAIN AF ELE, THIS TIME, AFTER EACH INDIVIDIAL ADUSTNERTY, FULLY FULLY TIGHTEN SEAM HARDWARE #17, #16, #15, 8 #14 DN THE RIB BEING ADUSTED. 3.64 REPEAT ALL 16 ADUSTNENTS AGAIN AT ELE, THIS TIME, AFTER EACH INDIVIDIAL ADUSTNERTY, FULLY NIGHTEN REMAINING SEAM HARDWARE (#1 THROUGH #13) DN THE REAL SEAM HARDWARE IS TIGHT, RESIGHT ALL 16 OUTDRADA AND ALL 15 INBURANT PRECETS AND PECDED THEN ACTUAL THAN 15 INVARIANT PRECETS AND PECDED.	TABLE PROVIDED AND SHEET LIN THINLESS OVER THE JUNE TO THE LINE THE TOTAL THE BE USEFULL FOR THE WEST-LINE WAS ANALYSIS. FURTHER ANALYSIS. 5.0 THEODOLITE BEMOTA. FROM CHEMICAL THE CREW HOR TORGIE TUBE MENDY. THEODOLITE SERVING HOR TORGIE TUBE MENDY. THEODOLITE STANDARDENTS IN THE CASE. MENDY THEODOLITE STANDARDENTS IN THE CASE. MENDY THEORY THEORY SHOW REPLACE THEN WITH FROM CHEMICAL TO HOLDERS AND REPLACE THEN WITH FROM SAM THEORY SHOW READY TO ACCEPT THE SUBREFLECTORS.	Second se
4		L-			NOILVOITE AND MEN I
ιΩ	3.3.1 REPEAT THE PROCEDURE DESCRIBED IN 3.3. FOR ALL IS OUTBIOARD TARGET SCREVS AT LOCATION ELL. 3.3.2. TARACEL, RADIUM REFLECTOR & DR 3 TIMES. REPEATING ALL 16 ADJUSTIVENTS, OR VUTILL ALL 16 TARGETS REAND IN ELL VITTUAN ACTOS SCORNOS. SOME TARGET SCREVS AWY NOT REACH ELL, DR MAY MOVE TARGET SCREVS AWY NOT REACH ELL, DR MAY MOVE TARGET SCREVS AWY NOT RECHECTOR & DR 3 TIMES. 3.4. ROUGHT NAROUND THE REFLECTION & DR 3 TIMES. 3.4. ROUGHT THEODOLITE ELEVATION MALLE TO THE YOLK ADJUST THEODOLITE ELEVATION MALLE TO THE YOLK ADJUST THE SOURCE THE SCREVE OF THE STORNE ON THE NOTE AND THE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE ON THE STORNE ON THE STORNE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE ON THE STORNE ON THE STORNE STORNE ON THE STORNE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE ON THE STORNE ON THE STORNE STORNE ON THE STORNE STORNE ON THE STORNE ON THE STORNE ON THE STORNE ON THE STORNE STORNE STORNE ON THE STORNE STOR	CHOUSING THE THREE LAPPE THE INSENT TOWNS TO THE TRANSITY OF THE TRANSITY SECRETS. THE LIPPE TRANSITY REPRESENTED UNTIL THE UPPER EDGE OF THE TRANSITY OF THE UPPER EDGE OF THE TRANSITY OF THE UPPER THE THEORY THE PROCEDURE DESCRIBED IN 3.4. FOR ALL IS INDEAD TARGET SCREWS AT LOCATION ELG. 3.4.1 REPEAT THE PROCEDURE DESCRIBED IN 3.4. FOR ALL IS INDEAD TRANSITY OF WITHIN THE SECRET SCREWS AT LOCATION ELG. 3.4.2 TRANSIT AND RELECTING P. OR 3 TIMES IN TRANSITY OF THE SCREWS O	3.6 FIND OUTBOARD ALIGNAERY: RIP DIGITORING DE SEAM HARDWARE NEAR THE DUTER RIP DURING THE UTBOARD ALIGNMENT WIST BE DONE FROM A LANDER DUTSIDE THE REFLECTIOR. DO NOT FOUT WHILE TIGHTRONIG THE DUTER SEAM HARDWARE. AGAIN ADJUST THEODOLITE ELEVATION ANGLE TO THE ELL ARGENT ELL LICATED IN THE RIB HI. WHILE STILL FOUSING TO THE THEODOLITE SIZED AND THE STILL SLOVEN IS AGAIN VITHIN THE UPPER DIGIT EACH THE STILL SLOVEN SEAM VITHIN THE UPPER DUGE OF THE TARGET SLOVEN SEAM VITHING THE CONTRACTORY.	ER EACH INDIVIDUAL AND STATEMENTS. SEND -TIGHTEN DESCRIPED AND WEST DAYS THE LOCKWARTER SEAM HARDWARE HES AND WEST DAYS THE LOCKWARTER SEND ON THE RIB BEING USTEL. I REPEAT THE PROCEDURE DESCRIBED IN 3.5 FOR ALL OUTBOARD TAGET SCREWS AT LOCATION ELS. EREPEAT ALL 16 ADJUSTMENTS AGAIN, THIS TIME, REPEAT HE DISTRIBUTION AND STATEMENT, FOLLY TIGHTEN, CAMBOLITY AS WELL AS SEAM HARDWARE HESE, RESE, THE OUTBER-MOST ON THE SEAM) ON THE BEING ADJUSTED.	ATTER EACH INDIVIDIOAL ADJUSTED. THE DUTER RING OF THE RELECTOR IS NOW "LOCKED" IN PLACE. PLACE. THE DUTER RING OF THE REFLECTOR IS NOW "LOCKED" IN PLACE. THE DUTER RING OF THE RING OF THE REFLECTOR IS NOW "LOCKED" IN PLACE. THE DUTER RING OF THE REFLECTOR IS NOW "LOCKED" IN PLACE. THE DUTER RING OF THE RING OF
9		.a ₩		ATTER EACH INDUSTRIAL COLUSE THE LOCKWASHE CRUD AND THE LOCKWASHE CRUD AND THE PROM THE SS.1 REPEAT THE PROM SS.2 REPEAT ALL 16 / AFTER EACH INDUSTRIAL THE CAMBOLT WIT, AS THE PROM THE CAMBOLT WIT, AS THE PROM RIB BEING ADJUSTED. SS.3 REPEAT ALL 16 /	THE DUTER RING IF THE PLACE. THE DUTER RING IF THE PLACE IF THE PL
7	NOTES: OLD SEA REPUBLICADE ALIGNMENT (KTI-BAND): 1. INDIAL LOBERT OF ALIGNMENT (KTI-BAND): 1. INTRODUCTION: 1. INTROUCTION: 1. INTRODUCTION: 1. INTROUCTION: 1. INTROUC	2. A FIRE ADDIVISATION PROCEDURE: 2. A FIRE ADDIVISATION PROCEDURE: 3. A FIRE ADDIVISATION ASSENBLY MARE SURE THAT ALL 1. INSIDARD AND UNDERDED CARBOLTS ARE SET TO 1. FIRE MAXIMU UPPER LIMIT. THES IS ACCIMPLISHED BY 1. TRINING THE CAMBOLT UNTIL THE MARK ON THE HEXD BY 1. TRINING THE CAMBOLT UNTIL THE MARK ON THE HEXD 1. THE MAIS DOINTING TOWARD THE RIB. ALDIN 1. THE ANIS OF THE ANGLE STRUT (SEE VIEW C ON SHEET S). 2. ARE NOT TO LODGE. AS A RULE OF THUM TIGHTEN THE CAMBOLT TURN'S FREELY BUT NOT TOTALLY LODGE. 2. BEFORE STARTING ALIGMENT MARE SURE THAT ALL 1. THE MAITEN HARDWARE ASSIGNATED WITH THE TRINIS. ASSEMBLY IS FULLY TOHTENDE REFER TO SHEET S).	24, IF NOT YET DONE, INSTALL SPECIAL TARGET SCREVS AT ALL LOCATIONS AS INDICATED ON SHEETS. MAKE SURE THAT THE SCREV IS FULLY SEATED ON THE RIB SUFFACE. THIS IS BEST DONE DURING REFLECTOR ASSEMBLY. ES. DO NOT PUT PRESSURE ON THE TURGUE TUBE OR SUPPRINT STRUTS WHEN SIGHTING THROUGH THE THEODOLITE. 3. RIB ALIGNMENT (REYER TO SHEETS 5): AS ALIGNMENT FERUNDER OF THE RIBS MUST BE FOLLOWED IN PROJECT OR ACHIEVE PROPER ALIGNMENT. PROCEDURES AND PROCEDURES VILL RESULT IN MORE DIFFICULT ALIGNMENT.	MOUNT HER RIES AND MAY EVEN RESULT IN AN INCORRECT ADJUSTMENT OF THE REFLECTOR FISELF. 3.2. REFER TO SHEET 5. EACH RIB HAS TWO TARGET SPECY MICH VALLE BE USED THE PARKEL ADJUSTMENT. ONE TARGET SCREW IS LICATED NEAR THE DUTBIARD THE ATSIGN AT SEAM HOLE #27. THE DITHER TARGET SCREW IS LICATED NEAR THE INSIDARD CAMBOLT LICATION AT SEAM HOLE #20. 4.3. RAVIEW STREME TOWN SHEET IN THE "\$1.1" ADJUSTMENT ON SHEET IN POINT AND FOOLST THE SCREW THE MICHAEL STREME STREW THE TOWN SHEET IN POINT AND FOOLST THE SCREW THE MICHAEL BOTH SHEET FLICKNICH NOT MAY SEED FOR THE STREW THE WINDOW THE WALLE WALLE WORLD AND THE WALLE WALL	CONTRACTOR TO THE CONTRACTOR WITH WITH WITH WITH WITH WITH WITH WITH
ac	1. NOTES, NAME OF ORDER STATES 1. NOTES, NAME OF ORDER STATES 2. COM. ESCA REFLECTOR 1. INTRODUCTION: 1. INT	21. AFTER THE ARTERNA A RELEASED AND DUTBOA THE INSCREAD AND DUTBOA THE IN MAZIMIN UPER LINE THE ANTON THE AND UT THE BULT IS POUR THE ANGLE SE AS A CAMBULT NUT UNITE. THE AMBULT THEN SEELY IS CAMBULT THEN SEELY IS CAMBULT THEN SEELY IS CAMBULT THEN SEELY IN THE AMBULT THEN SEELY IS CAMBULT THEN STAFFING ALLY TIGHT		B OF THE RIBS AND MAY EV ADJUSTMENT OF THE REFLE 32. REFER TO SHET 5, EV ONE TAKET SOFEW, IS LOO DIE TAKET SOFEW, IS LOO TAKET SOFEW, IS LOO TAKET SOFEW, IS LOO TAKET TO SOFEW, IS LOO TAKET TAKET SOFEW, IS LOO	A NORTH AND




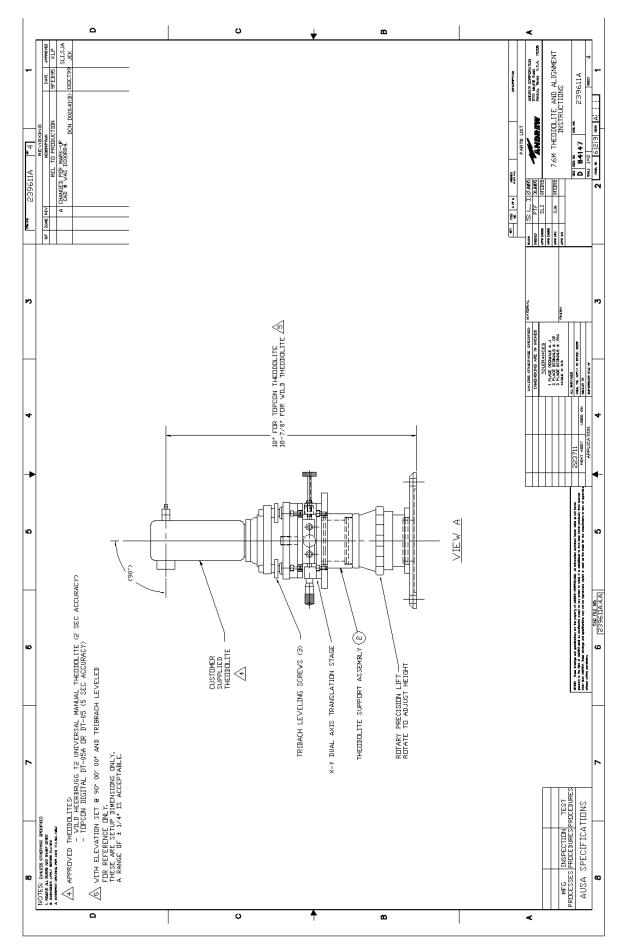




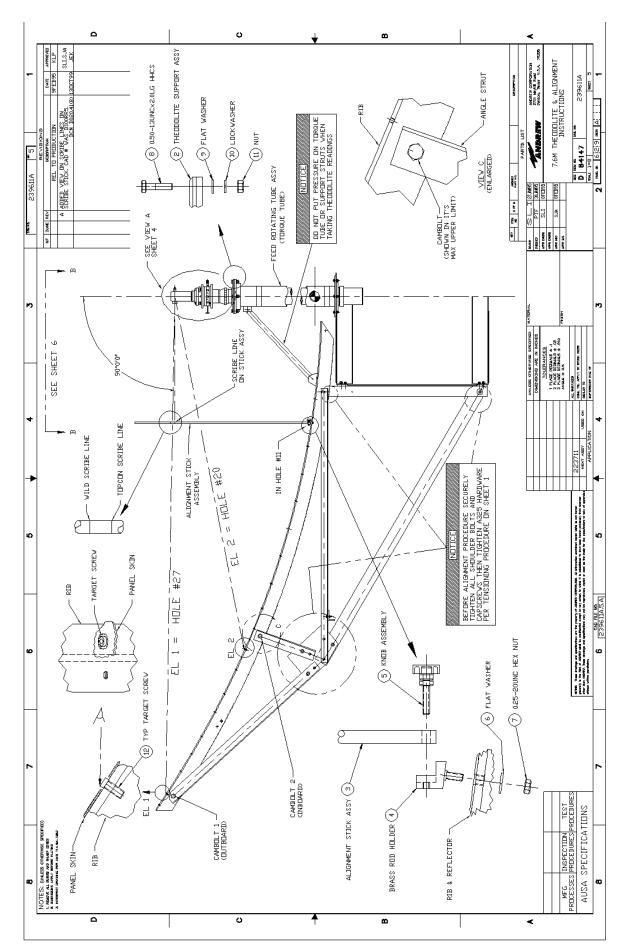




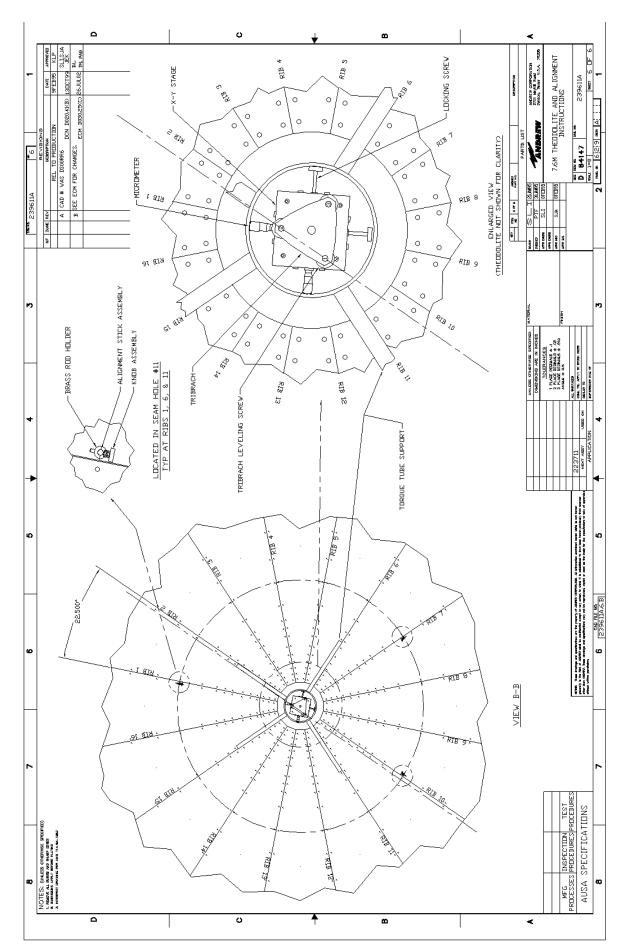




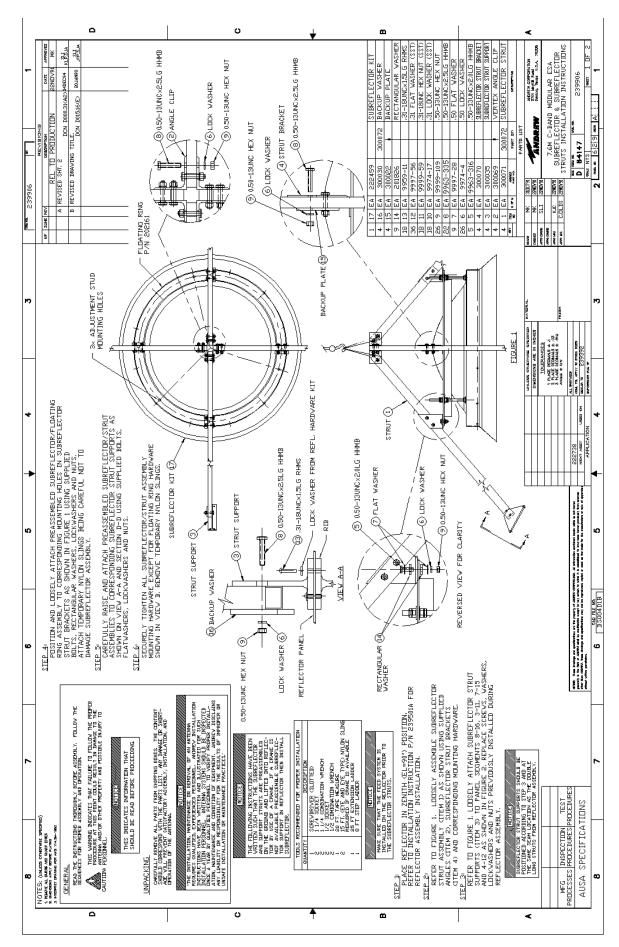




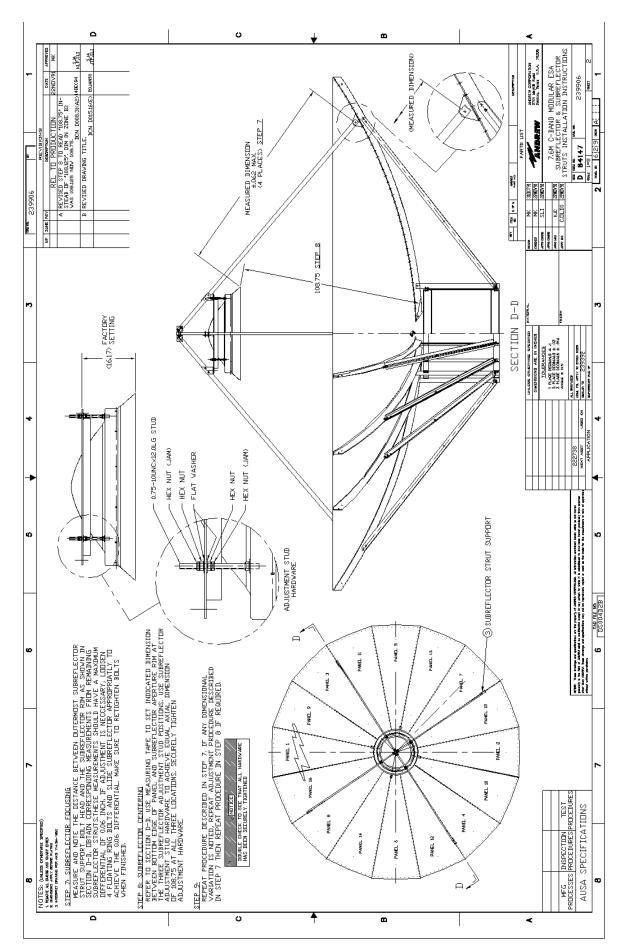



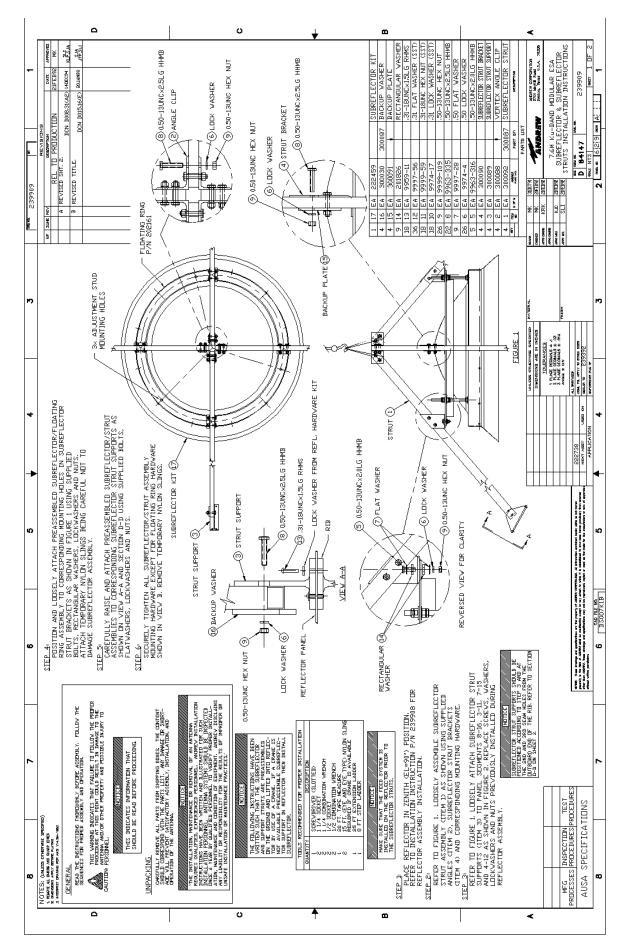



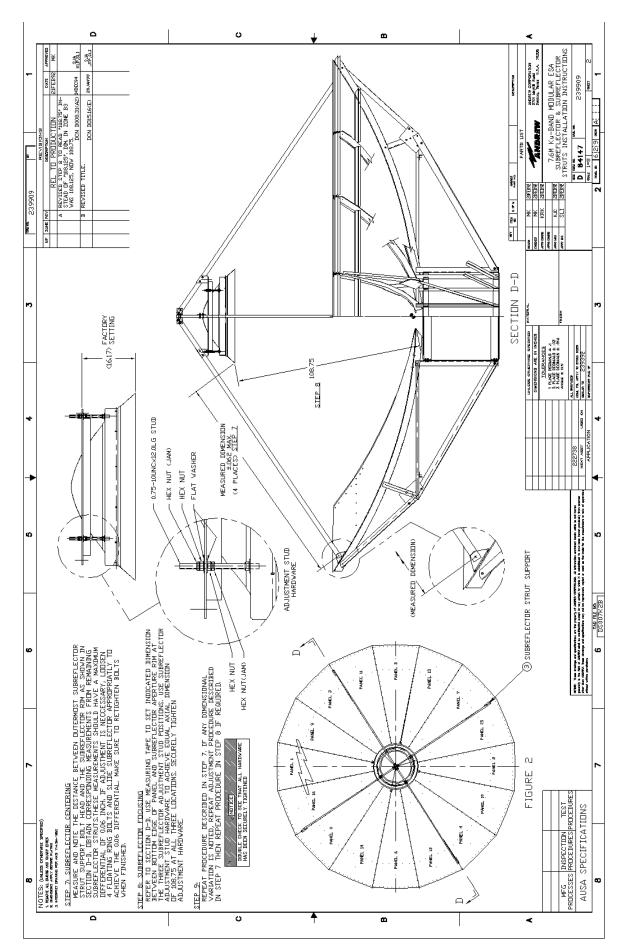



Operation

Overview

After you have completed the assembly of your antenna, you are now ready to become operational. In order to operate the earth station antenna, you will need to direct it to the desired satellite adjusting both the elevation and azimuth angles appropriately. The following procedures provide details on how to correctly position your antenna on the desired satellite.

Acquiring A Satellite

There are several procedures that may be used to properly acquire the satellite. Andrew recommends that a spectrum analyzer be used. The following procedures provide explanation as to how to use the spectrum analyzer.

While viewing the spectrum analyzer screen, a pure noise signal as shown in Figure 4-1 will probably be observed. Additionally, some transponder signals may be observed above the noise signal as shown in Figure 4-2.

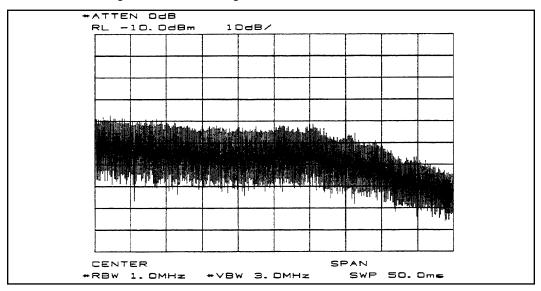


Figure 4-1: Pure Noise Signal on Spectrum Analyzer

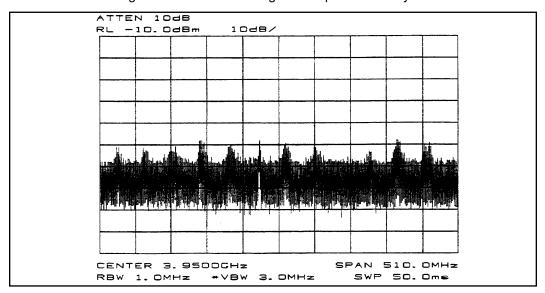


Figure 4-2: Minimum transponder Signal on Spectrum Analyzer



Operation

The following steps provide the procedure for acquiring a satellite.

Step 1

Manually move the antenna in the azimuth (scanning back-and-forth) to achieve the maximum (greatest amplitude) transponder signals.

- Scan in one direction until the amplitude continues to diminish and then scan in the opposite direction until the same condition occurs.
- Return to the position yielding the greatest amplitude.

The maximum azimuth excursion from the original setting should not exceed plus or minus 1.5 degrees or the antenna may begin to access a different satellite.

Step 2

With the antenna positioned in azimuth such that the transponder signals are maximized, follow the same procedure manually moving the antenna in elevation (scanning up-and-down) to further maximize the transponder signals.

Step 3

Repeat this procedure alternating between the azimuth and elevation excursions of the antenna to peak the transponder signal amplitude.

A transponder signal amplitude of 30 dB or greater from peak to average noise signal indicates the antenna is receiving the signal on the main beam. A transponder signal amplitude less than 30 dB or greater indicates the antenna is receiving the signal on a side lobe of the main beam.

Step 4

With the antenna peaked on a side lobe in azimuth and/or elevation, move the antenna in azimuth while observing the spectrum analyzer screen as shown in Figure 4-3.

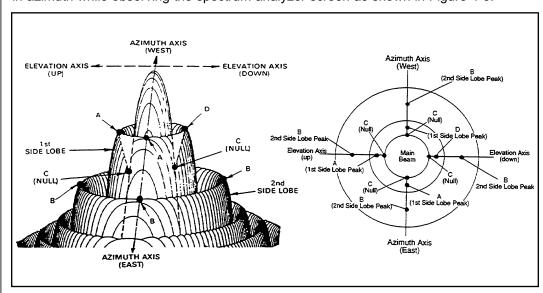


Figure 4-3: Antenna Radiation Pattern Topographical Diagram with Plan View

55



Operation

Step 5

If the signal amplitude diminishes and does not increase (position B) to the level noted when the antenna was peaked on the side lobe, the antenna is moving away from the main beam; reverse the direction of the antenna movement.

From the original side lobe position (position A), the signal amplitude should now diminish to a null point at position C (minimum amplitude showing only signal noise) and then symmetrically increase again to the same level at position D as noted at position A. At the null point (position C), the antenna is aligned with the alternate (elevation) axis. If the antenna was peaked on a side lobe in azimuth, it was appropriately aligned with the elevation, it was appropriately aligned with the azimuth axis; proceed with step 6 moving the antenna in azimuth rather than elevation.

Step 6

Move the antenna in elevation while observing the spectrum analyzer screen. If the signal amplitude increases, deceases and then increases again but to a lesser value, the antenna is moving in the wrong direction; reverse the direction of the antenna movement. From the original null point, the signal level should increase and decrease alternately, but with increasing amplitude until the transponder signal increases to a level of at least 30 dB at which time the main beam. Continue to manually peak the signal to a maximum level using the azimuth and elevation adjustments.

Step 7

If the antenna is aligned in azimuth and elevation (signal maximized) and 24 transponder signals (12 horizontal and 12 vertical) are noted, the polarization adjustment is set incorrectly and must be modified. If 12 transponder signals are noted, they may or may not be the properly polarized signals. Therefore 24 transponder signals must be visually noted in order to determine the proper polarization setting.

Step 8

Rotate the feed assembly clockwise until 24 transponder signals are noted and of approximately equal amplitude.

NOTE: It is more accurate and visually easier to minimize the alternate set of transponder signals rather than maximizing the transponder of interest.

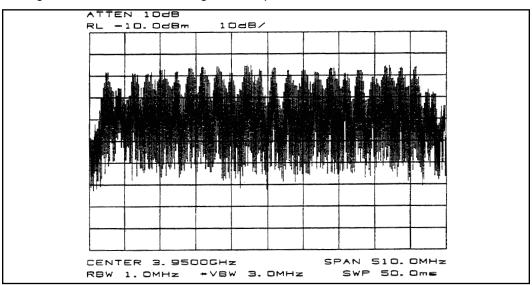


Figure 4-4: Polarization at 45 degrees from Optimum Setting



56 Operation

Step 9

With all 24 transponder signals of approximately equal amplitude appearing on the spectrum analyzer screen determine the specific antenna system and satellite parameters. Rotate the feed assembly as required until the appropriate (odd or even) transponder signals are maximized.

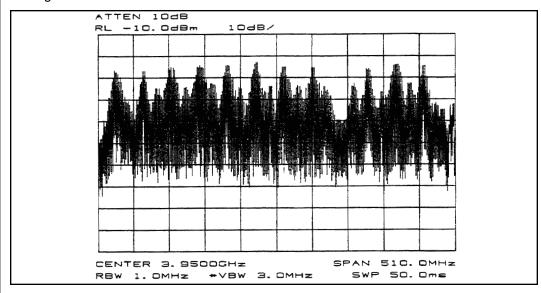


Figure 4-5: Maximizing Odd Transponders

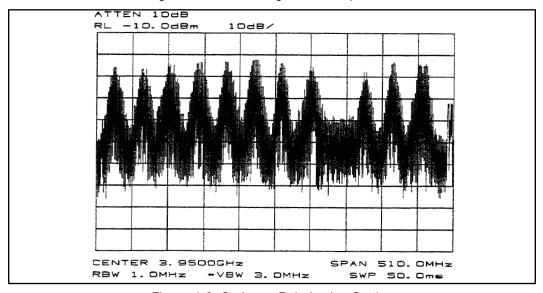


Figure 4-6: Optimum Polarization Setting

57



Subreflector Adjustment

After the satellite has been acquired and testing has taken place with the spectrum analyzer, the subreflector may need to be adjusted to maximize optimum performance of your antenna. The following procedures should be followed if a subreflector adjustment is required to maximize optimum performance.

NOTE: All INTELSAT Type Approved antennas do not require subreflector adjustment.

Before proceeding, azimuth and elevation patterns should be conducted to determine the adjustments that need to be made. The goal is to achieve a high peak on the main lobe and even distances between the main lobe and sidelobes as shown in Figure 4-6.

NOTE: No adjustments should be made in the receive band.

If your pattern dictates a need to adjust the azimuth angle(the left sidelobe requires adjustment), the west side of the subreflector should be adjusted outward by loosening the screws on the subreflector and adjusting the left side outward. An easy way to remember this adjustment feature is through the acronym WOLD (West Out Left Down).

If your pattern dictates a need to adjust the elevation angle(the right sidelobe requires adjustment), the bottom side of the subreflector should be adjusted downward by loosening the screws between the subreflector and the struts and adjusting the bottom side of the subreflector downward. An easy way to remember this adjustment is through the acronym BOLD (Bold Out Left Down).

Each of these adjustments should be repeated until each sidelobe is of equal distance from the peak of the mainlobe.

After the BOLD and WOLD adjustments have been made, it may be necessary to adjust the main lobe. The goal is to achieve a high null depth (distance between lower intersection of sidelobes and top of main lobe) as shown in Figure 4-6.

In order to adjust the main lobe pattern characteristics **ALL** subreflector adjustment screws should be adjusted at the same degree (Note: Because the azimuth and elevation adjustments have been set, it is very important that the null depth adjustment be carefully conducted. Be careful not to alter any previous adjustments that have been made to the subreflector. Follow the procedure listed below when adjusting the null depth of the main lobe.

C-band feeds - Adjustment screws are 3/4 X 10. Move 1 turn per 1dB of imbalance.

Ku-band feeds - Adjustment screws are 1/4 X 20. Move 1 turn per 1 dB of imbalance.

All adjustments should be continued until the desired pattern is achieved. Upon completion the antenna should be properly aligned with the satellite for maximum performance.



Preventive Maintenance

Overview

This section contains periodic preventive maintenance instructions for the 5.6-Meter Earth Station Antenna. Included in this section are inspection and preventive maintenance procedures including cleaning and lubrication, painting, and an operational voltage/current checkout procedure deemed within the capabilities of the average station technician. Refer to applicable vendor manuals for any repair procedures not included in this section yet designated as capable off being performed in the "field" rather than requiring specialized facilities, tools, and/or test equipment as well as technically trained personnel.

An operational checkout procedure provides an accurate indication of the overall earth station performance and should be performed at intervals of approximately three months. This procedure is essentially performed during the various modes of normal operation of the earth station. In addition, the operational checkout procedure should be performed after any repairs or adjustments have been made, or whenever the earth station is suspected of degraded operation. If any discrepancy in performance exists and the condition cannot be readily remedied to return the earth station to a proper operating condition, the appropriate troubleshooting procedures should be referenced to locate the fault. After the trouble is determined and the repairs affected, a final operational checkout procedure should be performed to verify that all discrepancies have been corrected.

The following paragraphs describe the inspection and preventive maintenance procedures for the earth station. These instructions include general cleaning and inspection, the preservation of metal parts and lubrication. Periodic replacement of assemblies or components as a preventive measure is not required. Malfunctions of the earth station can be traced to components, assemblies, and parts through the use of applicable troubleshooting procedures.

General Cleaning

To prevent the excessive accumulation of dust and dirt as well as the removal of such contaminants, thoroughly clean the equipment whenever visually inspecting the earth station components. No special cleaning procedures are required. However, a thorough cleaning in accordance with the following procedures is required to assure continued trouble-free operation.

Electrical Parts

Minor cleaning, such as the removal of dust and loose foreign particles can be accomplished by one of the following:

- Vacuuming
- Using a soft brush or lint-free cloth
- Blowing out the dust and dirt with low pressure (5 to 25 psi), dry compressed air

When using air to blow off the contaminants, either avoid or be careful when directing the air stream on delicate parts. To remove imbedded dirt, grease, or oil from electrical parts; use a 50 percent solution of isopropyl (rubbing) alcohol and apply with a soft bristle brush. It may be necessary to brush some parts vigorously with a stiff bristle brush to remove imbedded and hardened dirt particles. If possible, avoid excessive use of cleaning solvent on electrical insulation. After cleaning, allow the cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Clean mechanical parts by first removing dust, dirt, and other loose contaminants with a



Mechanical Parts

scraper, stiff brush (bristle or wire in the case of rust or other corrosion), or cloth or compressed air at 25 to 40 psi. Any accumulated imbedded dirt, corrosion, grease, or oil deposits that require further cleaning may be removed with a bristle or wire brush and a cleaning solvent such as trichlorethylene or equal. After cleaning, allow cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Inspection

The frequency of inspection is contingent upon the user's individual standards and the operational environment in which the earth station is located. However, a visual inspection of the earth station components should be performed at least semi-annually. Where there are no established wear limits, perform a visual inspection to locate worn or damaged parts which could cause improper functioning of the earth station. It is recommended that the mechanical and electrical inspection be performed on the assembled or partially disassembled equipment to determine the extent of disassembly required prior to completely disassembling a suspected malfunctioning component or module. In the absence of any special inspection requirements, operational tests are the most effective means in isolating parts and assemblies requiring further inspection. Any condition noted during inspection that may preclude continued proper operation of the earth station prior to the next scheduled inspection should be noted. The discrepant condition should be corrected (repaired or replaced) immediately or at the conclusion of the inspection procedure.

Local Control/Motor Drive Controller

Inspection of the local control/motor drive controller conforms generally to standard visual inspection procedures on electromechanical equipment. In addition to these standard procedures, perform the following checks and visual inspections for the specific conditions noted:

- Check the front panel for illegible and indistinct panel markings.
- Check the three position selector switches (Azimuth Off/Slow/Fast, Elevation-Off/Slow/Fast, and Polarization-CCW/Off/CW) for smooth operation, audible clicking at each actuation (left to center and return) and spring return from right to center. For each of the two position selector switches (Azimuth-East/West, Elevation-Up/Down, and Local/Remote) check for smooth operation and audible clicking at each actuation.
- Inspect all wiring and cables for discolorization and burned insulation, dirt, breaks, security of connection and other signs of deterioration. Examine connections for dirt, flux, corrosion, and mechanical defects. Check for loose or broken lacing and cut, brittle, abraided, frayed, or cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment, or other deformities. Check connector inserts for carbon tracking indicating arc-over.
- Check all electrical components for dirt, cracks, chips, breaks, discoloration and other signs of deterioration and damage. A discolored, blistered, or burnt condition is evidence of overload. Measure actual value of suspect electrical components and compare against specified value.
- Check transformer for an excessive wax deposit on the surface, discoloration, or a



pungent odor indicative of burning vanish denoting overheating or a total breakdown.

- Check all terminal boards for broken or missing terminals and stripped threads. Check tightness of lead attaching hardware.
- Check each starter for a make-after-break provision through the release of one pushbutton as the alternate pushbutton is pressed.
- Check the relays and contactors for free operation of the armatures and contact condition. The contacts are usable even though pitted, burned, worn, or discolored. The contacts or contactor or relay assembly should be replaced only when the contact material has been completely torn away or worn off.
- Visually inspect all mechanical parts for freedom of operation without binding or interference. Check for security of all hardware and stripped or otherwise damaged threads. Check metallic parts for corrosion, dents, distortion, and other deformation.
- Check for evidence of water inside the enclosure. If any water is in evidence, check that all seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hole, or other possible water entry to the enclosed electrical components in order to maintain a waterproof condition.
- Check or change humidity absorber.

Antenna

Inspection of the antenna conforms generally to standard visual inspection procedures performed on electromechanical equipment. In addition to these procedures, perform the following checks and visual inspections for the specific conditions noted:

- Inspect all wiring and cables particularly the network to enclosure and enclosure to mount interfaces for discoloration and burned insulation, moisture entry, corrosion, dirt, breaks, security of connection, and other signs of deterioration. Examine connections for dirt, corrosion, and mechanical defects. Check for loose or broken lacing and cut, abraided, frayed, brittle, and cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment or other deformities. Check connector inserts for cracks, and carbon tracking, burns or charring indicating arc-over.
- Check all electrical component for dirt, cracks, chips, breaks, discoloration, and other signs of deterioration and damage. A discolored, blistered, or burnt condition is evidence of overload.
- Operate the azimuth and elevation drives as well as the feed rotation in both the plus



and minus direction from the local control/motor drive controller at least once every three months during antenna down time. Check the mechanical limit switches provided at the end points stop antenna and feed movement, and limit travel to prevent structural interference and damage. Check the mechanical limit switches for corrosion and water entry and the arm on each feed limit switch for free movement without binding. Be certain both feed rotation limit switch arms are not distorted and ride centrally on the actuating cam to open their corresponding limit switch.

- Inspect the azimuth and elevation jackscrew boots for security of attachment at both ends, for abrasion, tears, cuts, brittleness and other damage that may expose the jackscrew to the environment (water, dust, etc.). Minor repairs can be made with RTV-108 silicone rubber sealant.
- Visually inspect the feed window for dirt and the feed, feed supports, feed window, and reflector for distortion, foreign object damage and environmental deterioration due to ice and snow, dust, rain, hail, and high winds, etc. which may cause electrical component and/or structural deformation.
- Check the cable attachment to the resolvers and to the LNA or LNB's and enclosure mount interface for security, the cable rouging for secure hanger attachment and the cable insulation for cuts, cracking, abrasion, and other deterioration. Check the LNA or LNB's and the resolvers for a secure mechanical attachment. Ensure proper torquing of polarization drive gear box setscrews and appropriate tensioning of corresponding drive chain assembly, if applicable.
- Check (if applicable) that the drain holes in the bottom of the enclosure are not obstructed and there is no evidence of water accumulation. Check the enclosure doors for proper closure and that the door seals are intact, not torn, abraided or otherwise damaged. Check that all other seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hold, or other possible water entry to electrical components in order to maintain a weatherproof condition. If the enclosure is provided with a vent fan, check for free operation of the fan blade. The fan bearings are permanently lubricated; any binding, abnormal noise or vibration necessitates replacement of he fan assembly. Check and replace the fan filter element if it appears dirty or obstructed with dust.
- Check for the appearance of surface lubricants that will cause the accumulation of dirt and grime. Clean off all excess surface lubricants with a cloth and if required, a cloth dampened not wetted with trichlorethylene, or equal.
- Visually inspect all mechanical parts for freedom of operation with no misalignment, binding or interference. Check all cabling for sufficient slack to prevent cable strain as well as adequate restraint to prevent abrasion or chaffing during antenna and feed movement.
- Check security of antenna mounting and interconnecting assembly hardware. Be cer-



tain all electrical grounding connections (including cross-axis grounding straps) are intact and secure, not corroded or broken. Thoroughly clean any noticeable corroded portions of grounding cables, unplated portion of universal terminals and corresponding mounting surfaces using a wire brush. Replace rather than tighten any loose A-325 structural hardware. The hardware distorts at initial installation and once loosened will not maintain the required high strength friction connection. All other assembly and installation hardware should be tightened to its original torqued condition. When installing new structural hardware, do not use a wrench with a lever arm longer than two feet.

• Examine painted aluminum and galvanized surfaces and tough-up where required.

Drive System Voltage and Current Checks

At the conclusion of the installation procedure prior to turning the system over to the station facility, an installation acceptance check off sheet was prepared and duly signed off if installed by Andrew crew. Part of this check off included voltage readings retaken to determine if proper voltage was available. Current readings were also taken as a reference for future comparison to serve as a troubleshooting aid in determining possible equipment degradation and shortened life. Any current reading taken during the following procedure that varies by more than five percent from the pre-established reference values necessitates troubleshooting the particular system involved to determine the cause and required corrective action.

Step 1

Approximately every three months and during a period of down time, disconnect as applicable the RF transmitter and all power supplies. The main disconnect switch in the main load center box at the antenna site must be in the ON position and the LOCAL/REMOTE switch in the local control motor drive controller must be in the LOCAL position.

Step 2

Open the outer local control/motor drive controller door at the antenna site to gain access to the conductors supplying power to the azimuth, elevation, and polarization drive motors.

NOTE: During the following procedures, the antenna drives (azimuth, elevation, and polarization) will be powered to rotate the antenna and feed in both directions of travel. Check that this condition can be tolerated from a safety as well as an operational standpoint, and that the electrical limits are not reached before the testing is concluded. Reaching an electrical limit before concluding a test necessitates rotating the antenna or feed in the opposite direction a sufficient distance to permit retesting in the desired direction.

Step 3

Turn the FEED CCW/OFF/CW switch to either the CW or CCW position and while the feed is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the polarization motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other within two percent. Turn the FEED CCW/OFF/CW switch to OFF. Repeat preceding step (3) with the FEED CCW/OFF/CW switch in the alternate operating position.



Step 4

Step 5

Turn the AZIMUTH EAST/WEST switch to either position and while the antenna is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the azimuth drive motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other—within two percent. Turn the AZIMUTH switch to OFF.

Repeat steps (5) with the AZIMUTH EAST/WEST switch in the alternate operating position.

Step 6

Step 7

Turn the ELEVATION DOWN/UP switch to either position and while the antenna is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the elevation drive motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other within two percent. Turn the ELEVATION switch to OFF.

Repeat steps (7) with the ELEVATION DOWN/UP switch in the alternate operating position.

Step 8

Step 9

If all voltage and current readings are within tolerance, close the local control/motor drive controller inner door and place the LOCAL/REMOTE switch in the REMOTE position to return antenna control to the studio. Then close and lock the outer local control/motor drive controller door.

When preserving the component parts, refer to the following paragraphs in this section.



Preservation of Component Parts

Aluminum Parts

Remove all loose paint and corrosion by scraping, wire brushing, or using steel wool. If using steel wool near the feed window, make sure that none remains on the feed horn window. Edges of existing paint can be blended with the metal surface by using a fine grit sandpaper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner or equal. Be certain to remove all loose paint, corrosion, imbedded dirt, grease, and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. The reflector may be washed with plain water if necessary. Do not use bleach, soap solutions, or kerosene as it is difficult to remove the residue. Allow the cleaned surface to dry thoroughly before priming.

Prime the cleaned surface by applying zinc chromate primer. The primer can be applied with a brush, roller, or pressurized spray. If necessary, thin the primer with lacquer thinner to the proper consistency. Feather primer onto adjacent painted surfaces;. Allow primer to thoroughly dry before applying the finish paint coat.

Paint all RF surfaces, such as the inside of the main reflector and subreflector with a high-reflectance white paint. This type of paint disperses light rays, reducing the focusing effect of the sun's radiation, thereby reducing heat build-up caused by the focused sun' rays on the feed system. Rear surfaces of the reflector and subreflector may be painted with a flat white enamel paint. The paint can be applied with a brush, roller, or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency. Thoroughly paint over the primed surfaces and blend with the existing painted surface.

Galvanized Surfaces

Remove all loose paint and corrosion by scraping, wire brushing, or using steel wool. Edges of existing paint can be blended with the metal surface by using a fine grit sand-paper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner, or equal. be certain to remove all loose paint, corrosion, imbedded dirt, grease, and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. Do not use bleach, soap solutions, or kerosene as it is difficult to remove the residue. Allow the clean surface to dry thoroughly before painting.

Paint the cleaned surface with a zing-rich paint. The paint can be applied with a brush, roller, or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency. Thoroughly paint over the cleaned surface and blend with the existing painted surface.

Lubrication

For long life and trouble-free operation be certain not to extend the lubrication schedule beyond the frequency recommended in the Lubrication Chart. The frequency should be shortened if the antenna is subjected to an adverse environment (e.g., high temperature, extended periods of rainfall, high humidity, dust storms, etc). Any component or part should be immediately be lubricated if during inspection or operation, rough, jarring, or intermittent motion is noted, or if squeaky or other unusual noises are heard. Lubrication is required on all metal-to-metal rolling or sliding parts. Us the lubricants recommended. Do not over lubricate. Over lubrication can often be as damaging as under lubrication. Prior to the application of lubricant to any parts, use a clean cloth and/or bristle brush and remove any old lubricant to prevent an excessive build-up. Remove indicated access plugs from square tube weldment and apply lubricant to panning frame



tube assembly and corresponding thrust pads. Securely replace access plugs in square tube weldment. Be certain to remove any protective caps and clean off each lubrication fitting prior to injecting fresh grease. The elevation and azimuth jackscrew assemblies are equipped with a grease fitting and corresponding pipe plug on opposite sides of the jack housing. Remove the appropriate pipe plug and fill with with grease until lubricant seeps from the pipe plug opening. Replace and securely tighten pipe plug.

The following is a list of the lubricant characteristics:

Mobil Temp SHC32 A non-soap hydrocarbon fluid type grease. Operating tempera-

ture range is -65 degrees to 350+ degrees Fahrenheit (-54

degrees to 177+ degrees Celsius).

• Mobil SHC624 A low temperature synthetic oil for worm gear reducers.

Operating temperature range is -40 degrees to 125+ degrees

Fahrenheit (-40 degrees to 52+ degrees Celsius).

temperature range is -85 degrees to 300+ degrees Fahrenheit

(-29 degrees to 149+ degrees Celsius).

Jackscrews/Motors

Periodically inspect lifting screws on jackscrew assemblies to ensure adequate lubrication. Loosen Jackscrew boot clamps to expose the lifting screw assembly. Fully extend jackscrew assembly being careful not to exceed preset mechanical limits. Brush thin coating of Mobil SHC32 grease on exposed lifting screw. Replace boot and attach corresponding boot clamps. If lifting screw is rusty, remove existing lubricant with solvent and wire brush rusted area. Rinse with solvent and apply fresh grease.

Peiordically inspect and remove dust or dirt deposits from the motor housings to avoid hindering the heat exchange with the ambient air. Slight dirt accumulation on the air vent screw through splash oil cannot be avoided; however, keep vent screw clean to ensure proper pressure compensation.

Gear Motor/Housing Fill Drain Requirements Lube points 2, 3, 7 and 8, shown in the Lubrication Chart, require removal of the indicated drain plugs and collecting/measuring the amount of SHC624 drain oil using measuring cup. The specified amount of oil must be added to the gear motor/housing (after installing the drain plug) via the fill/vent plug opening using supplied funnel. Addition of the oil requires use of an appropriate filling utensil. Use of a modified level stick will not correctly gauge the appropriate amount of oil in the gear housings.



Lubrication Chart

Lube Point No.	Components to be Lubricated	1	Frequ (Mont 3	•	12	Type of Service	Type of Lube	No. of Lube Points or Quantity
1.	Elevation Jackscrew Housing		Х			Pressure Fitting	SHC32	1
2.1	Elevation Jackscrew Gear Housing Fill and Drain			 *	C**	Pipe Plugs	SHC624	10 Oz
3.2	Elevation Drive Intermediate Gearbox Fill and Drain	l*	C**			Pipe Plugs	SHC624	34 Oz.
4.	Elevation Jackscrew Pivot Pin, upper		Х			Pressure Fitting	SHC32	1
5.	Azimuth Jackscrew Pivot Pin, front		Х			Pressure Fitting	SHC32	1
6.	Azimuth Jackscrew Housing		Х			Pressure Fitting	SHC32	2
7.1	Azimuth Jackscrew Gear Housing Fill and Drain	l*	C**			Pipe Plugs	SHC624	4 Oz.
8.2	Azimuth Drive Intermediate Gearbox Fill and Drain			l*	C**	Pipe Plugs	SHC624	34 Oz.
9.	Polarization Drive Gear			Х		Brush	SHC32	Minimum Surface Coverage
10.	Feed Rotation Worm Gear Pillow Blocks			Х		Pressure Fitting	SHC32	2

X = Lubricate I = Inspect C = Change




^{*} Inspection requires checking for visible signs of oil leakage, draining replacing and adding oil to ensure appropriate oil level requirements. Excessively dirty oil will require fresh oil replacement. If oil leakage is found to be excessive, refer to appropriate troubleshooting information and perform applicable corrective action. Periodic inspection procedures can be less frequent after first or second scheduled inspections.

^{**} Initial oil change requirements include flushing gear boxes with a standard cleaning agent.


¹ Type 'HS' and 'STHS' drives only. 10 oz. required for gearbox on Type 'MS' drives.

² Type 'HS' and 'STHS' drives only.

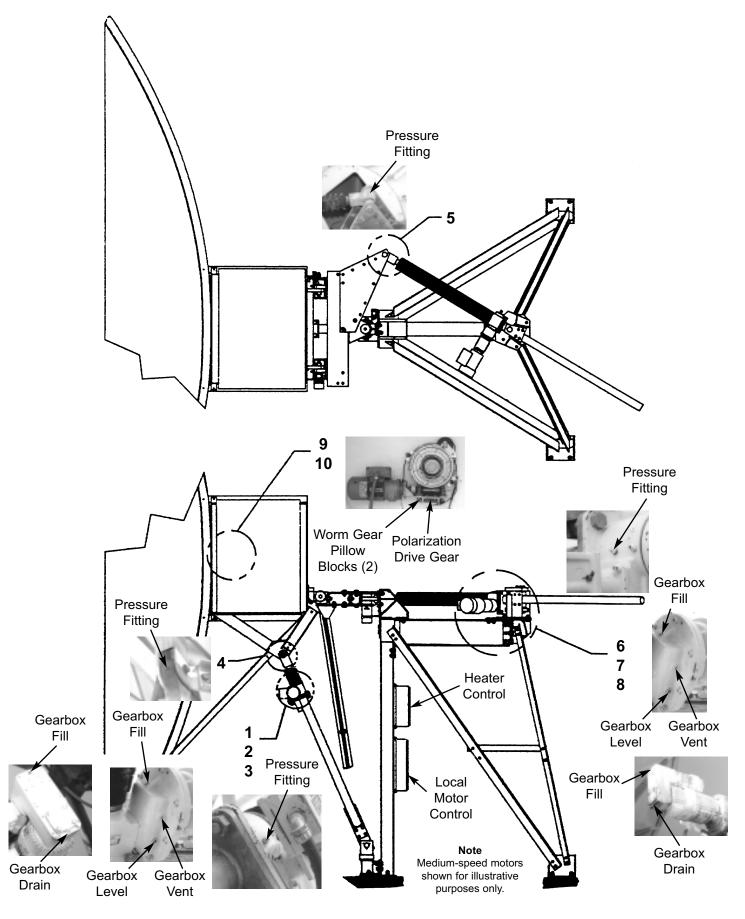

ANDDEW

High-Speed Antenna Lubrication Points

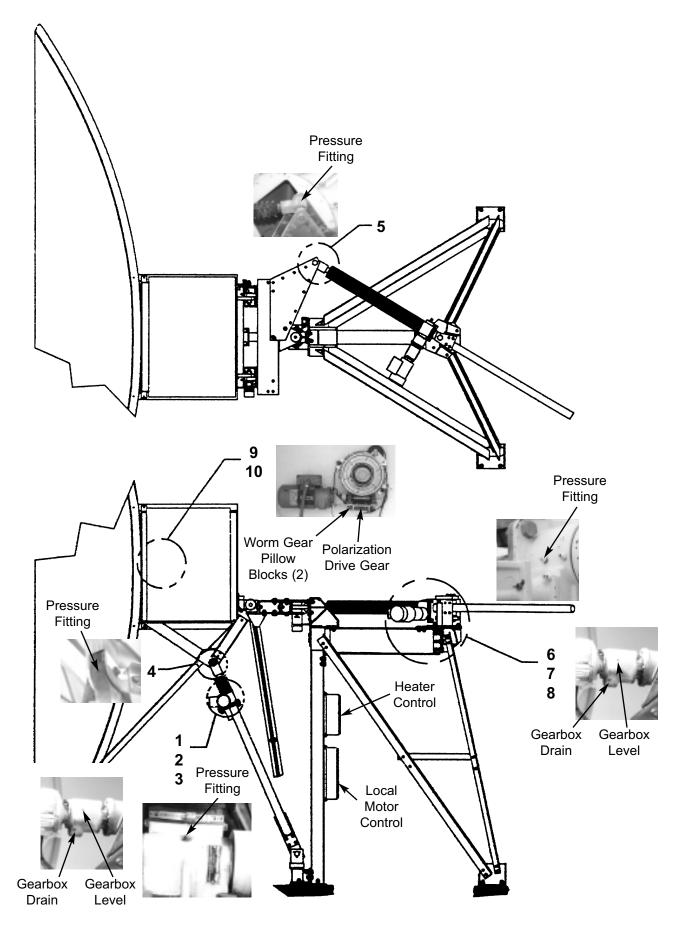

Medium-Speed Antenna Lubrication Points



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com