

User's Guide



CDM-8615

WELCOME

Thank you for choosing the up-to-date CDM-8615, our new model, developed by top researchers to support the CDMA2000 1X system through Qualcomm-manufactured MSM6050 chips and CDMA technologies. This product allows for high speed communication services, such as web browsing, data services, and a GUI animation menu.

T9 Input Mode makes it much easier to enter text, while VR (Voice Recognition) makes the CDM-8615 more user friendly. Other proven technologies include:

- Full graphic display with 9 text input lines and 1 icon line with variable font size.
- Easy to dial through the VR feature.
- Enhanced for web browsing & data services (i.e.; wireless internet access, UP browser)
- GUI & Animation display compliant with CDMA2000 1X.
- CSTN 65K Color LCD.
- Navigation Key and 21 keys aligned for more convenience.
- Sophisticated features of speaker phone, and voice recognition.
- Additional services of text messaging and Web browsing on top of authentication, call forwarding, call transfer, call waiting.

IMPORTANT INFORMATION

This CDM-8615 user guide contains very important information about how to handle and use the product. Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

TABLE OF CONTENTS

CHAPTER 1. BEFORE USING YOUR PHONE	5
INSIDE THE PACKAGE	6
HANDSET DESCRIPTION	7
FUNCTION KEYS	8
DISPLAY INDICATORS	9
BATTERY USAGE	11
BATTERY INSTALLATION	11
BATTERY REMOVAL	11
BATTERY CHARGING	12
POWER CONNECTION	12
BATTERY TALK TIME	13
BATTERY LIFE (FOR NEW BATTERY)	13
BATTERY HANDLING INFORMATION	14
DOS	14
DON'Ts	14
CHAPTER 2. BASIC OPERATION	15
TURNING THE PHONE ON / OFF	16
TURNING THE PHONE ON	16
TURNING THE PHONE OFF	16
ACCESSING THE MENU	17
MENU SUMMARY	18
BASIC FUNCTIONS	21
MAKING A CALL	21
SPEAKER PHONE	22
PAUSE FEATURE	22
ANSWERING A CALL	23
3-WAY CALLING	23
CALLER ID FUNCTION	24
CALL WAITING FUNCTION	24
ADJUSTING VOLUME	24
ETIQUETTE	25
LOCK	25
DURING A CALL	26
MESSAGING	26
MUTE (UNMUTE)	26
SCRATCHPAD	26
SEND MY PHONE #	26
MY PHONE #	27
VOICE PRIVACY	27
LOCATION	27
PHONE INFO	27
MAKING AN EMERGENCY CALL	28
911 IN LOCK MODE	28
911 USING ANY AVAILABLE SYSTEM	28
CHAPTER 3. MEMORY FUNCTION	29
STORING A PHONE NUMBER	30
ENTERING LETTERS, NUMBERS & SYMBOLS	31
STANDARD INPUT MODE	32
T9 INPUT MODE	33
NUMERIC MODE	34
SYMBOL MODE	34
MAKING A CALL THROUGH THE PHONE BOOK	35
ONE-TOUCH/TWO-TOUCH DIALING	35
ONE-TOUCH DIALING:	35
TWO-TOUCH DIALING:	35
TO STORE A NUMBER IN SPEED DIAL:	35
CHAPTER 4. MENU FUNCTION	37
PHONE BOOK	38
FIND	38
FIND BY NAME	38
FIND BY NUMBER	39
ADD NEW	40
GROUP	40
ADD NEW GROUP	40

TABLE OF CONTENTS

CHANGE GROUP NAME	41
ERASE GROUP	41
SPEED DIAL	42
MSG. GROUP	43
ADD NEW MSG. GROUP	43
CHANGE MSG. GROUP NAME	43
SEND TEXT MSG. GROUP	44
ERASE MSG. GROUP	44
MY PHONE #	45
RECENT CALLS	46
ALL CALLS	46
MISSED CALLS	47
RECEIVED CALLS	48
DIALED CALLS	49
CALL TIMERS	50
LAST CALL	50
ALL CALLS	50
HOME CALLS	50
ROAM CALLS	51
CUMULATIVE CALLS	51
BREW	52
START BREW	52
DOWNLOADING APPLICATIONS	52
DOWNLOADING MELODIES/WALLPAPERS	52
APPLYING MELODIES/WALLPAPERS	53
CHECKING DATA FOLDER MEMORY	53
ERASING AN APPLICATION	53
MOBILE WEB	54
CONNECT WEB	54
MEDIA GALLERY	55
IMAGES	55
GRAPHICS	55
ANIMATIONS	55
TONES	56
SETTINGS	57
SOUNDS	57
RINGER TYPE	57
VOLUME	58
ALERT	59
ROAM RINGER	60
TONE LENGTH	60
ETIQUETTE	61
DISPLAY	62
MENU STYLE	62
GRAPHICS	62
SUB SCREEN	64
GREETING MESSAGE	65
CONTRAST	65
BACKLIGHT	66
DATA SVC	67
CONNECTION	67
SECURITY	68
PHONE LOCK	68
RESTRICT	68
CHANGE CODE	70
SPECIAL #'S	71
ERASE ALL	71
RESET PHONE	72
OTHERS	73
ANSWER OPTIONS	73
AUTO RETRY	74
LANGUAGE	75
VOICE PRIVACY	75
TTY MODE	76
LOCATION	76
SYSTEM	77
SET MODE	77

TABLE OF CONTENTS

NAM SETTING	77
PRL ID	78
ERI BANNER	78
PHONE INFO	79
SMV VERSION	79
HMV VERSION	79
BREV VERSION	79
UTILITIES	80
SCHEDULE	80
ADD NEW PLAN	80
VIEW PLAN	81
ALARM	81
MEMO PAD	83
ADD MEMO	83
VIEW MEMO	83
SETTINGS	83
CALCULATOR	84
WORLD CLOCK	84
STOP WATCH	85
CHAPTER 5. VOICE SERVICE	87
VOICE TOOLS MENU	88
VOICE MEMO	88
VOICE DIAL	89
TRAIN WORDS	90
YES	90
NO	90
WAKE-UP	91
UNDO TRAIN ALL	91
VOICE SETTING	92
SET ACTIVE	92
HFK MODE	92
VOICE RECOGNITION MODE	93
NAME	93
CHAPTER 6. VOICE MAIL AND TEXT MESSAGING	95
WHEN A NEW MESSAGE ARRIVES	96
VOICE MAIL	96
NEW TEXT MSG	97
INBOX	98
REPLY	98
REPLY WITH COPY	98
FORWARD	99
SAVE MEDIA	99
SAVE TO CONTACT	99
SAVE TO SAVED	99
SAVE TO QUICK TEXT	99
BLOCK SENDER	99
LOCK & UNLOCK	99
OUTBOX	100
CHECKING SENT TEXT MESSAGES	100
RESEND	100
EDIT MESSAGE	100
SAVE TO CONTACT	101
SAVE TO SAVED	101
LOCK & UNLOCK	101
STATE	101
WEB ALERTS	102
SAVED	103
QUICK TEXT	104
ERASE ALL	105
ERASE MESSAGES	105
SETTINGS	106
SAVE SENT MSG	106
AUTO ERASE	106
INBOX	106
OUTBOX	106

TABLE OF CONTENT

DEFAULT CALLBACK.....	107
ALERT	107
EDIT SIGNATURE.....	108
DIRECT VIEW.....	108
ENTRY MODE.....	109
BLOCK OR UNBLOCK.....	109
CHAPTER 7. MOBILE WEB	111
LAUNCHING MOBILE WEB	112
ACCESS THE INTERNET	112
BROWSER MENU	112
HOME.....	112
BACK.....	112
FORWARD	112
REFRESH.....	113
HISTORY.....	113
ADDRESS.....	113
CLEAR MEMORY.....	113
SETTINGS.....	113
ADVANCED.....	114
EXIT.....	114
CHAPTER 8. SAFETY AND WARRANTY	115
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES	116
DRIVING SAFETY	117
ELECTRONIC DEVICES	118
OTHER SAFETY GUIDELINES	119
PRECAUTIONS	120
SAFETY INFORMATION FOR FCC RF EXPOSURE	121
CAUTIONS.....	121
SAR INFORMATION.....	122
FDA CONSUMER UPDATE	124
PROTECT YOUR WARRANTY	128
12 MONTH LIMITED WARRANTY	129

Chapter 1

BEFORE USING YOUR PHONE

This chapter provides important information about using the CDM-8615 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION



INSIDE THE PACKAGE

IC
1

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.



Handset



 
AC Travel Charger



Standard Battery



User Manual



Handstrap



Holster

6

HANDSET DESCRIPTION


The CDM-8615 weighs 3.7oz. The dimensions are 1.83" x 4.48" x 0.97".

IC
1



7

HANDSET DESCRIPTION

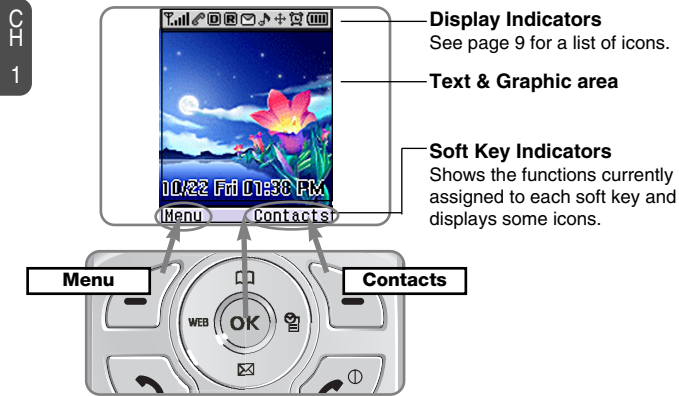

FUNCTION KEYS

- Phone Book**
In Idle Mode
- Press Up to access the Phone Book, Down to access the Messaging, Right for Schedule and Left for Mobile Web.
- Mobile Web** **Schedule**
- Messaging**
Inside the menu
- Within a menu, use to scroll through menu options, or to select a function displayed on the screen.
- Press to make or receive a call.
Press and hold to turn on VR mode.
- Press to turn the phone on/off, to terminate a call or to return to the initial page.
- (Left Soft Key) Press to access the menu or function displayed on bottom line.
- (Right Soft Key) Press to access contact menu or function displayed on bottom line.
- Press to clear a digit from the display or to return to the previous page.
Press and hold to enable speaker phone mode.
- Press and hold to enter etiquette mode.
- Press and hold to enter lock mode.

HANDSET DESCRIPTION

DISPLAY INDICATORS

- Signal Strength** - Current signal strength: the more lines, the stronger the signal.
- Roaming**
Phone is out of home area.
- Service Indicator**
 Indicates call is in progress, indicates the phone cannot receive a signal from the system.
- Message**
New text or voice message.
- Digital Mode**
Phone is operating in digital mode.
- Battery**
Battery charging level – the more blocks, the stronger the charge.
- Mute**
Phone is mute during a call.
- Silent**
Appears when Silent is selected as the ring mode.
- Emergency Call**
Blinks when an emergency call is in progress.
- Auto Answer**
Phone is in answering machine mode.
- Speaker Phone**
Phone is in speaker phone mode.
- Etiquette**
Phone will vibrate when call is received.
- Schedule**
Appears when either an event or an alarm is set.
- Ring Mode**
Appears when a ringer is selected as the ring mode.
- Data Only**
Receives an async. call as a voice call.

HANDSET DESCRIPTION

 IC
1


Fax Only

Receives a fax call as a voice call.



Dormant

Indicates your phone is in a dormant state during a data call. Your phone goes to Dormant mode when you have no had any activity on a page for some time - your connection is still active and now you can make and receive calls.



GPS Icon

Indicates the Location Service of your phone is disabled/enabled.



1X

Phone is in the 1x service area.



Scratchpad

Displays when scratchpad is in use during a call.



Unread Web Message

Phone has new Web Alert message.



Web Message + Text Message

Phone has new Web Alert Msg and Text Msg.



Web Message + Voice Message

Phone has new Web Alert Msg and Voice Msg.



Web Message + Text Message + Voice Message

Phone has new Web Alert Msg, Text Msg and Voice Msg.



UP Browser

UP Browser is in progress.


10

BATTERY USAGE

BATTERY INSTALLATION

1


① Place the battery on the back of the handset and slide into place. ② Push the battery down until it locks into place.

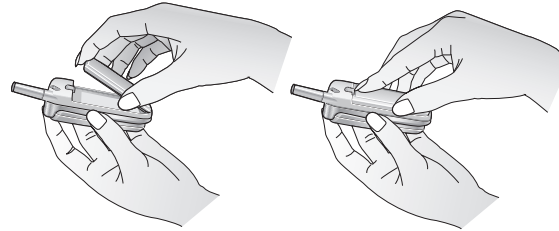

BATTERY REMOVAL

1

① Pull up the release latch, lift up the battery and ② remove the battery from the handset.

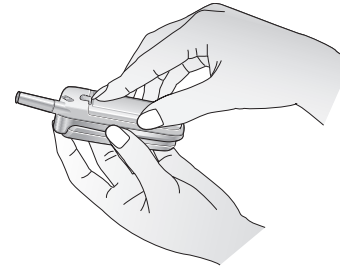

NOTE

If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.

11


BATTERY USAGE

IC
1

BATTERY CHARGING

POWER CONNECTION

- 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be attached to the phone.

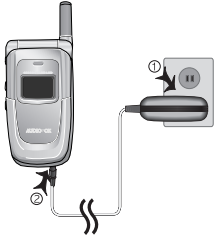

- When you charge the battery with the phone turned off, you will see a charging status screen. You cannot operate the phone until it is turned on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset turned off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY USAGE

IC
1

BATTERY TALK TIME

The operating time is subject to your handset usage and configuration.

Battery Capacity	DCS	PCS	AMPS
STD 1000 mAh	Up to 195 m	Up to 190 m	Up to 80 m
EXT 1700 mAh	Up to 330 m	Up to 330 m	Up to 130 m

BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

Battery Capacity	CDMA	AMPS
STD 1000 mAh	Up to 190 Hours	Up to 20 Hours
EXT 1700 mAh	Up to 310 Hours	Up to 35 Hours



These times are for a new battery. Usage and Standby time may decrease over time.

BATTERY HANDLING INFORMATION

IC
1

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

14

Chapter 2

BASIC OPERATION

CH
2


This chapter addresses and explains the basic features of your phone including:

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

15

TURNING THE PHONE ON / OFF


TURNING THE PHONE ON

- 1 Press and hold  until your "Power On" logo appears and the tone sounds.



- To select a logo, refer to page 62 for more details. (Settings>Display>Graphics).
- If "Password" appears on the display enter your 4-digit password to unlock your phone.
- The default password is the last 4 digits of your phone number.

TURNING THE PHONE OFF


- 1 Press and hold  until your "Power Off" logo appears.






- Immediately change or recharge the battery when "Low Battery Warning Power Off" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

ACCESSING THE MENU

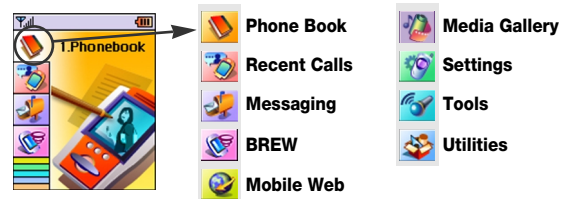Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.



- 1 To access the menu in the idle mode, press  [MENU].
- 2 Use the Navigation Key to scroll through the menu.
 - To search through the menu in numerical order, press the Navigation Key.
- 3 To return to the previous page, press  . To exit the current menu and return to the idle mode, press .
- 4 Press the Navigation Key to enter a function when its main page is displayed or press its assigned number to have direct access to the function.



Hotkey



In idle mode, move the Navigation Key as follows to access these functions:

- Upward movement : Phone Book
- Downward movement : Messaging
- Rightward movement : Schedule
- Leftward movement : Mobile Web

MENU SUMMARY

<p>1. Phone Book </p> <p>2. Recent Calls </p> <p>3. Messaging </p> <p>4. BREW </p> <p>5. Mobile Web </p>	<p>1. Find</p> <p>2. Add New</p> <p>3. Group</p> <p>4. Speed Dial</p> <p>5. Msg. Group</p> <p>6. My Phone #</p>	<p>1. By Name</p> <p>2. By Number</p>	
	<p>1. All Calls</p> <p>2. Missed Calls</p> <p>3. Received Calls</p> <p>4. Dialed Calls</p> <p>5. Call Timers</p>	<p>1. Last Call</p> <p>2. All Calls</p> <p>3. Home Calls</p> <p>4. Roam Calls</p> <p>5. Cumulative Calls</p>	
	<p>1. New Text Msg</p> <p>2. Voice Mail</p> <p>3. Inbox</p> <p>4. Outbox</p> <p>5. Web Alerts</p> <p>6. Saved</p> <p>7. Quick Text</p> <p>8. Erase All</p>	<p>1. Inbox</p> <p>2. Outbox</p> <p>3. Saved</p>	<p>1. Old Inbox</p> <p>2. Entire Inbox</p>
	<p>9. Settings</p>	<p>1. Save sent MSG</p> <p>2. Auto Erase</p> <p>3. Default Callback</p> <p>4. Alert</p> <p>5. Edit Signature</p> <p>6. Direct View</p> <p>7. Entry Mode</p> <p>8. Block or Unblock</p>	<p>1. Inbox</p> <p>2. Outbox</p> <p>1. Voice Mail</p> <p>2. Messages</p> <p>3. Remind</p> <p>1. Block</p> <p>2. Unblock</p> <p>3. View List of Blocked Address</p>
	<p>1. BREW</p>	<p>BREW Settings Help</p>	
<p>1. Connect web</p>			

MENU SUMMARY

<p>6. Media Gallery </p> <p>7. Settings </p>	<p>1. Images</p> <p>2. Tones</p>	<p>1. Graphics</p> <p>2. Animations</p>	
	<p>1. Sounds</p>	<p>1. Ringer Type</p> <p>2. Volume</p> <p>3. Alert</p> <p>4. Roam Ringer</p> <p>5. Tone Length</p> <p>6. Etiquette</p>	<p>1. Ringer</p> <p>2. Messages</p> <p>3. Voice Mail</p> <p>1. Ringer</p> <p>2. Key Tone</p> <p>3. Voice Call</p> <p>4. Speaker Phone</p> <p>1. Minute</p> <p>2. Roam</p> <p>3. Connect</p> <p>4. Fade</p>
	<p>2. Display</p>	<p>1. Menu Style</p> <p>2. Graphics</p> <p>3. Sub Screen</p> <p>4. Greeting Message</p> <p>5. Contrast</p> <p>6. Backlight</p>	<p>1. Wallpaper</p> <p>2. Power On</p> <p>3. Power Off</p> <p>4. Received</p> <p>5. Dialed</p> <p>6. Screen Saver</p>
	<p>3. Data Svc.</p> <p>4. Security</p>	<p>1. Connection</p> <p>1. Phone Lock</p> <p>2. Restrict</p> <p>3. Change Code</p> <p>4. Special #'s</p> <p>5. Erase All</p> <p>6. Reset Phone</p>	<p>1. Dialed</p> <p>2. Recent Calls</p> <p>3. Phone Book</p> <p>4. Data Call</p> <p>5. 900#s</p> <p>6. Long Distance</p> <p>1. 911</p> <p>2. *911</p> <p>3. #911</p>
	<p>5. Others</p>	<p>1. Answer Options</p> <p>2. Auto Retry</p> <p>3. Language</p> <p>4. Voice Privacy</p> <p>5. TTY Mode</p> <p>6. Location</p>	<p>1. Call Answer</p> <p>2. Active Flip</p> <p>3. Auto Answer</p>

MENU SUMMARY

CH 2	6. System	1. Set Mode 2. Nam Setting 3. PRL ID 4. ERI Banner	1. Auto NAM 2. Change NAM
	7. Phone Info	1. S/W Version 2. H/W Version 3. BREW Version	
	8. Tools	1. Voice Memo 2. Voice Dial 3. Train Words	
	4. Voice Setting	1. Record 2. Play 3. Play Speaker 4. Erase All	
	1. Record 2. Play 3. Play Speaker 4. Erase All	1. Yes 2. No 3. Wake-Up 4. Undo Train All	
	9. Utilities	1. Schedule 2. Alarm 3. Memo Pad 4. Calculator 5. World Clock 6. Stop Watch	1. Add New Plan 2. View Plan 1. Alarm 1 2. Alarm 2 3. Alarm 3 1. Add Memo 2. View Memo 3. Settings

BASIC FUNCTIONS

MAKING A CALL

1 Enter a phone number.



To modify the phone number you have entered :

- To erase one digit at a time press .
- To erase the entire number, press and hold .



2 Press .
The indicator, , appears on the display.



- If "CALL FAILED" appears on the display or the line is busy, press or .
- If you activate the "AUTO RETRY" function, the phone will automatically retry for the number of times you have selected. (Refer to page 74).
- When you place or receive a call from stored phone numbers, both the name and phone number will be displayed.
- There is another way to make a call through the VR mode, which is called "VAD (Voice Activated Dialing)". Please refer to page 89 (Voice Service) for more details.




3 To end a call, press .

BASIC FUNCTIONS




SPEAKER PHONE

The speaker phone feature lets you hear audio through the speaker and talk without holding the phone.

- 1 To activate the speaker phone in idle, answering or calling modes, press and hold .
- 2 The phone returns to normal (speaker phone off) after ending a call or when the phone is turned off and back on.





PAUSE FEATURE





 

Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.


- 1 To insert a pause, enter a phone number then press  [MENU]. Select either a Hard Pause ("P" appears) or a Timed Pause ("T" appears).
- 2 Press  to dial or  [SAVE] to store the number.
Please refer to page 30 for more details about storing a phone number.

BASIC FUNCTIONS

ANSWERING A CALL

- 1 To answer a call, press any key except , ,  or .

- By pressing , , , , , you can select either "Any Key" or "Send Key" to answer a call. If "Send Key" is selected, the phone can only be answered by pressing .
See page 73 for more information.




- 2 To end the call, press .



In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 74 for more details.

3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.

- 1 Enter the number you wish to call then press .
- 2 Once you have established the connection, enter the second number you wish to call then press .
- 3 When you're connected to the second party, press  again to begin your 3-Way call.



If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

BASIC FUNCTIONS

CALLER ID FUNCTION

Identifies caller by displaying their phone number. If the caller's name and number are already stored in your phone book, they both will appear.



The caller ID is stored in the call history.

CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.



1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press again.



Call Waiting is a system dependent feature. Please contact your service provider for details.

ADJUSTING VOLUME

Adjusts the volume of the ringer, key beep and speaker.



1 Press [MENU] 1 2 then select one of the following:

- Ringer : Controls the ringer volume.
- Key Tone : Controls the key pad tone.
- Voice Call : Controls the earpiece volume.
- Speaker Phone : Controls the speaker volume.



2 Adjust volume then press [OK] to save it.



To adjust earpiece volume during a call, press the Navigation Key up or down.

BASIC FUNCTIONS

ETIQUETTE

Mutes key tones and activates the vibration mode to alert you of an incoming call or message.



1 To turn etiquette mode on/off, press and hold . will be displayed to indicate etiquette mode is active and an audible tone sounds when etiquette mode is turned off.

LOCK

Locks your phone and prevents unauthorized use. Phone can only be used after inputting the password.



1 To lock the phone, press and hold .



2 To unlock the phone, press or [UNLOCK] then input your password.



The default password is the last 4 digits of your phone number.

DURING A CALL

To display menu options during a call, press [MENU].

MESSAGING

Enables you to send a message (SMS) during a call.

1 Press [MENU] .

MUTE (UNMUTE)

The caller cannot hear you or any sounds from your side but you can still hear them.

1 Press [MENU] .

- To deactivate, press [MENU] .
- The phone will automatically un-mute in Emergency Call or Callback mode.

SCRATCHPAD

Stores a new phone number during a call without the calling party hearing the key pad tones.

1 Press [MENU] .

- To deactivate it, press [MENU] .

SEND MY PHONE

Automatically transmits your phone number to a pager during a call. (Dependent on pager service)

1 Press [MENU] .

DURING A CALL

MY PHONE

Displays your phone number.

1 Press [MENU] .

VOICE PRIVACY

Increases security during a call.

1 Press [MENU] .

LOCATION

Enables the network to locate your current location through Global Positioning System (GPS). (Refer to page 76 for more details.)

1 Press [MENU] .

PHONE INFO.

Displays the software and hardware version of your phone.


1 Press [MENU] .

MAKING AN EMERGENCY CALL


The 911 feature puts the phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.

911 IN LOCK MODE

The 911 call service is available even in the lock mode.

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone exits the Lock Mode for 5 minutes.
 - When the call ends, the phone returns to the Lock Mode.

911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone maintains the Emergency Mode for 5 minutes.
 - The phone returns to the Lock Mode.
 - While the phone is in the emergency mode for 5 minutes, the phone can receive an incoming call from any available system. However, it can't make a call.



The 911 call is not recorded in the recent call list.

Chapter 3 MEMORY FUNCTION

This chapter addresses memory functions including:

- STORING A PHONE NUMBER
- ENTERING LETTERS, NUMBERS & SYMBOLS
- MAKING A CALL THROUGH THE PHONE BOOK

STORING A PHONE NUMBER


The phone book stores up to 300 entries.

- 1 Enter phone # then press [SAVE].
- 2 Choose “New Contact” or “Existing Contact”. Press [OK] to select.
- 3 The Phone # will appear above a list of icons. The name of the icon is displayed below the list. Use the Navigation Key to choose the type of # you’re adding, as indicated by the icon. Press [OK] to select.
- 4 Enter a name then press [OK]. Please refer to page 31 for more details on entering letters, numbers & symbols. To change the input mode, press [Abc]. Press the Navigation Key down to select the group. Press the Navigation Key down to select other options (secret, email).
- 5 To store the entry, press [SAVE]. “New contact added!” or “Contact edited!” will be displayed.

ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 4 available modes ; Standard input mode (Abc), T9 input mode (T9Word), Numeric mode (NUM), and Symbol mode (Symbols).

The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 4 modes below, press [MODE], then enter letters and numbers.

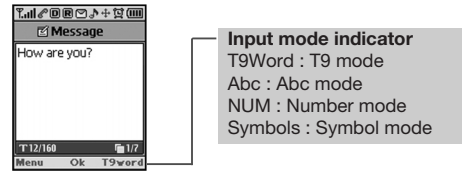

The following illustrates the function assigned to each key in the Alpha Editor:

KEY	FUNCTION
Mode	Press to change mode. [T9Word][Abc][NUM][Symbols]
Next	Press to view the next matching word if the highlighted word is not the word you intended.
Space	Press to accept a word and add a space.
Caps Lock	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC], and [abc] indicate the standard text input. [T9Word], [T9WORD], and [T9word] indicate the predictive text input.
Clear	Press to delete a character to the left of the cursor.
Save	Store the letters and numbers you enter.

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

- 1 Enter letters using the key pad as follows:

Key Pad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
1	1	.	@	?	!
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

To change the input mode, press [Abc].

- 2 To enter a space, press . The cursor will automatically move to the next column.
- 3 Repeat until letters are entered. There is a 16-letter limit.
- 4 To delete one digit or letter, press . To delete the entire entry, press and hold .
- 5 To change from lowercase to uppercase, press .



Select Abc mode by pressing [Abc].

When you select this mode, the Abc icon appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.
- Press it as many times as needed for the letter to appear on the screen.
- To enter the name "John":

Press | | J
 Press | | O
 Press | | H
 Press | | N

ENTERING LETTERS, NUMBERS & SYMBOLS

T9 INPUT MODE

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- 1 Select the T9Word mode by pressing [Abc].
- 2 Press a digit key once to enter the character you want then enter all the characters to input the word you want.
- 3 To view the next matching word, press .
- 4 To accept the matching word then enter a space, press .



To enter a compound word:

- Enter the first part of the word then press to accept it.
- Enter the last part of the word then press to enter the word.



To enter "Fun fare" in the T9 input mode.

- After you enter the 1st letter, press [Abc] to select T9 mode and to choose the lower case (T9Word).

- Press and you will see "Fun" highlighted. Press to select it.

- Press and until you see "ease" highlighted. Continue pressing until you see "fare" then enter a space, press .

ENTERING LETTERS, NUMBERS & SYMBOLS

NUMERIC MODE

Allows you to enter numbers.

- 1 To enter Numeric Mode, press [Abc], then select "NUM".
- 2 To enter a number, press a digit key.

SYMBOL MODE

Allows you to enter symbols.

- 1 To enter Symbol Mode, press [Abc], then select "Symbols".
- 2 Select symbol you want to enter with the Navigation Key.

- Use the Navigation Key to view a different line of symbols.

Press [],

or

Press [],



MAKING A CALL THROUGH THE PHONE BOOK

ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows phone book entries to be dialed via the keypad with only one or two key presses.

ONE-TOUCH DIALING:

1-9 : Press and hold the corresponding memory number for more than 1 second.

TWO-TOUCH DIALING:

10-20 : Press the first digit and second digits of the memory number short and long respectively.



- If no phone number is stored in the location entered, "There is no number" will appear on the screen.
- If a phone number is stored in secret, you will have to enter the password to make a call.

TO STORE A NUMBER IN SPEED DIAL:

- 1 Press [MENU] .
- 2 To assign a phone number to a location, select the location then press [SET].
 - If a phone number is already assigned to the location, press [ERASE] and [OK] to delete.
- 3 Select the entry with the Navigation Key and press [OK].



- "Unassigned" appears if the location is available.
- If a phone number is set as Secret, you will have to enter the password.
- To call an assigned number, press & hold the last digit of the speed dial #.

- 4 "Speed Dial # X edited" will be displayed.

MEMO

IC
3

Chapter 4

MENU FUNCTION

CH
4

This chapter addresses accessing the menu and using its functions and features to customize your phone.

- PHONE BOOK
- RECENT CALLS
- BREW
- MOBILE WEB
- MEDIA GALLERY
- SETTINGS
- UTILITIES

PHONE BOOK

Stores up to 300 entries, each of which can be assigned to a group. Entries can be retrieved by name, phone number or group.

FIND

Retrieves an entry by name and calls by simply pressing . You can review all the entries stored in your phone book list or quickly find an entry by entering a name or phone number.



Shortcut:

To display your internal Phone Book list from standby mode, press [CONTACTS].

FIND BY NAME

Lists contacts alphabetically so you can quickly find a name.

- 1 Press [MENU] or .
- 2 The list of names in your phone book is displayed alphabetically.
- 3 Enter a name or its character string or scroll through the list with the Navigation Key. Please refer to page 31 for more details on entering letters, numbers & symbols.
- 4 All matching entries will be displayed. Highlight an entry. To edit the entry, press [OK]. Press [MENU] to 1. Send Text Msg, 2. Prefix or 3. Erase.

• If the entry is set to secret, you will be asked for your password.

Please refer to page 97 for more details on “New Text MSG”.

- 5 To call the selected number, press .

PHONE BOOK

FIND BY NUMBER

Lists contacts numerically so you can quickly find a number.

- 1 Press [MENU] or .
- 2 The list of phone numbers saved in your phone book will be displayed in numerical order.
- 3 Enter a part of the phone number or scroll through the list with the Navigation Key. The name associated with that number will be displayed at the bottom of the screen.
- 4 All matching entries will be displayed. Highlight an entry. To edit the entry, press [OK]. Press [MENU] to 1. Send Text Msg, 2. Prefix or 3. Erase.

• If the entry is set to secret, you will be asked for your password.

Please refer to page 97 for more details on “New Text MSG”.

- 5 To call the selected number, press .

PHONE BOOK

ADD NEW

Adds a new entry.

- 1 To add a new entry to the phone book, press [MENU] or .
- 2 To enter a name or number, use the Navigation Key to select the phone book field.

PHONE BOOK FIELDS :

Name/Mobile/Home/Office/Pager/Fax/E-Mail/Wireless
Addr./Group/Ringer/Msg.Ringer/Graphic/Memo/
Set Secret.

Please refer to page 31 for more details on entering letters, numbers & symbols.

- 3.1 To save the entry, press [SAVE].
- 3.2 To return to the previous page, press .

GROUP

Allows you to classify phone entries into groups. Existing groups include Personal, Business, Etc. and All. A maximum of seven groups is allowed.

ADD NEW GROUP

- 1 To add a new group, press [MENU] or . A maximum of seven groups is allowed.
- 2 To select "Add Group", press [MENU].
- 3 Input a new group name.
- 4 To save it, press [OK].

PHONE BOOK

CHANGE GROUP NAME

- 1 Press [MENU] or .
- 2 Select an existing group name that you have added with the Navigation Key.
- 3 To select "Rename", press [MENU].
- 4 Input a new group name.
- 5 To save it, press [OK].

NOTE The default group names (All, Personal, Business, Etc.) cannot be changed.

ERASE GROUP

- 1 Press [MENU] or .
- 2 Use the Navigation Key to select the group.
- 3 To delete it, press [ERASE].
- 4 To erase it, press [OK].

NOTE

- The default group names (All, Personal, Business, Etc.) cannot be erased.
- When executing erase group, the saved entries are moved to the Etc. group.

PHONE BOOK

SPEED DIAL

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number, then press and hold the second number.

- 1 Press [MENU] or .
- 2 To assign a phone number to a location, select the location then press [SET].
 - If a phone number is already assigned to the location, press [ERASE] and [OK] to delete.
- 3 Select the entry with the Navigation Key and press [OK].
 - If the entry is set to secret, you will be asked for your password.



- "Unassigned" appears if the location is available.
- If a phone number is set as Secret, you will have to enter the password.
- To call an assigned number, press & hold the last digit of the speed dial #.

- 4 "Speed Dial # X edited" will be displayed.

PHONE BOOK

MSG. GROUP

Allows the user to group up to 10 phone numbers. The user can add, change, and delete Msg.Group.

ADD NEW MSG. GROUP

- 1 To add a new group, press [MENU] or . A maximum of five groups is allowed.
- 2 To select "Add Group", press [MENU].
- 3 Input a new group name.
- 4 To save it, press [OK].

CHANGE MSG. GROUP NAME

- 1 Press [MENU] or .
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Rename", press [MENU].
- 4 Input a new group name.
- 5 To save it, press [OK].

PHONE BOOK

SEND TEXT MSG. GROUP

- 1 Press [MENU] or .
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send Text Msg", press [MENU].
- 4 Input a "Message", "Default CB#", "Priority", and "Insert Signature".
- 5 5.1. To send the text message, press [MENU], select "Send", then press [OK].
5.2. To send the text message, press [MENU], select "Save to Outbox", then press [OK].

Please refer to page 97 for more details on "New Text Msg".

ERASE MSG. GROUP

- 1 Press [MENU] or .
- 2 Select an existing group name with the Navigation Key.
- 3 To delete it, press [ERASE].
- 4 To erase it, press [OK].

PHONE BOOK

MY PHONE

To display your phone number and service provider:

- 1 Press [MENU] or .
- 2 To return to the previous page, press [OK].

RECENT CALLS

In idle mode, you can access recent calls by pressing [MENU] .

ALL CALLS

Displays information about the most recent incoming, outgoing and missed calls.

- 1 To see a list of the 60 most recent incoming, outgoing and missed calls, press [MENU] . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view details, press [OK].

Call details include type of call, date, time and phone number.

- 3 Press [MENU] then select "SAVE" to save it or press [ERASE] to delete it.
Other Menu options include:

- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during a long distance call. You may save it in the phone book after entering the Prefix.
- Send Text Msg: To send a Text message, insert the phone number.
- Erase All: To erase all recent calls list.

After the 20th received, dialed or missed call, the oldest call will automatically be erased from the history.

RECENT CALLS

MISSED CALLS

Displays information about the 20 most recently missed calls. Place a call to a missed call number by simply pressing .

- 1 To see a list of the 20 most recently missed calls, press [MENU] . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view missed call details, press [OK].

Call details include date, time and phone number.


- 3 Press [MENU] then select "SAVE" to save it or press [ERASE] to delete it.
Other Menu options include:





- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during a long distance call. You may save it in the phone book after entering the Prefix.
- Send Text Msg: To send a Text message, insert the phone number.
- Erase All: To erase all missed calls list.

After 20 missed calls, the oldest call will automatically be erased from the history.

RECENT CALLS



RECEIVED CALLS

Displays information about the 20 most recently answered calls.
Place a call to a received call by simply pressing .

- 1 To see a list of the 20 most recently answered calls, press  [MENU]  . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2 To view incoming call details, press  [OK].



Call details include date, time and phone number.

- 3 Press  [MENU] then select "SAVE" to save it or press  [ERASE] to delete it.
Other Menu options include:


- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during a long distance call. You may save it in the phone book after entering the Prefix.
- Send Text Msg: To send a Text message, insert the phone number.
- Erase All: To erase all received calls list.


 
 



After 20 received calls, the oldest call will automatically be erased from the history.

RECENT CALLS



DIALED CALLS

Displays information about the 20 most recently dialed numbers.
Place a call to a dialed call by simply pressing .

- 1 To see a list of the 20 most recently dialed calls, press  [MENU]  . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2 To view dialed call details, press  [OK].



Call details include type of call, date, time and phone number.

- 3 Press  [MENU] then select "SAVE" to save it or press  [ERASE] to delete it.
Other Menu options include:

- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during a long distance call. You may save it in the phone book after entering the Prefix.
- Send Text Msg: To send a Text message, insert the phone number.
- Erase All: To erase all dialed calls list.



After 20 dialed calls, the oldest call will automatically be erased from the history.

RECENT CALLS

CALL TIMERS

Checks the usage time and manages your calls within the limit you set. The five timers include:

LAST CALL

Displays usage time of last call.

1 Press [MENU] .

2 To return to the previous page, press [OK].

ALL CALLS

Displays usage time of all incoming and outgoing calls, excluding web access calls.

1 Press [MENU] .

2 View the time of the following items:

- Voice Call
- Data/Fax Call

3 To return to the previous page, press [OK].

HOME CALLS

Displays usage time of all calls made within Home area.

1 Press [MENU] .

2 View the time of the following items:

- Voice Call
- Data/Fax Call

3 To reset the timer, press [RESET].
To return to the previous page, press [OK].

RECENT CALLS

ROAM CALLS

Displays usage time of roaming calls.

1 Press [MENU] .

2 View the time of the following items:

- Voice Call
- Data/Fax Call

3 To reset the timer, press [RESET].
To return to the previous page, press [OK].

CUMULATIVE CALLS

Displays usage time of all incoming and outgoing calls, excluding web access calls.

1 Press [MENU] .

2 View the time of the following items:

- Voice Call
- Data/Fax Call

3 To reset the timer, press [RESET].
To return to the previous page, press [OK].

BREW

Your phone provides “BREW”, a unique feature that enables you to download melody ringers, wallpapers, games, and more from your network to your phone. Please contact your service provider for the availability of these services.

START BREW

- 1 To launch “BREW” from the standby mode, press [MENU] .
- 2 When two or more icons appear on the screen, select an application by pressing the Navigation Key up or down.
- 3 To start the application, press .
- 4 To end the application, press . The phone will return to the standby mode.

DOWNLOADING APPLICATIONS

- 1 Press [MENU] .
- 2 Select “MobileShop” then press .
- 3 Select “Catalog” then press .
- 4 The phone will access your service provider’s server. Follow the prompt to download applications.

- To select an option, scroll to the option by pressing then press .
- When a prompt appears, press to proceed or to cancel.

DOWNLOADING MELODIES/WALLPAPERS

Before downloading melody ringers and wallpapers, you need to download the dedicated downloader. Please contact your service provider for details.

BREW

APPLYING MELODIES/WALLPAPERS

Downloaded melody ringers apply to several functions including the incoming call alert, new text message alert, alarm clock and event alarm.

See Ringer Type on page 57.

Downloaded wallpapers apply to the standby mode.

See Wallpaper on page 62.

CHECKING DATA FOLDER MEMORY

Downloaded melody ringers, wallpapers and applications are saved to the data folder in your phone.

- 1 Press [MENU] .
- 2 Select “Settings” then press .
- 3 Select “Manage Apps” then press . The memory status will be displayed.
- 4 To exit, press .

ERASING AN APPLICATION

- 1 Press [MENU] .
- 2 Select “Settings” then press .
- 3 Select “Manage Apps” then press . The memory status will be displayed.
- 4 Select the application to be erased then press .
- 5 Select “Remove” then press [OK].

MOBILE WEB

CONNECT WEB

You can use your phone to browse the Internet if you have obtained phone Internet service from your service provider and if over-the-air Internet access is available in your area.

- 1 Press [MENU] or .
- 2 For more information, see Chapter 7: Mobile Web, on page 111.

MEDIA GALLERY

IMAGES

GRAPHICS

This menu displays the list of downloaded still images.

- 1 Press [MENU] .
 - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 To display the picture you want to send scroll through the captured pictures then press [SEND].
- 3 Enter your picture message.
- 4
 - 4.1 To send the PIX message, press [MENU], select "Send", then press [OK].
 - 4.2 To send the PIX message, press [MENU], select "Save to Outbox", then press [OK].

ANIMATIONS

To display the list of downloaded animations:

- 1 Press [MENU] .
 - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 To display the picture you want to send scroll through the captured pictures then press [SEND].
- 3 Enter your picture message.
- 4
 - 4.1 To send the PIX message, press [MENU], select "Send", then press [OK].
 - 4.2 To send the PIX message, press [MENU], select "Save to Outbox", then press [OK].

MEDIA GALLERY

TONES

- 1 Press [MENU] .
- 2 Scroll to the saved voice memo you want to send then press [SEND].
- 3 Enter your picture message.
 - 3.1 To send the PIX message, press [MENU], select "Send", then press [OK].
 - 3.2 To send the PIX message, press [MENU], select "Save to Outbox", then press [OK].

SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

SOUNDS

Sets Ringer Type, Volume, Alert, Roam Ringer, Tone Length and Etiquette.

RINGER TYPE

To select a ringer type for incoming calls:

RINGER

- 1 Press [MENU] .
- 2 Select your desired ringer type.
 - Left or Right key : Select "Ring Tones", "Music Bells" or "Downloads."
 - Up or Down key : Select "Ringer."
 - Downloads : Downloaded ringer types and familiar music.
- 3 Select one of the available ring types.
To confirm, press [SELECT].

MESSAGES

To select a ringer type for receiving messages:

- 1 Press [MENU] .
- 2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5".
- 3 To confirm, press [SELECT].

VOICE MAIL

To select a ringer type for receiving voice mail:

- 1 Press [MENU] .
- 2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5".
- 3 To confirm, press [SELECT].

SETTINGS

VOLUME

Controls the Ringer, Key tone, Voice Call and Speaker Phone volume.

RINGER

Controls the Ringer volume and alerts you to incoming calls in the modes listed in the gray box below.

- 1 Press [MENU] .
- 2 Select one of the following options by pressing the Navigation Key to the right.
 - Silent : Mute the ringer, press (Min).
 - Ringer Off
 - Vibrate On
 - Ringer Mode : Up & Down (Level 1~5)
 - High & Vib : The ringer sounds and vibration, press (Max).
- 3 To confirm, press [OK].

KEY TONE

To adjust key pad tone:

- 1 Press [MENU] .
- 2 Adjust the key pad tone with the Navigation Key.
 - Off (Min-)
 - Level 1 - 5 (level 5, Max-)
- 3 To save, press [OK].

VOICE CALL

To adjust earpiece volume:

- 1 Press [MENU] .
- 2 Adjust the earpiece volume with the Navigation Key.
 - Level 1 - 5 (Min- , Max-)
- 3 To save, press [OK].

SETTINGS

SPEAKER PHONE

To adjust speaker phone volume:

- 1 Press [MENU] .
- 2 Adjust the speaker phone volume using the Navigation Key.
 - Level 1 - 5 (Min- , Max-)
- 3 To save, press [OK].

ALERT

When selected, this setting alerts you to the following handset changes:

MINUTE

Sounds an alert every minute during a call.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key then press [OK] to save it.

ROAM

Sounds an alert when leaving a service area and entering a roaming service area.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key then press [OK] to save it.

CONNECT

Notifies you that a call has been successfully placed.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key then press [OK] to save it.

SETTINGS

FADE

Sounds an alert when entering an area where calls cannot be made due to weak signal strength.

- 1 Press [MENU] .
- 2 Select "Off" or "On" with the Navigation Key then press [OK] to save it.

ROAM RINGER

Sounds a different ringer when you are in a roaming service area.

- 1 Press [MENU] .
- 2 Select "Distinctive" or "Normal" with the Navigation Key then press [OK] to save it.

- Normal : Sounds the same ringer type as used in Home area.
- Distinctive : Sounds a different ringer type.

tone LENGTH

To adjust tone length:

- 1 Press [MENU] .
- 2 Select "Normal" or "Long" with the Navigation Key then press [OK] to save it.

SETTINGS

ETIQUETTE

To place the phone in Etiquette Mode so all phone sounds are muted:

- 1 Press [MENU] .
- 2 Select "On" or "Off" with the Navigation Key, then press [OK] to save it. Or, press and hold .

- On : Etiquette Mode on.
- Off : Etiquette Mode off.

SETTINGS

DISPLAY

Allows you to customize the display.

MENU STYLE

To select a display menu style:

- 1 Press [MENU] .
- 2 Select “Fold”, “Grid” or “List” with the Navigation Key, then press [OK] to save it.

GRAPHICS

To select an LCD display:

WALLPAPER

- 1 Press [MENU] .
- 2 Select Default to choose a pre-installed display, or Downloads to choose a display you have downloaded to your phone.
- 3 Select a display from the Animation and the Graphic list using the Navigation Key and press [SELECT] to save it.

POWER ON

- 1 Press [MENU] .
- 2 Select “Audiovox” with the Navigation Key.
- 3 Select a display from the Animation and the Graphic list using the Navigation Key and press [SELECT] to save it.

SETTINGS

POWER OFF

- 1 Press [MENU] .
- 2 Select “Audiovox” with the Navigation Key.
- 3 Select a display from the Animation and the Graphic list using the Navigation Key and press [SELECT] to save it.

RECEIVED

- 1 Press [MENU] .
- 2 Select “Default” with the Navigation Key.
- 3 Press [SELECT] to save it.

DIALED

- 1 Press [MENU] .
- 2 Select “Default” with the Navigation Key.
- 3 Press [SELECT] to save it.

SETTINGS

SCREEN SAVER

Sets the time of Screen Saver and selects the images to be displayed on the LCD.

1 Press [MENU] .

2 Select "Time Setting" or "Screen Saver" with the Navigation Key.

- Time Setting : Off, 5 Secs, 10 Secs, 20 Secs, 30 Secs.
- Screen Saver : Select picture image.(Multimedia/Images).
By pressing , the user can choose from the following:
 1. **Erase:** To erase pictures saved in the current album.
 2. **Erase All:** To erase all pictures saved in the current album.
 3. **Change Title:** To edit the title of a picture file.

3 To save, press [SELECT].

SUB SCREEN

1 Press [MENU] .

2 Select "Digital" or "Analog" with the Navigation Key.

3 To save, press [OK].

SETTINGS

GREETING MESSAGE

To input a personal greeting:

1 Press [MENU] .

2 The message field will be highlighted. Press the Navigation Key left or right to choose between on and off. Press the Navigation Key down to move to the next field, font. Press the Navigation Key left or right to choose a font color. Press the Navigation Key down to move to the next field, Bg. Press the Navigation Key left or right to choose a Bg color. Repeat for both fields. Press the Navigation Key down for the entry message field. Enter your greeting.

- Message : On/Off.
- Font : White, Blue, Dark blue, Magenta, Gray, Black.
- Bg : Transparent, White, Blue, Yellow, Gray, Black.
- Entry Message : Enter message (Default-Audiovox).

3 To save, press [SAVE].

CONTRAST

To adjust the display contrast:

MAIN LCD/SUB LCD

1 Press [MENU] .

2 Select "Main LCD" or "Sub LCD" then select one of the following options with the Navigation Key.

- Main LCD : Level 1~5.
- Sub LCD : Level 1~5.

3 To save, press [OK].

SETTINGS

BACKLIGHT

Backlights the display and key pad and activates dimming for easy viewing in dark places.

LCD/KEY PAD/DIMMING

- 1 Press [MENU] .
- 2 Select "LCD", "Key Pad" or "Dimming" then select one of the following options with the Navigation Key.
 - LCD : 5 Secs/15 Secs/30 Secs/60 Secs/Always On.
 - Key Pad : 5 Secs/15 Secs/30 Secs/60 Secs/ Always On/Always Off.
 - Dimming : On/Off.
- 3 To save, press [OK].

SETTINGS

DATA SVC.

CONNECTION

Choose the connection mode for the usage of your phone.

- 1 Press [MENU] .
- 2 Select one of the following connection modes with the Navigation Key.
 - Voice Call : To receive a voice call.
 - Data Only : To receive data when connected to PC.
 - Fax Only: To function as a fax when connected to PC.
- 3 To save it, press [OK].



This function is available only when the phone is connected to a data cable.

SETTINGS

SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:

PHONE LOCK

Prevents the phone from being used without entering the password first.

- 1 Press [MENU] then enter your password.



The default password is the last 4 digits of your phone number.

- 2 Press then select “Lock Now”, “Lock On Power Up” or “Unlock”.

- Lock Now : Lock the phone now.
- Lock On Power Up : Not locked, but it is automatically locked when power is recycled.
- Unlock : Do not lock the phone.

- 3 To save, press [OK].

RESTRICT

When you attempt to make a restricted call, “This phone is restricted” appears on the screen.

DIALED

Blocks all dialed calls – except emergency calls – but allows an incoming call to be placed.

- 1 Press [MENU] then enter your password.

- 2 Press then select “Allow” or “Restrict” with the Navigation Key.

- Allow : Allows a dialed call.
- Restrict : Restricts a dialed call.

- 3 To save, press [OK].

68

SETTINGS

RECENT CALLS

Blocks access to Recent Call List.

- 1 Press [MENU] then enter your password.

- 2 Press then select “Allow” or “Restrict” with the Navigation Key.

- Allow: Allows access to the recent call list.
- Restrict: Restricts access to the recent call list.

- 3 To save, press [OK].

PHONE BOOK

Blocks access to, and protects data in your phone book.

- 1 Press [MENU] then enter your password.

- 2 Press then select “Allow” or “Restrict” with the Navigation key.

- Allow: Allows access to the phone book.
- Restrict: Restricts access to the phone book.

- 3 To save, press [OK].

DATA CALL

Restricts a data call from being placed.

- 1 Press [MENU] then enter your password.

- 2 Press then select “Allow” or “Restrict” with the Navigation Key.

- Allow : Allows a data call.
- Restrict : Restricts a data call.

- 3 To save, press [OK].

69

SETTINGS

900#S

Restricts calling 900 dial service numbers.

- 1 Press [MENU] then enter your password.
- 2 Press then select "Allow" or "Restrict" with the Navigation Key.
 - Allow : Allows calls to a 900-dial service.
 - Restrict : Restricts calls to a 900-dial service.
- 3 To save, press [OK].

LONG DISTANCE

Restricts calling long distance numbers – the phone is limited to calling numbers within the area.

- 1 Press [MENU] then enter your password.
- 2 Press then select "Allow" or "Restrict" with the Navigation Key.
 - Allow : Allows a long distance call.
 - Restrict : Restricts a long distance call.
- 3 To save, press [OK].

CHANGE CODE

Changes your 4-digit password.

- 1 Press [MENU] then enter your password.
- 2 Press .
- 3 Enter a new password then press [OK].
- 4 Enter the new password again and press [OK].

70

SETTINGS

SPECIAL #'S

Stores 3 phone numbers that can be called even in the lock mode.

- 1 Press [MENU] then enter your password.
- 2 Press then select a location with the Navigation Key.
- 3 Press [SET] and input a phone number, press [OK] again to save.

ERASE ALL

Clears all phone book entries and downloaded entries.

- 1 Press [MENU] then enter your password.
- 2 Press .
- 3 Press [CHECK] to check "Phone Book" or "Downloads" then press [OK] to erase all the items in those categories.

71

SETTINGS

RESET PHONE

Resets phone to default settings.

- 1 Press [MENU] then enter your password.
 - 2 Press .
 - 3 Select "Yes" or "No" with the Navigation Key. Press [OK].
- When you select "Yes" and [OK], you will see "Reset Phone! this will reset to default settings" on the display.
- 4 To reset the phone, press [OK].

SETTINGS

OTHERS

ANSWER OPTIONS

CALL ANSWER

To select an answer mode:

- 1 Press [MENU] .
- 2 Select "Any Key" or "Send Key" with the Navigation Key.
 - Any Key : Press any key to answer an incoming call except , , , and .
 - Send Key : Press only to answer a call.
- 3 To save, press [OK].

ACTIVE FLIP

To select Active Flip Answer mode:

- 1 Press [MENU] .
- 2 Select "On" or "Off" with the Navigation Key.
- 3 To save, press [OK].

- When Active Flip On is selected, an incoming phone call can be answered simply by opening the phone.
- When Active Flip Off is selected, you will need to open the phone and use the Answer mode you have selected.

SETTINGS

AUTO ANSWER

Automatically answers a call after a preset amount of time.
Auto Answer only works when the phone is open.

1 Press [MENU] .

2 Select one of the following with the Navigation Key.

Off/5 Secs/10 Secs/18 Secs.



This function will not be active when you select Vibrate, Silent, Etiquette or Ringer off as a ringer mode.

3 To save, press [OK].

AUTO RETRY

Automatically redials a call up to 5 times after a set time interval.

1 Press [MENU] .

2 Press the Navigation Key left or right to choose the amount of time.
(Off, 3 Secs, 5 Secs, 7 Secs or 10 Secs.)

3 When a time is chosen for retry time, the repeat field is shown. Press the Navigation Key down to highlight the repeat field. Press the Navigation Key left or right to choose the number of repeats. (1 time, 3 times or 5 times).

4 To save, press [OK].

SETTINGS

LANGUAGE

Selects the language in which letters are displayed on the screen.

1 Press [MENU] .

2 Select either “English” or “Spanish” with the Navigation Key.

3 To save, press [OK].

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

1 Press [MENU] .

2 Select “Standard” or “Enhanced” with the Navigation Key.

3 To save, press [OK].

“Enhanced” : Makes it more difficult to wire tap.

SETTINGS

TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

- 1 Press [MENU] .
- 2 Select one of the following options (TTY Off / TTY+TALK / TTY+HEAR / TTY Full) with the Navigation Key then press [OK].

LOCATION

To determine whether or not the network system can detect your position:

- 1 Press [MENU] .
- 2 Select "911 Only" or "Location On" with the Navigation Key.
 - 911 Only : Your location will be hidden from network & application except 911.
 - Location On : Your location is now available to the network.
- 3 To save, press [OK].

SETTINGS

SYSTEM

SET MODE

Selects the Preferred System.

- 1 Press [MENU] .
- 2 Select one of the following options (Automatic B /Automatic A /Home Only) with the Navigation Key then press [OK].

- Automatic B : Scan the radio channels based on the Automatic B setting.
- Automatic A : Scan the radio channels based on the Automatic A setting.
- Home Only : Only within your home area or home affiliated area.

NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- 1 Press [MENU] .
- 2 Select "Yes" or "No" then, press [OK] to save it.

SETTINGS

CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.

- 1 Press [MENU] .
- 2 Select "NAM1-Midwest" or "NAM2-Midwest" then press [OK] to save it.

PRL ID

Displays the phone's PRL (Preferred Roaming List).

- 1 Press [MENU] .
- 2 To return to the previous page, press [OK].

ERI BANNER

- 1 Press [MENU] .
- 2 Select "On" or "Off" with the Navigation Key.
- 3 To save, press [OK].

SETTINGS

PHONE INFO.

Displays the version of your phone:

S/W VERSION

- 1 Press [MENU] .
- 2 The software version appears.
- 3 Press [OK].

H/W VERSION

- 1 Press [MENU] .
- 2 The hardware version appears.
- 3 Press [OK].

BREW VERSION

- 1 Press [MENU] .
- 2 The "BREW" software version appears.
- 3 Press [OK].

UTILITIES

SCHEDULE

Sets an event and reminds you of that event.

ADD NEW PLAN

- 1 Press [MENU] or .
- 2 Move the Navigation Key left, right, up or down to choose a date in the calendar then press [OK].
- 3 The date field is highlighted. Press the Navigation Key down to set the alarm options.

DATE SETTING

Use the keypad to change or enter the date then press [OK].

TIME SETTING

Use the keypad to set a time and to select "AM" or "PM" then press [OK].

PLAN SETTING

Use the keypad to input a plan message then press [OK].

SETTING

Select an alert time interval option (On Time, 10 Min Before, 30 Min Before, 1 Hour Before, No Alarm) by pressing the Navigation Key left or right.

RINGER SETTING

To set a Ringer, press [MENU], then select "Default" or "Change" using the Navigation Key. To save it press [SELECT].

- Default : To set default ringer type.
- Change : Choose a ringer type from the list.

UTILITIES

- 4 Press [SAVE] to save it or to return to the calendar.
- 5 The date of the event will be marked on your calendar.

VIEW PLAN

- 1 To view the Event List, press [MENU] or .
- 2 Use the Navigation Key to choose an event then press [OK] or [ERASE]. Press [MENU], then select "Erase All" using the Navigation Key, "Erase all plans?" will appear. Press [OK] to delete.

ALARM

You can set up to 3 alarms.

- 1 To display alarm entries, press [MENU] .
- 2 Select one of the entries using the Navigation Key. To set a new alarm, choose alarm 1, 2 or 3. To edit an existing alarm, select that alarm. Press [OK].
- 3 The setting field will be highlighted. Press the Navigation Key down to select alarm options.

SETTING

Use the Navigation Key to select a setting for the alarm (Once, Daily, Weekly, Monthly, Off).

UTILITIES

DATE SETTING

Use the keypad to change or enter the date for the alarm then press [OK].

If weekly is chosen for setting, date field becomes day of the week field.

- Once: Enter a date.
- Daily: Select a time.
- Weekly: To select "Monday", "Tuesday", "Wednesday", "Thursday", "Friday", "Saturday", "Sunday".
- Monthly: Select 1 - 31.
- Off

TIME SETTING

Use the keypad to set a time for the event and to select "AM" or "PM", then press [OK].

SNOOZE SETTING

Use the Navigation Key to select a Snooze setting (Off, 1 time after 5 min, 1 time after 10 min, 3 times by 5 min).

RINGER SETTING

To set a "Ringer" press [MENU], then select "Default" or "Change" using the Navigation Key. To save it, press [SELECT].

- Default : To set default ringer type.
- Change : To select a custom ringer from the list.

PLAN SETTING

Using the keypad, input an alarm message then press [OK].

- To save an alarm setting press [SAVE].

UTILITIES

MEMO PAD

Your phone includes an internal memo pad that can be used to compose and store reminders and notes.

ADD MEMO

To compose a memo (there is an 80-letter limit):

- Press [MENU] .
- Input a new text memo.
(Please refer to page 31 for more details on entering letters, numbers & symbols.)
- To save memo, press [OK].

VIEW MEMO

To view a saved memo:

- Press [MENU] .
 - To erase a memo, press [ERASE].
 - To add a new memo, press [MENU] "New Memo".
 - To erase all memos, press [MENU] "Erase All".
- The list of all memos, in saved order, is displayed. Select a memo then press [OK].
- The selected memo will appear. To edit it, press [MENU], select "Edit" and input a new text memo, then press [OK] to save it.

SETTINGS

To select memo pad background image:

- Press [MENU] .
- Select (Paper/Pattern/Sea/Sky/Flower) by pressing Navigation Key left or right then press [OK].

UTILITIES

CALCULATOR

To access the calculator:

- 1 Press [MENU] .
- 2 Follow the instructions below to calculate $8*6\div 4-2.5=9.5$

Input 8.
Move the Navigation Key rightward.
Input 6 then press the Navigation Key.
Move it leftward.
Input 4 then press the Navigation Key.
Move it downward.
Input 2 then press the to input (.).
Press 5.
Then press and you will see the answer.



- 3 To reset, press [RESET].

WORLD CLOCK

To display the time and date in pre-programmed cities:

- 1 Press [MENU] .
- 2 Select a city with the Navigation Key.
- 3 The world map appears with the city, its date and time.

- Use the Navigation Key to select another city.

NOTE As the daylight saving time is not applied, the time may be different from the actual time during DST.

- 4 To return to the previous page, press [OK].

UTILITIES

STOP WATCH

Simultaneously times up to six different events. To operate the stop watch:

- 1 Press [MENU] .
- 2 To measure a time period.
 1. To start the stop watch, press [START].
 2. To pause it, press [STOP].
 3. To resume it, press [START].
To reset it, press [RESET].
To return to the previous page, press [EXIT].
- 3 To time up to six events at once:
 1. To start, press [START].
 2. To stop a time period and continue measuring another one, press [CONT].
 3. To stop the second and continue measuring a third one, press [CONT].
 4. To measure up to six time periods, repeat the above steps.
 5. To stop the stop watch, press [STOP].
 6. To review the results, press [VIEW].
 7. To return to the stop watch, press [OK].
 8. To reset it, press [RESET].

MEMO

Chapter 5

VOICE SERVICE

This chapter addresses Voice Service, an advanced feature that allows you to place calls using your voice. With Voice Memo (VM) you can record voice messages and set the Answering Machine. Topics include:

- VOICE TOOLS MENU
- VOICE RECOGNITION MODE

VOICE TOOLS MENU

VOICE MEMO

Voice Memo allows you to record a reminder message that can be up to 60 seconds. To record a memo:

- 1 To start Tools menu, press [MENU] .
- 2 To enter a voice memo, press .
 - 1.1. To record a voice memo, press .
Instructions will be displayed and you will hear “Please record at the tone.”
 - 1.2. To stop recording a memo, press [STOP] or [PAUSE/RESUME].
 - 1.3. Press [MENU] after recording a voice memo to “Review” or “Re-record.”
 - 1.4. Press [SAVE] to input a “Voice Memo” title, then press [OK]. (See page 31 for more information on entering letters, numbers and symbols.)
2. To play voice memo, press .
Select the message you want to play then press [PLAY] or press [MENU] to
 1. Edit Title.
Press [ERASE] to erase the memo.
3. To play speaker mode, press .
Select the message you want to play then press [PLAY] or press [MENU] to
 1. Edit Title.
To erase the memo, press [ERASE].
4. To erase all voice memos, press .
“Erase all voice memos?” will be displayed.
To erase all voice memos, press [OK].

VOICE TOOLS MENU

VOICE DIAL

Voice Dial allows you to call a person by simply saying their name. To access Voice Dial:

- 1 To start Voice Tools menu, press [MENU] .
- 2 To enter a voice dial, press .
- 3 1.1. To record a voice dial, press .
The phone book list will be displayed alphabetically. Select a name then press [OK]. Instructions will be displayed and you will hear “Name Please”.
- 1.2. Say the name for the voice tag and repeat the name when prompted. You will hear “Added”.
2. To play a voice dial, press .
Highlight the voice tag you want to play then press [PLAY] or press [ERASE].
3. To play speaker mode, press .
Highlight the voice tag you want to play then press [PLAY] or press [ERASE].
4. To erase all voice dials, press .
“Removing all voice tags Proceed?” will be displayed.
Press [OK].

VOICE TOOLS MENU

TRAIN WORDS

Train allows you to use Control words to make a call without using the keypad.

YES

Use to train or untrain the Voice Recognition with the control word, "Yes".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word yes".
- 3 Say "Yes". You will hear "Again". Say "Yes" again. You will hear "Training word successful".

NO

Use to train or untrain the Voice Recognition with the control word, "No".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word no".
- 3 Say "No". You will hear "Again". Say "No" again. You will hear "Training word successful".

VOICE TOOLS MENU

WAKE-UP

Use to train or untrain the Voice Recognition with the control word, "Wake-Up".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word Wake-Up".
- 3 Say "Wake-Up". You will hear "Again". Say "Wake-Up" again. You will hear "Training word successful".

UNDO TRAIN ALL

Undo Train All erases all "trained" words.



 

- 1 Press [MENU] .
- 2 "Undo voice recognition for all procedures?" will be displayed. Press [OK] to undo all trained words.

VOICE TOOLS MENU

VOICE SETTING





SET ACTIVE

Allows the user to activate or deactivate voice dial service.

- 1 Press  [MENU]  .
- 2 Select "Active Flip" or "Send Key" by pressing the Navigation Key left or right.
- 3 To save, press  [OK].

HFK MODE

While using the Hands Free Kit, activates or deactivates the voice recognition function.

- 1 Press  [MENU]  .
- 2 Scroll to HFK Mode. Select "On" or "Off" by pressing the Navigation Key left or right.
- 3 To save, press  [OK].

VOICE RECOGNITION MODE

Voice Recognition (VR) enables you to place calls using your voice and to record voice memos. Only phone numbers with saved voice tags can be called in VR mode. See page 89 for more on creating voice tags.

- 1 Press and hold  until your phone turns to Voice Recognition mode.




If no recorded voice dial, "No entries recorded" message will be displayed.

- 2 "Please say the name after the prompt tone" will be displayed and you will hear "Name please".



NAME

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 If you say a name or tag that is already in the phone book, the number and name will be displayed and you will hear "Calling (name)."

MEMO

Chapter 6

VOICE MAIL AND TEXT MESSAGING

This chapter addresses Voice Mail and Text Messaging functions including:

- WHEN A NEW MESSAGE ARRIVES
- VOICE MAIL
- NEW TEXT MSG
- INBOX
- OUTBOX
- WEB ALERTS
- SAVED
- QUICK TEXT
- ERASE ALL
- SETTINGS

WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.



- 2 To display the message, press [READ].

VOICE MAIL

Displays the number of voice mails and accesses them by pressing [V].

- 1 To access your voice mail, press [MENU] [3 REF] [2 ABC] or [2 ABC].

FIRST TIME USER

- 1 Dial MDN(My Directory Number) then press [V].
- 2 At the recording, press [END].
- 3 To set up your account follow the voice tutorial.

EXISTING USER

- 1 Dial MDN(My Directory Number) then press [V].
- 2 At the recording, enter your 4 digit password, then press [END].
- 3 To listen to new messages, press [1 MSG].

NEW TEXT MSG

To send a new message:

- 1 Press [MENU] [3 REF] [1 MSG] or [1 MSG].
- 2 Under "Send To", input the phone number and press [OK] [OK].
 - By pressing [MENU] [MENU], you can choose from the following:
 1. Find : Search for a phone number stored in the phone book.
 2. Save : Stores the phone number the message was sent to.
 3. Msg. Group : Select all the phone numbers in a group.
- 3 Under "Message", input a new TEXT message then press [OK] [OK].

(Please refer to page 31 for more details on entering letters, numbers and symbols.)

- By pressing [MENU] [MENU], in the message input screen you can choose from the following:
 1. Insert Quick Text: Inserts canned text into a Text Msg.
 2. Insert Sound: Inserts sound into a Text Msg.
 3. Insert Picture: Inserts picture into a Text Msg.
 4. Insert Animation: Inserts Animation into a Text Msg.
 5. Save to Quick Text: Saves the written sentences into Quick Text.

- 4 The default call back number is automatically included into the Default CB# field. You can scroll to the number and edit it or simply press [OK] [EDIT].
- 5 Press the Navigation Key down for more fields. Under "Priority", select "Normal" or "Urgent".
- 6 Under "Insert Signature", select "On" or "Off".
- 7.1. To send the text message press [MENU] [MENU], select "Send", then press [OK] [OK].
- 7.2. To save the text message press [MENU] [MENU], select "Save to Outbox", then press [OK] [OK].

INBOX

The Inbox manages received text messages. To access:

1 Press [MENU] or .

- : Urgent New Msg (not read)
- : Urgent Read Msg
- : New Msg (not read)
- : Old Msg (already read)
- : Lock (already read and locked)

2 Select a message then press [OK].
The message is displayed. To delete a message, press [ERASE].

3 Press [MENU].

REPLY

1 Type your reply then press [OK].

REPLY WITH COPY

To reply to a received message and include the received message into the message:

- 1 The default call back number is automatically included into the Default CB# field.
You can scroll to the number and edit it.
- 2 Under "Insert Signature", select "On" or "Off".
- 3 To send the text message, press [MENU] then select "Send", then press [OK].
- 4 To save the text message, press [MENU] and select "Save to Outbox", then press [OK].

INBOX

FORWARD

To forward the text message:

- 1 Input the phone number of the person you are sending the message, then press [OK].
- 2 Input any text message to go along with the forwarded message, then press [OK].

SAVE MEDIA

- 1 Select to save a picture to the media gallery folder.



"Save Media" menu appears only when you receive a pix message or EMS message.

SAVE TO CONTACT

- 1 Select to save number to contacts.

SAVE TO SAVED

- 1 Select to save the text message to your phone.

SAVE TO QUICK TEXT

- 1 Select to save received text msg to "Quick Text".

BLOCK SENDER

- 1 Select to block all incoming messages from addresses on block list.

LOCK & UNLOCK

To lock or unlock the text message:

- 1 Select "Lock" to lock the message or "Unlock" to unlock the message, then press [OK].

OUTBOX

Manages sent text messages or messages waiting to be sent.

CHECKING SENT TEXT MESSAGES

1 Press [MENU] 3 DEF 4 GRT or 4 GRT .



2 2.1. Select a message, then press [OK].
The text message is displayed.

2.2. To erase message, press [ERASE].

RESEND

1 Select to resend a text message.

EDIT MESSAGE

1 To send a message to another person:

2 Input a text message then press [OK].

3 Input the phone number then press [OK].

OUTBOX

SAVE TO CONTACT

1 Select to save number to contacts.

SAVE TO SAVED

1 Select to save the text message to your phone.

LOCK & UNLOCK

1 To lock or unlock the text message:

2 Select "Lock" to lock the message or "Unlock" to unlock the message, then press [OK].

STATE

1 Select to display the status of an outbox message.

NOTE "State" menu appears only when you receive a text message.

WEB ALERTS

WEB ALERTS

- 1 Press [MENU] or .
- 2 To select GoTo, press .
To select Erase Message, press .
- 3 The Web Alerts message will be displayed.

- : Read Message.
- : Unread Message.
- : Displays the remaining text.
- GoTo : Connecting to Selected Site.
- Erase : Erase Selected Message.

SAVED

SAVED

Manages saved messages from the Inbox/Outbox.

- 1 Press [MENU] or .
- 2 2.1. Select a text message then press [OK].
The text message is displayed.
2.2. To erase message, press [ERASE].
- 3 Press [MENU].
- 4 If the text message is saved from the "Inbox" menu. The following menu options will appear.
 - To select inbox menu : Reply, Reply With Copy, Forward, Save Media, Save to Quick Text, Block Sender, Save to Contact, Lock & Unlock

If the text message is saved from the "Outbox" menu. The following menu options will appear.

 - To select outbox menu : Resend, Edit Message, Save to Contact, Lock & Unlock, State
- 5 Select one by pressing [OK].



- "Save Media" menu appears only when you receive a pix message or EMS message.
- "State" menu appears only when you receive a text message.

QUICK TEXT

QUICK TEXT

To edit the Quick Text message you have saved:

- 1 Press [MENU] or or .
- 2 2.1. Select a message from the list.
Press [MENU].
2.2. To add a new Quick Text message,
press [ADD NEW]. To edit the Quick
Text message you have selected,
press [EDIT].
- 3 To erase the saved Quick Text message,
press [ERASE].

ERASE ALL

ERASE MESSAGES

- 1 Press [MENU] or .
- 2 1. To erase all the inbox messages, press .
 - Old Inbox : To erase all messages already read.
(However, the locked Message(s) will not be deleted).
 - Entire Inbox : To erase all messages.
2. To erase all the outbox messages, press .
3. To erase the saved messages, press .
- 3 Select "OK" or "Cancel" with [OK]
or [CANCEL].

SETTINGS

Manages messaging features through various features.

SAVE SENT MSG

- 1 Press [MENU] 3 DEF 9 WXYZ or 9 WXYZ.
- 2 Press 152.
Select either “Off”, “On” or “Prompt” with the Navigation Key.
- 3 Press [OK].

AUTO ERASE

Automatically erases inbox/outbox messages when new messages arrive.

INBOX

- 1 Press [MENU] 3 DEF 9 WXYZ 2 ABC or 9 WXYZ 2 ABC.
- 2 Press 152.
Select “Disable” or “Enable” with Navigation Key.
- 3 Press [OK].

OUTBOX

- 1 Press [MENU] 3 DEF 9 WXYZ 2 ABC or 9 WXYZ 2 ABC.
- 2 Press 2 ABC.
Select “Disable” or “Enable” with Navigation Key.
- 3 Press [OK].

SETTINGS

DEFAULT CALLBACK

Edits a default callback number so that the recipient can callback or reply.

- 1 Press [MENU] 3 DEF 9 WXYZ or 9 WXYZ.
 - 2 Press 3 DEF.
Input a callback number, then press [OK].
- You can look it up from the phone book by pressing [FIND].

ALERT

- 1 Press [MENU] 3 DEF 9 WXYZ or 9 WXYZ.
 - 2 Press 4 ON.
Select one from the “Voice Mail”, “Messages” or “Remind” with the Navigation Key.
- Voice Mail: Select “Tone 1, 2, 3, 4, 5”.
 - Messages: Select “Tone 1, 2, 3, 4, 5”.
 - Remind: Select “On” or “Off”.
- 3 Press [OK].

SETTINGS

EDIT SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

- 1 Press [MENU] or .
- 2 Press . To input "Signature", put the cursor on Edit Signature then enter Signature Edit window by using right or left direction keys.
- 3 To activate Signature function, put the cursor on Insert Signature then select "On" by using right or left direction keys. To deactivate Signature function, select "Off".
- 4 Press [OK].

DIRECT VIEW

If the Direct View is set to on, the user will be able to view the message by pressing the read key. If the Direct View is set to off, the user can view the message by entering SMS Menu-> Inbox.

- 1 Press [MENU] or .
- 2 Press . Select "On" or "Off" with the Navigation Key.
 - ON : Set to read msg without entering inbox in SMS menu.
 - OFF : Set to read msg after entering inbox in SMS menu.
- 3 Press [OK].

SETTINGS

ENTRY MODE

Sets an Entry Mode as a default. For example, if T9 Mode is the default, its icon will appear.

- 1 Press [MENU] or .
- 2 Press . Select "Alpha Mode" or "T9 Mode" with the Navigation Key.
- 3 Press [OK].

BLOCK OR UNBLOCK

To block all incoming messages from the phone number or email address of the sender.

- 1 Press [MENU] or .
- 2 Then press . Select "Block", "Unblock" or "View List of Blocked Addresses" with the Navigation Key.
 - BLOCK : Enter the address to block.
 - UNBLOCK : Enter the address to remove from block.
 - VIEW LIST OF BLOCKED ADDRESSES : Display the blocked list on LCD.
- 3 Press [OK].

MEMO

Chapter 7

MOBILE WEB

This chapter addresses Internet services and web browsing.
For more detailed information contact your service provider.

- LAUNCHING MOBILE WEB
- BROWSER MENU

CH
6

CH
7

110

111

LAUNCHING MOBILE WEB

ACCESS THE INTERNET

- To start your Internet browser and access websites through your wireless handset press [MENU] or .

BROWSER MENU

The browser menu lists the actions necessary to operate the browser. To access, press [MENU] .

HOME

When the home item is selected from the browser menu, the phone displays the home page.

- To display the homepage, press [MENU] , then press .

BACK

- To return to the previous page, press [MENU] , then press .

FORWARD

- To forward to the next page, press [MENU] , then press .

BROWSER MENU

REFRESH

Selecting the refresh item from the browser menu refreshes the current page.

- To select “Refresh”, press [MENU] , then press .

HISTORY

When the history item is selected from the browser menu, the browser is displayed with the browser version and copyright information. The device layer version is also displayed.

- To select “History”, press [MENU] , then press .

ADDRESS

Selecting the “Address” action displays the URL of the current page.

- To select “Address”, press [MENU] , then press .

CLEAR MEMORY

- To clear browser memory, press [MENU] , then press .

SETTINGS

- To select “Settings”, press [MENU] , then press .

BROWSER MENU

ADVANCED

Selecting the advanced item in the browser menu displays the advanced menu items.

- To select "Advanced", press [MENU]
5 JK 1 [OK] 2 ABC, then press 9 WXYZ.

EXIT

- To exit browser, press [MENU]
5 JK 1 [OK] 2 ABC, then press 0 OFF.

Chapter 8

SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- 12 MONTH LIMITED WARRANTY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

*Read This Information Before Using Your Handheld
Portable Cellular Telephone*

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

1* : American National Standards Institute.
2* : National Council on Radiation protection and measurements.
3* : International Commission on Nonionizing Radiation Protection.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES







Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

-  DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
-  DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
-  DO NOT expose this equipment to rain or spilled beverages.
-  DO NOT use unauthorized accessories.
-  DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
-  DO NOT short-circuit the battery terminals with metal items etc.

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at www.fcc.gov

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.15 W/Kg and when worn on the body, as described in this user guide, is 0.393W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4TX-110C.

IC 8

SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stancial margin of safety to give additional protection for the public and to account for any variations in measurements.

IC 8

FDA CONSUMER UPDATE



U.S. Food and Drug Administration - Center for Devices and Radiological Health
Consumer Update on Wireless Phones

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
 - Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;
- and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones.

FDA CONSUMER UPDATE

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at a far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

FDA CONSUMER UPDATE

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wire-less telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

FDA CONSUMER UPDATE

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wire-less phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wire-less phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrpb.org.uk>)

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



UTSTARCOM/AUDIOVOX COMMUNICATIONS

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
UTStarcom Canada Company
5155 Spectrum Way, Unit #5, Mississauga, Ontario
Canada L4W 5A1, 800-465-9672

12 MONTH LIMITED WARRANTY

UTStarcom/Audiovox Communications (the Company) warrants to the original retail purchaser of this Audiovox handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) months period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.

12 MONTH LIMITED WARRANTY

In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

IN USA : UTStarcom/Audiovox Communications
555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA : UTStarcom Canada Company
5155 Spectrum Way, Unit #5
Mississauga, Ontario L4W 5A1
(800) 465-9672

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>