

Lenovo E46

User Guide v1.0

lenovo

Notes

- Before using this information and the product it supports, be sure to read Important safety information and Notices in the User Guide attached with the computer first.
- Some instructions in this guide may assume that you are using Windows® 7. If you are using other Windows operating system, some operations may be slightly different. If you are using other operating systems, some operations may not apply to you, but it won't substantially affect your use of this computer.
- The features described in this guide are common to most models. Some features may not be available on your computer and/or your computer may include features that are not described in this user guide.

This manual is for your reference only.

For more information, please see the User Guide attached with the computer.

First Edition (Jan. 2010)

© Copyright Lenovo 2010.

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure. LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.


Contents

Chapter 1. Getting to know your computer	1
Top view	1
Left-side view	4
Right-side view.....	6
Front view	7
Rear view.....	8
Bottom view	9
Chapter 2. Learning the basics	11
First use.....	11
Using the touchpad.....	14
Using the keyboard.....	15
Special buttons.....	18
System status indicators.....	20
Securing your computer.....	21
Connecting external devices.....	23
Chapter 3. Using the Internet	27
Wired connection	27
Wireless connection	29
Index	31

Contents

Chapter 1. Getting to know your computer

 ■ ■ Top view

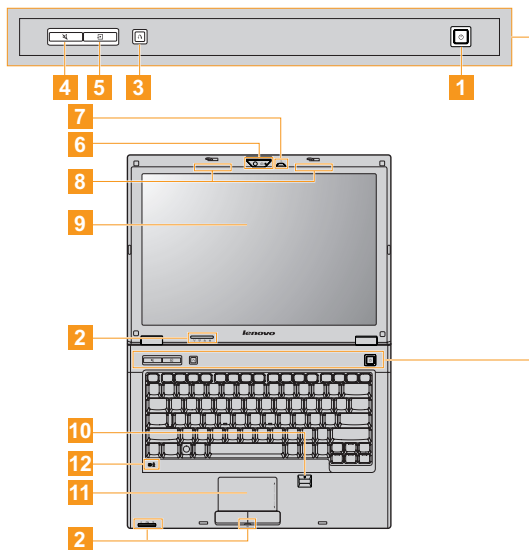

Note: The illustrations in this manual may differ from the actual product. Please refer to the actual product.

Chapter 1. Getting to know your computer

⦿ Attention:

- Do NOT open the display panel beyond 180 degree. When closing the display panel, be careful NOT to leave pens or any other objects in between the display panel and the keyboard. Otherwise, the display panel may be damaged.

1 Power button Press this button to turn on the computer.

2 System status indicators For details, see “System status indicators” on page 20.

3 OneKey Rescue System button Press this button to open OneKey Rescue System (If OneKey Rescue System has been preinstalled) when the computer is powered off.

Note: For details, see “OneKey Rescue System” in the User Guide attached with the computer.

4 Mute button Use this button to mute/unmute the computer.

5 Custom button Press this button to set and launch a self defined program, file or a Web site.

 
6 Integrated camera (specific models only) Use the camera for video communication.

7 Keyboard light (specific models only) The keyboard light illuminates the keyboard in the dark.

8 Wireless LAN antennas (specific models only) The built-in antennas ensure optimal reception of wireless communication radio.

- 9 Computer display** The LCD display provides brilliant visual output.
- 10 Fingerprint reader (specific models only)** With the fingerprint reader you can register fingerprints and use them as passwords to secure your computer.
- 11 Touchpad** The touchpad functions as a conventional mouse.
- Note:** For details, see “Using the touchpad” on page 14.
- 12 Built-in microphone** The built-in microphone (with noise reduction) can be used for video conferencing, voice narration, or simple audio recordings.

Left-side view

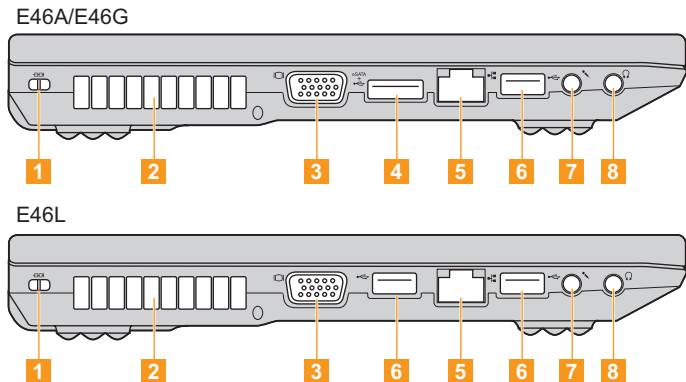

- 1 Kensington slot** Attach a security lock (not supplied) here.

Note: For details, see “Attaching a security lock (not supplied)” on page 21.

- 2 Fan louvers** Dissipate internal heat.

Note: Make sure that none of the fan louvers are blocked or else overheating of the computer may occur.

- 3 VGA port** Connects to external display devices.

- 4 eSATA/USB combo port** Connects to eSATA or USB devices.

Note: For details, see “Connecting a universal serial bus (USB) device” on page 26.

- 5 RJ-45 port** Connects to an Ethernet network.

Note: For details, see “Wired connection” on page 27.

- 6 USB port** Connects to USB devices.

Note: For details, see “Connecting a universal serial bus (USB) device” on page 26.

 
- 7 Microphone jack** Connects to an external microphone.

- 8 Headphone jack** Connects to an external headphone.

○ **Attention:**

- Listening to music at high volume over extended periods of time may damage your hearing.

■ ■ Right-side view

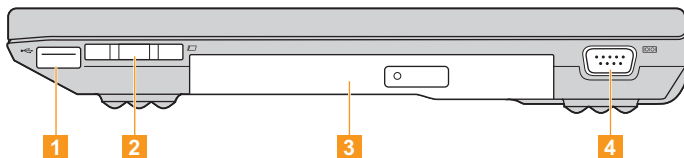

- 1 USB port** Connects to USB devices.

Note: For details, see “Connecting a universal serial bus (USB) device” on page 26.

 
- 2 ExpressCard® slot** Insert ExpressCard device here.

Note: For details, see “Inserting an ExpressCard/34 device” on page 25.

- 3 Optical drive (specific models only)** Your computer comes with an optical drive, such as a CD/DVD drive.

- 4 Serial port** Connects to devices with serial port.

Front view

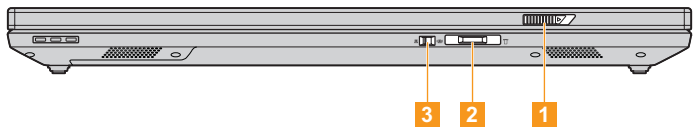


- 1 Display latch** Release this latch to open the display.
- 2 Memory card slot** Insert memory cards (not supplied) here.

Note: For details, see “Using memory cards (not supplied)” on page 23.

- 3 Integrated wireless device switch** Use this switch to turn on/off the wireless radio of all wireless devices on your computer.

 ■ ■ Rear view

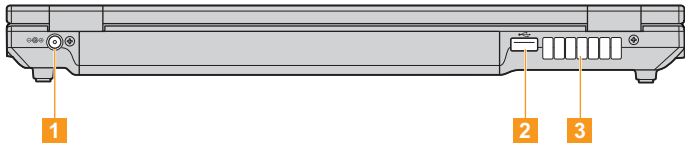

- 1 AC power adapter jack** Connect the AC adapter here.

Note: For details, see the User Guide attached with the computer.

 
- 2 USB port** Connects to USB devices.

Note: For details, see “Connecting a universal serial bus (USB) device” on page 26.

- 3 Fan louvers** Dissipate internal heat.

Note: Make sure that none of the fan louvers are blocked or else overheating of the computer may occur.

■ ■ Bottom view

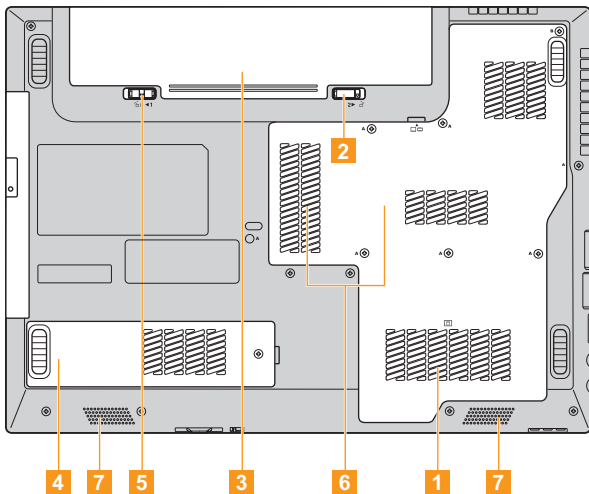

Chapter 1. Getting to know your computer

- 1 Hard disk drive(HDD) compartment**
Houses the computer's hard disk drive.
- 2 Battery latch - spring loaded**
The spring-loaded battery latch keeps the battery pack secured in place.
- 3 Battery pack**
For details, see the User Guide attached with the computer.
- 4 Mini PCI ExpressCard slot compartment**
Houses the computer's wireless module.
- 5 Battery latch - manual**
The manual battery latch is used to keep the battery pack secured in place.
- 6 Central Processing Unit (CPU)/Memory (RAM) compartment**
House the computer's CPU and memory.
- 7 Speakers**
The speakers provide rich and powerful sound.

Chapter 2. Learning the basics

■ ■ First use

■ Read the manuals

Read the supplied manuals before using your computer.

■ Connect to the power

The supplied battery pack is not fully charged at purchase. To charge the battery and begin using your computer, insert the battery pack and connect the computer to an electrical outlet. The battery is automatically charged while the computer is running on AC power.

Install the battery pack

Refer to the supplied User Guide attached with the computer to install the battery pack.

Connect the computer to an electrical outlet

- 1 Connect the power cord to the AC adapter.
- 2 Connect the AC adapter to the AC power adapter jack of the computer firmly.
- 3 Plug the power cord into an electrical outlet.

Chapter 2. Learning the basics

■ Turn on the computer

Press the power button to turn on the computer.

■ Configure the operating system

You may need to configure the operation system when it is first used. The configuration process may include the procedures below.

- Accepting the end user license agreement
- Configuring the Internet connection
- Registering the operating system
- Creating a user account

■ Putting your computer into standby/sleep state or shutting it down

When you finish working with your computer, you can put it into standby/sleep state or shut it down.

Putting your computer into standby/sleep state

If you will be away from your computer for only a short time, put the computer into standby/sleep state.

When the computer is in standby/sleep state, you can quickly wake it to resume use, and bypass the startup process.

To put the computer into standby state, do one of the following.

- Click **start** and select **Stand By** from the **Turn Off Computer** menu.
- Press **Fn + F1**.

Note: Wait until the power indicator light starts blinking (indicating that the computer is in standby state) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

 
To wake the computer, do one of the following.

- Press the power button.
- Press any key on the keyboard.

■ Shutting down your computer

If you are not going to use your computer for a day or two, shut it down. To shut down your computer, click **start** and select **Turn Off** from the **Turn Off Computer** menu.

■ ■ Using the touchpad

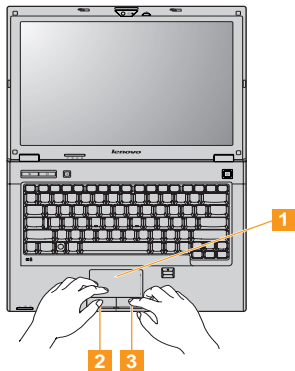

1 Touchpad

To move the cursor on the screen, slide your fingertip over the pad in the direction in which you want the cursor to move.

2 Left click button

The function corresponds to that of the left mouse button on a conventional mouse.

3 Right click button

The function corresponds to that of the right mouse button on a conventional mouse.

Note: You can enable/disable the touchpad using **Fn+F8**.

The touchpad may be disabled when manipulated with two fingers together.

 
■ ■ Using the keyboard


Your computer has a numeric keypad and function keys incorporated in its standard keyboard.

■ Numeric keypad

The keyboard has keys that, when enabled, work as a 10-key numeric keypad.

To enable or disable the numeric keypad, press **Fn+Insert**.

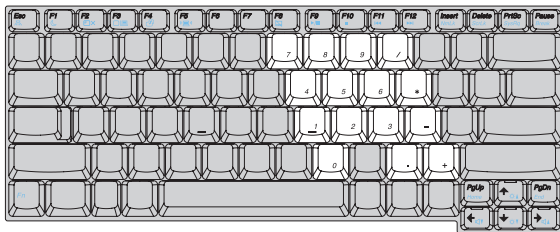


Note: The  indicator will light on if the numeric keypad is enabled.

Chapter 2. Learning the basics

■ Function key combinations

 
Through the use of the function keys, you can change operational features instantly. To use this function, press and hold **Fn** **1**; then press one of the function keys **2**.

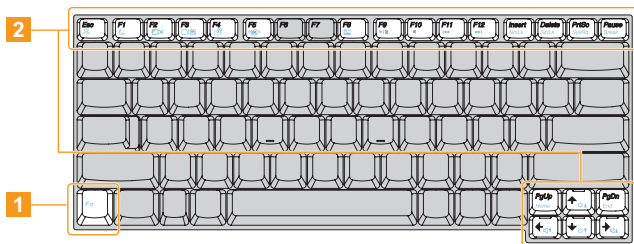

The following describes the features of each function key.

Fn + Esc:	Turn on/off the keyboard light. (specific models only)
Fn + F1:	Enter standby/sleep mode.
Fn + F2:	Turn on/off the backlight for the LCD screen.
Fn + F3:	Shift to other connected display devices.
Fn + F4:	Open the interface for display resolution settings.
Fn + F5:	Open the interface for integrated wireless devices settings (enable/disable).
Fn + F8:	Enable/Disable the touchpad.
Fn + F9:	Start/Pause playback of Windows Media Player.
Fn + F10:	Stop playback of Windows Media Player.
Fn + F11:	Skip to the previous track.
Fn + F12:	Skip to the next track.
Fn + Insert	Enable/Disable the numeric keypad.
Fn + Delete	Enable/Disable the Scroll Lock.
Fn + PrtSc:	Activate the system request.
Fn + Pause	Activate the break function.
Fn + ↑ / ↓ :	Increase/Decrease display brightness.
Fn + ← / → :	Decrease/Increase volume level.

 Special buttons

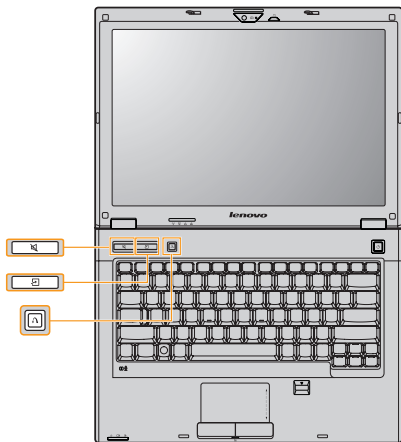

Mute button

Mute/Unmute the computer.

Custom button

Under Windows operating systems, press this button to launch a self-defined program, file or a Web site.

Note: To re-define the Custom button, select **Self-defined program setting** (start → All Programs → Lenovo → Energy Management → Self-defined program setting).

 
OneKey Rescue System button









- When the computer is powered-off, press this button to enter the OneKey Rescue System if Lenovo OneKey Rescue System has been preinstalled.
- Under Windows operating systems, press this button to start Lenovo OneKey Recovery.

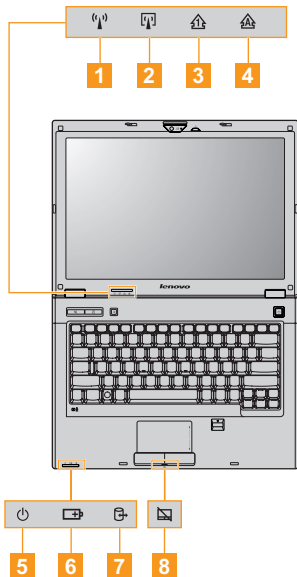Note: For details, see "OneKey Rescue System" in the User Guide attached with the computer.

System status indicators

  These indicators inform you of the computer status.



- 1 **Wireless communication indicator** 
- 2 **Bluetooth indicator** 
- 3 **Num lock indicator** 
- 4 **Caps lock indicator** 
- 5 **Power status indicator** 
- 6 **Battery status indicator** 
- 7 **Hard disk drive indicator** 
- 8 **Touchpad indicator** 

■ ■ Securing your computer

This section provides information about how to help protect your computer from theft and unauthorized use.

■ Attaching a security lock (not supplied)

You can attach a security lock to your computer to help prevent it from being removed without your permission. For details on installing the security lock, please refer to the instructions shipped with the security lock that you have purchased.

Refer to the “Right-side view” on page 6 for the location of the Kensington slot.

Notes:

- Before purchasing any security product, verify that it is compatible with this type of security keyhole.
- You are responsible for evaluating, selecting, and implementing the locking devices and security features. Lenovo offers no comment, judgement, or warranty regarding the function, quality or performance of locking devices and security features.

Chapter 2. Learning the basics

■ Using passwords

Using passwords helps prevent your computer from being used by others. Once you set a password and enable it, a prompt appears on the screen each time you power on the computer. Enter your password at the prompt. The computer cannot be used unless you enter the correct password.

Note: This password can be from one to seven alphanumeric characters in any combination.

For details about how to set the password, see the help to the right of the screen in **BIOS setup utility**.

Note: To enter **BIOS setup utility**, press **F2** when the Lenovo logo appears on the screen while the computer is starting up.

■ Fingerprint reader

With the fingerprint reader, in addition to registering fingerprint information and using it as a password for Windows operating system or Web site logon, you can also launch applications quickly and encrypt private data with your fingerprint to secure your computer. For more details on fingerprint reader, see the Help file of your software.

■ ■ Connecting external devices

Your computer has a wide range of built-in features and connection capabilities.

■ Using memory cards (not supplied)

Your computer supports the following types of memory cards:

- Secure Digital (SD) card
- Secure Digital High Capacity (SDHC) card
- MultiMediaCard (MMC)
- Memory Stick (MS)
- Memory Stick PRO (MS PRO)
- xD picture (xD) card
- xD picture type card

Notes:

- Insert ONLY one card in the slot at a time.
- This card reader does not support SDIO devices (e.g., SDIO Bluetooth, etc.).

Inserting a memory card

- 1 Push the dummy card until you hear a click. Gently pull the dummy card out of the memory card slot.

Note: The dummy card is used for preventing dust and small particles from entering the inside of your computer when the memory card slot is not in use. Retain the dummy card for future use.

- 2 Push the card directly into the memory card slot until it reaches the end.

Removing a memory card

- 1 Push the memory card until you hear a click. Gently pull the memory card out of the memory card slot.
- 2 Insert the dummy card to the memory card slot.

Note: Before removing the memory card, unplug it by Windows **Safely Remove Hardware** utility to avoid data corruption.

■ Connecting an ExpressCard device

Your computer comes with an ExpressCard/34 slot used for connecting ExpressCard devices.

Note: Only use the ExpressCard/34 devices.

Inserting an ExpressCard/34 device

- 1 Push the dummy card until you hear a click. Gently pull the dummy card out of the ExpressCard slot.
- 2 Slide the ExpressCard device in with the front label facing upward until it clicks into place.

Removing an ExpressCard/34 device

- 1 Push the ExpressCard device until you hear a click.
- 2 Gently pull the ExpressCard device out of the ExpressCard slot.

Notes:

- Before removing the ExpressCard/34 device, unblock it by Windows **Safely Remove Hardware** utility.
- The dummy card is used for preventing dust and small particles from entering the inside of your computer when the ExpressCard slot is not in use. Retain the dummy card for future use.

Chapter 2. Learning the basics

■ Connecting a universal serial bus (USB) device


Your computer comes with three USB ports compatible with USB devices.

Note: When using a high power consumption USB device such as USB ODD, use the external device's power adapter. Otherwise, the device may not be recognized, or system shut down may result.

■ Connecting a *Bluetooth* enabled device (specific models only)

If your computer has an integrated *Bluetooth* adapter card, it can connect to and transfer data wirelessly to other *Bluetooth* enabled devices, such as notebook computers, PDAs and cell phones. You can transfer data between these devices without cables at up to 10 meters range in open space.

Enabling *Bluetooth* communications on your computer

- 1 Slide the integrated wireless device switch to .
- 2 Press **Fn + F5** to make configuration.

Note: When you do not need to use the *Bluetooth* function, turn it off to save battery power.

Chapter 3. Using the Internet

As a global network, the Internet connects computers worldwide, providing services such as e-mailing, information searching, electronic commerce, Web browsing and entertainment.

You can connect the computer to the Internet in the following ways:

Wired connection: uses physical wiring to connect.

Wireless network technology: connect without wiring.

■ Wired connection


Wired connection is a reliable and safe way to connect the computer to the Internet. Generally, the following two accessing methods are widely used.

Cable	Cable Internet services use a cable modem connected to the residential cable TV line.
DSL	DSL is a family of related technologies that bring high-speed network access to homes and small businesses over ordinary telephone lines.


Chapter 3. Using the Internet

■ Hardware connection:

 Cable

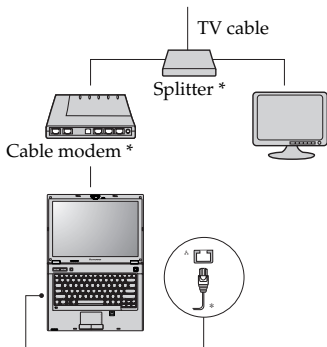

DSL

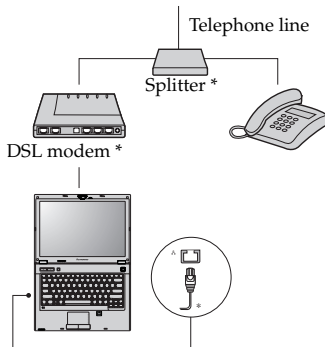 

* Not supplied.

Note: The above diagrams are for reference only. Actual connection method may vary.

■ Software configuration

Consult your Internet Service Provider (ISP) for details on how to configure your computer.

Wireless connection

Wireless connection provides mobile access to the Internet, allowing you to stay online anywhere the wireless signal covers.

Divided by the signal scales, wireless connection to the Internet can be built based on the following standards.

Wi-Fi	Wi-Fi networks cover a small physical area, like a home, office, or small group of buildings. An access point is necessary for the connection.
WiMAX	WiMAX networks connect several Wireless LAN systems to cover a metropolitan area, providing high-speed broadband access without the need for cables.
Mobile Broadband	The Mobile Broadband network provides Internet access to computers, cell phones and other devices over a large geographic area. Mobile networks are used for data transmission, and access is usually provided by a mobile network operator. A Mobile Broadband SIM card is necessary for the connection.


Note: Your computer may not support all wireless connection methods.

Chapter 3. Using the Internet

 
■ Using Wi-Fi/WiMax (specific models only)

Enabling wireless connection

To enable wireless communications, do the following:

- 1 Slide the integrated wireless device switch to .
- 2 Press **Fn + F5** to make configuration.

Hardware connection

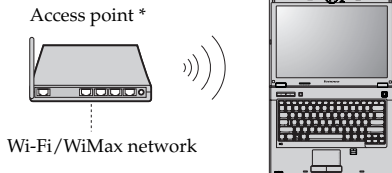

* Not supplied

Software configuration

Consult your Internet Service Provider (ISP) and search Windows Help and Support Center for details on how to configure your computer.

Index

B

Bluetooth
Connecting 26

C

Camera 2, 17
Card reader 23

F

Function key combinations 16

K

Kensington slot 4
Keyboard
Using 15

M

Microphone
Built-in 3

N

Numeric Keypad 15

O

OneKey Rescue System button 2

P

Password
Using 22
Power button 2

S

Security 21

T

Touch pad 14

Index

U

USB port..... 5, 6, 8

W

Wireless LAN
Antennas..... 2

lenovo.



**If your product is not working correctly,
DO NOT RETURN IT TO THE STORE.**

For technical assistance, contact a Lenovo support specialist 24 hours a day by calling toll free **1-877-4 LENOVO (1-877-453-6686)**.

Additionally, you can find support information and updates on the Lenovo Web site located at **<http://consumersupport.lenovo.com>**.

* Only for the users from the United States.

New World. New Thinking.TM
www.lenovo.com

©Lenovo China 2010

lenovo



P/N: 147003151
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>