



# Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para LG 21FG5RL. Encontrarás las respuestas a todas sus preguntas sobre la LG 21FG5RL en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

**Manual de instrucciones LG 21FG5RL**  
**Instrucciones de uso LG 21FG5RL**  
**Manual de usuario LG 21FG5RL**  
**Guía del usuario LG 21FG5RL**  
**Modo de empleo LG 21FG5RL**



Color Television  
**OWNER'S MANUAL**

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.



[Tus instrucciones](#)  
[LG 21FG5RL](#)

**Manual de resumen:**

POWER BUTTON (ON/OFF or Refer to "Turning on/off the TV". ) 2. NUMBER BUTTONS To select the desired channel directly. 3. APC (Auto Picture Control) BUTTON To adjust the factory preset pictures corresponding to the lighting around. 1 2 10 4. MENU BUTTON To display on screen menus. 5. CH(or PR) UP/DOWN (D/E) BUTTONS · To select the desired channel. · To select the desired menu item when menu is displayed on the screen. 3 4 5 6 7 8 16 15 11 12 VOLUME UP/DOWN (F / G) BUTTONS · To increase or decrease volume level. · To enter or adjust the selected menu when menu is displayed on the screen. ENTER (A) BUTTON · To exit from the displayed menu. · To memorize the adjusted menu. · To recall the current TV mode (by remote control only).  
To select the favorite channel. Refer to "Favorite channel memory". 13 14 9 6. FCR (Favorite Channel Review) BUTTON 7. AUTO PRG. /A.PROG (Auto program) BUTTON To memorize channels by AUTO PROGRAM. 8. EYE/ BUTTON (some models) To switch on or off eye picture. Refer to "Enjoying the Eye Function". : No function. 9. REVIEW BUTTON (some models) To return to the previous channel. 10. MUTE BUTTON To mute the sound. Again to restore the muted sound. 11. TV/VIDEO BUTTON (some models) To select TV, VIDEO or COMPONENT mode. 3 1 13 7 3 2 SLEEP POWER TV/VIDEO APC A.PROG MEMORY/ERASE CAPTION 11 14 12 12. CAPTION BUTTON (some models) To select the CAPTION mode. Refer to "Closed caption function". 13. SLEEP BUTTON To set the desired sleep time. 14. MEMORY/ERASE BUTTON (some models) To memorize or erase the desired channel. 15. PICTURE BUTTON To display picture modes one by one. 16. MTS BUTTON (some models) To listen to the MTS sound. 17. (some models) No function. 1 4 7 2 5 8 0 3 6 9 10 MUTE 6 FCR CH 5 9 4 16 15 VOL ENTER VOL CH MENU REVIEW EYE/ MTS PICTURE 8 17 Note: Fitting Batteries in the Remote Control Unit · Open the battery compartment cover on the back side and insert the batteries with correct polarity. · Apply two 1.5V batteries of AAA type.  
Don't mix the used batteries with new batteries Front Panel Information POWER BUTTON (or ON/OFF) Refer to "Turning on/off the TV". STAND BY INDICATOR Illuminates red when the TV is in standby mode. Refer to "Turning on/off the TV". REMOTE CONTROL SENSOR - - TV/VIDEO ( A ) BUTTON To select TV, VIDEO or COMPONENT mode. MENU BUTTON To display on-screen. - CHANNEL UP/DOWN (D/E) BUTTONS · To select the desired channel. · To select the desired menu item when menu is displayed on the screen. VOLUME UP/DOWN (F / G) BUTTONS · To increase or decrease volume level. · To enter or adjust the selected menu when menu is displayed on the screen. 4 On screen menus The dialogue between you and your set takes place on screen with an operator menu .  
The buttons required for the operating steps are also displayed. button to select a menu item. 3.Press the G button to display the sub menu or the pull-down menu. 4.Change the setting of an item in the sub or pulldown menu with F / G or D / E. You can move to the higher level menu with ENTER (A) or F button and to move to the lower level menu press the G button. Manual { { { Channel Channel Memory Fine { { { TV 3 Menu selection 1.Press the MENU button and then use the D / E button to display each menu. 2. Press the G button and then use the D / E Channel CH. Auto+prog. Manual Manual Favorite++ To+set Move++Next+{+Back} Move++Next+{+Back} Picture CH. Channel APC APC XD Contrast Brightness Color Sharpness Tint ++++++ ++ ++{ { { { { { Clear Optimum Soft User CH. Auto+prog. { Manual { Favorite+channel+{ Favorite { Move++Next+{+Back} Move++Next+{+Back} Sound CH. CATV++95 \_\_\_\_\_ DASP DASP Turbo+Snd. AVL Balance Treble Bass ++{ ++ { { { { { Flat Music Movie Sport User Move++Next+{+Back} Timer CH. Clock Clock Off\_timer On+ \_timer Auto+ \_off+ { { { { { \_: \_+AM \_ AM Move++Next+{+Back} Special CH. Language Input Key+lock Caption+ { { { { On Off Move++Next+{+Back} 5 Basic TV operation Before operating your TV, make sure the following instructions have been completed. · Your TV has been connected to an antenna or a cable system. · Your TV has been plugged in a power outlet..



[Tus instrucciones](#)  
[LG 21FG5RL](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>