


LG 125 USERS MANUAL

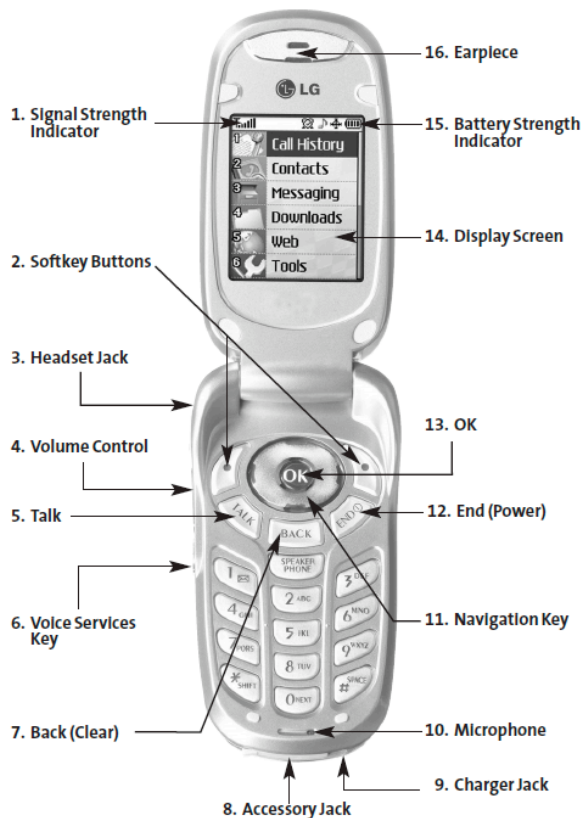

Key Functions

- 1. Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
- 2. Softkey Buttons** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
- 3. Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
- 4. Volume Control** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
- 5. Talk** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
- 6. Voice Services Key** for quick access to voice dials. Also press and hold during standby mode or during a conversation to record a voice memo.
- 7. Back (Clear)** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu. This key also allows you to return to the previous screen in your wireless vision session.
- 8. Accessory Jack** allows you to connect optional accessories, such as a USB cable.
- 9. Charger Jack** connects the phone to the battery charger.
- 10. Microphone** allows the other caller to hear you clearly when you are speaking to them.
- 11. Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
 - Press Up to access Messaging.
 - Press Down to access Downloads.
 - Press Right to Find/Add Entry.
 - Press Left to view your Scheduler or your own customized shortcut.
- 12. End (Power)** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
- 13. OK** selects the highlighted choice when navigating through a menu.
- 14. Display Screen** displays all the information needed to operate your phone, such as the call status, the internal phone book's contact list, the date and time, the signal and battery strength, etc.
- 15. Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
- 16. Earpiece** lets you hear the caller and automated prompts.

Getting Started with Your Phone

The Battery

Battery Capacity

Your wireless Phone is equipped with a Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.5 hours of continuous digital talk time (up to 1.8 hours in analog).

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Installing the Battery

To install the Lilon battery:

To install the battery, you must first remove the phone battery cover. To remove the battery cover, turn the phone upside down, press the release button down, and push the battery cover away.

1. Insert the battery (label side facing up) into the cavity at a 45-degree angle. (The metal contacts must be aligned with and touching the metal prongs.)

2. Press down on the battery until it snaps into place.



Removing the Battery

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.

2. To remove the battery cover, turn the phone upside down, press the release button down, and push the battery cover away.

3. Pull downward on the upper end of the battery with your finger tip and remove the battery from the phone at a 45-degree angle.



Charging the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon blinks and the phone sounds a warning tone.

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:
Press and hold END for approximately two seconds.

Once your phone is on, it may display "Searching for Service," which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for your wireless Service by pressing any key (when your phone is turned on).

Turning Your Phone Off

To turn your phone off:
Press and hold END for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Making and Answering Calls

Making Calls

Placing a call from Your wireless Phone is as easy as making a call from any land line phone. Just enter the number and press Talk , and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press Back to erase one digit at a time. Press and hold Back to erase the entire number.)
3. Press Talk . (To make a call when you are roaming and Call Guard is enabled, highlight Roam Call and pressTalk.)
4. Press END or close the phone when you are finished.

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key.)

Your wireless Phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the phone book entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to TALK Only, the following options are also displayed. To select an option, press the corresponding softkey button.

- Quiet to mute the ringer.
- Ignore to send the call to your voicemail box.

Voicemail

Setting Up Your Voicemail


All unanswered calls to Your wireless Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up Your wireless Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold 1.
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding 1, bypassing the need for you to enter your pass code)

Voicemail Notification

There are several ways Your wireless Phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

Retrieving Your Voicemail Messages

You can review your messages directly from Your wireless Phone or from any other touch-tone phone. To dial from Your wireless Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

Press and hold 1. (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Press Menu(left softkey) to access the main menu.
2. Select Messaging 3.
3. Scroll to Voicemail and press OK .
4. Press Talk to listen to your messages.

Using a Phone Other Than Your wireless Phone to Access Messages

1. Dial Your wireless Phone number.
2. When your voicemail answers, press * .
3. Enter your pass code.

Using SMS Text Messaging

Composing SMS TextMessages

To compose an SMS Textmessage:

1. Press Menu (left softkey) to access the main menu. Messaging may also be accessed by pressing up on the navigation key from the idle screen.
2. Select Messaging 3.
3. Scroll to Send message and press OK .
4. Input a new phone number or email address and select the entry method you prefer:
 - Mobile to use the keypad to enter the wireless phone number of the person to whom you wish to send a message.
 - Email to enter the recipient's email address.
 - From Contacts to select a recipient from your internal Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - Recent List to select a recipient from your recent lists.

5. Press OK to save the recipient. (To include additional recipients, input a new phone number or email address. You may include up to 10 recipients per message.)

6. Press Next (left softkey) when you are finished selecting/entering recipients, and compose a message or use the canned (pre-set) messages or smileys (icons) and press OK.

- To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode.
- To use a canned message or a smiley, press the right softkey, select Smileys or PresetMsg, then highlight your desired message or emoticon and press OK .

7. Scroll to Priority and press your navigation key right or left to set the message priority (Normal or Urgent).

8. Press Send(left softkey) to send the message.

Accessing SMS Text Messages

To read an SMS Text message:

When you receive a text message, it will automatically appear on your phone's main display screen, depending on your settings. Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. While the message is open, press Options (right softkey) and then select Reply.

2. Scroll to [Message] and press OK .

3. Compose your reply or use the pre-set messages or icons.

- To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode.
- To use a canned message or a smiley, press the right softkey, select Smileys or PresetMsg, highlight your desired message or emoticon, and press OK .

4. Scroll to Priority and press your navigation key right or left to set the message priority (Normal or Urgent).

5. Press Send(left softkey) to send the message.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press    .

2. Enter the number you want to call.

3. Press Talk .

To permanently block your number, call your service provider.

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

- To deactivate Silence All:
Press the volume key up repeatedly to select a desired volume level.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>