

http://www.LGEservice.com e-mail http://www.LGEservice.com/techsup.html

DEHUMIDIFIER OWNER'S MANUAL

Please read the operating instructions and safety precautions carefully and thoroughly before operating your dehumidifier.

You can refer to the Energy Star program in detail at "www.energystar.gov"



As an ENERGY STAR* Partner, LG Electronics Inc. has Determined that this product meets the ENERGY STAR* guidelines for energy efficiency. (DH40/DH50)

MODEL: DH30, DH40, DH50

Safety Precautions.....3



FOR YOUR RECORDS

Write the model and serial numbers here:

You can find them on a label on the back of the dehumidifier behind the bucket.

Model #

Serial #

Dealer's Name

Date Purchased

Staple your receipt here.





READ THIS MANUAL


Inside you will find many helpful hints on how to use and maintain your dehumidifier properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your dehumidifier.

 
You'll find many answers to common problems in the chart of Troubleshooting Tips. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.



PRECAUTION

- Contact an Authorized Service Center for repair or maintenance of this unit.
- The dehumidifier is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the dehumidifier.

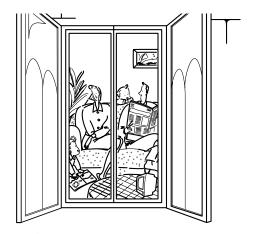



Safety Precautions

Read all instruction before using.

- To prevent injury to the user or other people and property damage, the following instructions must be followed.
- Incorrect operation due to ignoring instructions will cause harm or damage; the seriousness is classified by the following indications.

 Λ

WARNING

This symbol indicates the possibility of death or serious injury.



CAUTION

This symbol indicates the possibility of injury or damage to properties only.

■ Meanings of symbols used in this manual are as shown below.



Be sure not to do.







Be sure to follow the instruction.



Complete all grounding and installation requirements as described on page 5.

 Otherwise, it could cause electrical shock or fire. Disconnect power cord from receptacle before servicing or cleaning.

 It could cause electrical shock or fire. Do not use flammable fluids, solvents, abrasive cleaners, or strong detergents to clean the dehumidifier.

 It could cause fire or product damage hazard.



Do not plug the dehumidifier in until the outside of unit is completely dry.

• It could cause electrical shock and personal injury hazard.





Do not use the water collected in the bucket for drinking purposes.

 It is not sanitary and could cause illness or personal injury hazard.





Do not clean the dehumidifier while it is plugged in, especially if it is wet.

 
It may cause electrical shock.

 


Be sure to block the wheels to prevent unit from falling when installed on a table or shelf.

Be sure to replace bucket properly after emptying to prevent water from collecting on the floor. Make sure the dehumidifier is the correct size for the area you want to dehumidify.

 It may damage the dehumidifier or cause other damage or injury.






Do not operate switches with wet hands.

Install the dehumidifier properly on a floor, table, or shelf that is level and strong enough to support it with a full bucket of water. Do not install dehumidifier in an area where temperatures will fall below 65°F (18°C.)

 • It may cause electrical shock.



 Low temperatures could cause coils to frost and unit may not start.







 
Close all doors, windows and other outside openings to the room.

When the unit is to be cleaned, switch it off.

 
Do not put a pet or house plant where it will be exposed to direct air flow.

 The dehumidifier must be operated in an enclosed area to be most effective. It will cause electrical shock or fire.

• This may injure the pet or plant.








Operating Instructions

Features

This section contains captioned illustrations of your appliance. Use the drawings to become familiar with all parts and features and what they look like.

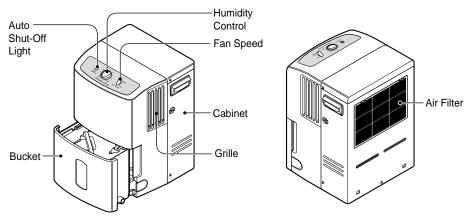


Electrical requirements

OBSERVE ALL LOCAL CODES AND ORDINANCES.
DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE
THE POWER SUPPLY CORD GROUND PRONG.

Electrical ground is required on this appliance.


A 115-volt 60 Hz, AC only, 15A fused and properly grounded electrical supply is required. A time delay fuse or time delay circuit breaker is recommended. **Use a dedicated circuit**, serving only this appliance. Do not use an extension cord.

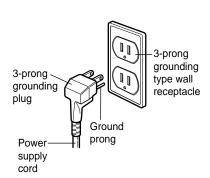

Recommended grounding method

For your personal safety, this appliance must be grounded. This appliance has a power supply cord with a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating grounding type wall receptacle, grounded in accordance with the National Electrical Code (ANSI/NFPA 70) latest edition and all local codes and ordinances. If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have a properly grounded 3-prong wall receptacle installed by a qualified electrician.

Operating your dehumidifier

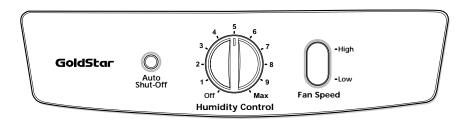

Control

Your dehumidifier has a control panel containing an indicator and two controls —

Auto Shut-Off, Fan Speed, and Humidity Control.

Auto Shut-Off --- This lamp glows when the bucket is full or missing.

Fan Speed --- This controls the speed of the airflow.

Humidity Control--- This controls the moisture in the room.

Unit operation

- 1. Turn the Humidity Control to Off. Plug the power supply cord into an electrical outlet.
- 2. The Humidity Control can be set anywhere between Off and Max for normal operation. If you need more dehumidification, turn the Humidity Control toward Max. If you need less dehumidification, turn the Humidity Control toward Off.
- **3.** Turn the Humidity Control to **Off** to stop the unit manually.
- 4. If you want to control the speed of air flow, turn the Fan Speed toward Low or High.

NOTE: The compressor will not operate for about two minutes to protect the compressor when you turn the unit off and immediately back on.

De-icer control (invisible)


The Defrost Control senses frost build-up on the evaporator coil and automatically shuts off the compressor. The fan continues to run, drawing air across the coil, and melting the frost. When the coil is defrosted, the compressor automatically restarts, and dehumidifying resumes.

NOTE: Do not operate the dehumidifier at temperature below 65°F (18°C.) If your dehumidifier runs when the temperature and humidity conditions of room are low, frost can form on its evaporator coil. This interferes with proper operation. Therefore, dehumidifying performance may be reduced.

Automatic shut off

The dehumidifier will turn off automatically when the bucket is full, or when the bucket is removed or not replaced in the proper position.

The bucket must be replaced in the proper position for the dehumidifier to work. The light will be on and the dehumidifier will not run if the bucket is not in the proper position.

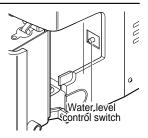

Disposing of collected water

1. Empty the bucket manually.

When the bucket is full, pull out and empty it into a large sink or tub and then replace it properly.

NOTE: Do not overtighten the hose when connecting it to the bucket. Use a rubber washer and tighten by hand firmly without stripping the plastic threads.

NOTE:Be careful while taking out the bucket as it can cause damage.

NOTE:Please do not shake strongly when you carry the bucket. It can cause to breakage of the handle or bucket cover. It is advisable to carry the bucket by supporting it from the bottom.

2. Attach a length of garden hose to the threaded bucket drain hose connection to carry water to the drain.


The bucket has a threaded hose connection which can be left open. Drill a 1/4" (6.4 mm) hole in the center of the hose connection. Once opened, the hose connection will continually drain water from the bucket.


NOTE: The nozzle cannot be fixed after puncture. Use an ordinary garden hose cap to reclose if necessary.


NOTE:When inserting the bucket into the unit. lifting up the bottom tip of the bucket lightly makes insertion easily.

When being attached to the bucket drain hose connection, be sure the hose doesn't kink or bend. It should lie flat from the dehumidifier to the drain.

NOTE: The hose attachment will accept a standard garden hose filling. You can attach a screw-on cap to use the bucket without a hose.

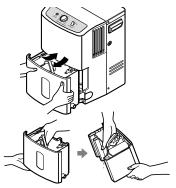

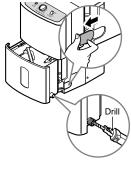

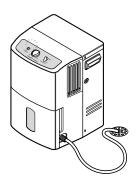


Installation Instructions

Choosing the proper location for your dehumidifier

- Use the dehumidifier in a basement to help prevent moisture damage.
- Use the dehumidifier in laundry drying, bathing, and dishwashing areas which have excessive moisture.
- Use the dehumidifier to prevent moisture damage anywhere books are stored.





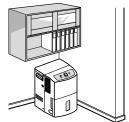


Installing the dehumidifier properly

- Allow at least 12 inches of space on all sides of the unit for good air circulation.
- 2. Install your dehumidifier on a floor, table, or shelf. When installing the dehumidifier on a table or shelf, make sure the table or shelf is strong enough to support the weight of the dehumidifier with a full bucket. Do not sit or stand on the dehumidifier.

NOTE: The height of a table or shelf might provide a better position from which to handle the bucket and help prevent icing of the coils due to colder air near the floor (such as in a basement.)

- Lift the bucket and place it in the dehumidifier, making sure the slots on the bottom side of the bucket are positioned correctly.
- 4. Rollers let you move the dehumidifier easily.

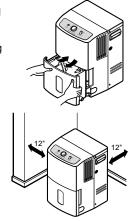


The cleaning of bucket


- 1. Pull out the bucket cover.
- Brush off the filth in the bucket.

 
NOTE: Please push the leftside of the cover after the two Upsides are upward completely when closing the cover.



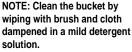





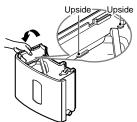

Care and Maintenance

Your dehumidifier is designed to serve you yearround. It needs practically no attention. However, you should check your dehumidifier and inspect the coils annually.

You may want an Authorized Service Center to perform this annual checkup. (Cost of the inspection is the owner's responsibility.)

OR

If you are familiar with electrical appliances and their functions, listed below are instructions which would allow you to perform the inspection and maintenance for yourself.

Cleaning the front case bucket and cabinet

Clean the front case and the cabinet with a soft cloth, warm water, and a mild detergent.

Do not use bleach or abrasives.

Cleaning the air filter

- **1-1.** First pull out the air filter by pressing the filter hooks lightly.
 - Then release two tabs at the bottom side of the filter.
- **1-2.** Wash air filter with warm water and a mild detergent. Rinse and dry it.

Replace it in place.

Cleaning the coil

- **2-1.** Remove air filter from the cabinet regarding to the above.
- **2-2.** Brush the coil gently like arrow in the figure, if necessary, with warm water and a mild detergent. Rinse and dry them thoroughly.

Be careful not to spray the coil with a water hose.

Be careful! Sharp edges!

A WARNING

Electrical Shock Hazard

- Disconnect power supply cord from receptacle before performing any maintenance.
- Be careful when cleaning the coils. Fins are sharp.

Failure to follow the above precautions could result in electrical shock or personal injury.











Troubleshooting Tips

Before you call for service, review this list. It may save time and money.

The list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

FIND YOUR PROBLEM HERE	POSSIBLE CAUSES	WHAT TO DO
DEHUMIDIFIER DOES NOT OPERATE	Plug is disconnected from outlet.	Push plug firmly into wall outlet.
	The fuse is blown/circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace fuse or reset the breaker.
	The dryness level you selected has been reached.	Dehumidifier automatically shuts off when the selected amount of moisture has been removed from the air. If you want to remove more moisture, turn the humidity Control to Max. After the dehumidifier starts, reset the control to the desired setting.
	The Auto Shut-Off light is on.	Dehumidifier automatically shuts off when the bucket is full. Empty the bucket and replace it.
	Dehumidifier is not turned on.	Turn on the Humidity Control.
DEHUMIDIFIER RUNS TOO MUCH	Humidity Control is set too high.	Turn the Humidity Control to a lower setting.
	Windows or doors near dehumidifier are open to outdoors.	Close all windows or doors to outside.
	Area to be dehumidified is too large. Air movement through dehumidifier is blocked.	Check with your dealer to see if capacity is adequate.
		Front grille may be dirty. Use a brush to clean the grille.
		Dehumidifier's coils on the back of unit may be dirty. Clean the soil on the coils of the back of the unit.
		Dehumidifier must be placed in a space that does not restrict air flowing into the rear coil or out of the front grille.
	Humidity Control is set at Max .	Dehumidifier will not turn off if Humidity Control is at Max .
FROST APPEARS ON COILS	Room temperature is too low. (Room temperature is below 65°F (18°C.)	Frost will usually disappear within 60 minutes.
FAN NOISE	Air is moving through the dehumidifier.	This is a normal sound.

DEHUMIDIFIER DOES NOT DRY THE AIR AS IT SHOULD	Dehumidifier has been installed or restarted recently.	The more moisture in the room air, the longer it takes for the room air to become dry.
	Airflow is restricted.	Make sure there are no curtains, blinds, or furniture blocking the front or back of the dehumidifier.
	The control may not be set high enough.	Turn the knob to a higher number.
	Doors and windows may not be closed tightly.	Check that all doors, windows, and other openings are securely close.
	Clothes dryer may be blowing moisture-laden air into the room.	Install the dehumidifier away from the dryer. Dryer should be vented to the outside.
	Room temperature is too low.	The unit will not operate satisfactorily if the room temperature is below 65°F (18°C.)

GOLDSTAR DEHUMIDIFIER LIMITED WARRANTY - USA

LG Electronics Inc. will repair or replace your product, at LG's option, if it proves to be defective in material or workmanship under normal use, during the warranty period set forth below, effective from the date of original consumer purchase of the product. This limited warranty is good only to the original purchaser of the product and effective only when used in the United States, including U.S. Territories.

WARRANTY PERIOD:	HOW SERVICE IS HANDLED:	
Labor: 1 Year from the Date of Purchase.	Call 1-800-243-0000 and choose the appropriate prompt. Please have product type (Dehumidifier) and ZIP code ready.	
Parts: 1 Year from the Date of Purchase.	have product type (Bendmanner) and 211 code ready.	
Compressor: 5 Years from the Date of Purchase.	Dehumidifiers receive carry-in service.	

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. LG WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS, IN CONNECTION WITH THE PRODUCT. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Service trips to your home to deliver, pick up, and/or install the product, instruct, or replace house fuses or correct wiring, or correction of unauthorized repairs; and
- 2. Damages or operating problems that result from misuse, abuse, operation outside environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, vermin, fire, flood, improper installation, acts of God, unauthorized modification or alteration, incorrect electrical current or voltage, or commercial use, or use for other than intended purpose.
- 3. Therefore, the cost of repair or replacement of such a defective product shall be borne by the consumer.

CUSTOMER INTER-ACTIVE CENTER NUMBERS:

To Prove Warranty Coverage	Retain your Sales Receipt to prove date of purchase. A copy of your Sales Receipt must be submitted at the time warranty service is provided.
To Obtain Nearest Authorized Service Center or Sales Dealer, or to Obtain Product, Customer, or Service Assistance	Call 1-800-243-0000 (Monday ~ Friday, 7 AM ~ 8 PM CT; and Saturday, 8 AM ~ 5 PM CT) and choose the appropriate prompt from the menu; or visit our website at http://www.lgservice.com.

P/No.: 3828A20315D Printed in Korea

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com