

Put It Back the Way I Got It

You can return all advanced functions back to their original settings by resetting the remote to factory default settings. Resetting the remote to factory default settings removes all of the programming you have entered for the remote. You must reprogram the remote to restore your original settings.

Resetting the Remote to Factory Default Settings (Program Code 900)

- Press and hold the **STB** mode key on the remote.
- Without releasing the **STB** key, press and hold the **OK** key.
- Release *both* keys and all mode keys blink twice.
- Enter the programming code **9 0 0** by pressing the numeric keys on the remote. The STB mode key blinks four times to indicate you have successfully reset the remote to factory default settings.

Notes:

• If any other key is pressed except the numeric keys, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.

• If the remote times out before you complete the factory default reset procedure, the remote does not accept any changes. You must start over from step 1 of this procedure.

Troubleshooting

If there is no response when you press the keys on the remote, please check the following items before calling for service.

Check the Batteries

- Are the batteries inserted correctly?
- Check the battery condition for leakage.
- Replace with new alkaline batteries.

Check the Device

- Is the device's power cord connected to the power outlet?

- Is the device switched on?

Check the IR Database Codes List

Is the device brand name for the device listed in the code list?

- If **yes** and there is more than one code listed, try using a different code to provide more functionality.
- If **no**, try the following:
 - Use the Auto-Search function to find a usable code.
 - If the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Code Tables

If the remote does not recognize your device, you can find codes for your device by brand name. Code tables in this section are organized by the devices assigned to each mode (TV, DVD, and AUX).

TV Mode Group	
TV	
Abex	1098
Admiral	1001, 1099
Advent	1005, 1053, 1110, 1113
Adventura	1004
Aiko	1015
Aiwa	1004
Alcal	1002, 1427
Allison	1044
Amtron	1038
Anam National	1003, 1036
AOC	1004, 1005
Apex	1111, 1119, 1163, 1256
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Benq	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Candle	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Colorfyne	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106,1258, 1362, 1368, 1369
Daytron	1004, 1097
Diamond/Vision	1461
Dimensia	1000
Dumont	1160
Durabrand	1259

TV, continued	
Dynatech	1004
Electroband	1002
Electrohome	1002, 1003, 1004,1018, 1021
Emerson	1004, 1011, 1013, 1025, 1028, 1031, 1033, 1036, 1044, 1045, 1080, 1097, 1101, 1102, 1107, 1382, 1383
Envision	1004
Fisher	1043, 1045, 1047, 1103
Fujitsu	1044, 1029
Funai	1036, 1044, 1384
Futuretec	1036
Gateway	1038
GE	1000, 1003, 1004, 1008, 1021, 1048, 1049, 1063, 1068, 1094, 1144, 1164, 1224, 1367, 1380, 1381, 1385, 1386
Gibraltar	1180
Goldstar	1004, 1005, 1011, 1018, 1050, 1090, 1091, 1097, 1098, 1400, 1401
Grundy	1036, 1044
Hallmark	1004
Harley Davidson	1384
Harvard	1036
Hisense	1112
Hitachi	1004, 1011, 1012, 1051, 1052, 1084, 1085, 1086, 1087, 1102, 1225, 1384
HP	1408
Ilo	1457
IMA	1036
Infinity	1053
Janel	1100
JBL	1053
JC Penney	1000, 1004, 1005, 1007, 1012, 1021, 1048, 1049, 1058, 1063, 1068, 1072, 1073, 1075, 1097, 1098
JCB	1002
Jensen	1004, 1232, 1285, 1314, 1376
JVC	1011, 1012, 1028, 1049, 1052, 1054, 1055, 1080, 1092, 1117, 1131, 1235, 1288, 1299
Kawasho	1002, 1004
Kenwood	1004, 1018
Kloss Novabeam	1036, 1056, 1057, 1100
KTV	1036, 1097, 1101
LG	1005, 1396, 1397, 1398, 1399, 1402, 1403, 1404, 1405
Lloyd's	1384
Loewe	1053
Luxik	1001
Luxman	1004
LXI	1000, 1004, 1045, 1053, 1058, 1068, 1075
Magnavox	1004, 1007, 1018, 1053, 1056, 1057, 1059, 1060, 1083, 1110, 1147, 1228, 1260, 1300, 1301, 1302, 1321, 1326, 1339, 1365, 1386, 1371, 1384, 1387
Magnin	1380
Majestic	1001
Marantz	1004, 1051, 1053
Media Center	1408
Megaltron	1004, 1051
Memorex	1001, 1004, 1005, 1022, 1045
MGA	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1360
Midland	1049, 1068, 1097, 1098, 1160
Minutaz	1048
Mitsubishi	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1081, 1381
Montgomery Ward	1001
Motorola	1003, 1099
MTC	1004, 1005, 1073
Multitech	1036
NAD	1004, 1058, 1075, 1085
NEC	1003, 1004, 1005
Net-TV	1040
Olevia	1420
Nikko	1004, 1015
Norcent	1217, 1320
NTC	1015
Orwa	1036
Optimus	1085
Optonica	1064, 1099
Opton	1023, 1033, 110, 1382, 1383
Panasonic	1003, 1010, 1048, 1053, 1068, 1123, 1152, 1231, 1289, 1292, 1295, 1303, 1304, 1305, 1306, 1385
Penney	1380, 1385
Philco	1003, 1004, 1005, 1007, 1011, 1018, 1053, 1056, 1057, 1059
Philips	1003, 1004, 1007, 1011, 1017, 1018, 1053, 1056, 1057, 1059, 1060, 1063, 1110, 1126, 1129, 1148, 1155, 1238, 1263, 1264, 1265, 1290, 1291, 1307, 1308, 1309, 1337, 1389
Philips Magnavox	1260, 1264, 1265, 1266
Pilot	1097
Pioneer	1004, 1085, 1102
Polaraoid	1285, 1458
Portland	1004, 1005, 1015, 1097
Price Club	1073
Prima	1113
Prism	1049
Proscan	1000, 1008, 1058, 1108
Proton	1004,1011
Pulsar	1160
Pulsar	1004
Quasar	1003, 1039, 1048, 1096, 1165, 1166, 1385
Radio Shack/Realistic	1000, 1004, 1011, 1036, 1045, 1064, 1097, 1098, 1384
RCA	1000, 1003, 1004, 1005, 1008, 1018, 1048, 1049, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1082, 1102, 1104, 1108, 1108, 1115, 1151, 1162, 1167, 1168, 1268, 1269, 1270, 1271, 1310, 1355, 1359, 1361, 1370, 1373, 1379, 1380, 1381, 1385, 1386
Runco	1160
Sampo	1004, 1097, 1098, 1120
Samsung	1004, 1005, 1011, 1014, 1018, 1019, 1072, 1073, 1074, 1097, 1098, 1156, 1161, 1297, 1323, 1360, 1363, 1364
Sansui	1023, 1107, 1122, 1273, 1382, 1383, 1384
Sanyo	1045, 1062, 1095, 1103, 1380
Scotch	1004
Scott	1004, 1011, 1033, 1036, 1044
Sears	1000, 1004, 1012, 1018, 1044, 1045, 1047, 1055, 1058, 1068, 1075, 1076, 1103, 1105, 1384
Sharp	1004, 1009, 1011, 1025, 1064, 1077, 1078, 1097, 1099, 1153, 1157, 1274, 1298, 1311, 1312, 1362, 1375, 1378
Shogun	1004
Signature	1001
Simpson	1007
Sony	1002, 1109, 1137, 1201, 1202, 1249, 1272, 1275, 1276, 1277, 1278, 1317, 1356, 1374, 1384, 1388
Soundesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starlite	1036
Supra-Miacy	1100
Supreme	1002

TV, continued	
Sylvania	1004, 1007, 1018, 1027, 1153, 1056, 1057, 1059, 1060, 1124, 1150, 1145, 1279, 1296, 1387, 1464
Symphonic	1024, 1031, 1036, 1105, 1280, 1384
Tandy	1099
Tashiko	1058
Tatung	1003
Technics	1049
Techwood	1004, 1049
Teknika	1001, 1004, 1005, 1007, 1111, 1012, 1015, 1036, 1044, 1060, 1073, 1096, 1097
Tera	1004, 1011
Thomas	1384
TMK	1004
Toshiba	1006, 1045, 1058, 1073, 1175, 1079, 1093, 1116, 1154, 1158, 1159, 1262, 1267, 1281, 1282, 1283, 1284, 1286, 1293, 1294, 1313, 1315, 1319, 1338, 1364, 1377
Television	1097
Universal	1048, 1063
Victor	1055
Vidtech	1004, 1005
Viking	1100
Wards	1000, 1001, 1004, 1005, 1118, 1031, 1044, 1048, 1053, 1056, 1057, 1059, 1060, 1063, 1064
Westinghouse	1013
Yamaha	1004, 1005, 1018
Zenith	1001, 1089, 1118, 1125, 1161, 1287, 1357, 1382, 1383, 1384
HDTV	
Acer	1041, 1192
Akai	1427, 1432
Apex	1088
Astar	1434
Lasonic	2081
Audiovox	1455
Axion	1459
Benq	1136
Coby	1460
Daewoo	1135
Dell	1141, 1142, 1146, 1394, 1395, 1409
Element	1431
Emerson	1468
Emprex	1438
Epson	1422, 1451
Fujitsu	1029
Gateway	1038, 1449
Hewlett Packard	1419, 1444, 1445, 1452
Hitachi	1030, 1132, 1133, 1134, 1191, 1208, 1209, 1210, 1211, 1221, 1226, 1322, 1324, 1328, 1344, 1447
HP	1419, 1445, 1452
Ilo	1412, 1435, 1436
InFocus	1450
Initial	1457
Insignia	1437
JVC	1130, 1131, 1227
LG	1343, 1346, 1396
Magnavox	1329, 1358, 1372, 1414
Maxent	1424
Mintek	1457
Mitsubishi	1032, 1213, 1229, 1230, 1448
NEC	1193, 1423
NET-TV	1040
Olevia	1406, 1418, 1421, 1462
Panasonic	1140, 1169, 1170, 1194, 1123, 1234, 1331, 1336, 1410, 1417, 1442, 1468
Philips	1126, 1129, 1236, 1237, 1239, 1261, 1334, 1351, 1390, 1411
Pioneer	1025, 1195, 1240, 1335, 1469, 1470
Polaraoid	1282, 1391, 1392, 1393, 1396, 1431, 1440
Proscan	1000
Protron	1430
Proview	1407
RCA	1143, 1196, 1241, 1242
Sampo	1038, 1243
Samsung	1019, 1171, 1172, 1173, 1174, 1175, 1197, 1198, 1199, 1200, 1245, 1246, 1325, 1327, 1352, 1354, 1443
Sharp	1467
Scott	1428
Sharp	1138, 1176, 1177, 1214, 1244, 1247, 1248, 1348, 1350, 1415, 1416
Sony	1037, 1128, 1137, 1178, 1215, 1216, 1218, 1219, 1220, 1221, 1250, 1251, 1316, 1318, 1330, 1347, 1413
Sony	1446
Sylvania	1046, 1465
Syntax	1418
Syntax-Briilian	1418
Tatung	1426
Toshiba	1147, 1179, 1203, 1204, 1222, 1223, 1332, 1340, 1341, 1325, 1373
Trutech	1425
Viewsonic	1038, 1149, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1205, 1206, 1441
Vlore	1435
Vizio	1429, 1433, 1439
Westinghouse	1454
Zenith	1020, 1139, 1207, 1253, 1255, 1333, 1342, 1349
DVD Mode Group	
DVD	
Aiwa	2026, 2131
Akai	2378
Amplion	2342
MediaWorks	
AMW	2342
Apex	2001, 2056, 2057, 2061, 2095, 2098, 2229, 2250, 2316, 2322, 2330
Apex Digital	2261, 2262, 2263, 2266, 2269, 2291
Argo	2325
Asio	2354
Audiovox	2132, 2373, 2388
Axion	2379
Bang & Olufsen	2324, 2370
Blaupunkt	2136, 2322
Bose	2122, 2130, 2215
Boss	2336
Broksonic	2053, 2072, 2284
Cambridge	2395
SoundWorks	
Cinevision	2152, 2195
Clarion	6012
Classic	2101, 2391
Coby	2380, 2387
Curtis	2387

DVD, continued

CyberHome	2083, 2325
Cytron	2374
Daewoo	2058, 2062, 2137, 2138, 2190
Denon	2110, 2133, 2040, 2216, 2247, 2253, 2317
Desay	2344
Diamond/Vision	2382
Disney	2321
Durabrand	2326
Eclipse	2335
Emerson	2002, 2059, 2073, 2321, 2327, 2392
ESA	2327, 2394
Fisher	2112, 2134, 2255
Funai	2002, 2321, 2327
Gateway	2346
GE	2079, 2118, 2041, 2261, 2272, 2319, 2322
Go Video	2046, 2127, 2129, 2124, 2230, 2239, 2249, 2346
GPX	2114, 2390
Greenhill	2322
Grundig	2320
Harman Kardon	2125
Hitachi	2000, 2027, 2126, 2173, 2240
Ilo	2375
Initial	2322, 2381
Insignia	2327, 2369, 2394
Imradio	2149, 2156
JVC	2017, 2028, 2047, 2090, 2096, 2097, 2115, 2168, 2204, 2206, 2217, 2218, 2232, 2242, 2265, 2277, 2283, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367
Kenwood	2142, 2148
KLH	2322
Konka	2029, 2030, 2376
Koss	2060, 2200
Lasonic	2081
Lenox	2326
LG	2297, 2303, 2339, 2352, 2363, 2368, 2371
Liteon	2346, 2353
Magnavox	2002, 2018, 2033, 2089, 2237, 2241, 2245, 2259, 2270, 2293, 2

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>