



MOTOROLA
USER'S GUIDE
MBP35BL, MBP35BW
BABY MONITOR

USER'S GUIDE

The features described in this user's guide are subject to modifications without prior notice.



Welcome...

to your new Motorola Baby Monitor!

Thank you for purchasing the MBP35BL, MBP35BW. Now you can see and hear your baby sleeping in the other room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

0845 218 0890 in the UK
(65) 68412668 in Singapore
On the Web: www.motorola.com

This User's Guide provides you with all the information you need to get the most from your product.

Before you can use the baby monitor, you'll need to insert and fully charge the battery on the Parent unit. Please read the Safety Instructions on page 6 before you install the units.

 
 
Got everything?



 


- 1 x Parent unit
- 1 x Baby unit
- 1 x Rechargeable Ni-MH battery pack for the Parent unit
- 1 x Power adapter for the Parent unit
- 1 x Power adapter for the Baby unit

IMPORTANT

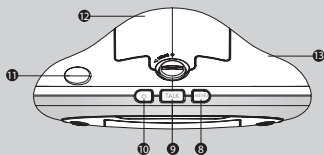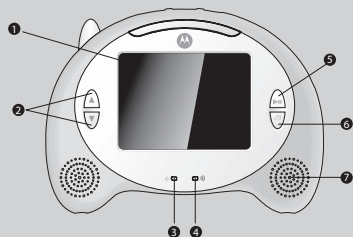








The non-rechargeable batteries for the Baby unit are not supplied with your product. We recommend the batteries to be installed before use, so that the unit continues to work in the event of a mains power failure.

Overview of your Parent unit




1. Display (LCD screen)
2. Up ▲ / Down ▼ keys
Normal mode: Adjust speaker volume
Menu mode: Adjust setting
3. Power and Low battery LED
4. Voice Activation))) LED
5. Lullaby Play/Stop key 
Press once to play lullaby.
Press again to stop playing.
6. Lullaby selection key 
Press to select a lullaby during playback.
7. Microphone
8. Menu key 
Press to open the Menu options
9. Talk key 
Press and hold to speak to your baby.
10. Power key 
Press and hold to turn on/off the unit.
11. Antenna
12. Battery cover
13. Speaker


Parent unit display symbols

	Indicates that the Baby Unit is out of range or not linked to the Parent Unit.
	Appears when setting the Temperature mode.
 High	Appears when the temperature goes above 26°C (79°F).
 Low	Appears when the temperature goes below 14°C (57°F).
	Appears when setting the Night Light function.
	Indicates that the Talk function is activated.
	Appears when the Lullaby function is activated.
	Appears when adjusting the Volume of the Parent Unit.
	Appears when adjusting the Brightness of the Parent Unit display.

Parent Unit display symbols (cont'd)

	Appears when the Parent Unit is in registration mode.
VOX	Appears when setting the Voice Activation level.

 Overview of your Baby unit

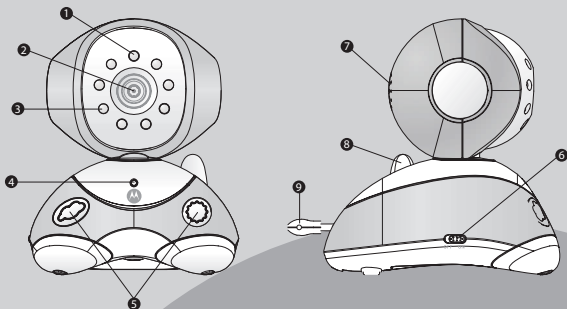

1. Photo sensor
2. Camera lens
3. Infrared LEDs
4. Power LED
5. Night lights
6. On/Off switch
7. Speaker
8. Antenna
9. Temperature sensor

Important guidelines for installing your Baby Monitor

- To use your video monitor baby and parent unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete, between the baby and parent unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV's, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4GHz products, such as wireless networks, Bluetooth[®] systems or microwave ovens may cause interference with this product, so keep the baby monitor away from these types of products, or turn them off if they appear to be causing interference.
- If the signal is poor, try moving the parent and/or the baby unit to different positions in the rooms.



Table of contents

1. Safety Instructions	6
2. Getting started	7
2.1 Baby unit battery installation.....	7
2.2 Baby unit power supply	8
2.3 Parent unit battery Installation	8
2.4 Parent unit power supply	9
2.5 Registration	10
3. Using the Baby Monitor MBP35BL, MBP35BW	11
3.1 Setting up	11
3.2 Night vision	11
3.3 Talk function	11
3.4 Adjusting the volume of the Parent Unit	11
3.5 Playing a lullaby for your baby.....	12
4. MBP35BL, MBP35BW Parent Unit Menu Options	13
4.1 Brightness.....	13
4.2 Temperature Display (°C or °F)	13
4.3 Night Light	13
4.4 Voice Activation	14
5. Disposal of the device (environment)	15
6. Cleaning	16
7. Help	17
8. General Information	18



1. Safety Instructions

WARNING

This baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This baby monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the baby unit or cables in the cot or within arm's reach of the baby (the unit should be at least 1 metre away).
- Keep the cords out of reach of children.
- Do not cover the baby monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test the baby monitor before use. Become familiar with its functions.
- Do not use the baby monitor near water.
- Do not install the baby monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and batteries.
- For the parent unit, only insert a rechargeable battery pack of the same type. For the baby unit, use non-rechargeable batteries and insert with the correct polarity, as indicated in the battery compartment and in "2.1 Baby unit battery installation".
- Do not touch the charger or plug contacts with sharp or metal objects.

 
CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

2. Getting started

2.1 Baby unit battery installation

The camera uses either 3 AA size batteries (non-rechargeable batteries recommended) or the household power mains. **The Baby unit has no charging function!**

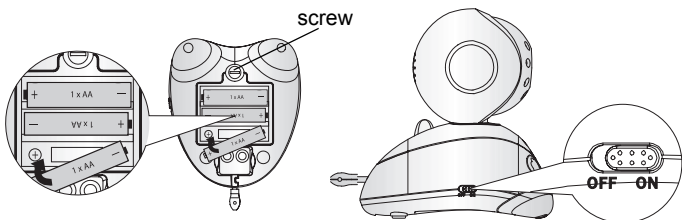

IMPORTANT

The non-rechargeable batteries for the Baby unit are not supplied with your product. We recommend the batteries to be installed before use, so that the unit continues to work in the event of a mains power failure.

1. Loosen the screw in a counterclockwise direction using a small screwdriver. Remove the battery cover.
2. Install the 3 AA non-rechargeable batteries following the polarity as shown in the compartment. Close the battery compartment and tighten the screw in a clockwise direction.
3. Slide the power switch to the **ON** position. The power LED will light up in green.

To switch off the baby unit, slide the power switch to the **OFF** position.

NOTE

When the battery level is low, the power LED will turn orange and will flash.

WARNING

Do not mix old batteries with new ones.

 
Keep batteries away from small children.

Do not short-circuit batteries or dispose of in fire.

Remove the batteries if this device is not going to be used for a long period of time.



2.2 Baby unit power supply

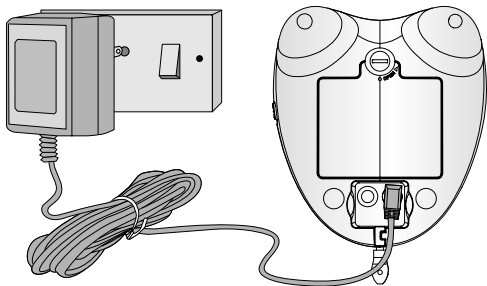


1. Connect the small plug of the power adapter to the baby unit and the other end to the mains socket (230V/50Hz).



NOTE

Only use the enclosed power adapter (6V DC / 800mA).

 2. Slide the power switch to the **ON** position. The power LED will light up in green.
3. To switch off the baby unit, slide the power switch to **OFF** position.

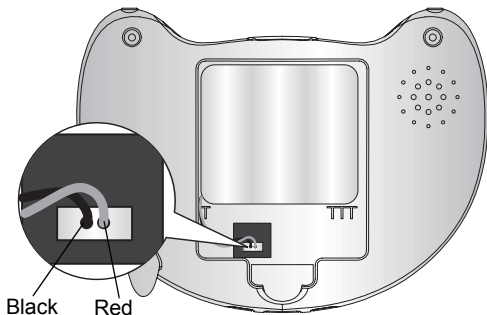2.3 Parent unit battery Installation



1. Loosen the screw in a counterclockwise direction using a small screwdriver. Remove the battery cover.
2. Insert the wire tab of the rechargeable battery pack into the contact slot as shown above and fit the battery pack into the compartment.
3. Close the battery compartment and tighten the screw in a clockwise direction.
4. Press and hold  to switch ON the parent unit.
- It will take a few seconds to start up the unit.
5. Press and hold  to switch OFF the parent unit.

 
NOTE

When the battery level is low, the power LED will turn orange and will flash. Charge the battery pack for at least 15 hours before using on battery power only.

NOTE

When the unit is powered up with either the power adapter or using the rechargeable battery pack, the LED will light up in green. If both the power adapter and rechargeable battery pack are used, the LED will light up in red.

2.4 Parent unit power supply

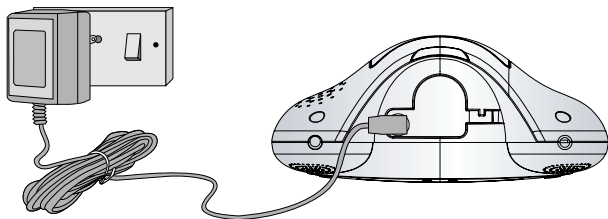



1. Connect the small plug of the power adapter to the parent unit and the other end to the mains socket (230V/50Hz).

NOTE


Only use the enclosed power adapter (6V DC / 800mA).



2. Press and hold  to switch ON the parent unit. The power LED will light up in green.
3. Press and hold  to switch OFF the parent unit.

NOTE





Once the baby and parent units are switched on, the display on the parent unit will show the video captured by the baby unit. When the VOX mode is on, the screen will turn off after a few seconds if the sound near the baby unit drops below the Voice Activation threshold level of the unit.


When there is no connection or out of range, the  icon on the LCD display will flash and the parent unit will beep continuously. Move the parent unit closer to the baby unit until the link is re-established.


2.5 Registration

The Baby monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedure below:

1. Switch off the Baby Unit
2. Press and hold the  button on the Parent Unit until  appears on the display screen.
3. Then press the  button to confirm the selection and enter the registration mode.  will appear on the screen for up to 15 seconds.
4. Switch the Baby Unit ON to enter the registration mode. The power LED on the Baby Unit flashes quickly for approximately 3 seconds.

The registration is completed when OK appears and then the video captured by Baby Unit's camera appears on the display screen of the Parent Unit.

If the registration fails then X appears and then both the Parent and Baby Unit return to normal mode.

NOTE

If a particular Baby Unit had been registered already, registering this current Baby Unit again will over-write the old registration.

3. Using the Baby Monitor MBP35BL, MBP35BW

3.1 Setting up

- Place the camera in a convenient location and point the lens of the camera towards the area you want to monitor.
- Tilt the head of the baby unit up or down to your desired position until the parent unit gets a good reception of the baby.

NOTE

Do not place the camera within baby's reach! If there is interference on the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.



3.2 Night vision

The camera has 4 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor detects a low level of ambient light, the LEDs will automatically activate and the screen on the parent unit will display in black and white.




NOTE

If the ambient light near the Baby Unit is marginal, the screen may appear to flicker between colour and black and white.

3.3 Talk function

Press and hold  on the Parent unit to talk to your baby through the Baby unit loudspeaker. The symbol  will be displayed in the middle of the LCD screen.

3.4 Adjusting the volume of the Parent Unit

1. Press  and  to adjust the volume (5 levels) of the Parent Unit during normal operations, and  (5 volume levels) appears on the display screen.



3.5 Playing a lullaby for your baby

You can remotely activate a lullaby to be played on the Baby Unit.






1. Press the button on the Parent Unit to play the last set lullaby.
2. To select another lullaby, press during playback. There are 5 lullabies available for selection, indicated by 1, 2, 3, 4 or 5.
3. To play all lullabies, press until is displayed on the display screen.
4. Press again to stop playback.

TIPS






- During the first 10 seconds of lullaby playback, pressing or will adjust the lullaby volume of the Baby Unit. appears on the display screen.
- Pressing or after 10 seconds of lullaby playback will adjust the volume of the Parent Unit. appears on the display screen.

4. MBP35BL, MBP35BW Parent Unit Menu Options


4.1 Brightness


1. Press  repeatedly until  appears on the display screen.
2. Press  and  to adjust the LCD brightness level to 1, 2, 3, 4, or 5 (the default setting is 3). The LCD brightness will be adjusted accordingly.
3. Press  repeatedly to exit.

4.2 Temperature Display (°C or °F)

1. Press  repeatedly until  appears on the display screen.
2. Press  and  to change the temperature display to °C, °F or OFF (the default setting is °C). The temperature unit and reading will be changed accordingly.
3. Press  repeatedly to exit.






NOTE

If the temperature goes above 26°C (79°F),  High appears on the LCD screen.

If the temperature goes below 14°C (57°F),  Low appears on the LCD screen.

4.3 Night Light




The Baby Unit has a night light feature that provides a dim light and is controlled from the Parent Unit.

1. Press  repeatedly until  appears on the display screen.
2. Press  to turn the Baby Unit Night Light ON or press  to turn the Night Light OFF. The night light on the Baby Unit will be switched on and off accordingly.
3. Press  repeatedly to exit.



4.4 Voice Activation

If you do not want the parent unit screen to be on continually, you can set the VOX mode so that the screen only turns on if there is a sound near the baby unit. The sound detection sensitivity level (VOX) of the Baby Monitor can be adjusted. If the baby is a quiet sleeper, the sensitivity level can be increased so that only minor disturbances will cause the parent unit screen to turn back on.

1. Press  repeatedly until VOX appears on the LCD screen. Press  and  to adjust the VOX level to OFF, 1, 2, 3, 4 or 5 (the default setting is OFF).

When the VOX function is on (level 1 to 5), the Voice Activation))) LED will be turned on, and the LCD screen will switch off after a few seconds if the detected sound is below the level selected.

Note: Level 5 is the most sensitive and so will need to be the quietest before the LCD will switch off.

2. Press  repeatedly to exit.

NOTE

When the Voice Activation function is on, the voice Activation LED will be turned on (red) and the display screen will switch off after a few seconds.

The LCD screen on the parent unit will be switched back on when the sound level of the baby reaches the Voice Activation threshold or when any key on the parent unit is pressed.

5. Disposal of the device (environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste, but take the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the batteries in an environmentally-friendly manner according to your local regulations.



6. Cleaning

Clean the MBP35BL, MBP35BW with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.


Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals — this may cause permanent damage to the product which is not covered by the Warranty. When necessary, clean it with a damp cloth.
- Keep your MBP35BL, MBP35BW away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your MBP35BL, MBP35BW. However, if something does go wrong, please do not try to repair it yourself — contact Customer Service for assistance.

7. Help

Display

No display

- Try recharging or replacing the batteries.
- Reset the units. Unplug the units' electrical power, including the batteries and both mains adapters, then plug them back in.
- Is the unit turned on?
Press and hold  on the parent unit to turn it on.

Is the VOX mode on?

- Turn the VOX off (see “4.4 Voice Activation”) to keep the screen on continually.

Registration

If the baby unit has lost its link with the parent unit

- Try recharging or replacing the batteries.
- If the baby unit is too far away it may be going out of range, so move the baby unit closer to the parent unit.
- Reset the units by unplugging the units' batteries and mains electrical power. Wait for around 15 seconds and plug it back in again. Allow up to one minute for the baby unit and the parent unit to synchronise.
- See “2.5 Registration” if there is a need to re-register the units.

Interference

Noise interference on your parent unit

- Your baby and parent units may be too close. Move them further away from each other.
- Make sure there is at least 1 metre between the 2 units to avoid feedback howling.
- If the baby unit is too far away it may be going out of range, so move the baby unit closer to the parent unit.
- Make sure the baby and parent units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone.



8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website:
www.motorola.com
3. Contact Customer Service at:
0845 218 0890 in the UK
(65) 68412668 in Singapore

To order a replacement battery, contact customer service or visit our website.

Consumer Products and Accessories purchased in the United Kingdom and Singapore

What Does this Warranty Cover?

Subject to the exclusions and limitations contained below, Binatone Electronics International LTD. warrants the Motorola branded consumer products that it manufactures ("Products") and the Motorola branded or certified accessories sold for use with these Products that it manufactures ("Accessories") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and only applies as follows to new Motorola branded Products and Accessories manufactured by Binatone Electronics International LTD., and purchased by consumers in the United Kingdom and Singapore, which are accompanied by this written warranty:

Who is covered?

This warranty covers only the first consumer purchaser, and is not transferable.

What will BINATONE ELECTRONICS INTERNATIONAL LTD. do?

BINATONE ELECTRONICS INTERNATIONAL LTD., at its sole option, will at no charge repair, replace or refund the purchase price of any Products or Accessories that does not conform to this warranty. Binatone Electronics International LTD. may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts in such repair or replacement and any Products, Accessories or parts removed or being replaced under this warranty become the property of Binatone Electronics International LTD.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES OR CONDITIONS IRRESPECTIVE OF WHETHER THEY ARE IMPOSED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL WARRANTIES AND MOTOROLA AND BINATONE ELECTRONICS INTERNATIONAL LTD. MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE ELECTRONICS INTERNATIONAL LTD. BE LIABLE, WHETHER UNDER THIS LIMITED WARRANTY OR IN CONTRACT OR TORT (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY) OR OTHERWISE FOR DAMAGES OR CLAIMS IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE, SAVINGS OR PROFITS, LOSS OF BUSINESS, LOSS OF PROGRAMS DATA INFORMATION (WHETHER CONFIDENTIAL PROPRIETARY OR PERSONAL IN NATURE OR OTHERWISE) OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR



ACCESSORIES AND BINATONE ELECTRONICS INTERNATIONAL LTD. SHALL UNDER NO CIRCUMSTANCES BE LIABLE FOR ANY CLAIMS OR DEMANDS MADE BY ANY THIRD PARTY OR MADE BY YOU ON BEHALF OF ANY THIRD PARTY TO THE FULL EXTENT THESE DAMAGES OR CLAIMS MAY BE DISCLAIMED BY LAW.

Some states, countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you in such states, countries or jurisdictions. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one country/jurisdiction to another.

Products or Accessories Covered	Length of Coverage
Consumer Products	One (1) year from the date of purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of purchase by the first consumer purchaser of the accessory.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty. Battery life and the changes in battery capacity with time or use are excluded from this warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper or unreasonable use, operation, storage, misuse or abuse, accident or neglect or other external cause, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) your failure to follow or operate outside the usage parameters stated in the user instructions that came with the Products or Accessories; (c) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (e) other acts or omissions which are not the fault or neglect of Motorola or Binatone Electronics International LTD., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, Binatone Electronics International LTD. or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.



How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

0845 218 0890 in the UK

(65) 68412668 in Singapore

You will receive instructions on how to ship the Products or Accessories, the shipment of which shall be at your own risk and expense, to a BINATONE ELECTRONICS INTERNATIONAL LTD. Authorised Repair Centre. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase of the Products or Accessories showing the date of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE ELECTRONICS INTERNATIONAL LTD. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE ELECTRONICS INTERNATIONAL LTD. or representations made by any agent employee or staff of BINATONE ELECTRONICS INTERNATIONAL LTD., that may have been made in connection with the said purchase.

**Technical Specifications****Baby unit**

Frequency	2.4GHz to 2.4835GHz
Maximum range	Extended range up to 450 feet* *Based on unobstructed line of sight. Actual range will vary depending on surroundings.
Image sensor	Colour CMOS
Lens	f 2.5mm, F 2.8
IR LED	4 pcs
Power	Adapter: Input — 100-240VAC, 50/60Hz (VDE/BS plug); Output — 6VDC, 800 mA (Supplier: Sure-power, Model: SW-060080EU/ SW-060080BS) OR Battery: 3xAA non-rechargeable batteries (Note: Batteries are not included)

Parent unit

Frequency	2.4GHz to 2.4835GHz
Display	3.5" TFT LCD
Display colours	16.7M colour LCD
Brightness control	5 steps
Power	Adapter: Input — 100-240VAC, 50/60Hz (VDE/BS plug); Output — 6VDC, 800 mA (Supplier: Sure-power, Model: SW-060080EU/ SW-060080BS) OR Battery: Ni-MH rechargeable battery pack (Supplier: Desay, Model: AA2000; Supplier: TFL, Model: TFL3X49AA2000-CD99-01A)

WARNING

Do not use non-rechargeable batteries for the Parent Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

BINATONE TELECOM PLC

1 Apsley Way London NW2 7HF, United Kingdom.
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877
e-mail: binatoneuk@binatone telecom.co.uk

The logo for Binatone, featuring the word "Binatone" in a bold, italicized sans-serif font. Above the letters "i" and "n" is a stylized, curved line that arches over the top of the text.**EC Declaration of Conformity**

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment: Digital Baby Monitor
Model Name: MBP 35BL, MBP 35BW

Country of Origin: China
Brand: Motorola

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum: EN300328 V1.7.1 (2006-10)
EMC: EN301489-17 V1.3.2 (2008-04)
EN301489-1 V1.8.1 (2008-04)
Electrical Safety: EN60950-1:2006+A11:2009

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.



Manufacturer / Importer
(Signature of authorized person)

A handwritten signature in black ink, appearing to read "K.H. Mueller".

Signature: (K.H.Mueller, CT0)

London, 10 Jun 10

Place & Date:



MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2010. All rights reserved.



Version 1.0

Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>