


motorola


Universal Bluetooth® Hands-free Speaker T307




MOTOMANUAL



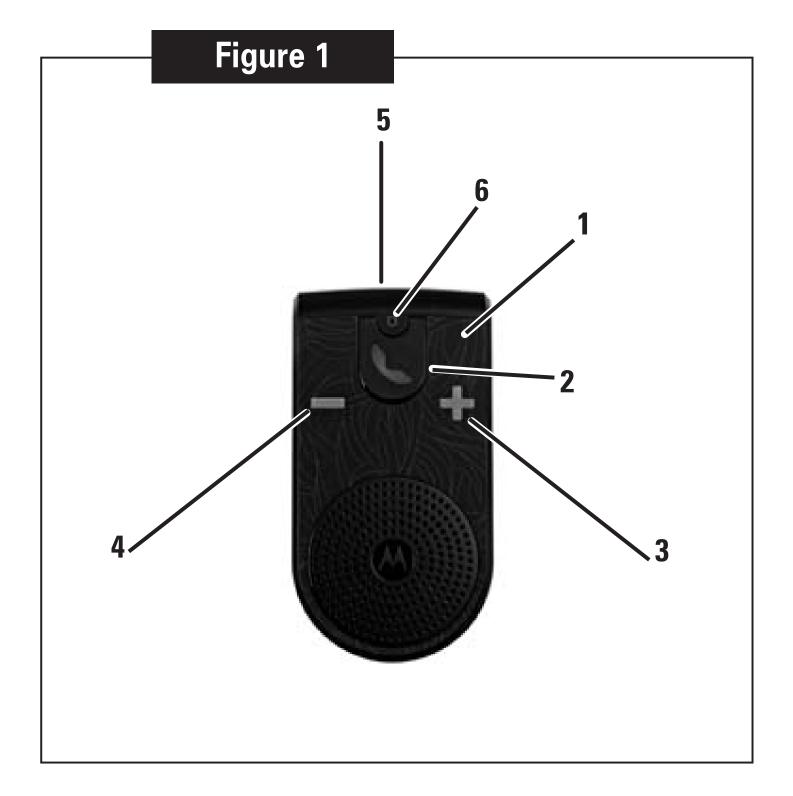

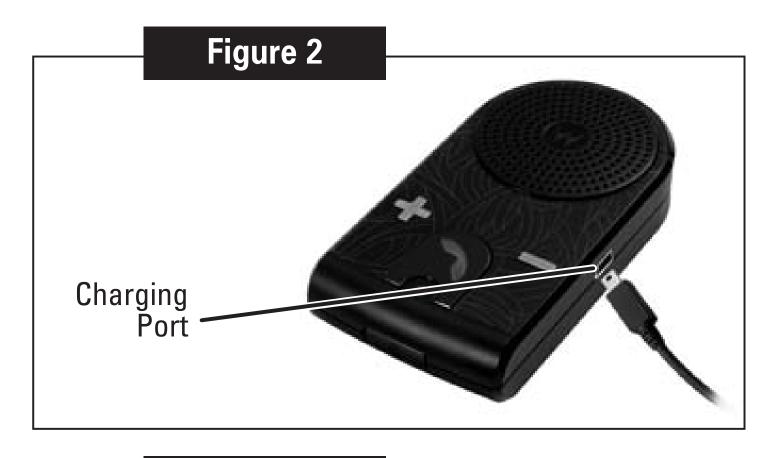

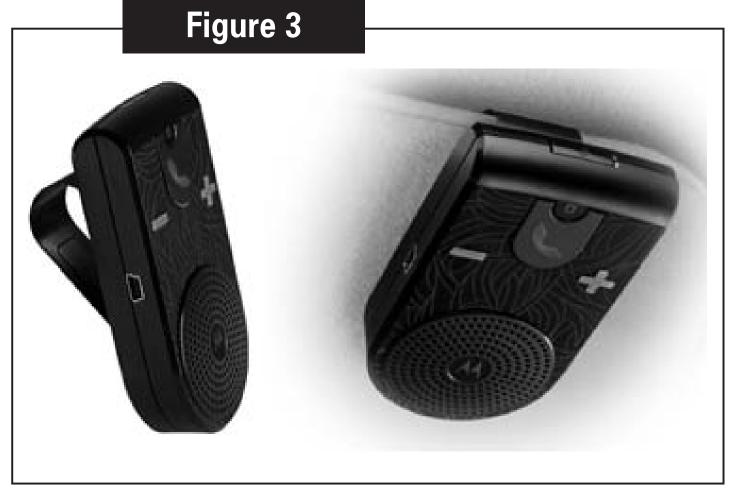

European Union Directives Conformance Statement



Hereby, Motorola Inc., declares that this T307 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

FCC Notice to Users

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

English

Initial set up

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola T307 portable Bluetooth® Hands-free Speaker.

Before you begin

Take a moment to familiarize yourself with your T307 hands-free speaker.

See figure 1 on page 1.

- 1 Speaker
- 2 Multicolor indicator light and Call Button
- **3** Volume up (+) button
- 4 Volume down (-) button
- **5** Power button
- 6 Microphone

Charging your hands-free speaker

See figure 2 on page 2.

The indicator light turns steadily red when the battery is charging and the hands-free speaker is turned off. It may take up to 1 minute for the indicator light to turn on. When the hands-free speaker's battery is fully charged (about 2 hours), the indicator light turns steadily blue.

Note: Do not place the hands-free speaker with clip installed on visor while charging. **Hands-free speaker is functional while charging.**



The battery should only be replaced by a Motorola approved service facility. ANY ATTEMPT TO REMOVE OR REPLACE YOUR BATTERY MAY DAMAGE THE PRODUCT.

Installing the hands-free speaker in your car

See figure 3 on page 2.

- Slide the visor clip onto the mounting bracket on the bottom of the handsfree speaker. To do this, place the loop end first onto the hands-free speaker and slide forward.
- 2. Slide the visor clip on your sun visor.

When installed, the Power button must be facing toward you.

The visor clip is reversible to allow placement of your hands-free speaker either on the front or the back of your car's sun visor.

Adjusting the hands-free speaker volume

To adjust volume, press and hold either volume button on the side of the hands-free speaker.

Note: hands-free speaker volume cannot be adjusted during an incoming call.

Pairing your hands-free speaker and phone

Your phone's Bluetooth feature is off by default. Make sure the Bluetooth feature is turned on in your phone before using your hands-free speaker. Please check your phone's user's guide.

Before you can use your hands-free speaker, you must pair (link) it with your phone.

1. Ensure the hands-free speaker is in pairing mode

To initiate easy pairing, power on the hands-free speaker by pressing and holding the Power button until the indicator light becomes steadily lit in purple. Then, release the button.

After a few moments, the indicator light will be steadily lit in blue to indicate that the hands-free speaker is in pairing mode. If the hands-free speaker does not enter pairing mode, see the **Troubleshooting** section for help.

English

2. Set your phone to look for your hands-free speaker

Perform a device discovery (or scan) from the phone. For details about device discovery, consult your phone's user's guide. The phone lists Bluetooth devices it finds.

Select **Motorola T307** in the list of discovered devices and confirm by following the on-screen prompts.

When prompted by the phone, enter the passkey 0000 and confirm.

When your hands-free speaker successfully pairs with your phone, the indicator light changes to flashing blue with quick purple flashes.

After you have successfully paired your phone and the hands-free speaker, you do not need to repeat these steps each time you use the hands-free speaker.

Test and use

Your phone and hands-free speaker are now paired and ready to make and receive calls. To confirm they are successfully paired and operating properly, place the hands-free speaker on your car sun visor and make a call from your phone. You will hear ringing from the hands-free speaker.

Using your hands-free speaker

Turning your hands-free speaker on & off

To turn your hands-free speaker on, press and hold the Power button until the indicator light turns purple. Then, release the button.

Note: the hands-free speaker may take up to 3-4 seconds to turn on.

To turn your hands-free speaker off, press and hold the Power button until the indicator light turns purple and then turns off.

To save battery power, your hands-free speaker will turn off when not connected to your phone for more than 30 minutes.

Making and receiving calls

Your hands-free speaker supports both hands-free and headset profiles. Accessing call functions depend upon which profile your phone supports. See your phone's user's guide for more information.

Note: Some features are phone/network dependent.

Function	Action
Receive a call	Tap the Call button
End a call	Tap the Call button – If a call is on hold, tap twice to end all calls
Reject a call	Tap either volume button
Redial last call	Press and hold the Call button until you hear a beep
Make a voice dial call	Tap the Call button and speak the name after the tone
Answer a second incoming call	Press and hold the Call button until you hear a beep (The 1st call is placed on hold)
Toggle between two active calls	Press and hold the Call button
Mute or un-mute a call	Tap both Volume buttons

Note: when turning on your hands-free speaker during a phone call, audio is transferred automatically to your hands-free speaker (provided that your hands-free speaker and phone have previously been connected and your phone supports this feature).

English

Indicator lights

With the charger plugged in:

Indicator	Status
Steady red	Charge in progress
Steady blue	Charging complete

Note: Charging status is not displayed when hands-free speaker is in use.

With no charger plugged in:

Indicator	Status
Off	Power off
Steady purple	Powering up
Steady blue	Pairing mode
Quick red flash	Low battery
Blue with rapid purple flashes	Successful pairing
Slow blue pulse	Connected (on a call)
Blue flash	Standby (not on a call)
Quick blue flash	Incoming call
Slow purple pulse	Muted

Audio tones

Audio tone	Status
Single high tone when pressing volume button	Volume at minimum or maximum
5 rapid high tones repeated every 60 seconds	Low battery
No audio indications: deteriorating quality	Out of range
Ring tone	Incoming call
Single high tone	Pairing confirmation
Single low tone	Voice activation
Dual high/low tone (phone dependent)	Voice tag not recognized
Single high tone	End call
Low to high tone	Phone network not available
2 ascending tones	Mute enabled
2 descending tones	Mute disabled

Troubleshooting

My hands-free speaker will not enter pairing mode: make sure that any devices previously paired with the hands-free speaker are turned off. If the indicator light is flashing in blue, turn off the other device and wait for 10 seconds. The indicator light becomes steadily lit in blue indicating that the hands-free speaker is now in pairing mode.

My phone does not find my hands-free speaker: make sure the indicator light on your hands-free speaker is steadily lit when you phone is searching for devices.

My hands-free speaker worked before but now it is not working: Make sure the Bluetooth feature is turned on in your phone. If the Bluetooth feature has been turned off or was turned on temporarily, you may need to restart the Bluetooth feature and pair your phone and hands-free speaker again.

If you have any additional questions, please call your hotline number (0870-9010-555) or visit us at www.motorola.com.

motorola.com MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Motorola, Inc. is under license. © 2007 Motorola, Inc. All rights reserved. 6803578F61 - Printed in the EU.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com