

DECT 6.0 Digital Cordless Phones

L601 / L602 / L603 / L604 / L605
L601M / L602M / L603M /
L604M / L605M

DECT 6.0 Digital Cordless Phones with Answering Machine System

L701 / L702 / L703 / L704 / L705
L701M / L702M / L703M /
L704M / L705M



MOTOROLA

US EN

Quick Start Guide

 
- 1 Getting started
- 2 Using the phone
- 3 Help
- 4 General Information

This Quick Start Guide provides all the information you need to get started. If you need more detailed instructions, please go to www.motorola.com to download a PDF of this product's User's Guide. Please consider the environment before printing.

Box Contents




L60x / L60xM series /
L70x / L70xM series handset

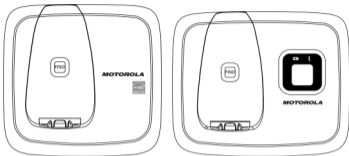

L60x / L60xM series /
L70x / L70xM series base



 Battery door

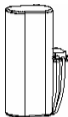

NiMH rechargeable
battery pack



Power adapter



Telephone line
cord



L60x series / L70x series
User's Guide



Quick Start Guide

In multi-handset packs, you will find one or more additional handsets, chargers with power adapter units, additional rechargeable battery packs, and battery doors.

IMPORTANT


Only use the telephone line cord supplied.

This equipment is not designed to make emergency telephone calls during power failures. Alternative arrangements should be made for access to emergency services.


1 Getting started

Step 1. Connecting the base

For L60x / L60xM series:

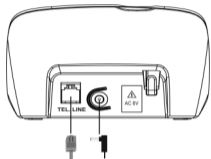



For L70x / L70xM series:

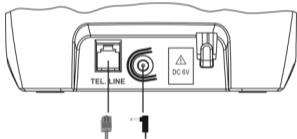 

- Plug the power adapter and telephone line cord into the base. The power adapter with the larger round pin is for the charger (only in multi-handset packs).
- Plug the other end of the power adapter into a power outlet and the telephone line cord into a telephone wall jack.
- Use only the provided power adapter.

Step 2. Installing and charging the handset battery pack

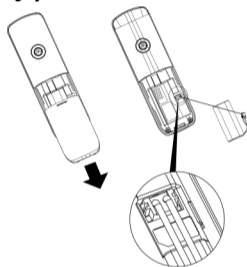

- Slide off the battery compartment cover to remove it. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
- Slide the battery compartment cover back on.
- Put the handset on the base to charge for at least 24 hours. When the handset is fully charged, the  (battery icon) will indicate that it is fully charged.

IMPORTANT

Use only the rechargeable battery pack provided with this product.

Step 3. Setting the display language


- Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP HS.**
- Repeat to select **LANGUAGE.**
- Repeat to select the desired language.
- Press **MENU** to save.

Step 4. Setting date and time




- Press **MENU** to select **DATE & TIME.** If you're a subscriber to your network's Caller ID service, date and time is automatically set when a call is received.
- Repeat to edit the year and date.
- Press **VOL+** or **REDIAL/VOL-** to move between the input fields **YEAR** and **DATE.**
- Press **MENU** and edit the time in 12hr format. Press **VOL+** or **REDIAL/VOL-** to toggle **AM/PM** settings.
- Press **MENU** to save the settings.

Your phone is now ready for use.

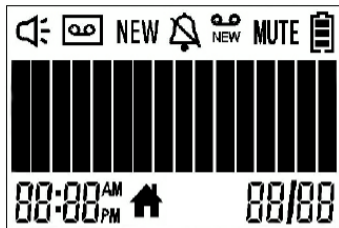Handset LCD Display



Display icons

-  On when the speakerphone is turned on.
-  On when the answering machine is turned on. Flashes when a new message is received (this icon is displayed for L70x series only).
- NEW** Indicates that a new call has been received. Off after all new calls have been reviewed.
-  Indicates that the ringer volume is off.



If a voice mail service is being used, this icon indicates that there is a new voice mail message. The icon is off after all new voice mails have been reviewed.

MUTE On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when a low battery level is detected and the handset needs to be charged.



Animation in motion. Battery is charging.



In idle mode, the current time is displayed.
In Caller ID mode, the time of call is displayed.



On when the line is in use.
Flashes when there is an incoming call.



In idle mode the current date is displayed.
In Caller ID mode, the date of the call is displayed.

2

Using the phone

US EN

Making a call

Enter the phone number and press /FLASH or /SPEAKER to dial the phone number.

Speed dialing

In idle mode, press and hold a key from /1 to **WXYZ/9** (/1 to **WXYZ/9** for L60x series) until the number is displayed and dialed.

Answering a call

Press /FLASH or /SPEAKER to answer the incoming call.

Ending a call

During a call, press /BACK or put the handset on the base.



Adjusting volume

During a call, press **VOL+** or **REDIAL/VOL-** to adjust the volume.



Muting a call

- During a call, press /MUTE (**MUTE** for L60x series) to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
- Press /MUTE (**MUTE** for L60x series) again to unmute.


Dialing from the redial list

- Press **REDIAL/VOL-** and then **VOL+** or **REDIAL/VOL-** to scroll and select the entry you want to redial.
- Press /FLASH or /SPEAKER to dial the number.




Dialing from the calls list

- Press **CID** and then **VOL+** or **REDIAL/VOL-** to scroll and select the entry you want to dial.
- Press /FLASH or /SPEAKER to dial the number.

Adding an entry to the phonebook

- Press . Press **MENU** then **VOL+** or **REDIAL/VOL-** to scroll and select **ADD**.
- Press **MENU** and enter the name.
- Press **MENU** and enter the number.
- Press **MENU** to save.

Dialing from the phonebook


- Press  and then **VOL+** or **REDIAL/VOL-** to scroll and select the entry you want to dial.
- Press /FLASH or /SPEAKER to dial the number.







Paging/Finding the handset

Press **FIND** on the base. All handsets registered to the base will ring.

To stop the paging, press **FIND** again, or press any key on the handset, or place the handset on the base.

Using your answering machine (For L70x series Only)

1. Press /MUTE from idle mode. New messages will be played followed by any older messages.
2. During the message playback, press the keys below to perform the following functions:

- | | |
|---|--|
|  | Repeats the current message. Press twice to playback the previous message. |
|  | Stop the message playback. |
|  | Skip to play the next message. |
| VOL+ | Increase the volume |
| REDIAL/VOL- | Decrease the volume. |
|  /MUTE | Delete the current message and the next message will be played. |
|  /SPEAKER | Toggle the message playback via earpiece/speakerphone. |
|  /BACK | Exit to idle. |

NOTE

When you are on a call, the answering system will not answer the second incoming call.

3 Help

The  icon is not scrolling when the handset is placed on the base

- Handset not properly seated on the base cradle - readjust the handset on the base.
- Dirty contact - clean the charge contacts by wiping with an alcohol moistened cloth.
- Battery is full - charging is not necessary at this time.

No dial tone

- If there is no base power, check the connections. Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the handset closer to the base.
- Be sure to use only the provided telephone cords.

Poor audio quality

- If the base is too close to electrical appliances, reinforced concrete walls, or metal door frames, move the base from these areas.

Caller ID does not work

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Need more help?

- For a full explanation of all features and instructions, please refer to the User's Guide.

4 General information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery pack, contact customer service or visit our website.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.

Printed in China
Version 1.0

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>