



**MOTOROLA**



*MemoEXPRESS II™*  
*MemoEXPRESS II FLX™*

**USER'S GUIDE**

# Contents

## Introduction

Controls .....	2
----------------	---

## Getting Started

Turning Your Beeper On .....	3
------------------------------	---

Menu Icons .....	4
------------------	---

Turning Your Beeper Off .....	4
-------------------------------	---

## Messages

Types of Messages .....	5
-------------------------	---

Receiving/Reading Messages .....	5
----------------------------------	---

## Message Features

Scanning Your Messages.....	7
-----------------------------	---

Duplicate Messages .....	7
--------------------------	---

## Time/Date

Setting the Time and Date.....	8
--------------------------------	---

## Alerts

Setting the Incoming Message Alert...	9
---------------------------------------	---

Choosing an Audio Alert.....	10
------------------------------	----

## Read Mode

Setting the Scroll Speed.....	11
-------------------------------	----

## Message Features

Locking Personal Messages.....	12
--------------------------------	----

Unlocking Personal Messages .....	13
-----------------------------------	----

Deleting Messages .....	14
-------------------------	----

Storing Messages.....	15
-----------------------	----

Automatic Message Deletion.....	15
---------------------------------	----

## Information Services

Reading Information Services .....	16
------------------------------------	----

Information Service Alert .....	17
---------------------------------	----

Information Service Bookmark .....	18
------------------------------------	----

## Other Features

Out of Range .....	19
--------------------	----

Message Error Icons .....	19
---------------------------	----

## Use and Care

Patent Information .....	20
--------------------------	----

Cleaning Your Beeper .....	20
----------------------------	----

Functionality and Use .....	21
-----------------------------	----

Care and Maintenance .....	21
----------------------------	----

## Battery

Battery Information .....	22
---------------------------	----

Congratulations on purchasing the Motorola® Memo Express II™ or Memo Express II FLX™ beeper. The Memo Express II FLX beeper incorporates the latest in paging technology. FLEX™ technology extends battery life up to four times longer than ordinary beepers and improves the ability to receive pages.

This compact beeper combines messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide. This user's guide includes a detachable Quick Reference Card on the back cover.

## **Effective Use of Your Beeper**

Your beeper can help you keep in contact with everyone important to you. By giving your beeper number to your business associates, family, and friends, you can be contacted when necessary.

If you have a cellular phone, give your beeper number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

## **Sending a Test Page to Yourself**

After your beeper has been activated by your service provider, send yourself a test page.

## Controls



- Mode      Used to scroll through available choices, or to increment a value.
- Select      Used to select and confirm a value.
- Read/  
Power On      Used to read a message, to save a setting, to turn on the beeper, and to exit from a menu.

 
## Turning Your Beeper On



Press  to turn your beeper on.

A start-up message is displayed momentarily and your beeper activates the currently selected alert.

**Note:** The start-up alert can be stopped by pressing any button.



When the beeper is on and no activity is taking place, the standby screen is displayed. The standby screen displays the power indicator, the time and date, the alert mode, and may display other beeper indicators.


## Menu Icons

 The three menu icons on the top row (🔊🗑️🔊) correspond to the three menus: **CONTROLS**, **DELETE ALL**, and **ALERTS**.

The first time you press **▶** these menu icons are displayed. The controls menu icon (🔊) flashes, indicating that pressing **▶** will enter the controls menu.

Press and release **▶** to display the **CONTROLS?**, **DELETE ALL?**, and **ALERTS?** menu prompts. Press **▶** to enter the corresponding menus, or press **⏪** to return to the standby screen.

## Turning Your Beeper Off



- 1 From the standby screen, press **▶** to display **CONTROLS?**. The controls menu icon (🔊) flashes.
- 2 Press **▶** to display **OFF?**.
- 3 Press **▶** to turn the beeper off. The off screen is displayed without any icons.

## Types of Messages

The message indicators define the type of message received and flash until the message is read.

**Personal messages:** ▲ unselected    📧 selected

### Information services

 
when received:    📧 or 📧


when chirp is on:    📧 selected

when bookmark is on: 📧 selected

## Receiving/Reading Messages

When a message is received, your beeper alerts with the selected alert (chirp, audio, vibrate, musical, or no alert). A message indicator (for example 1, 2, etc.) lets you know how many messages you have received.



- 1 Press any button to stop the alert.
- 2 Press  to display the message indicator menu. The message indicators for unread messages flash until any part of the message is read.



time the message  
was received

message  
continuation  
indicator



message number

- 3 Press to read the selected message or press to select another message, then press .

**Hint:** On this screen, pressing displays the previous screen.

- 4 If your beeper is set to scroll the message automatically (SCROLL 1, SCROLL 2, or SCROLL 3), the remainder of the message is automatically displayed at that speed.

**Hint:** To pause or restart a scrolling message, press .

If the scrolling speed is set to LINE-BY-LINE, press to view the next screen.

- 5 Allow the beeper to automatically return to the standby screen, or press then .

**Note:** A message is considered read if any part of the message is displayed.



## Scanning Your Messages

 
When the first line of a message is displayed, press **▶** to scan all other messages that may be stored. The message number and the first line of the message are displayed for each message.

## Duplicate Messages



When a duplicate message is received, **DUPLICATE** is displayed after the message number and before the message. The time the duplicate message is received is displayed.

## Setting the Time and Date









- 1 From the standby screen, press to display **CONTROLS?**. The controls menu icon flashes.
- 2 Press to enter the **CONTROLS** menu.
- 3 Press and release until **TIME/DATE?** is displayed.
- 4 Press to enter the **TIME/DATE** menu. The hour field flashes.
- 5 Press and release to adjust the hour.
- 6 Press to move to the next field.
- 7 Repeat steps 5 and 6 for the minutes, AM/PM, day, and month fields.
- 8 Press from any field to save and return to the standby screen.

 **Hint:** Pressing and holding scrolls through selections quickly.

## Setting the Incoming Message Alert

You can set your beeper to alert with a chirp alert, a vibrating alert (vibration with no alert tone), one standard audio (beep) alert, one of the musical alerts, or no alert (no vibration or alert tone).




- 1 From the standby screen, press and release  until ALERTS? is displayed. The alert icon  flashes.
- 2 Press  to enter the ALERTS menu. VIBRATE? is displayed.
- 3 Press and release  until your choice of VIBRATE?, AUDIO?, CHIRP? or NO ALERT? is displayed.
- 4 Press  to select the desired alert. The standby screen is displayed with the corresponding alert icon.






**Note:** If the audio alert mode is selected, your beeper automatically displays the audio alert options screen.

## Choosing an Audio Alert

 If you select the audio alert mode, you can choose either a standard beep (audio) or one of the musical alerts.

If you choose no alert or vibrate, your beeper emits an alert only if a priority message is received.



- 1 From the ALERTS menu, press and release  until AUDIO? is displayed.
- 2 Press  to enter the AUDIO menu.
- 3 Press  to scroll through the alert choices. The beeper emits a sample of each alert.
- 4 Press  to select the alert. The standby screen is displayed with the audio alert icon .








## Read Mode

This feature allows you to choose the most comfortable way to view messages.

### Setting the Scroll Speed

You can choose the speed at which your messages scroll, or read them line by line.

 
 





- 1 From the standby screen, press  to display **CONTROLS?**. The controls menu icon  flashes.
- 2 Press  to enter the **CONTROLS** menu.
- 3 Press and release  until **SCROLL?** is displayed.
- 4 Press  to enter the **SCROLL** menu.
- 5 Press and release  to choose the scroll speed.
- 6 Press  to select the scroll speed.


There are four scroll speeds to choose from: **LINE-BY-LINE**, **SCROLL 1** (slowest), **SCROLL 2**, and **SCROLL 3** (fastest).

## Locking Personal Messages

By locking messages, you can save personal messages to prevent them from being replaced when the memory is full or from being deleted. Messages can be locked only while reading them.





- 1 Press  while reading a personal message to display LOCK?.
- 2 Press  to lock the message. The message indicator  is displayed.

When a locked message is selected or read, the lock icon  is displayed.

**Note:** A maximum of five personal messages may be locked at one time. To lock another message, you must first unlock at least one message.

## Unlocking Personal Messages





- ① Press  while reading a locked personal message to display UNLOCK?.
- ② Press  to unlock the message.

## Deleting Messages

Messages may be deleted one at a time or all at once.

### *Deleting a Single Message*







- 1 While reading a message press and release  until DELETE? is displayed.
- 2 Press  to delete the message.

### *Deleting All Messages*

The DELETE ALL command deletes all read and unlocked personal messages and information services. Locked or unread messages are not deleted.



- 1 From the standby screen, press and release  until DELETE ALL? is displayed. The delete icon  flashes.
- 2 Press  to enter the DELETE menu. The delete confirmation DELETE? is displayed.
- 3 Press  to delete all personal messages.



## Storing Messages

Your beeper can store up to ten personal messages. Each stored message is assigned a number, which is displayed when the message is stored. The first message received is 1, the second is 2, and so on.

## Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.


When the message memory is full, `MEMORY FULL` is displayed. Press any button to return to the standby screen.

If all messages are unread, the oldest, unlocked message is deleted and `OVERFLOW` is displayed.





## Information Services

Information services are typically news or financial reports which provide information that is relevant for a short time (a few hours). Your beeper may be equipped with one information service message slot. Contact your service provider if you are interested in receiving information services.


### Reading Information Services


When an information service message is received,  flashes momentarily and the unread information services is displayed. After a short time, the standby screen is displayed.





- ① Press  to display the message indicator menu.
- ② Press  to enter the information service menu. The information service message icon  or  is displayed.



 
- 3 Press  to read the message. The time the information service was received is displayed with the first screen of the message.



 indicates the message is continued on an additional screen.

Press  and then  to display the previous screen.

## Turning the Information Service Alert On and Off

You can set an incoming message alert for the information service message slot.





- 1 While reading an information service message, press  until CHIRP ON? or CHIRP OFF? is displayed.
- 2 Press  to turn chirp on or off for the information service message slot.

## Turning the Information Service Bookmark On


You can set a bookmark to hold your place in a lengthy information service while reading it.





❶ While reading an information service, press  to display **BOOKMARK?**.

❷ Press  to activate the bookmark. The message menu screen is displayed.


The next time you read the information service, the last screen displayed while the message was marked is the starting point of the display.


 indicates the message is bookmarked.

## Out of Range

If your beeper is equipped with this feature, and if you are outside your paging coverage area,  is displayed. As long as  is displayed, your beeper cannot receive messages.

## Message Error Icons

If there is an error in the message received, the error icon  is displayed at the end of the message.

If this option is enabled, and if  is displayed at the end of the message, either the message was too long, or there was not enough memory to store the message.

## **Patent Information**

This Motorola product is manufactured under one or more Motorola U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

## **Cleaning Your Beeper**

To clean smudges and grime from the exterior of your beeper, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

## **Functionality and Use of Your Beeper**


For questions pertaining to the functions and use of your Motorola beeper please visit our web site at [www.motorola.com/LatinAmerica/Beepers](http://www.motorola.com/LatinAmerica/Beepers). For questions pertaining to your paging service, contact your paging service provider.

## **Care and Maintenance**

The Memo Express II and Memo Express II FLX beepers are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the beeper. Do not expose your beeper to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your beeper purchase with an optional extended warranty covering parts and labor. For more information about warranties or repair, please contact either your paging service provider, retailer, or Motorola, Inc.

 
## Battery Information

Your Memo Express II or Memo Express II FLX beeper operates with one AAA-size alkaline battery. When the battery is low, the low-battery icon  is displayed between the time and date on the standby screen. Change your battery within five days of receiving a low-battery indication.

**Note:** Messages are not retained when replacing the battery. Please transcribe any information that you may wish to retain.

### Replacing the Battery

- 1 Turn your beeper off.
- 2 To remove the old battery, slide the battery door lock towards the top of the beeper to unlock the battery door.
- 3 While pressing on the battery door, slide the door until the groove on the battery door aligns with the groove on the back cover.

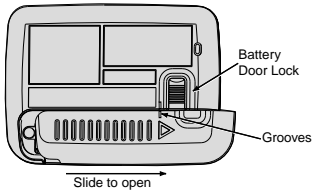




 
- ④ Lift the battery door to free it from the housing.
- ⑤ Remove the battery.
- ⑥ Align the new battery so the positive (+) and negative (-) markings match the polarity diagram in the battery compartment. Insert the battery.
- ⑦ To replace the battery door, align the groove on the battery door with the groove on the back cover and slide the battery door closed.
- ⑧ Slide the battery door lock toward the bottom of the beeper to lock the battery door.

# NOTES



Ⓜ, Motorola, Memo Express II, Memo Express II FLX, and  are trademarks or registered trademarks of Motorola, Inc.  
Reg. U.S. Pat. & Tm. Off.

© 1998 by Motorola, Inc. All Rights Reserved.  
Paging Products Group  
1500 Gateway Blvd., Boynton Beach, FL 33426-8292  
Printed in U.S.A. 2/98











 










6881031B05-O

# Memo Express II™ and Memo Express II FLX™




## Quick Reference Card

### Icons and Indicators



- On
-  Message, selected
-  Message, unselected
-  Control menu
-  Delete All menu
-  Audio alert
-  Audio menu
-  Vibrate
-  Locked message
-  Out of range
-  Message continuation
-  Low battery
-  Information service folder, selected
-  Information service folder, unselected
-  Information service message, Memo Express II

-  Information service message, Memo Express II FLX
-  Information service, Bookmark
-  Information service, Chirp on
-  Locked message, selected
-  Locked message, unselected



### Control Buttons

-  Mode
-  Select
-  Read/Power On

 
### Locking and Unlocking Messages

While reading a personal message, press  to display LOCK? or UNLOCK?. Press .

### Deleting a Single Message

Press  while reading a message until DELETE? is displayed. Press .

## Memo Express II and Memo Express II FLX Menu Map

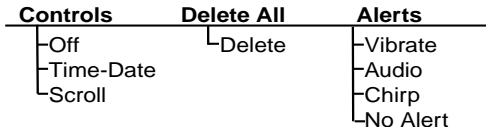

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>