

## User's Guide

## Contents

	Page
Introduction.....	1
Getting the Most From Your Gold Line Pager .....	1
Controls.....	1
Turning Your Pager On .....	1
Receiving and Reading Your Messages.....	2
Turning Your Pager Off .....	3
Turning the Back Light On.....	3
Returning to the Status Screen.....	3
Changing Alert Modes .....	4
Setting the Clock .....	4
Setting the Alarm .....	4
Erasing Messages From Memory.....	5
Additional Gold Line Pager Features .....	5
Cleaning Your Gold Line Pager .....	5
Battery Information .....	6
Repair and Maintenance .....	6
Patent Information.....	6

### INTRODUCTION

Congratulations on selecting a Gold Line pager from Motorola, the world leader in paging products. The Gold Line pager is designed with the latest microelectronic technologies to provide a reliable, high performance communications capability. Its attractive styling complements all office, home and travel environments.

### GET THE MOST FROM YOUR GOLD LINE PAGER

- Include your pager number on your telephone answering machine message. Receive important messages immediately without calling your answering machine.
- If you have a cellular phone, give your pager number instead of your cellular number. You decide who to call back on your cellular phone without paying for incoming cellular calls, reducing your monthly cellular bill.

### CONTROLS


All Gold Line pager functions are activated with only two buttons:

- On/Read/Select – Turn pager on, read incoming messages, and select the function displayed.
- ☐ Menu/Return to Status – Selects menu options and return to status (clock) screen (see diagram).

### TURNING YOUR PAGER ON

- Press — to turn your pager on. Your pager produces an alert indicating it is on.

The time of day and the alert mode indicator (silent or audible mode) appears on the screen.

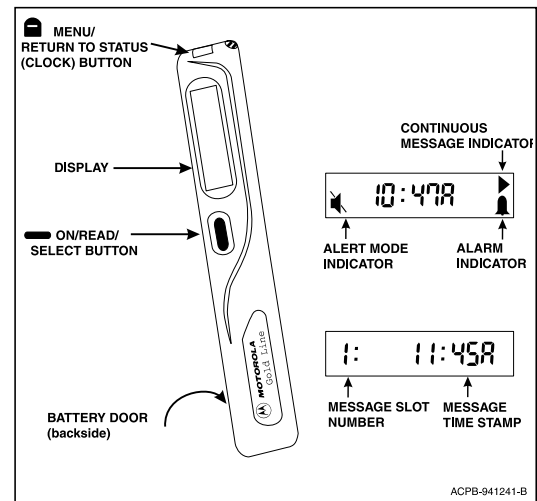

### RECEIVING AND READING YOUR MESSAGES

Your Gold Line pager can receive up to eight 20-character messages. When a message is received, the pager alerts for eight seconds.

- Press either button to stop the pager from alerting.
- Press — to display your message.
- Press ☐ while reading a message to return to the status (clock) screen.

Messages that contain more than 12 characters are displayed on a second screen. The symbol ▶ indicates additional screens.

The second screen is displayed automatically after one minute or you can press — to advance to the second screen.

The last screen of your message displays the message slot number and the time your message was received. If a message is left unread, your pager emits a reminder alert every two minutes and the number of unread messages is displayed on the screen (example: 1 Page, 2 Pages).

### TURNING YOUR PAGER OFF

- Press **■** until the *PRGRT OFF* prompt is displayed.
- Press **—** to turn your pager off.

When your pager is off, the clock is displayed, but the alert mode indicator is not (see diagram). The alarm still activates (if set), even if your pager is turned off.

### TURNING THE BACK LIGHT ON

- To turn the back light on, press and hold either button for one second while the clock or a message is displayed.
- The back light turns off automatically after eight seconds.

### RETURNING TO THE STATUS SCREEN

- To return to the status (clock) screen while reading a message, press **■**.
- Scrolling through the menu allows you to return to the status (clock) screen or you can wait for the pager to return there automatically after eight seconds.

3

### CHANGING ALERT MODES

- Press **■** and *SILENT* or *AUDIO* appears depending on the current mode.
- To change the alert mode, press **—** while your choice is displayed. Selecting the silent mode causes the pager to vibrate instead of emitting an audible alert.

### SETTING THE CLOCK

- Press **■** until *SET TIME* is displayed.
- Press **—** to start setting the pager clock.
- Press **■** until the desired hour appears. Press **—** to advance to the next digit.

Repeat this process for each item displayed (hours, minutes and AM/PM).

- After setting AM/PM, the pager automatically returns to the status (clock) screen with the set time displayed.

### SETTING THE ALARM

- Press **■** until *SET ALARM* appears on the display.
- Press **—** to select the alarm On/Off sequence.
- Press **■** to turn the alarm on or off. Press **—** to advance to the next digit. Press **■** to change a digit. Repeat this process for each item displayed (on/off, hours, minutes and AM/PM).
- After setting AM/PM, the pager automatically returns to the status (clock) screen.

The **■** indicator is displayed when the alarm is turned on. At the selected alarm time, the pager vibrates or emits a unique 20-second audible alert and *AL RM* is displayed.

- Press either button to stop the alert.
- The alarm still activates (if set) when your pager is turned off.

4

### ERASING MESSAGES FROM MEMORY

- Press **■** until *ERASE ALL* is displayed. Press **—** to erase all the stored messages. The *ERASE ALL* prompt appears only if there are read messages in memory.

### ADDITIONAL GOLD LINE PAGER FEATURES

A low-battery alert and a *LOW CELL* display occurs when the battery needs to be replaced. At this point all alerts are reduced to two seconds.

*OVERFLOW* is displayed when the number of unread messages is greater than the available memory.

The earliest unread message is deleted, making room for the latest message received. Once you have read all of your messages, the clock appears on the status screen.

*DUPLICATE* appears at the beginning of a new message indicating this message has already been received. The new message contains the latest time stamp.

*TIME ONLY* appears on the display when a message is read that does not contain numeric data.

### CLEANING YOUR GOLD LINE PAGER

To clean smudges and grime from your Gold Line pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Wipe the surface using a second cloth moistened in clean water. Do not immerse the pager in water. Do not use alcohol or other cleaning solutions.

5

### BATTERY INFORMATION

The Gold Line pager is designed to operate with one AAA-size alkaline battery. See diagram for the battery door location.

To replace the battery, slide the battery door in the direction of the arrows on the door. Remove the old battery. Insert the negative (-) end of the new battery in first toward the display side of the pager.

Then snap the positive (+) side of the battery into place. To replace the battery door, align the grooves on the door with the grooves on the housing and slide the battery door closed.

### REPAIR AND MAINTENANCE

Your Gold Line pager, when properly handled, is capable of many years of trouble-free service. However, if service is required, the Motorola's Field Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the world. Please contact your paging service representative or a Motorola sales office for more information.

### PATENT INFORMATION

This Motorola product is manufactured under one or more Motorola U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

6



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>