



MOTOROLA



Scriptor LX2TM

User's Guide

CONTENTS

	Page
Scriptor LX2 Alphanumeric Pager	1
Getting The Most From Your Scriptor LX2 Pager..	1
Display Symbols	2
Controls	2
Scriptor LX2 Symbol Quick Reference List	3
Message Status Symbols	3
Function Menu Symbols	3
Other Symbols	4
Turning Your Pager On	4
Turning Your Pager Off	4
Receiving and Reading Your Messages	4
Using the Function Menu.....	5
Backlighting	6
Locking and Unlocking Messages	6
Setting the Clock	7
Setting the Alert Pattern	7
Setting the Alert Mode (Silent or Audible)	8
Setting the Alarm	8
Deleting Messages From Memory.....	9
Other Features	10
Cleaning Your Scriptor LX2 Pager	10
Repair and Maintenance	11
Battery Information	11
Patent Information	12

SCRIPTOR LX2™ ALPHANUMERIC PAGER

 
Congratulations on purchasing a *Scriptor LX2* alphanumeric pager by Motorola, the world leader in paging. Your *Scriptor LX2* pager incorporates many of the most advanced electronic, communications, and wireless technologies available. It's reliable, convenient, and designed for easy operation.

These Operating Instructions explain how to use your *Scriptor LX2* pager and provide helpful suggestions for first-time as well as experienced users. Keep this booklet handy for quick reference.

 
GETTING THE MOST FROM YOUR SCRIPTOR LX2 PAGER

- Give your pager number to secretaries, business associates, friends and family. This allows you to keep in touch wherever you go!
- Include your pager number on your business cards and on your telephone answering machine message. Let people know how to contact you when you're on the go.
- Leave your pager number at your children's school and with the baby-sitter so you can always be reached, right away, in an emergency.

DISPLAY SYMBOLS

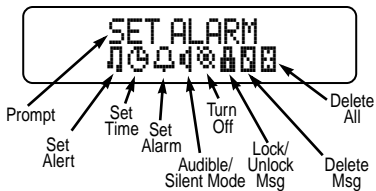
 


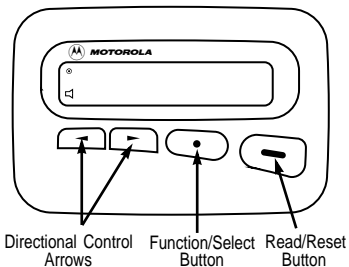

CONTROLS









SCRIPTOR LX2 SYMBOL QUICK REFERENCE LIST











Display Annunciators

-  *Power On*
-  *Auto On/Off Mode Enabled*
-  *Combined Power On and Auto On/Off Mode Enabled*
-  *Audible Alert Mode Enabled*


 



 




MESSAGE STATUS SYMBOLS

-  *Lock Message*
-  *Cursor on Locked Message*
-  *Maildrop Indicator*
-  *Cursor on Message Indicator*
-  *Message In Memory Indicator*
-  *Memory Full Indicator (optional)*




FUNCTION MENU SYMBOLS

-  *Set Audible Alert (or)*
-  *Set Silent Alert*
-  *Turn Pager Off*
-  *Lock Message*
-  *Unlock Message*
-  *Delete Message*
-  *Delete All Messages*
-  *Escape to Main Screen*
-  *Set Alert*
-  *Set Alarm*

OTHER SYMBOLS


	<i>Set Time</i>
	<i>24 Hour Time Indicator</i>
	<i>AM Time Indicator</i>
	<i>PM Time Indicator</i>
	<i>Disable Alarm</i>
	<i>Enable Alarm</i>
	<i>Low Battery Alert</i>
	<i>Out Of Range Indicator</i>
	<i>Message Continuation Indicator</i>
	<i>Press Right Arrow Button Prompt</i>
	<i>Increment Value</i>


TURNING YOUR PAGER ON

Press . Your pager alerts and shows the ON  indicator in the upper left corner of the display. At the end of the alert the time and date is displayed momentarily. The screen then once again displays the ON  indicator.


TURNING YOUR PAGER OFF


① Press  to display the function menu.



The TURN OFF  symbol flashes when this menu item is displayed.


② Press  to select the TURN OFF function. Press it again to turn your pager off.

RECEIVING AND READING YOUR MESSAGES

 

 

When receiving a message, your pager alerts and displays the incoming message  symbol.


- 1 Press any button to stop the alert.
- 2 Press  to display your message.

The flashing arrow at the bottom right corner of the screen  indicates the message you received continues beyond the first two lines of the display. Each  press advances the message to the next two lines.


Press and hold  to rapidly scroll through your message.



Your pager automatically stores the message, along with the time and date your message was received.

If more than one message exists, press  or  to select the message you want to read. The reversed arrow cursor  indicates the location of your message in memory. Press  to display your message.


A flashing ON  symbol indicates a message has been received, but has not yet been read. If programmed with reminder alerts, your pager beeps at predetermined intervals to remind you of an unread message.

USING THE FUNCTION MENU

Press  to display the function menu.

The function menu gives you access to the many features of your pager through a series of symbols and prompts. For example, when the function menu screen is displayed, the TURN OFF  symbol or the ESCAPE  symbol flashes (depending on the pager's factory setting) indicating the present position of the cursor.


As you move the cursor left or right across the symbols, a corresponding prompt appears. To activate your function selection, press ●.


 
 
NOTE: To escape from any field without making any changes, press .



BACKLIGHTING

To view your display in low light conditions, turn on your pager's backlight by pressing and holding ● for 1.5 seconds. If no further buttons are pressed, the backlight automatically turns off when the display goes blank. You can also turn off the backlight by pressing and holding ● for 1.5 seconds.


LOCKING AND UNLOCKING MESSAGES

Up to 10 messages can be “locked” in memory, preventing them from being replaced when your pager's memory is full or from being deleted if the DELETE ALL function  is chosen.


- 1 Press .
- 2 Press ◀ or ▶ to select the message you want to lock.
- 3 Press ● to display the function menu.
- 4 Press ▶ to move the cursor to the LOCK MSG  symbol.
- 5 Press ● to lock the message. The padlock  symbol appears, indicating the message has been locked.

To unlock  a locked  message, use the same procedure outlined above.

SETTING THE CLOCK


- 1 While in the function menu, move the cursor left to the SET TIME  symbol by pressing ◀.
- 2 Press ● to display the SET TIME screen. The cursor flashes in the hour position. Pressing ◀ increments the flashing digits. This is defined by the + symbol shown on the display above the button.
- 3 Press ◀ to advance to the desired hour.
- 4 Press ▶ to move the cursor to the minute field.
- 5 Repeat the process for each field hour, minute, AM/PM/24 hr., day/month/year.
- 6 Press ● to initiate the change.

If you move your cursor past the last field in the row (far right), it automatically wraps around and appears at the first function symbol in that row (far left).


NOTE: To escape from any field without making any changes, press .

SETTING THE ALERT PATTERN



NOTE: The pager must be in the audible alert mode to select an alert pattern. The select alert menu is not displayed on the function menu if the pager is in the silent mode.



- 1 Press ● to display the function menu.
- 2 Press ◀ to move the cursor to the set alert  symbol.
- 3 Press ● to display the SET ALERT screen.

- ④ Move to the desired alert and press ● to initiate the alert change. The selected alert number flashes while a 2 second sample of the selected alert plays through the internal speaker.



NOTE: To escape from any field without making any changes, press .

SETTING THE ALERT MODE (SILENT/AUDIBLE)

- ① Press ● to display the function menu.
- ② Press ◀ to move the cursor to the AUDIBLE MODE  or SILENT MODE  symbol.


The AUDIBLE MODE  symbol is displayed if the pager is in the silent alert mode (prompting you to enter that mode, if desired). The SILENT MODE  symbol is displayed if the pager is in the audible alert mode (prompting you to enter that mode, if desired).



- ③ Press ● to select the desired alert.






If the selected mode is audible , your pager emits a short “chirp.” If the selected mode is silent , and if equipped with a vibrator, your pager vibrates.


SETTING THE ALARM


If your pager is equipped with the ALARM feature, and you want to set the alarm:

- ① Press ● to display the function menu.
- ② Press ◀ to move the cursor to the SET ALARM  symbol.
- ③ Press ● to display the set alarm screen.

When the screen is displayed, the cursor is at the left-most position. This symbol defines the alarm status: either alarm enable , or alarm disable .








- ④ Press  to increment or toggle between alarm enable  and alarm disable .
- ⑤ Press  to move the cursor to the hour field.
- ⑥ Repeat the process for each field (hour, minute).
- ⑦ Press  to make the change.


The alarm  indicator is displayed if an alarm has been set. At the selected time, your pager either vibrates or emits a unique 8-second alert, depending on the alert mode.

NOTE: To escape from any field without making any changes, press .


DELETING MESSAGES FROM MEMORY

You can clear or delete an unlocked message from memory while you are viewing it, or through the function menu.


- ① Press  or  to select the message you want to delete from memory.
- ② Press  to display the function menu.
- ③ Press  to move the cursor to the DELETE MSG  symbol.
- ④ Press  to receive confirmation of delete request.
- ⑤ Press  to delete the message.

If your pager is equipped with the **DELETE ALL** feature, *and* you want to delete all unlocked messages from memory, move the cursor within the function menu screen to the **DELETE ALL**  symbol and press ● twice.

OTHER FEATURES

Low Battery Alert: A low battery  symbol is displayed in place of the date at the onset of low battery conditions. An audible low battery alert is also heard at that time. Replace the battery as soon as possible after the low battery alert is heard. It alerts only once when the low battery symbol is displayed.

Duplicate Message: If the same message is received more than once, **DUPLICATE** is displayed at the beginning of your new message to indicate that your message has already been received. Your new message contains the latest time stamp.

Out of Range: With this option installed, whenever you are too far away from your paging system's transmitter to reliably receive messages, your pager displays an **OUT OF RANGE** message and an out-of-range  symbol.

CLEANING YOUR SCRIPTOR LX2 PAGER

To clean smudges and grime from the exterior of the *Scriptor LX2* housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water.

Do not use alcohol or other cleaning solutions.

REPAIR AND MAINTENANCE

 
Your *Scriptor LX2* pager, properly handled, is capable of many years of trouble-free service. However, if it ever requires service, Motorola's Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities worldwide.

BATTERY INFORMATION

NOTE: The battery door is hinged and does not need to be removed.

Your *Scriptor LX2* pager is designed to operate with a AAA-size alkaline battery (do not use carbon zinc batteries). See the following diagram for battery door location. To install or replace the battery, place the pager face down in the palm of your hand. Then,

- ❶ Unlock the battery door by sliding the door latch up with your thumb.
- ❷ Slide the battery door to your right (toward the outer edge).
- ❸ Lift the battery door toward you to install or replace the battery.

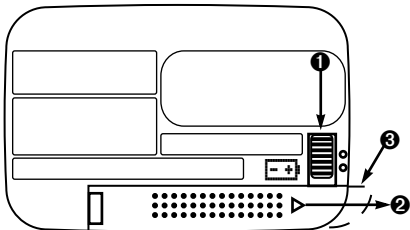

Scriptor LX2 Rear View (Battery Replacement)

CAUTION: Inserting the battery backwards causes all messages stored and/or locked in memory to be erased.

PATENT INFORMATION

This Motorola product is manufactured under one or more Motorola U.S. Patents. A listing of these patents is provided inside the battery compartment which can be seen by removing the battery door. Other U.S. Patents covering this product are pending.

NOTES

Ⓜ, Motorola, and Scriptor are registered trademarks
of Motorola, Inc.

Scriptor LX2 is a trademark of Motorola, Inc.

© 1993 - 1996 by Motorola, Inc.,

Paging Products Group,
1500 Gateway Boulevard.,
Boynton Beach, FL 33426-8292 U.S.A.
All Rights Reserved

Printed in U.S.A. 6/96



6881019B70-C

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>