



Two-Way Radio User's Guide



KEM-ML29743

MB Series

The MB Series is approved for use in the US and Canada only.

Portable Radio Operation and EME Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

Do NOT hold the antenna when the radio is "IN USE." Holding the antenna affects the effective range.

Body-Worn Operation

To maintain compliances with FCC/Health Canada RF exposure guidelines, if you wear a radio on your body when transmitting, always place the radio in a Motorola-supplied or approved clip, holder, holster, case or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines.

If you do not use one of the Motorola-supplied or approved body-worn accessories and are not using the radio held in the normal use position, **ensure the radio and its antenna are at least 1 inch (2.5 cm) from your body when transmitting.**

Data Operation

If applicable, when using any data feature of the radio with or without an accessory cable, **position the radio and its antenna at least one inch (2.5 cm) from the body.**

Approved Accessories

53724: Remote Speaker with Push-to-Talk Microphone

53727: Earbud with Push-to-Talk Microphone

53728: Flexible Ear Receiver

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause undesired operation.

IC Canada

The term "IC:" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your radio when onboard an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

Medical Devices – Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio and a pacemaker. These recommendations are consistent with the independent research by and recommendations of the U.S. Food and Drug Administration.

People with pacemakers should:

- ALWAYS keep the radio more than 6 inches (15 cm) from their pacemaker when the radio is turned ON.
- Not carry the radio in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio OFF immediately if there is any reason to suspect that interference is taking place.

Medical Devices – Hearing Aids

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Medical Devices - Other

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General Use While Driving

Check the laws and regulations regarding the use of radios in the area where you drive, and always obey them. If you do use your radio while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

The use of a two-way radio while engaged in activities requiring concentration may cause distraction or otherwise impair your ability to safely participate in such activities. Always use technology safely.

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your radio prior to entering any area with a potentially explosive atmosphere. Only radio types that are especially qualified should be used in such areas as "Intrinsically Safe." Do not remove, install or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles (such as grain, dust or metal powders) and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often—but not always—posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off two-way radios." Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material—like jewelry, keys or beaded chains—touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse or other container with metal objects.

Exercise care when removing NiMH or AAA batteries. Do not use sharp or conductive tools to remove either of these batteries.

Battery Charger Safety Instructions:

Save these Instructions

1. Do not expose the charger to rain or snow.
2. Do not operate or disassemble the charger if it has received a sharp blow, or has been dropped or damaged in any way.
3. Never alter the AC cord or plug provided with the unit. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician. An improper condition can result in a risk of electric shock.
4. To reduce the risk of damage to the cord or plug, pull the plug rather than the cord when disconnecting the charger from the AC receptacle.
5. To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.
6. Use of an attachment not recommended or sold by Motorola may result in a risk of fire, electric shock or personal injury.
7. Make sure the cord is located so it will not be stepped on, tripped over or subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of a fire and/or electric shock. If an extension cord must be used, make sure that:
 - The pins on the plug of the extension cord are the same number, size and shape as those on the plug of the charger.
 - The extension cord is properly wired and in good electrical condition.
 - The extension cord size is 18 AWG for lengths up to 100 feet, and 16 AWG for lengths up to 150 feet.
9. The supply cord of the AC adaptor cannot be replaced. If the cord is damaged, call customer service at 1-800-638-5119 or e-mail us at giantint@callcenter.com.

FCC Licensing Information

Your Motorola radio operates on FRS & GMRS frequencies in Canada & in the USA. For Canadian citizens, use of these frequencies is subject to the rules & regulations of Industry Canada (IC). IC requires no license when operated in Canada. For USA citizens, use is subject to the rules and regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using GMRS frequencies obtain a radio license before operating their equipment. To obtain the FCC forms, please visit the FCC's Web site at wireless.fcc.gov/uls/index.htm?job=home to source form 605 and 159, which includes all the instructions you will need. If you wish to have the document faxed or mailed, or if you have questions, please use the following contact information:

For a fax: Contact the Fax-On-Demand system	For mail service: Call the FCC Forms Hotline	If you have questions about the FCC License: Call the FCC
1-202-418-0177	1-800-418-FORM (3676)	1-888-CALL-FCC (225-5322)

 
Changes or modifications not expressly approved by Motorola may void the user's authority granted by the IC/FCC to operate this radio and should not be made. To comply with IC/FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land, mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the IC/FCC equipment authorization for this radio could violate IC/FCC rules.

Note: Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited.

Control Buttons



Display Screen Guide

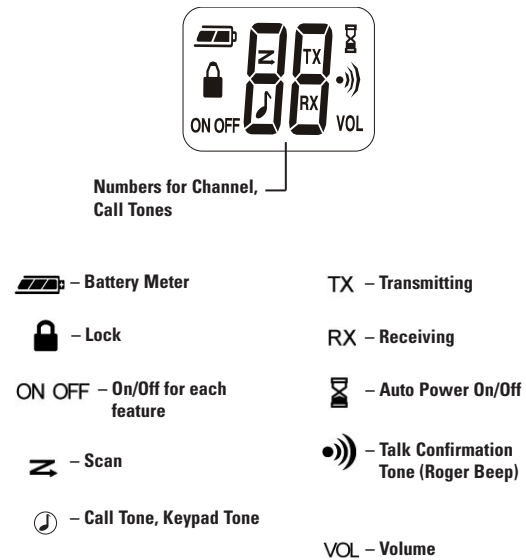

Getting Started

Installing the Batteries

Each radio uses 1 NiMH rechargeable battery pack or 3 AAA alkaline batteries and beeps when the batteries are low.

Installing NiMH Rechargeable Battery Pack (Optional Accessory)

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Remove the NiMH battery pack from the clear plastic bag (do not disassemble or unwrap the battery pack).
4. Insert the NiMH battery pack with the diagram facing you.
5. Reposition the battery cover and press down to secure.

Installing the Three AAA Alkaline Batteries (Not Included)

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Insert the three AAA alkaline batteries with + and - polarity as shown inside.
4. Reposition the battery cover and press down to secure.

Radio Battery Meter

The radio battery icon shows the radio battery charge level, from full to empty . When the radio has one segment left, the radio chirps periodically or after releasing (Low Battery Alert).

Removing the NiMH Battery Pack (Optional Accessory)

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Gently remove the NiMH battery by easing it out.
4. Reposition the battery cover and press down to secure.

Removing the Three AAA Alkaline Batteries

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Remove each alkaline battery by easing each battery out individually.
4. Reposition the battery cover and press down to secure.

Notes:

- Exercise care when removing NiMH or AAA batteries. Do not use sharp or conductive tools to remove either of these batteries.
- Remove the batteries before storing your radio for extended periods of time. Batteries corrode over time and may cause permanent damage to your radio.

Using the Plug-in Charging Adaptor (Optional Accessory)

The battery plug-in charger (adaptor) provides charging convenience for NiMH batteries in one or both radios. Charge the NiMH battery overnight (at least 16 hours) before using it for the first time. After the initial charge, an empty battery is fully charged within 14 hours.

1. Follow the steps above to install a NiMH battery pack.
2. Connect the AC power adaptor plug into the recharging jack at the bottom (right) of the radio. (The adaptor charges two radios.)
3. Plug the AC power supply into a standard wall outlet.

Notes:

- The light will remain red after the battery pack is fully charged.
- When moving between hot and cold temperatures, do not charge the battery until the battery temperature acclimates (usually about 20 minutes).
- For optimal battery life, unplug the charging adaptor within 16 hours. Do not store the radio while connected to the charger.
- When your radio is plugged into the AC power adaptor, your radio will automatically power off.

Low Battery Alert

In addition to your battery meter showing how much battery power you have, your radio will beep to alert you to the fact that your batteries are low.

Turning Your Radio On and Off

1. To turn on, press and hold until a channel number appears and the radio beeps.
2. To turn off, press and hold until the display goes blank.

Setting the Volume

Press to increase or to decrease the volume. The volume level flashes and VOL displays.

Talking and Listening

To communicate, all radios in your group must be set to the same channel.

1. To talk, press and hold .
2. When you are finished talking, release .

For maximum clarity, hold the radio two to three inches away from your mouth and speak directly into the microphone. Do not cover the microphone while talking.

Talk Range

Your radio is designed to maximize performance and improve transmission range. Do not use the radios closer than five feet apart.

Push-to-Talk (PTT) Timeout Timer

To prevent accidental transmissions and save battery life, the radio emits a continuous warning tone and stops transmitting if you press for 60 continuous seconds.

Menu Options

There are 8 options you may set to your preferences. Each press of the MENU key advances you to the next option setting. Press the or keys to change the setting. The menu will automatically close 5 seconds after the last press of any button. After the last menu item, the radio exits MENU mode and returns to operation of the radio. A press of the button while setting any menu option will immediately save all your settings and return to operation of the radio.

All MENU settings will revert to the factory default values if the battery is fully discharged or removed for more than 30 seconds.

Menus and Values

1. Channel (1-22)
2. Call Tone (1-10 or OFF)
3. Talk Confirmation Tone (ON/OFF)
4. Keypad Tones (ON/OFF)
5. Auto Power Off (0/30/60/90 minutes or OFF)
6. Scan (ON/OFF)
7. Monitor
8. Keypad Lock (ON/OFF)

Selecting the Channel

Your radio has 22 channels. The channel is the frequency your radio uses to transmit. (See Channels and Frequencies table below.)

1. Briefly press and release . The channel number flashes.
2. Press or to select a channel.
3. Press to confirm or to continue set up.

Channels and Frequencies

Channel	Frequency (MHz)	Description	Channel	Frequency (MHz)	Description
1	462.5625	GMRS/FRS	12	467.6625	FRS
2	462.5875	GMRS/FRS	13	467.6875	FRS
3	462.6125	GMRS/FRS	14	467.7125	FRS
4	462.6375	GMRS/FRS	15	462.5500	GMRS
5	462.6625	GMRS/FRS	16	462.5750	GMRS
6	462.6875	GMRS/FRS	17	462.6000	GMRS
7	462.7125	GMRS/FRS	18	462.6250	GMRS
8	467.5625	FRS	19	462.6500	GMRS
9	467.5875	FRS	20	462.6750	GMRS
10	467.6125	FRS	21	462.7000	GMRS
11	467.6375	FRS	22	462.7250	GMRS

Note: This radio does not have Interference Eliminator Codes. To communicate with radios that use Interference Eliminator Codes, the Interference Eliminator Code must be set to 0.

Setting and Transmitting Call Tones

Your radio can transmit different call tones to other radios in your group so you can alert them that you want to talk. You have 10 call tones from which to choose.

To set a call tone:

1. With the radio on, short press until the appears. The current call tone setting flashes.
2. Press or to change and hear the call tone.
3. Press to set the new call tone or to continue set up.

To transmit your call tone to other radios set to the same channel as your radio, press .

Note: Setting the call to 0 disables the call tone feature.

Keypad Tones

You may enable or disable the speaker key tones. You will hear the key tone each time a button is pushed.

1. Press until appears. The current setting On/Off will flash.
2. Press either or to turn On or Off.
3. Press to confirm or to continue set up.

Note: When the key tone feature is off, the following are not disabled:

- Transmit timeout alert tone
- Power-down alert tone
- Low battery alert tone
- The transmitted talk confirmation tone

Transmitting a Talk Confirmation Tone

You can set your radio to transmit a unique tone when you finish transmitting. It is like saying "Roger" or "Over" to let others know you are finished talking.

1. With the radio on, short press until appears. The current setting On/Off flashes.
2. Press or to turn On or Off.
3. Press to set the talk confirmation tone or to continue set up.

Auto Power Off






Your radio will save power by automatically turning itself off if unused after a predetermined amount of time.

1. Press until displays. The current setting (0, 30, 60, 90) will flash.
2. Press or to set the time to 30 minutes, 60 minutes or 90 minutes. When this feature is activated, the will remain on the display.
3. When you exit the Menu mode, the timer will begin. If a button is pressed, or if there is an incoming signal, the timer will restart.
4. Press to confirm or to continue set up.

Special Features

Keypad Lock

To avoid accidentally changing your radio settings you can lock your keypad:






 
1. Short press  until  appears. The current setting On/Off will flash.
2. Push  or  to turn On or Off.
3. The  will be displayed on your screen.

 
When in lock mode, you cannot adjust the volume, but all other functions work as usual.

To unlock the radio, press and hold  for a few seconds.

 
 
Scanning Channels

Use scanning to monitor channels for transmissions or to find someone in your group who has accidentally changed channels.

1. Briefly press  until  appears. The current setting On/Off will flash.
2. Press either  or  to turn On or Off.
3. Press  to confirm or  to continue set up.

When the radio detects channel activity, it stops scanning and you can hear the transmission. To respond, press  within five seconds.




Advanced Scan



If the radio stops on an undesired transmission, you may immediately resume the scan by briefly pressing  or .

To disable the scan feature, press  briefly until  appears. Press either  or  to select the off option.

Monitor Function

Use this feature to see if there is anyone on the channel you have selected.

 
1. Short press  until RX appears.
2. When you have finished listening, press  to confirm or  to continue set up.

Note: Monitor will time out after five seconds if  or  is not pressed.

Use With Accessories

You can transmit more reliably with the use of optional PTT headset accessories. A PTT headset allows privacy to others around you while listening.

Many accessories (sold separately) are available for your radio. For more information, visit our Web site at www.motorola.com or shop.giantintl.com.

1. Plug the PTT accessory into the accessory jack.
2. Press the PTT on the accessory microphone instead of the radio.
3. Adjust the volume appropriately by pressing . Lower the volume before placing the accessory on your head or in your ear.

Note: The MB Series does not have VOX capabilities, and is only compatible with PTT headset accessories.

Warranty

Consumer Two-Way Radio Products and Accessories purchased in Canada or the United States.

What Does this Warranty Cover?

Subject to the exclusions contained to the right, Giant International Ltd. warrants the Motorola branded consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service that it manufactures ("Products") and the Motorola branded or certified accessories sold for use with these Products that it manufactures ("Accessories") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola branded Products and Accessories manufactured by Giant International Ltd., and purchased by consumers in Canada or the United States, which are accompanied by this written warranty:

Products Covered	Length of Coverage	Exclusions
<p>Products and Accessories as defined above, unless otherwise provided for below.</p> <ol style="list-style-type: none"> 1. Consumer Two-Way Radio Accessories. 2. Products and Accessories that are Repaired or Replaced. 	<p>One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.</p> <ol style="list-style-type: none"> 1. Ninety (90) days from the date of purchase by the first consumer purchaser of the product. 2. The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer. 	<p>Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.</p> <p>Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.</p> <p>Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or Giant International Ltd., are excluded from coverage.</p> <p>Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, or other peripheral equipment are excluded from coverage.</p> <p>Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, Giant International Ltd. or its authorized service centers, are excluded from coverage.</p> <p>Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.</p> <p>Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.</p>

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will GIANT INTERNATIONAL LTD. do?

GIANT INTERNATIONAL LTD., at its option, will at no charge repair, replace or refund the purchase price of any Products or Accessories that does not conform to this warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

USA and Canada Two-Way Radios

1-800-638-5119

giantintl@callcenter.com

For Accessories, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products or Accessories at your expense, to a GIANT INTERNATIONAL LTD. Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR GIANT INTERNATIONAL LTD. BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Patent and Copyright Information

Manufactured, distributed or sold by Giant International Ltd., official licensee for this product. MOTOROLA, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. ©2011 Motorola, Inc. All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>