


Timer recording allows the convenient function of pre-setting your DVD recorder to record programs when you are not there, this will give you a basic guide on how to set timer recording.

1. Turn your DVD recorder on at the wall also on using the **<Power Button>** below and put your TV onto the channel that you view your DVD recorder on.



2. Press the **<Prog/check button>**. (The buttons position may vary depending on your recorder the most common two are shown below, if you are unsure please check your operating instructions)

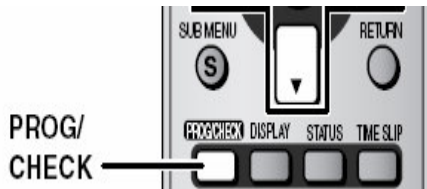


(DMR-E55, E85, ES10 & ES30)




(DMR-EH60 & EH50)

3. Using the **[▲, ▼]** move up and down until “New Timer Programme” is highlighted and press, the **<Enter button>**. (see menu below)

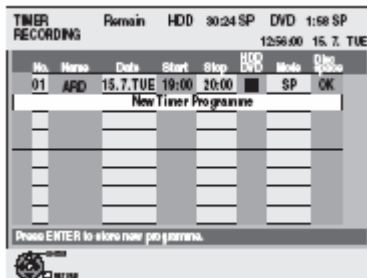


4. After pressing the **<Enter button>** it will display the screen for entering in the details for the programme you want to record.

With Hard Drive.

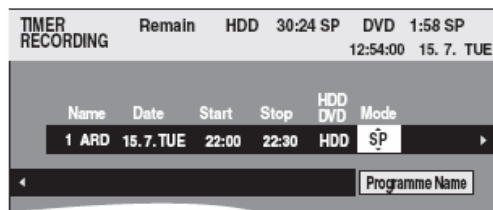

Without Hard Drive.

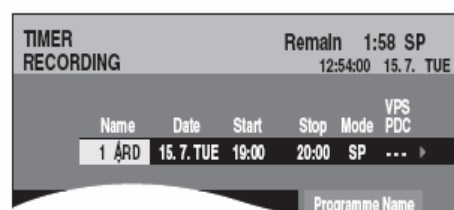


or

This is a basic guide to set up one off timer recordings for more advanced timer functions and information please consult your operating instructions, for more information please check out the FAQ section on our website www.panasonic.om.au .


(DMR-ES10, E55 & ES30)

5. * First select the Channel you wish to record, this is the “Name” section of the menu, use the [▲, ▼] to select the correct channel.

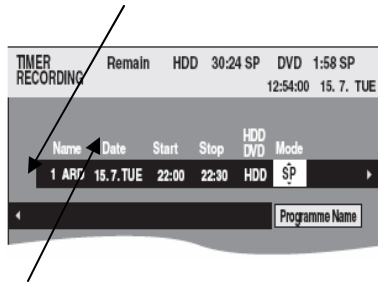


* Next use the [▶] to select the start time of the programme, use the [▲, ▼] to scroll, by holding down the button will move the time in 30min increments by pressing it once will move it 1min at a time.

* Next only applies to recorders with a hard drive. Use the [▶] to select “HDD/DVD” use the [▲, ▼] to select the format that the unit will record in.

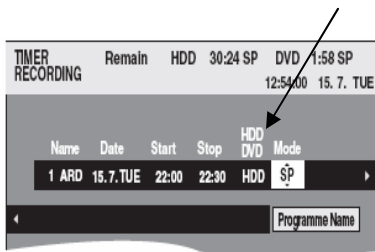


(DMR-EH50, EH60 & E85)

* Next use the [▶] to select the date, use the [▲, ▼] to select correct date.

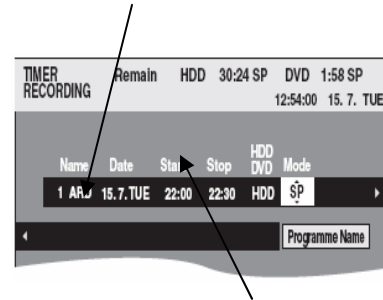

* Next use the [▶] to select the stop time of the recorder, use the [▲, ▼] to select the time the recorder will finish recording.

* Next use [▶] select the “Mode”. Use the [▲, ▼] to select the speed the unit will record at.

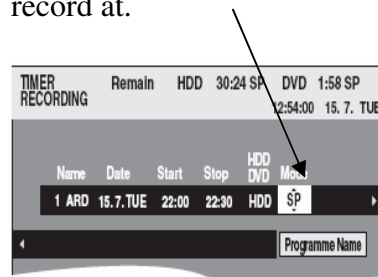

6. If all the information on the screen is correct press the timer button



TIMER

. The unit will then go into the standby mode waiting for the time for it to start recording.

This is a basic guide to set up one off timer recordings for more advanced timer functions and information please consult your operating instructions, for more information please check out the FAQ section on our website www.panasonic.om.au .

This is a basic guide to set up one off timer recordings for more advanced timer functions and information please consult your operating instructions, for more information please check out the FAQ section on our website www.panasonic.om.au .

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>