


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

## Basic Hardware buttons



- ① **▲ button**  
Press to display the touch panel keys for ejecting the media.
- ② **VOL (+/-) button**  
Press to adjust the AV (Audio and Video) source volume.
- ③ **HOME button**  
Press to display the "Top Menu" screen.
- ④ **MODE button**  
Press to switch between the map screen and the AV operation screen.
- ⑤ **TRK (◀/▶) button**
- ⑥ **⏸ button**  
Press briefly to start the voice operation. Press and hold to mute the AV source.

## Display the menu screen

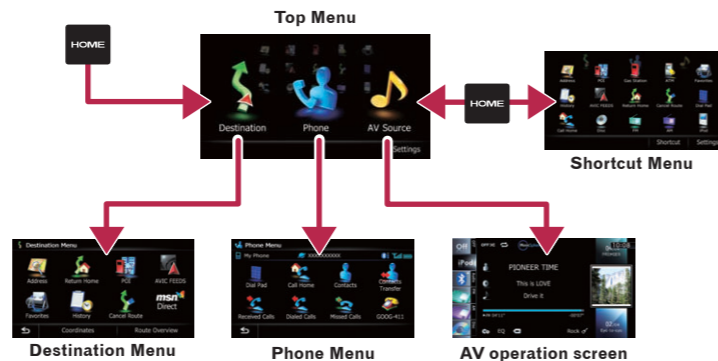


## Basic items on the map



- ① Name of the street to be used (or next guidance point)
- ② Current time
- ③ Estimated time of arrival
- ④ Current route
- ⑤ Current position
- ⑥ Street name that your vehicle is traveling along
- ⑦ Eco-Meter
- ⑧ Zoom in/Zoom out
- ⑨ Next direction of travel

## Destination Menu


Touch **Destination** on the "Top Menu" screen.

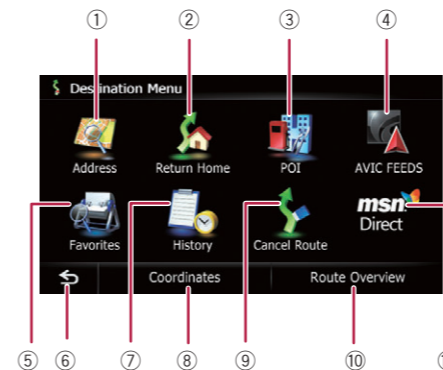


- ① Searches for location by address
- ② Calculates the route home
- ③ Searches for a place from stores, restaurants, and other businesses in the points of interest database
- ④ Searches for POIs by using the data on external storage devices (microSD card)
- ⑤ Selects your stored location
- ⑥ Returns to the previous screen
- ⑦ Selects a previously routed destination
- ⑧ Searches for a location by coordinates
- ⑨ Cancels your current route
- ⑩ Displays the current route information
- ⑪ Displays information on MSN® Direct

## Searching for your destination by address

- 1 Display the "Destination Menu" screen and touch **Address**.

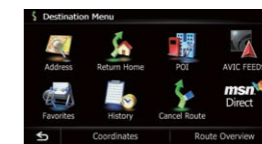

- 2 Input the information that you want to set as the destination.

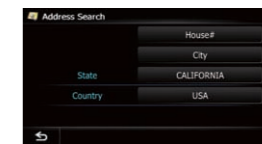


- 3 Touch **OK**.



After searching for the destination, the Route confirmation screen appears.


- 4 Touch **OK**.

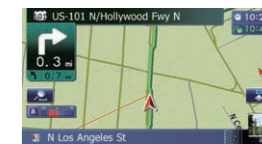

This navigation system gives you route guidance visually and by voice.

## Setting the volume of the route guidance

- 1 Touch the keys in the following order in the “**Top Menu**” screen. **Settings** → **System Settings** → **Volume**
- 2 Touch **+** or **-** to change the volume of the route guidance.

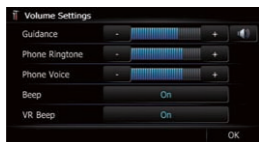


## Inserting and ejecting a microSD card

For details about playable files, refer to Operation Manual.


### Inserting a microSD card

- 1 Insert your microSD card until it clicks.

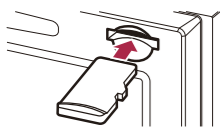


### Ejecting a microSD card

- 1 Press **▲** button.
- 2 Touch **Eject SD** on the screen.
- 3 Press the middle of the microSD card gently until it clicks.
- 4 Pull the microSD card out straight.

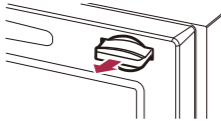

## Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap **FM** on the AV operation screen.

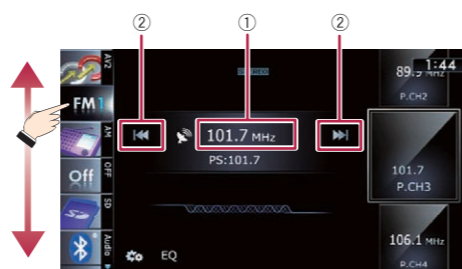


- ① Displays the current preset frequency list
- ② Scans until a broadcast strong enough for good reception is found

## Playing your Apple iPod


You can control an iPod by connecting the USB interface cable for iPod (CD-IU50V) (sold separately) to the navigation system.

- 1 Connect your iPod.

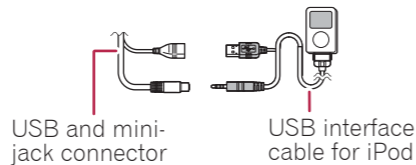

The source changes and then playback will start.

- 2 Tap or drag the key that you want to operate.

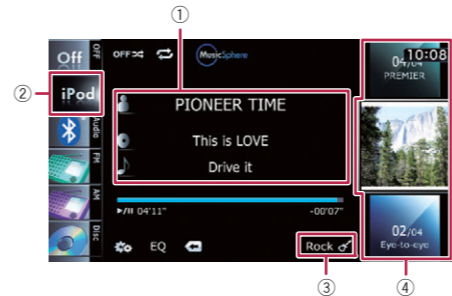

- ① Displays the artist name list, album title list or song title list
- ② Displays the category list
- ③ Displays the genre list
- ④ Selects the song to play by scrolling and dragging the key up or down. To play the song, tap it
- ⑤ Switches the list screen between music and video
- ⑥ Selects a song by scrolling and dragging the character tab up or down. Tap the tab of the character for the song title that you want to display
- ⑦ Starts playback by tapping an item to select

## Pairing your phone


- 1 Activate the Bluetooth function on your phone.
- 2 Touch the keys in the following order in the “**Top Menu**” screen. **Settings** → **Bluetooth Settings**
- 3 Touch **Bluetooth On/Off** to select **On**.



- 4 Touch **Registration** on the “**Bluetooth Settings**” screen.

The system tries to find and lists nearby devices.

- 5 Touch your phone on the list.

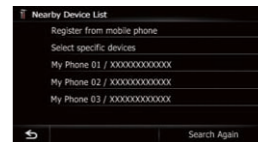

- 6 Enter the PIN code from your phone. (The default code is 1111.)

When the pairing is successful, the message will appear.

## Transferring the phone book

- 1 Connect the cellular phone.
- 2 Touch **Contacts Transfer** on the “**Phone Menu**” screen.
- 3 Check that the following screen is displayed, and operate your cellular phone to transfer the phone book entries.



After transferring the data is finished, a message asking whether you want to transfer more data appears.

- 4 Touch **No**.



The transferred data is imported to the navigation system.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>