



# DVD3100

## In-Dash Single Disc DVD/CD Player

**Before operating the unit, please read these  
instructions carefully**



## Welcome

Thank you for purchasing this DVD/CD player. Before operating the unit, please read this manual thoroughly and retain it for future reference.

## IMPORTANT NOTES

To prevent an electrical system short which could cause serious damage to the unit, the vehicle, or cause personal injury, please follow the safety recommendations below:

- Should there be requirement to replace a blown fuse, remember to first disconnect all power and switch off the unit before fuse replacement. Use a fuse with the correct rating to avoid damaging the unit.
- During operation, if the unit overheats or the system malfunctions for some reason, switch off the unit and consult your dealer immediately. Please do not attempt to open up the unit; there are no serviceable parts inside.
- **This product utilizes a laser.** Do not remove the cover. Use of controls or adjustments or performance of procedure other than those specified herein may result in hazardous radiation exposure.
- To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

This unit is designed using high quality electronic components, and is manufactured under stringent quality control standards. The unit will provide many hours of quality performance if used correctly. To ensure quality performance, please comply with the following precautions during use:

- The battery life of the remote control unit is approximately 6 months long. To ensure effective control, please replace the batteries regularly. Do not use new and used batteries at the same time; the good battery could be damaged.
- Do not use any chemical solvent, cleaning agent or corrosive detergent to clean away dirt on the surface of the bezel. By so doing, you may cause irreversible damage to the surface. To clean off dirt or fingerprints, use a soft damp lens cleaning cloth.
- Ensure that no metal or foreign materials fall into the player cabinet. If this happens, switch off the unit and contact your dealer immediately.
- Allow adequate air circulation to prevent internal heat buildup. Do not install unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight or excessive dust. If the internal temperature of the vehicle is extremely high, allow a brief cool-down period before operating the unit.
- Keep the unit away from equipment with strong magnets such as large loudspeakers.

## Operating Instructions

- Depending on reception quality of the TV, noise interference may appear while a broadcast is being received with the DVD powered on. This is not a malfunction of the DVD or the TV. To watch a TV broadcast, turn off the DVD.
- To prevent an operational malfunction, do not play discs other than DVD audio discs, DVD-ROMs, CD-ROMs, Photo CDs and DVDs with region numbers other than this player's region number.
- Only use the correct size of fasteners or cable connectors during installation. Failure to comply with this requirement may create a fire hazard.
- Kindly refer to an authorized dealer if in doubt concerning any of the preceding items.

**When installing this unit together with a display monitor, please check that this configuration complies with your local traffic rules and regulations**

**This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.**

# INSTALLATION GUIDE


### Precautions:

1. This DVD/CD player should be install by qualified technician or service personnel.
2. The DVD/CD is designed to operate with a 12 Vdc, negative ground battery system.
3. Disconnect the ground wire from the battery terminal before connecting the unit to the electrical system.
4. The wiring from other units or accessories might display a similar color code to this product; however, they may not perform the same function. It is always advisable to refer to the electrical connection diagrams of a unit or its accessories before installation to avoid incorrect connections.
5. Use proper insulation and fastening materials to prevent electrical short-circuiting.
6. Do not connect the yellow wire of the DVD/CD player directly to the battery terminal. Remember to connect the red wire to the ACC side of the ignition switch. Failure to do so may result in prematurely draining the battery charge.
7. Use only supplied accessories to avoid damaging the unit during installation.
8. Do not install the DVD/CD player at an incline angle exceeding 30°.
9. Do not install the DVD/CD player at a position that may cause injuries to the passenger(s) during an accident.


# Operating Instructions

## Back Panel

The figure below shows the back panel design for the player. It also indicates the wire definition for interconnections.

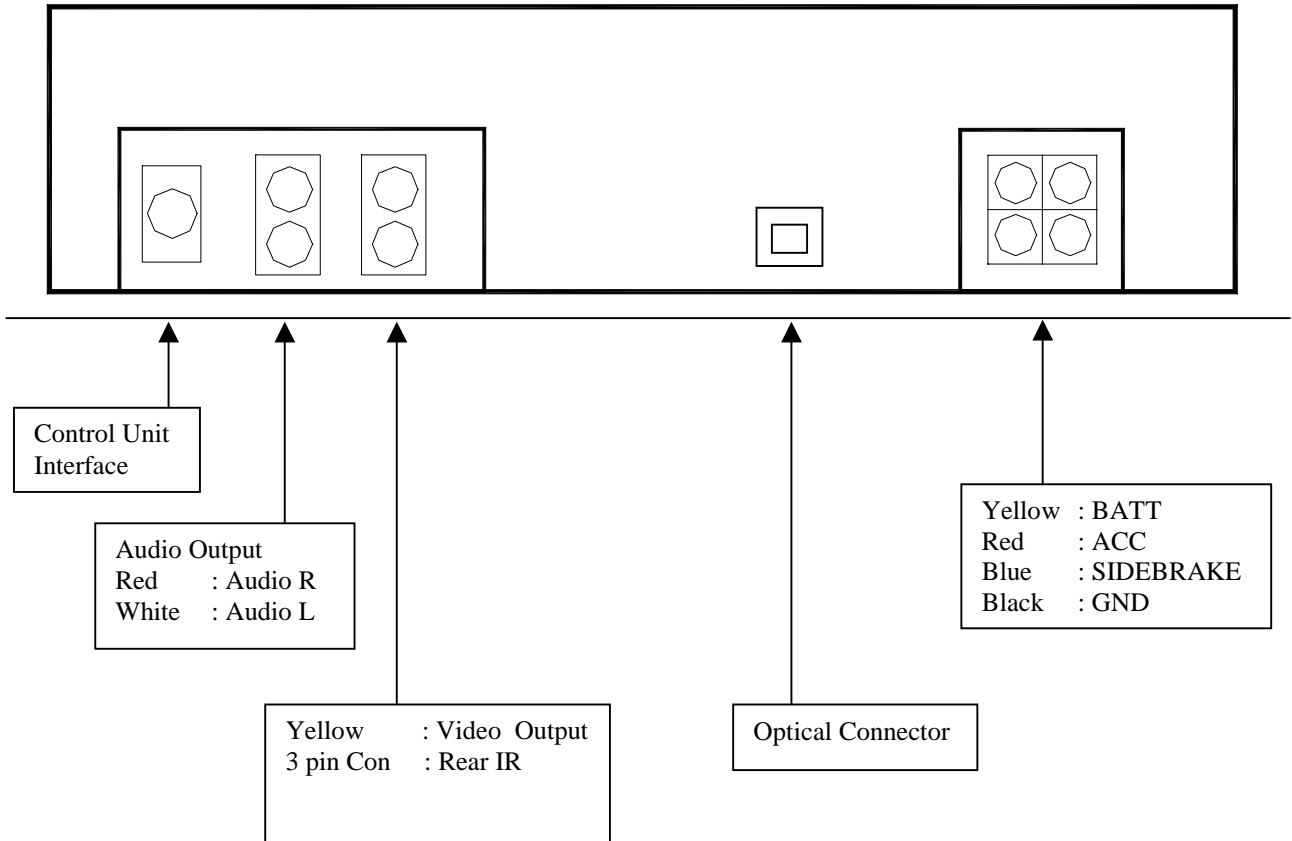


## 2.1 Remote Control Reference Guide

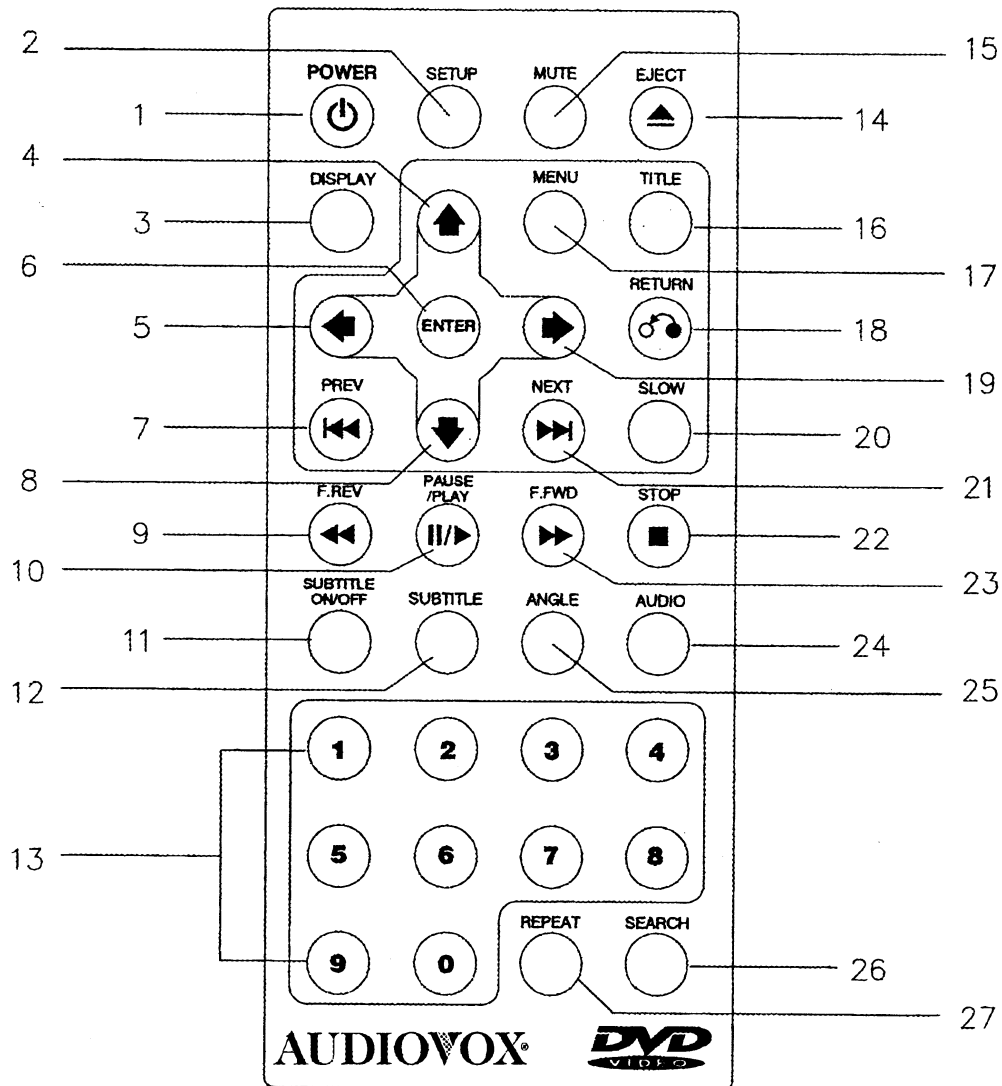

- |                                 |                              |
|---------------------------------|------------------------------|
| 1. Power Button                 | 15. Mute Button              |
| 2. Setup Button                 | 16. Title Button             |
| 3. Display Button               | 17. Menu/PBC Button          |
| 4. Up Cursor Key                | 18. Return Button            |
| 5. Left Cursor Key              | 19. Right Cursor Key         |
| 6. Enter Key                    | 20. Slow Button              |
| 7. Previous/Reverse Skip Button | 21. Next/Forward Skip Button |
| 8. Down Cursor Key              | 22. Stop Button              |
| 9. Reverse Scan Button          | 23. Forward Scan Button      |
| 10. Play/Pause Button           | 24. Audio Select Button      |
| 11. Subtitle On/Off Button      | 25. Angle Select Button      |
| 12. Subtitle Selection Button   | 26. Search Button            |
| 13. Numeric Buttons             | 27. Repeat Button            |
| 14. Eject Button                |                              |

## 2.2 Front Panel Control Reference Guide

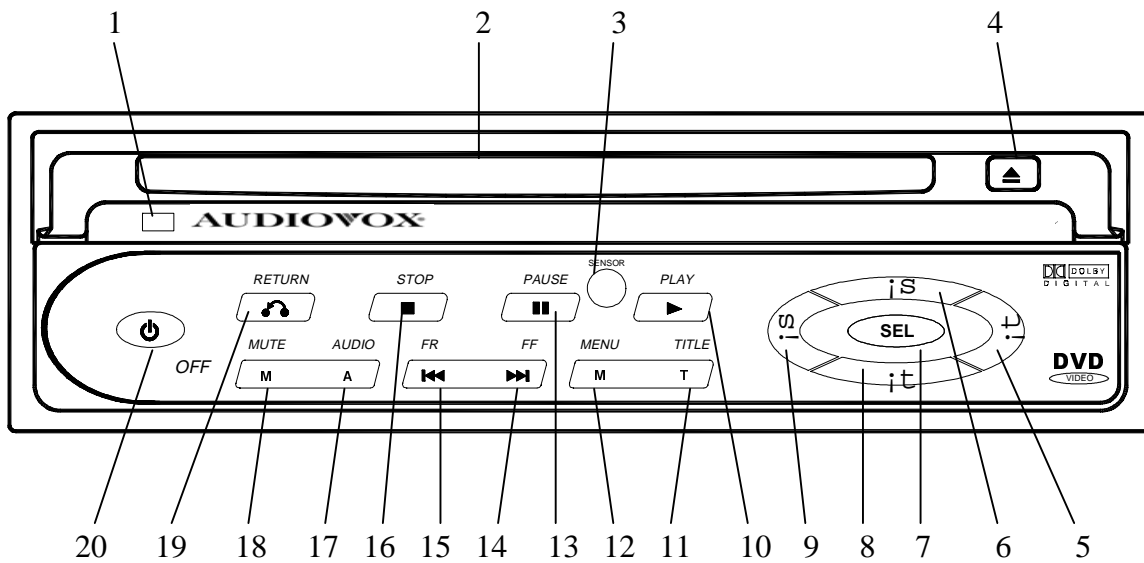

- |                     |                          |
|---------------------|--------------------------|
| 1. Power Indicator  | 11. TITLE Button         |
| 2. Disc slot        | 12. MENU Button          |
| 3. Remote Sensor    | 13. Pause Button         |
| 4. Eject Button     | 14. Forward Skip Button  |
| 5. Cursor Right Key | 15. Backward Skip Button |
| 6. Cursor Up Key    | 16. Stop Button          |
| 7. Enter Key        | 17. Audio Button         |
| 8. Cursor Down Key  | 18. Mute Button          |
| 9. Cursor Left Key  | 19. Return Button        |
| 10. Play Button     | 20. Power On/Off Button  |

## 3. Basic Functions

### 3.1 DVD Playback (DVD)

- 1) Press the **POWER** (⏻) button on the remote control, or the DVD/CD player front panel **POWER** (⏻) button to switch on unit power.
- 2) Insert a disc into the unit.
- 3) DVD playback commences:
  - The disc will start to play if the disc does not have any menu recorded on it.
  - If the disc has one or more titles recorded on it, a menu screen will appear on the TV monitor.

**NOTE:** When “INVALID” appears, it means that the corresponding operation is prohibited either by the player or by the disc.

The DVD will display “INVALID DISC” if the DVD disc has a region code that does not compare favorably with the unit.

- 4) Press the **▶ / ◀ / ▲ / ▼** buttons to select the preferred title.
- 5) Press the **ENTER** button: the selected item will now start playing.
- 6) Press the **MENU** or **TITLE** button; the menu screen will appear.

TITLE MENU	
1. Fish	
2. Bird	
3. Dog	

After operation, press **POWER** (⏻) button to place the unit in standby mode.

### 3.2 Audio CD or Video CD Playback (CD/VCD)

- 1) Press the **POWER** (⏻) button on the remote control, or the DVD/CD player front panel **POWER** (⏻) button to switch on unit power.
- 2) Insert a disc into the unit.
- 3) Press the **PLAY/PAUSE** (⏮/▶) button to start playback of the disc.

1. Dog
2. Cat
3. Sheep
4. Cow
5. Bird

#### 3.2.1 Playback Video CDs with Playback Control Using Menus

- This function operates only with a Video CD having playback control (Version 2.0).
- Perform steps 1 to 3 as outlined in paragraph 3.2; the menu will be displayed on the TV monitor.
- 4) Press the numeric buttons to select the preferred track.
- 5) Press the **RETURN** button to stop the playback and return to the Menu screen.

**NOTE:** The play details in the menu will vary depending on the disc in question.

The basic operations to play Video CD having PBC (Playback Control) consist of the following:

- **NEXT TRK** (⏮) - To go to the next menu (if available) or next track.
- **PREV TRK** (⏭) - To go to the previous menu (if available) or previous track.
- **RETURN** - To return to the previous menu.



## 3.2.2 Playback Video CDs with Playback Control Without Using Menus (VCD)

- 1) Press the **MENU/PBC** button to set PCB off.
- 2) "PBC OFF" will be displayed on the TV screen.
- 3) Press the required track number button to select the preferred track, or press the **PLAY/PAUSE (II/▶)** button to commence playback.

 
To return to menu playback:

- 1) Press the **MENU/PBC** button: "PBC ON" will be displayed on the TV screen.
- 2) The menu (if available) will be displayed on the TV monitor.


## 3.3 Fast Forward or Reverse (CD/VCD/DVD)

- 1) Press the **F.FWD (▶▶)** button during playback.  
Each time this button is pressed, the unit will go into a rapid advance playback mode. The following OSD will be shown on the TV screen, depending on the speed of the playback selected:

### Audio CD Playback




### Video CD/DVD Playback

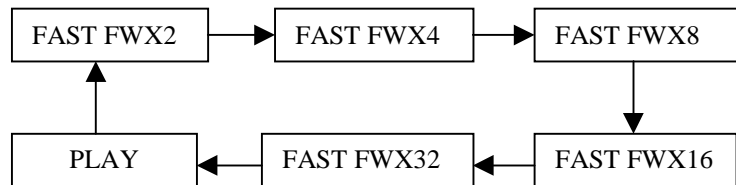


- 2) Press the **F.REV (◀◀)** button during playback.  
Each time this button is pressed, the unit will go into a rapid reverse playback mode. The following OSD will be shown on the TV screen, depending on the speed of the playback selected:

### CD Playback

 

### VCD/DVD Playback

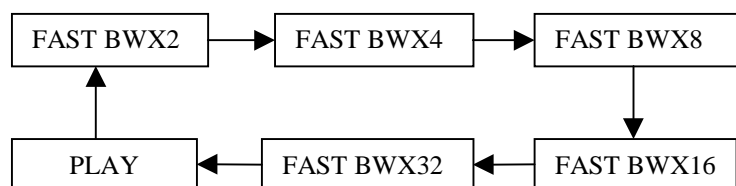

## 3.4 Next track or previous track (CD/VCD/DVD)

Press **▶▶** during playback.

Audio CD and Video CD:

The player will skip forward to the next track each time the button is pressed.  
“SKIP FW” will be displayed on the TV screen.

DVD:

The player will skip forward to the next title/chapter each time the button is pressed.  
“SKIP FW” will be displayed on the TV screen.

Press **◀◀** during playback.

Audio CD and Video CD:

The player will skip to the beginning of the current track each time the button is pressed.  
The player will skip to the beginning of the previous track when the button is pressed twice consecutively.  
“SKIP BW” will be displayed on the TV screen.

DVD:

The player will skip to the beginning of the current chapter each time the button is pressed.  
The player will skip to the beginning of the previous chapter when the button is pressed twice consecutively.  
“SKIP BW” will be displayed on the TV screen.


## 3.5 Play / Pause (CD/VCD/DVD)

Press the **PLAY/PAUSE (II/▶)** button during playback; the player will be placed in the pause mode.

Press the **PLAY/PAUSE (II/▶)** button again; the player will return to normal playback

## 3.6 Slow Motion play (VCD/DVD)

Each time the **SLOW** button is pressed, the unit will go into a slow motion playback mode.  
The following OSD will be shown on the TV screen:

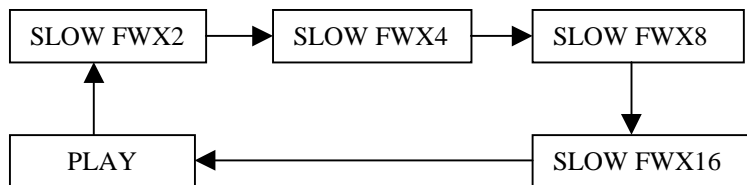

## 3.7 Stop (CD/VCD/DVD)

- 1) During Audio CD playback, when the **STOP (■)** button is pressed, the CD playback will stop.
- 2) During VCD/DVD playback, when the **STOP (■)** button is pressed, “PRE STOP” will appear. The player records the point where the **STOP (■)** button is pressed (Resume playback function).
- 3) Press the **PLAY/PAUSE (II/▶)** button again and play will resume from this point. During “PRE STOP”, if the **STOP (■)** button is pressed, “STOP” will appear and the resume playback function will be cleared.


**NOTE:** The resume playback function is not available for Audio CDs.

## 3.8 Search Function (CD/VCD/DVD)

The Search function enables you to pinpoint a specific location by entering the time/track/chapter or title.

### Audio CD:

When the **SEARCH** button is pressed the following will be displayed:

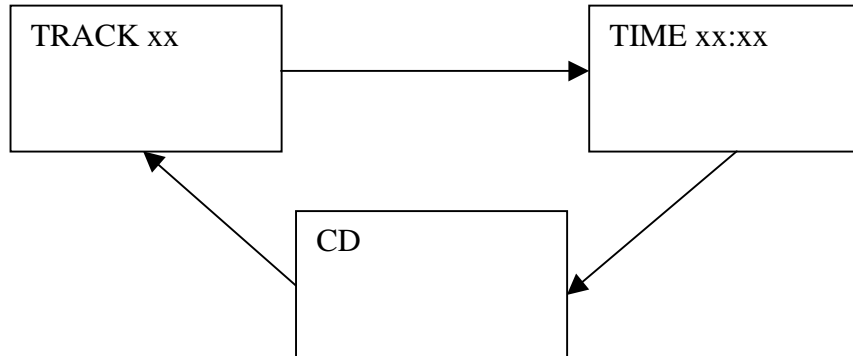


Use the numeric keys to enter the desired track or disc time; pressing the **ENTER** button will cause the player to start playing at the selected track or time.

If you are not in search mode, you may use the numeric keys to enter the desired track; the player will commence at the selected track.

### Video CD:

When **SEARCH** button is pressed the following will be displayed:

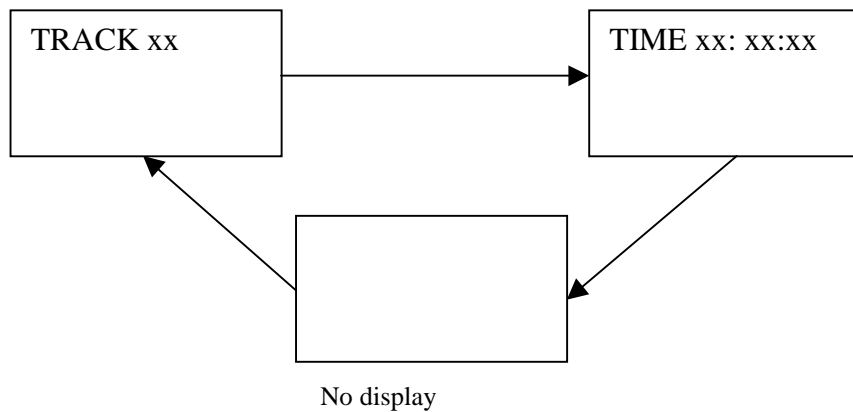

Use the numeric keys to enter the desired track or disc time; pressing the **ENTER** button will cause the player to start playing at the selected track or time.


If you are not in search mode, you may use the numeric keys to enter the desired track; the player will commence at the selected track.

**NOTE:** The search function is not available during Video CD "PBC ON".

# Operating Instructions

## DVD:

When the **SEARCH** button is pressed the following will be displayed:

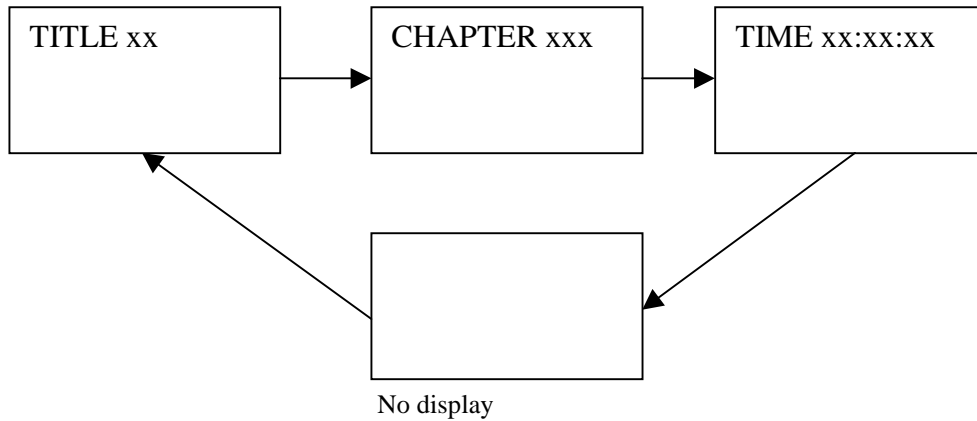

Use the numeric keys to enter the desired title or chapter, or chapter time; pressing the **ENTER** button will cause the player to start playing at the selected title, chapter or chapter time.


If you are not in search mode, you may use the numeric keys to enter the desired chapter; the player will commence at the selected chapter.

## 3.9 Advanced Playback (CD/VCD/DVD)

### 3.9.1 Repeat Mode

When the **REPEAT** button is pressed, the player will toggle between different repeat modes (Audio CD/ Video CD)

When the **REPEAT** button is pressed:

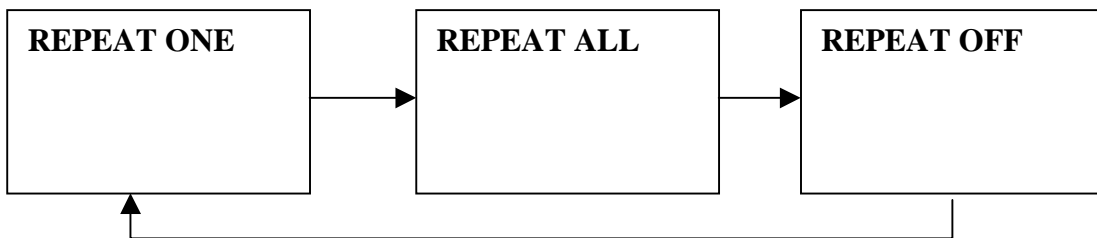


- REPEAT ONE = The current track will be repeated.
- REPEAT ALL = The current disc will be repeated.
- REPEAT OFF = Repeat mode will be switched off.

**NOTE:** The **REPEAT** function is not available during Video CD "PBC ON".

# Operating Instructions

## For DVD:

When the **REPEAT** button is pressed:

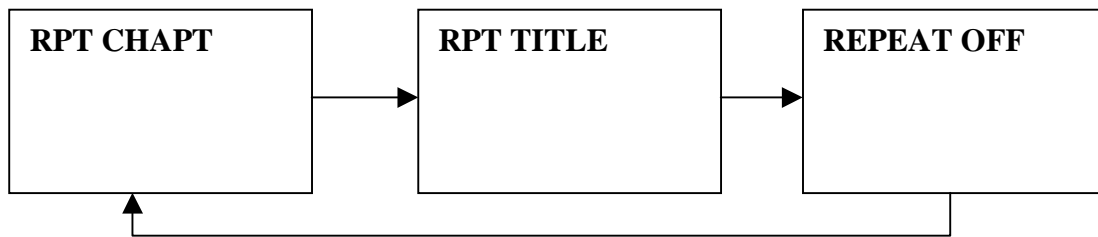

RPT CHAPT = The current chapter will be repeated  
RPT TITLE = The current title will be repeated  
REPEAT OFF = Repeat mode will be switched off

### 3.9.2 Camera Angle (DVD)

Some DVD discs may contain scenes which have more than one viewing angle.

For these discs, the same scene can be viewed from a different angle by using the **ANGLE** button as follows:

 
**NOTE:** This function will only operate on discs where different camera angles have been recorded.

- 1) During DVD playback, press the **ANGLE** button.  
“**ANGLE x/y**” will appear, where x represents the current camera angle, and y represents the total available camera angle.
- 2) Press the **ANGLE** button until the preferred angle is selected.  
The **ANGLE** selection will cycle through all available camera angles.

### 3.9.3 Audio Function (VCD/DVD)

The audio function operates only for discs that have multiple audio soundtracks.

During VCD playback, press the **AUDIO** button until the desired audio is selected.



During DVD playback, press the **AUDIO** button.

“**AUDIO x/y**” will appear, where x represents the current audio stream and y represents the total available audio streams.


Press the **AUDIO** button until the preferred audio is selected.

The audio selection will cycle through all available audio streams.

## 3.9.4 Subtitle (DVD)

During DVD playback, you may change the subtitle language from the one selected at the initial setting to a different language, if available.

- 1) When the **SUBTITLE ON/OFF** button is pressed:

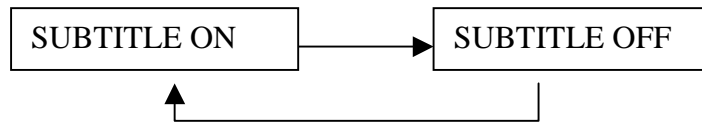

- 2) During DVD playback with **SUBTITLE ON**, press the **SUBTITLE** button .  
“**SUBTITLE x/y**” will appear, where x represents the current subtitle and y represents the total available subtitle.  
Press the **SUBTITLE** button until the preferred subtitle is selected.  
The **SUBTITLE** selection will cycle through all available subtitles.

**NOTE:** 1. The **SUBTITLE** works only for discs that have multiple subtitles.  
2. In some cases, the subtitle is not changed immediately to the one selected.

## 3.9.5 DVD Menu (DVD)

Most DVD discs have unique menu structures call DVD menus.  
The DVD menu contents and operation may differ from disc-to-disc.

- 1) During DVD playback, press the **MENU** button.  
The DVD menu available on the disc will be displayed.
- 2) Use the **▶** / **◀** / **▲** / **▼** buttons to select the preferred item, or use the numeric buttons(s) to make a selection.
- 3) Press the **ENTER** button; the selected item will start playing.

## 3.9.6 Title Menu (DVD)

Some DVD discs may contain more than one title. If the disc has a title menu recorded on it, the **TITLE** button can be used to access it.


- 1) During DVD playback, press the **TITLE** button.  
A list of the titles may be displayed.
- 2) Use the **▶** / **◀** / **▲** / **▼** buttons to select the preferred item.
- 3) Press the **ENTER** button; the selected title will start playing.

## 3.9.7 Display Function (CD/VCD/DVD)

The display function enables you to view the status, current title number, track number and the total playing time of the disc on the TV screen.

### Audio CD:


When the **DISPLAY** key is pressed, the following OSD will be shown:

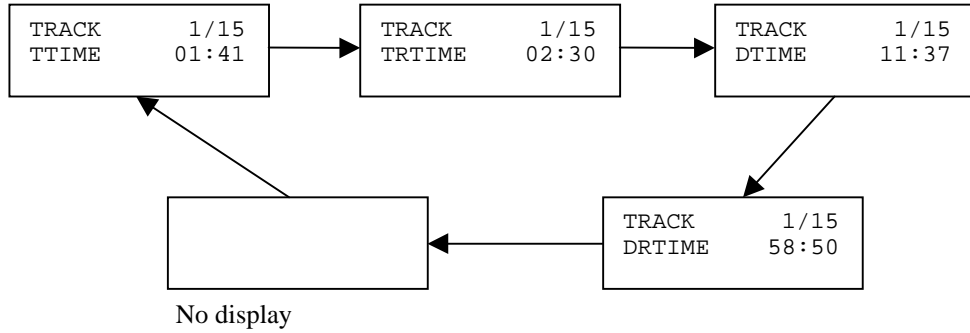

TTIME = Track time  
 TRTIME = Track remaining time  
 DTIME = Disc time  
 DRTIME = Disc remaining time

### Video CD:

When the display key is pressed, the following OSD will be shown:

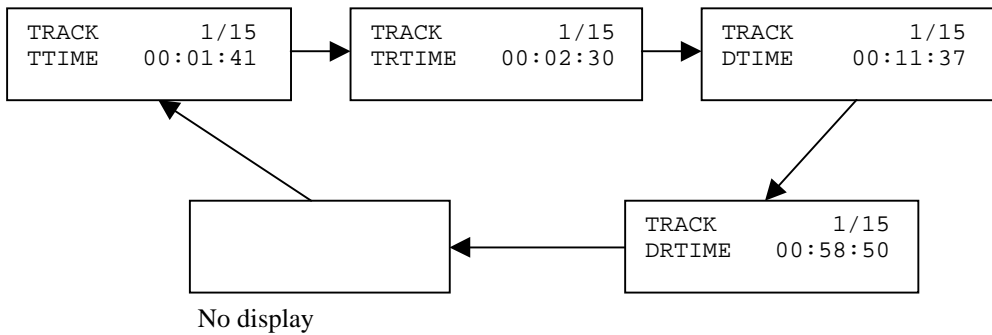


TTIME = Track time  
 TRTIME = Track remaining time  
 DTIME = Disc time  
 DRTIME = Disc remaining time

# Operating Instructions

## DVD:

When the display key is pressed, the following OSD will be shown:

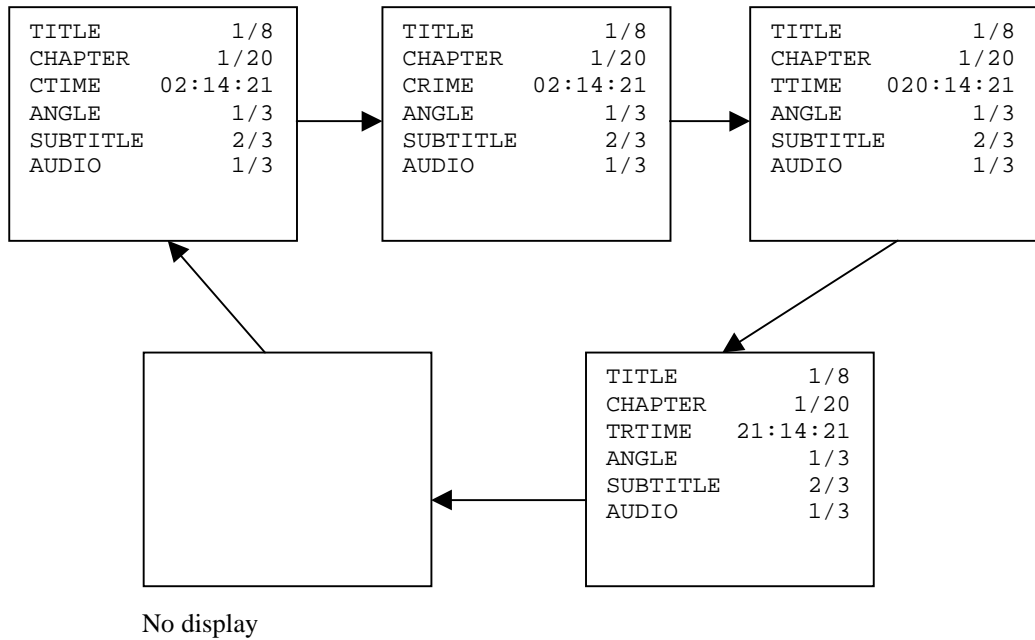


CTIME = Chapter time  
CRTIME = Chapter remaining time  
TTIME = Title time  
TRTIME = Title remaining time

### 3.9.8 Setup Menu (DVD)

When the player is in stop mode, pressing the **SETUP** button will allow you to modify some of the player's basic settings.

1) During STOP, press the **SETUP** button, the setup menu will appear as follows:

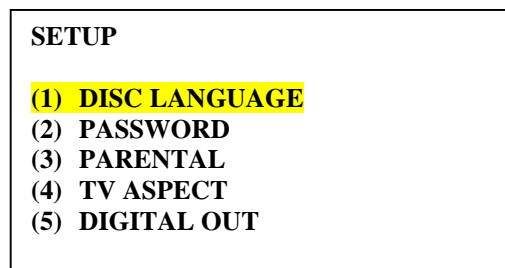

2) Use **▲** / **▼** or numeric key to select the desired item, then press the **ENTER** button:

3) To exit, press the **SETUP** button.




# Operating Instructions

## (1) Disc Language


- a) During **STOP**, press the **SETUP** button; the setup menu will appear.
- b) Use the **▲** / **▼** buttons or numeric key to select the **DISC LANGUAGE** item; then press the **ENTER** button.

The disc language menu will appear as follows:

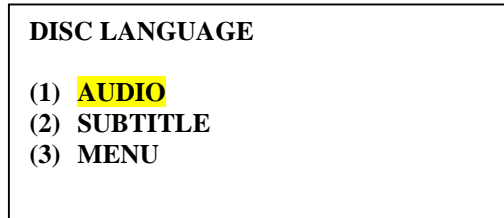

- c) Use the **▲** / **▼** buttons or numeric key to select **AUDIO/SUBTITLE/MENU**, then press the **ENTER** button.

If audio is selected, the following menu will appear:

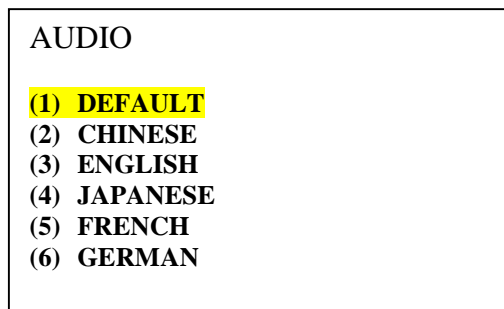

- d) Use the **▲** / **▼** buttons or numeric key to select the preferred language for **AUDIO/SUBTITLE/MENU**, then press the **ENTER** button.
- e) Use the **RETURN** button to return to the previous menu, or press the **SETUP** button to exit.

# Operating Instructions

## (2) Password

**NOTE: The factory default password is 1234**

- a) During **STOP**, press the **SETUP** button, the setup menu will appear.
- b) Use the **▲ / ▼** buttons or numeric key to select the **PASSWORD** item, then press the **ENTER** button. The change password menu will appear.

**CHANGE PASSWORD**

**PARENTAL  
PASSWORD**

- c) Use the numeric keys to enter the password; then press **ENTER**.
- d) If the correct password is entered, the user can now enter the new password.

**CHANGE PASSWORD**

**NEW  
PASSWORD**

If the incorrect password is entered, the previous menu will be shown.

- e) Use the numeric keys to enter the new password; then press **ENTER**.
- f) The user is required to confirm the new password as shown.

**CHANGE PASSWORD**


**CONFIRM  
PASSWORD**

- g) If the new password and the confirm password agree, the **SETUP** menu will be shown again.


# Operating Instructions

## (3) Parental Control

- a) During STOP, press the **SETUP** button, the setup menu will appear.
- b) Use the **▲** / **▼** buttons or numeric key to select the PARENTAL item; then press **ENTER**.  
The DVD/CD player will request a parental password.

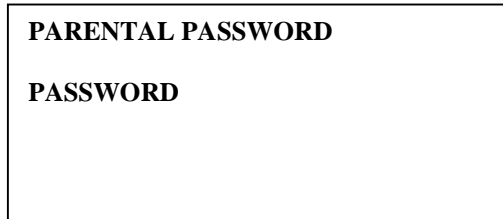

- c) Use the numeric keys to enter the password; then press **ENTER**.
- d) If the correct password is entered, the parental control menu will be shown as follows:

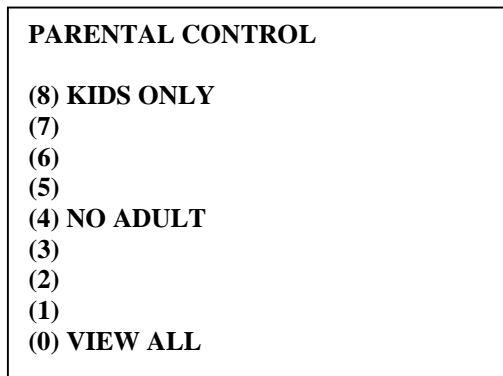


If an incorrect password is entered, “INVALID” will be appear.

- e) Use the **▲** / **▼** buttons or numeric key to select the desired parental control; then press **ENTER**.
- f) The SETUP menu will be shown again.

## (4) TV Aspect

- a) During STOP, press **SETUP** button, the setup menu will appear.
- b) Use the **▲** / **▼** buttons or numeric key to select the TV ASPECT; then press **ENTER**.

The preferred TV aspect menu will be shown as follows:

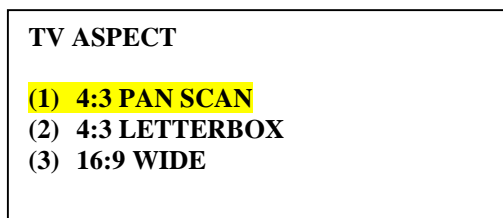


- c) Use the **▲** / **▼** buttons or numeric key to select the preferred TV ASPECT item; then press **ENTER**.
- d) The SETUP menu will be shown.

# Operating Instructions

## (5) Digital Out

- a) During **STOP**, press **SETUP** button, the setup menu will appear.
- b) Use the **▲** / **▼** buttons or numeric key to select the **DIGITAL OUT** item, then press **ENTER**.

The preferred digital audio output will be shown as follows:

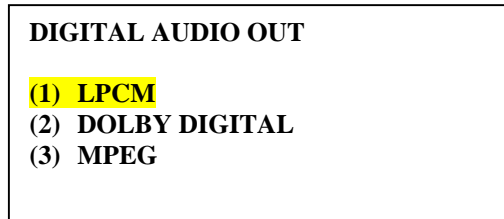

- c) Use the **▲** / **▼** buttons or numeric key to select the preferred digital audio output, then press **ENTER**.
- d) The **SETUP** menu will be shown.

## 4. Product Specification

### GENERAL

Power Supply	: 12V <sub>DC</sub> Typical
Current Consumption	: Less than 3.0 A
Operating Positions	: Horizontal mount only
Dimension (WxHxD)	: 7 (178) x 2 (50) x 7.4 (190)
Inches (Millimeters)	
Weight	: 2.0 kg

### AUDIO

Output	: 700mV rms, 600Ω
Frequency Response	: 20 Hz to 20 kHz (CD audio / 44.1kHz sampling)
Distortion	: 0.02% (at 1 kHz)
Dynamic Range	: Above 85dB
S/N Ratio	: ≥ 90dB
Cross Talk	: -75dB
Optical Output	: Connection to DSP unit for 5.1 channel Dolby™ Digital & dts™ sound reproduction

### VIDEO

Television System	: NTSC/PAL
Playback Disc	: DVD/VCD/CD & CD-R compatible (12cm, 8cm) Single-sided and dual layer DVD supported
Aspect Ratio	: 4:3, 16:9
TV Encoder Resolution	: 10 bit DAC
Video S/N	: 65 dB

### CONNECTORS

#### Output

Audio Video Output	: 3 RCA connectors for Video and Audio
Digital Audio Output	: 1 optical transmitter

#### Input

Power Connector	: For external power supply input and Sidebrake Consists of BATT, ACC, GND
Rear IR Connector	: For connection to a rear IR sensor

#### Interface

Controller Interface Connector	: For connecting to a control unit
--------------------------------	------------------------------------

## 5. Region Management Information

This DVD/CD player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this player, this player will not be able to play the DVD disc.

This DVD/CD player is set to work only in a particular world region as labeled on the player.

<b>Region Number</b>	<b>Country Within the Region</b>
1	Canada, U.S, U.S Territories
2	Japan, Europe, South Africa, Middle East (including Egypt)
3	Southeast Asia, East Asia (including Hong Kong)
4	Australia, New Zealand, Pacific Islands, Central America, Mexico, South America, Caribbean
5	Former Soviet Union, Indian Subcontinent, Africa (also North Korea, Mongolia)
6	China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>