
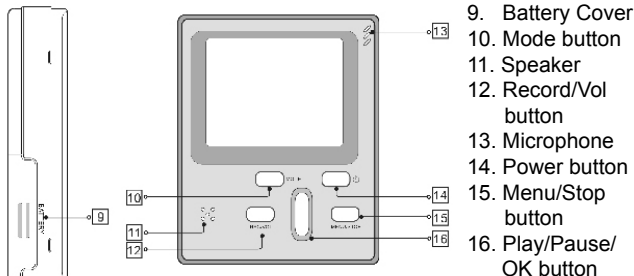


# Personal Video Recorder

## PERSONAL MEDIA CENTER QUICK GUIDE

### Identifying the Parts

1. Function Scroller
2. Hold
3. DC IN jack
4. Strap Holder
5. AV IN jack
6. Earphone jack
7. USB port
8. SD/MMC CARD slot

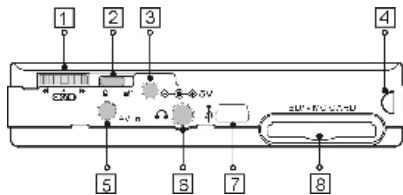

\*The PVR front panel design is subject to change without further notice.


### Icons and Indicators on the LCD Display

	Photo Player Mode		With Card
	Video Player Mode		Card Lock
	Voice Player Mode		Battery Full
	MP3 Player Mode		Battery Low
	AV Recorder Mode		Out of Battery
	Slide Show Mode		Recording
	Calendar Mode		Volume
	Game Mode		Low Quality Video/Voice Record ; High Quality Video/Voice Record
	Repeat A-B		Alarm Clock
	Repeat One		Search
	Repeat All		Time
	Repeat Normal		Video Record Clock


### Charging the Battery

You must charge the battery before using the PVR.

#### 1. Insert the Battery

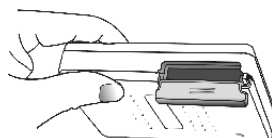


"Open the battery cover"

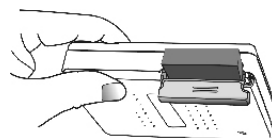

"Insert the battery in accordance with the +/- sign shown on the battery sticker"

#### 2. Connect the Power Adapter

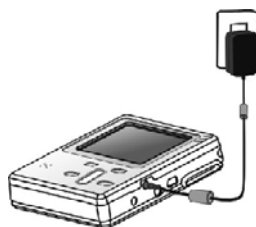

Close the battery cover. Connect one end of the AC Adapter to the DC IN jack of the PVR, the other end to a wall outlet. The red LED will light during battery charging. Charge the battery for at least 3 hours before using for the first time.


### Software Installation

1. Insert the Installation CD into CD-ROM.
2. Follow the on-screen instructions to complete the software installation.



### Synchronizing Files between PC and PVR

1. Power on the PVR and then connect to PC.
2. Upload files to PVR via Multimedia Converter program.

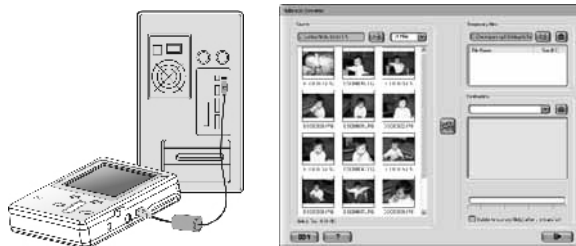


### Inserting SD/MMC Card for Memory Expansion

The PVR has built-in internal memory, but you may insert additional memory card to expand the storage capacity.



"Insert the card as shown above"

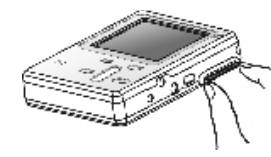


"Push it until a 'click' is heard"

### Attaching the Strap

To protect the PVR from falling by accident, it is recommended to wind the attach around your wrist while holding the PVR.

To attach the strap to the PVR:

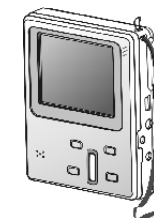

"Insert the thin end of the strap into the strap holder"



"Pass the other end of the strap through the loop of thin cord and pull tight"

### Turning on the PVR

Press and hold the the power button for 2 seconds to turn on the PVR.

Note: You have to either install the battery or connect the power adapter first

### Setting Date and Time

Use the MODE button to enter the Calendar mode and then press the MENU button to select . A date and time adjustment screen will appear. Use the scroller to set up the correct data and then save the new settings.



## OSD Menu

The OSD menu contains 9 categories. Each of them provides individual functions.

### A Photo Player



To play photos, you have to enter Photo Player category. In this category you can review photos, record voice clip, add special effects to photos.

### E AV Recorder



In this category you can record your favorite TV show directly with PVR or even set the timer record.

### I Setup Menu




In the Setup Menu you can change the factory default setting and format the data stored in the external memory card/internal memory.

### B Video Player




In this category you can review videos.

### F Slide Show

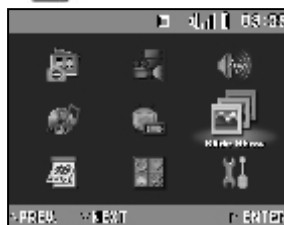


In this category you can review photos as a slide show.

### C Voice Player

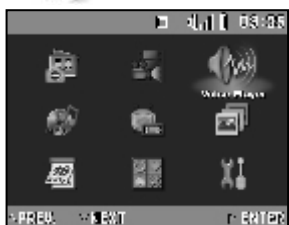


In this category you can listen to WAV music, record audio clip, choose a sound track for alarm sound, add sound effects.

### G Calendar

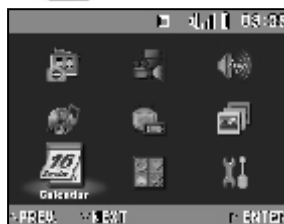

This PVR can be a long life electric calendar. It's built-in clock can be a convenient replacement when you forget your watch.

### D MP3 Player

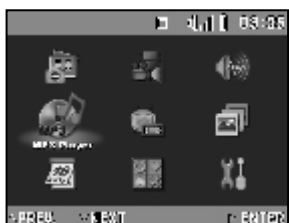

In this category you can listen to MP3 music, choose a song for alarm sound, add sound effects.

### H Game



There are 2 games available on the PVR. They are Puzzle and Tic-Tac-Toe.

## Specifications

Product Function	Digital Photo Player, Digital Video Player, Digital Video Recorder, Digital Voice Player, Digital Voice Recorder, MP3 Player, USB Portable Disk, SD/MMC Card Reader
Display	2.5" TFT LCD
Microphone	Built-in
Speaker	Built-in
TV System	NTSC/PAL
DPS Support	Yes
Audio Effects	POP/Jazz/Classic/Bass/Rock
Interface	USB/AV IN/Earphone/DC-IN
Memory Card Slot	SD/MMC
Internal Memory	Built-in 32MB
File Format	ASF(video)/JPEG(photo)/MP3/WAV(audio)
Power	Rechargeable Li-ion Battery x1 ; Power Adapter
Mass Storage	Windows 98SE/2000/Me/XP ; Mac OS 9.X and 10.1 above
Dimensions	3.7(L) x 3.0 (W) x .78 (H) inches
Weight	.25lbs without battery



**AUDIOVOX**  
ELECTRONICS CORP.

128-7115

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>