 
user **manual** guide de l'utilisateur

ARS1i







EN/F

It is important to read this user manual prior to using your new product for the first time. Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

FCC Information

FCC Information Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

interference to radio communications

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the

CAUTION ACK) O USER-SERVICEABLE ARTS INSIDE, REFER ERVICING TO QUALIFIED NG ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR THIS PRODUCT TO RAIN OR MOISTURE

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
 Keep these instructions.
- Heed all warnings.
- Follow all instructions
- Do not use this apparatus near
- Clean only with dry cloth · Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including
- mplifiers) that produce heat · Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and
- the point where they exit from the • Only use attachments/accessories

- specified by the manufacture Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used,
- use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is
- required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been sp or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been
- ADDITIONAL SAFETY INFORMATION The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position. Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that
- came with your product or that is listed in the user's guide. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases,

shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed rug, in a bookcase or cabinet that may prevent air flow through vent

- Do not place lighted candles, cigarettes, cigars, etc. on the
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected
- from the mains AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be
- easily accessed during intended use. The ventilation should not be
- impeded by covering the ventilation openings with items such as ewspaper, table-cloths, curtains etc. No naked flame sources such as
- lighted candled should be placed on the apparatus. Attention should be drawn to the environmental aspects of battery
- disposal. The use of apparatus in moderate

Important battery precautions

IMPORTANT SAFETY INSTRUCTIONS

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be
- recharged, do not incinerate, and do not puncture. Non-rechargeable batteries, such as the same or equivalent type. alkaline batteries, may leak if left in your product for a long period of
- time. Remove the batteries from the product if you are not going to use it for a month or more. If your product uses more than one
- battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak. Discard any leaky or deformed
- battery immediately. They may cause skin burns or other personal Please help to protect the environment by recycling or disposing of batteries according to

Replacing the battery of

1. Slide out the battery compartment.

2. Insert one battery (CR2025) making

marks indicated on the remote

3. Slide in the battery compartment

sure the polarity (+/-) matches the

the Remote Control

federal, state, and local regulations WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology Help protect the environment - we recommend that you dispose of used

batteries by putting them into specially designed receptacles.

Danger of explosion if battery is correctly replaced. Replace only with

For your records In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number

Technical information Product: Portable audio system for iPhone and iPod Brand: Acoustic Research

Model No :

Date of Purchases

Place of Purchase:

Model: ARS1i

Electrical power information


AC/DC Adaptor: Input: 100 - 240 V ~ 50/60 Hz Output: 18 VDC / 2.0 A

"Made for iPod" and "Made for iPhone" mean that an electro accessory has been designed to connect specifically to iPod or iPhone espectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other

General controls

Front view

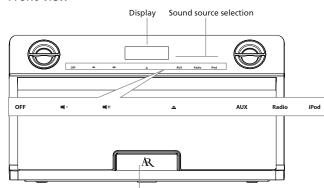

Universal dock for iPod/iPhone

OFF - Switch the unit to standby mode ■-/■+ - Adjust volume

♣ - Open or close the motorized button will not open or close the universal dock whenever an iPod or iPhone is docked.

Before you begin

Plugging in for power

- Connect the supplied power adapter to the unit's DC jack, and connect to a convenient wall outlet. Slide the **POWER** switch at the back of the unit to ON. The clock is
- then flashing. Refer to the "Clock" section and follow the instructions to set the clock time.

Battery back-up operation This clock radio is equipped with a memory holding system that can be powered with 3 "AAA" batteries (included). The power failure protection circuit will not operate unless batteries are installed. When normal household power is interrupted, or AC line cord is unplugged, the batteries will power

Normal operation will resume after AC power is restored so you will not have to reset the time.

- the batteries every year.It is recommended to plug the unit for AC power while replacir batteries to avoid the loss of clock
- Power failure indicator for a short period of time, the time power was interrupted and you should

Before using the Remote Control

There is an isolated sheet installed in the battery compartment of the remote ntrol. Remove the sheet before using



readjust the time settings 888888 88888888888888888 Plug in for power • © **E** _ 1 1111 2. Slide the **POWER** switch to **ON**

General controls

Back view


POWER - Switch on/off the power DC IN - Connect to the power adapter

AUX IN - Auxiliary input jack

AM loop antenna socket -Connect to the AM loop antenna

FM antenna socket – Connect to the FM antenna




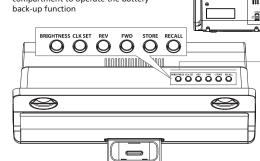

iPod RADIO

Remote Control

Sound source selection

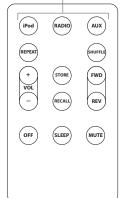

Top view **BRIGHTNESS** – Adjust display

AM loop FM antenna

æ

© **= =**

(· • ==

CLK SET – Enter setting mode for setting clock time REV or FWD - Search radio frequencies; skip or search music file in

iPod/iPhone: adjust clock time STORE - Save radio stations as presets

RECALL - Recall preset radio stations

Clock

Setting clock time 1. Press **CLK SET** on the top of

- the unit. The clock setting icon \odot flashes and the clock time is
- 2. Press **REV** or **FWD** on the top of the unit to set the clock time. The time decrements or increments follow by a faster rate when you press and hold the button.
- AM or PM icon also lights beside the time.



it for about 5 seconds or press CLK SET to save the time

Radio

Listening to the radio To turn on or off radio:

1. Press RADIO on the front of the

- unit to turn on the radio • The radio mode icon (🗖) lights on
- the display. Press **OFF** to turn off the radio, or press **AUX** or **iPod** to select another
- To select radio band: In radio mode, press RADIO to
- on the display.
- To tune frequency:
 Press REV or FWD. The selected
- search for the next available station.
- Antenna

Built-in AFC The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and

When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points. Always tune carefully at the loudest and clearest point.

AM Antenna For AM reception, connect the AM antenna loop to the back of the radio

fullest length and rotate the antenna for better reception Station presets

Stretch out the antenna cord to its

To store a station as preset:

1. Tune to a radio station 2. Press STORE.

- An available preset location (e.g. Pa 1) shows on the display
- 3. Press REV or FWD (or RECALL) to select a desired preset location (01 - 20)
- 4. Press STORE. ☐ K shows on the display as
- confirmation. You can save up to 20 preset
- To recall a preset station:
 1. In radio mode, press RECALL. The existing preset station number
- 2. Press REV or FWD (or RECALL) to

select a desired preset station

iPod/iPhone

for iPod/iPhone on the front of the

Listening to iPod/iPhone

2. Place the appropriate adapter provided with your iPod/iPhone and then place your iPod/iPhone on the universal dock for iPod/iPhone

To select iPod mode: · Press iPod on the front of the unit

to select the iPod mode.
The iPod mode icon () and the

word "iPod" light on the display • Playback from the iPod/iPhone starts automatically.

 If no iPod/iPhone is connected in the iPod mode, the unit will exit the iPod mode and turn off

Universal dock for iPod/iPhone

- iPod/iPhone 101 • iPhone 3GS 16GB, 32GB
- iPhone 3G 8GB, 16GB iPod touch 3rd generation 32GB, 64GB iPod touch 2nd generation 8GB,
- 16GB, 32GB, 64GB • iPod touch 1st generation 8GB, 16GB, 32GB • iPod nano 5th generation 8GB
- · iPod nano 4th generation (video) 8GB, 16GB iPod nano 3rd generation (video) 4GB, 8GB
- iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB iPod nano 1GB, 2GB or 4GB

• iPod 5th generation (video) 30GB, 60GB, 80GB

iPod 4th generation 20GB, 40GB iPod 4th generation (color

display) 20GB, 30GB, 40GB, 60GB

iPod mini 4GB, 6GB

- iPod classic 80GB, 120GB, 160GB

- 2. Press **REV** or **FWD** to skip to the • Press and hold **REV** or **FWD** to search backward or forward.
- 4. Press **REPEAT** to select a repeat playback mode (repeat 1 or repeat all). Press **REPEAT** until no repeat mode is selected (shows on the

repeat playback.

To charge the iPod/iPhone: You may charge the battery of your iPod/iPhone through the universal dock for iPod/iPhone while the unit is turned off (standby mode) or in the AUX, Radio (FM band only) or iPod mode. Charging control should be operated on the iPod/iPhone. It is not necessary to charge in iPod mode, unless you are listening to

In the sleep mode, the radio, iPod or

off automatically. To set the sleep time:

- The icon The flashes while selecting. 2. When the desired sleep time is selected, release **SLEEP** and wait for
- The icon lights on the display.
- To listen to different sources: In standby mode, press **SLEEP** to turn on the sleep mode and your

source buttons as usual.

To change or check the remaining · Press SLEEP once to check the remaining sleep time. Press **SLEEP** repeatedly to select another sleep

Sleep function

at the back of the unit with an

- modes and the word "AUX" is displayed on the display.

Limited warranty 12 Month Limited Warranty

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option)

product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s),

discs, removable memory devices or

transportation prepaid, to the Company

cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle

electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by remova or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER

ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than

expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have

other rights which vary from state to How to make a warranty claim:

If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON

Illustrations contained within this

THE RETURNED DEVICE. Product

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without

Acoustic Research is a registered trademark of Audiovox Electronics Corporation.



Carmel, IN 46032 Trademark(s) ® Registered

default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be

even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Include evidence of purchase date

Attn: Service Department. 150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491

damage. Audiovox accepts no route to Audiovox.

AUX mode can be set to operate for a certain period of time before turning

- Press SLEEP repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and OFF, 90min is the default setting)
- about 5 seconds, the sleep time is

last selected source will be started To listen to other sources, press the

To cancel the sleep mode:

Auxiliary source

To select auxiliary mode: 1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack

- audio cable (not supplied). 2. Press **AUX** to turn on the unit or to switch to listen to AUX from other
- Adjust the auxiliary player to midrange volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality. For other playback operations, control them on your

Press BRIGHTNESS repeatedly to adjust

When the unit is reconnected to the AC power, the display backlight will be readjusted. You can press **BRIGHTNESS** to adjust the brightness level again.

Display readout:If you have the unit on, and an input is selected, but the

volume is turned to 0, the display will

show dn00 as a reminder. To prevent

Display brightness

without charge for parts and repair

FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR

> publication are for representation only and subject to change

Visit http://store.audiovox.com to find the best accessories for your products



Printed in China

the clock radio to keep track of time.

It is recommended that you replace

If the the AC power is disconnected settings will change. After AC power

the remote control

REPEAT - Select repeat playback mode SHUFFLE - Select random playback

VOL - / VOL + - Adjust volume

STORE - Save radio stations as presets **RECALL** - Recall preset radio stations REV or FWD - Search radio frequencies; skip or search music file in iPod/iPhone;

OFF - Switch the unit to standby mode

SLEEP - Refer to "Sleep function

MUTE - Mute the sound

3. To save and exit the clock setting

select the radio band (AM/FM). The selected radio band icon lights

frequency shows on the display. Press and hold to automatically

keeping the radio locked in on the FM

Warranty information Applies to Acoustic Research Audio/

To obtain repair or replacement within the terms of this Warranty, the

at the address shown below. elimination of externally generated incurred for installation, removal or

This Warranty does not extend to the static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes

this, simply press the volume up. e.g. UP10.

responsible to restore any persona preference settings. Properly pack your unit. Include any remotes, memory cards, cables,

covered by the warranty.

For Canada Customers, please ship

 If you decide to turn off the unit sooner, press **OFF** or press **SLEEP** repeatedly to select "OFF"

A new or refurbished unit will be shipped to you freight prepaid. What we will do: Provide you with a new, or at our

Warranty information

option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's Audiovox Return Centre

c/o Genco

L5T 3A5

6685 Kennedy Road,

Mississuaga, Ontario

Unit#3, Door 16,

etc. which were originally provided with the product. However DO NOT return any removable batteries

such as the bill of sale. Also print your name and address and a

description of the defect. Send via standard UPS or its equivalent to Audiovox Electronics Corp

Insure your shipment for loss or liability in case of damage or loss en

Pay any charges billed to you by the Exchange Center for service not

To control the playback: During playback, press **iPod** to pause the playback and press again

3. Press **SHUFFLE** to play the files in random order in the iPod/iPhone Press again to cancel the function (shows on the iPod/iPhone display)

iPod/iPhone display) to cancel the

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com