




user manual
manual de usuario

VR5320R
VR5330R



Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

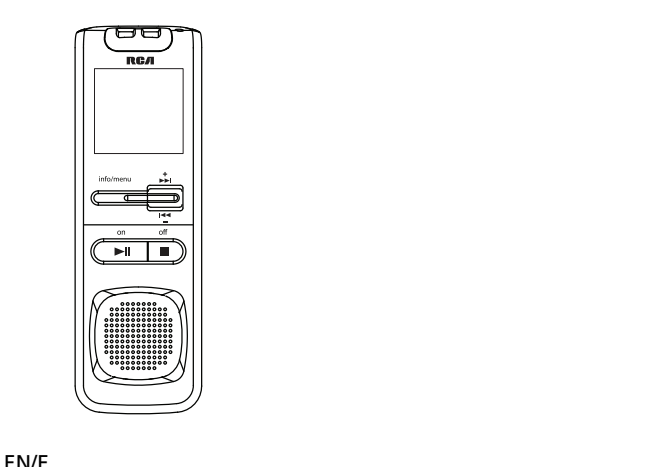

EN6
It is important to read this instruction prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipo.

Before you begin

Unpacking your player
You should have the following:

- One voice recorder
• One user manual
• One quick start guide
• One carrying case (for VR5330R only)
• Two AAA size batteries (For VR5330R only)

Turn off the player first before replacing batteries. If power interruption exceeds 20 seconds, date and time have to be set again.

Auto power shut down
The player will be automatically turned off if left idle for three minutes.

Using earphones and external microphone
When earphones are connected, sound output from speaker will be muted.


Installing batteries
This player can be operated by 2 "AAA" batteries (included).

Refer to the battery level indicator on display for battery's level. Replace with new batteries when the indicator is empty.

Keys lock
To avoid accidental key selection, slide the key lock selector toward the lock icon (L) to lock the keys. Reverse the step to unlock them.

General controls

Player controls

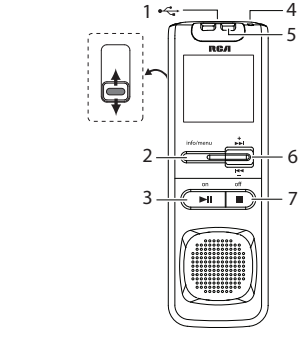

- 1. USB connector - Press the button on the back...
2. Info/menus - Press and hold to access the player menu...
3. on - Press the button to turn player on...
4. Recording indicator...
5. Built-in microphone...
6. + / - / - - Skips / searches backward or forward...
7. off - Turns off player...
8. Key lock selector...
9. External microphone jack...
10. External earphones jack...
11. + Vol - Adjusts volume...
12. REC/bookmark - Starts and pauses recording...
13. x, erase - Erases files...
14. Battery compartment door

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn...
• Non-rechargeable batteries, such as alkaline batteries...
• Do not attempt to disassemble the cabinet...
• Discard any leaky or deformed battery immediately...
• Please help to protect the environment by recycling...

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat...

Ecology
Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

- Do not use the unit immediately after transportation from a cold place...
• Do not store the unit near fire, places with high temperature...
• Do not expose to rain or moisture...
• Clean the unit with a soft cloth or a damp chamois leather...
• The unit must only be opened by qualified personnel.

equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

Manufacturer/Responsible Party Audiovox Accessories Corporation... Service information... For your records... Power Supply... ESD Remark... This Class B digital apparatus complies with Canadian ICES-003.

Basic operations

Selecting folders and files

- 1. Press and hold info/menus for about 2 seconds and then release the button...
2. Press left/right or VOL +/- to select a specific folder...
3. Press left/right or VOL +/- to select a specific folder...
4. Press left/right or VOL +/- to select a specific folder...

To select files:
1. Select the folder you need.

To display file information:
Press info/menus repeatedly to show various information of the current file.

Player menu

To access the player menu:
Press and hold info/menus for about 2 seconds and then release the button.

- Folder (A/B/C/D)
Record conditions (DICT/CONF)
Record quality (LP/SP/HQ)
AVR (on/off)
Playback speed (FAST/SLOW)
Playback mode (one/all)
Tone (on/off)
Year
Day (month/day)
12/24 hour time
Time (hour/minute)
Exit player menu

Recording

Setting recording mode

- 1. While playback is stopped, select a destination folder...
2. Press left/right or VOL +/- to select between recording modes...
3. Press REC to start recording...
4. To stop recording, press REC.

Display messages

- 12 HOUR 12 hour time display mode
24 HOUR 24 hour time display mode
APPEND Appendix (Adding Appendix)
BATTLO Batteries are weak
CUTE Cut End (Cutting)
DEL 01 Delete the current file

Setting recording quality

- Long Play - allows you to record up to 99 files in one folder...
• SP (Standard Play) - allows you to record up to 140 files...
• HQ (High Quality) - allows you to record up to 140 files...

Setting recording condition

- CONF (Conference) - in a more open area...
• DICT (Dictation) - in a more enclosed area...
1. Press and hold info/menus for about 2 seconds...
2. Press info/menus repeatedly until DICT or CONF flashes...
3. Press left/right or VOL +/- to select between DICT and CONF...
4. Press REC to exit the player menu.

Erasing files and bookmarks

Erasing mode

- To erase files or bookmarks, press and hold info/menus for about 2 seconds...
1. Press left/right or VOL +/- to select one of the erasing options...
2. Press REC to confirm your selection...
3. Press left/right or VOL +/- to adjust listening volume.

Editing

CAUTION

- The edit function does not operate when battery power is too low.
• Make sure you play ALL files in selected.
• After editing a message, WAIT disappears...
• The minimum interval between bookmarks is 3 seconds.

Editing mode

- To insert bookmarks, new segments or append to a recorded file:
1. Select the desired file and start playback...
2. Press REC to start recording...
3. Press left/right or VOL +/- to select one of the editing options...

Bookmark

- To create bookmarks:
1. While playback is stopped, press REC...
2. Press left/right or VOL +/- to select one of the editing options...
3. Press REC to confirm your selection...

To delete all bookmarks

- To delete all bookmarks created in the current file:
1. Press and hold info/menus for about 2 seconds...
2. Press left/right or VOL +/- to select ALL...
3. Press REC to confirm your selection...

Append

- To insert an appendix at the end of the current file:
1. Once ON is pressed...
2. Press REC to stop the recording of the appendix...
3. Press left/right or VOL +/- to select among LP, SP and HQ...

Cut

- To erase unwanted parts from the current file:
1. Start playback of the desired file...
2. Press x to mark the start of the unwanted part...
3. Press x to mark the end of the unwanted part...
4. Press REC to confirm cutting within 3 seconds...

Insert, Append and Cut

- Insert, Append and Cut will only update the recorded time length...
• All bookmarks will be deleted after Insert, Append or Cut is performed.

Advanced operations

Play one/all

- To play a specific file or all files in a folder:
1. Press and hold info/menus for about 2 seconds...
2. Press info/menus repeatedly until ONE or ALL flashes...
3. Press left/right or VOL +/- to select between ONE and ALL...
4. Press REC to exit the player menu.

Advanced operations

Tones

- To activate or deactivate the beep sound when any key is pressed (except during playback and recording):
1. Press and hold info/menus for about 2 seconds...
2. Press info/menus repeatedly until TONE or NOTONE shows...
3. Press left/right or VOL +/- to set beep sound ON/OFF...
4. Press REC to exit the player menu.

Connecting to computer

Computer system requirements

- PC with Windows® 7, Windows® Vista or Windows® XP...
• Mac OS is NOT supported...
• USB port 1.1 or 2.0...
• Mac OS version (i.e. Mac OS X version 10.4.11 or later) can support the mass storage mode only...

Installing Digital Voice Manager

- 1. Connect the player with the computer as instructed...
2. Open My Computer and double-click the player's drive icon...
3. The RCA Detective application is installed with the Digital Voice Manager application...
4. With one of the above options selected, press REC again to confirm your selection...

Using Digital Voice Manager

Launching the software

- 1. To launch the software, click Start, select All Programs, select RCA Digital Voice Recorder...
2. All the drives in the computer except the removable Digital Voice Recorder are shown in the top while the removable Digital Voice Recorder is shown in the bottom.

Playback and editing operations

- 1. To organize your files, click the corresponding buttons to cut, delete, copy and paste a file...
2. To play the recorded files, highlight the file and click the PLAY/PAUSE button...
3. Adjust the volume on the right of the toolbar.

Creating and playing self-executable file

- You can play the created file independently without the Digital Voice Management software.
1. Highlight a recorded file, click Save...
2. Select the destination folder from the pop up window and click Save...
3. Go to the destination folder and double-click the created file...
4. Click Play to start playback. Adjust the volume on the right.

Creating wave file

- Self-executable file may be blocked by some e-mail filters.
1. Highlight a recorded file, click Save...
2. Select the destination folder from the pop up window and click Save...
3. The created file could be found in the destination folder.

Using Digital Voice Manager

Transfer files with Digital Voice Manager

Your player is associated with a drive letter. You can drag the voice files you want to transfer to your player to the A/B/C/D folder in the drive.

Disconnecting from computer

- 1. Click the icon from the System Tray and select Unplug or Eject hardware...
2. The Stop a Hardware player screen will appear...
3. Now you can disconnect the player from the computer.

Troubleshooting tips

- Player doesn't turn on: Check that batteries are properly inserted...
Display keeps flashing when player is off: You may not have set the time...
Cannot record: This player does not record mp3 format...
Cannot activate the battery after pressing on keys: Remove the batteries to reset the player.

Warranty information

12 Month Limited Warranty

Audiovox Accessories Corp. (the Company) warrants to the original retail purchaser of this product... This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number code label... This warranty is in lieu of all other express warranties or liabilities.

Service information

This product does not have any pre-loaded content which may have been installed in the originally purchased products... Consumer will be responsible for restoring data and content. Consumer will be responsible to restore any personal preference settings... Representative is authorized to assume for the Company any liability other than that expressed herein in connection with the sale of this product.

Audiovox Electronics Corp.

Audiovox Electronics Corp. Attn: Service Department, 1500 Marcus Blvd, Hauppauge N.Y. 11788, 1-800-645-4994... For Canada Customers, please ship to: Audiovox Return Centre c/o Genco, 6685 Kennedy Road, Unit#3, Door 16, Mississauga, Ontario, L5T 3A5

Cannot erase recorded file(s)

- Make sure you follow each step under section "Erasing files and bookmarks" carefully.
Cannot stop recording when AVR ON: If AVR ON sensitivity is set to HIGH, recording may not be stopped in noisy environment...
Cannot keep the saved setting: If the batteries are removed, saved settings may be removed.
Cannot open recorded files in the computer: You must use the provided DVM software to open the files.

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product, we reserve the right to make any improvement or modification without prior notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>