

***Pioneer***

**Plasma Display**

**PDP-502MXE**

**Operating Instructions**



---

**English**

If you would like to view a video signal with this unit, please make the necessary connections to the optional video box, PDA-5001.



# Safety Precautions

## IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Thank you very much for purchasing this PIONEER product. Before using your Plasma Display, please carefully read the "Safety Precautions" and these "Operating Instructions" so you will know how to operate the Plasma Display properly. Keep this manual in a safe place. You will find it useful in the future.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** This product may be used only with Model PDK-5001 stand. Use with other stands may result in instability causing possible injury.

**WARNING:** THIS APPARATUS MUST BE EARTHED.

**CAUTION:** WHEN POSITIONING THIS EQUIPMENT ENSURE THAT THE MAINS PLUG AND SOCKET IS EASILY ACCESSIBLE.

### WARNING:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

To ensure proper heat radiation, distance the unit slightly from other equipment, walls, etc. (normally more than 10 cm). Avoid the following installations which will block vents and cause heat to build up inside, resulting in fire hazards.

- Do not attempt to fit the unit inside narrow spaces where ventilation is poor
- Do not place on carpet
- Do not cover with cloth, etc.
- Do not place on its side
- Do not place it upside down
- If planning special installation such as fitting close to the wall, placing it horizontally, etc., be sure to consult your Pioneer dealer first.

### Notes on Installation Work:

This product is marketed assuming that it is installed by qualified personnel with enough skill and competence. Always have an installation specialist or your dealer install and set up the product. PIONEER cannot assume liabilities for damage caused by mistake in installation or mounting, misuse, modification or a natural disaster.

### Note for Dealers:

After installation, be sure to deliver this manual to the customer and explain to the customer how to handle the product.

The following symbols are found on labels attached to the product. They alert the operators and service personnel of this equipment to any potentially dangerous conditions.

### WARNING

This symbol refers to a hazard or unsafe practice which can result in personal injury or property damage.

### CAUTION

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

# Features

## ● Incorporation of high performance XGA wide plasma panel.

The XGA wide panel incorporates pioneering developments that have allowed realization of more than 2.5 times the data capacity of the VGA panel used at the TV broadcasting level until now\*. With a definition of 1280 pixels horizontal and 768 pixels vertical, the XGA wide panel provides unsurpassed reproduction of a wide range of images from personal computers.

\* When the screen aspect is 4:3

VGA: 640 pixels x 480 pixels

XGA: 1024 pixels x 768 pixels

## ● Achievement of XGA class high level luminance

Even in the case of luminance, which is difficult to keep consistent with the level of definition, using originally developed PIONEER technology for optimization, top level luminance has been achieved at this definition.

## ● Realization of thin 9.8 cm unit depth while retaining a maximum class level 50 inch screen

As well as producing a 50 inch wide screen, which has been difficult to do with a direct view CRT, the extremely thin 9.8 cm unit depth size opens up completely new possibilities to how viewing rooms may be designed.

## ● Unlimited placement possibilities

Designed to be attached to a wall, set on a table top stand or placed on a floor rack, this unit can be installed many ways.

## ● Optional line (sold separately)

(For details, please consult the dealer where this unit was purchased.)

- 1 Table top stand : Stand designed specifically for PDP-502MXE table top placement.
- 2 Wall installation unit : Wall installation bracket designed as a wall interface for securing the unit to various types of wall construction formats.

### CAUTION:

This product may be used only with Model PDK-5001 stands. Use with other stands may result in instability causing possible injury.

- 3 Speaker system designed specifically for plasma displays (width: 7.4 cm)  
: With the adoption of a vertical twin system designed with a 2.5 cm domed conical tweeter in the center and newly developed 4.5 cm wide oval shaped units arranged vertically, sound field orientation has been greatly improved. Although the cabinet depth is only 7.4 cm, a rich, dynamic sound is produced. (When speakers are attached, the operation panel on this unit is not operable.)

## ● Designed to conserve energy

This product has been designed to minimize power consumption when the power is in standby. The value of the power consumption in standby mode is 0.6 W.

# Contents

Safety Precautions .....	i
Before Proceeding .....	2
How to Use This Manual .....	2
Checking supplied accessories .....	3
Part Names and Functions .....	4
Main unit .....	4
Remote control unit .....	5
Connection panel .....	6
Installation and Connections .....	8
Installation of the unit .....	8
Connection to a personal computer .....	10
Audio connections .....	11
Control cord connection .....	11
Power cord connection .....	12
How to route cables .....	12
Setting Up the System .....	13
Setup after connection .....	13
Operations .....	14
Selecting an input source .....	14
Screen size selection .....	16
POWER SAVE .....	17
Display Panel Adjustments .....	18
Adjusting the picture quality .....	18
Adjusting the display image .....	19
Making the PC image brighter (ABL) .....	20
Making the PC image clearer (H/V ENHANCE) .....	21
Resetting the unit to factory set defaults .....	21
Additional Information .....	22
Cleaning .....	22
Inserting the batteries in the remote control unit .....	22
Operating range of the remote control unit ...	23
Troubleshooting .....	23
Specifications .....	25
Supplement 1 .....	26
Supplement 2 .....	27
Explanation of Terms .....	27

## How to Use This Manual

This manual is set up to follow the course of actions and operations in the order that would seem most logical for someone setting up this unit.

Once the unit has been taken out of the box, and it has been confirmed that all the parts have been received, it may be beneficial to look over the section "Part Names and Functions" starting on page 4 to become acquainted with the plasma monitor and remote control unit, as their respective buttons and controls will be referred to throughout this manual.

The section "Installation and Connections" starting on page 8 covers all the necessary points regarding installation of the plasma display and connections to a personal computer (PC).

The section "Setting Up the System" starting on page 13 covers the necessary on-screen menu settings to establish correct linkage between the plasma display and connected components. Depending on the connections made, this section may or not be necessary.

The remainder of the sections in this manual is dedicated to the basic operations associated with selecting a source component up to the more complex operations associated with adjusting the plasma display picture to match the requirements of specific components and personal preferences.

## About operations in this manual

Operations in this manual are outlined in step by step numbered procedures. Most of the procedures are written in reference to the remote control unit unless the button or control is only present on the main unit.

However, if a button or control on the main unit has the same or similar name as that on the remote control unit, that button can be used when performing operations.

The following example is an actual operation that shows how one might set the vertical position of the screen. The screens shown at each step are provided as a visual guide to confirm that the procedure is proceeding as it should. Please familiarize yourself with this process before continuing on with the rest of this manual.

**1 Press MENU to display the menu screen.**

**2 Press ▲/▼ to select SCREEN.**

```
MAIN MENU
PICTURE      H. POSI. : 0
▶SCREEN      V. POSI. : 0
ALL RESET
POWER SAVE  V. SIZE  : ---
SET UP      CLK FRQ  : 0
              CLK PHS : 0
              RESET
MENU:MENU OFF
▲▼▶:SELECT
```

**3 Press ▶.**

```
MAIN MENU
PICTURE      ▶H. POSI. : 0
SCREEN       V. POSI. : 0
ALL RESET
POWER SAVE  V. SIZE  : ---
SET UP      CLK FRQ  : 0
              CLK PHS : 0
              RESET
MENU:MENU OFF
▲▼▶:SELECT SET:ADJUST
```

**4 Press ▲/▼ to select V. POSI.**

```
MAIN MENU
PICTURE      H. POSI. : 0
SCREEN       ▶V. POSI. : 0
ALL RESET
POWER SAVE  V. SIZE  : ---
SET UP      CLK FRQ  : 0
              CLK PHS : 0
              RESET
MENU:MENU OFF
▲▼▶:SELECT SET:ADJUST
```

**5 Press SET to display the adjustment screen for the selected item.**

```
SCREEN


V. POSITION    0
▲▼:ADJUST    SET:EXIT
```

**6 Press ▲/▼ to adjust the value.**


## Checking supplied accessories

Check that the following accessories were supplied.

① Remote control unit

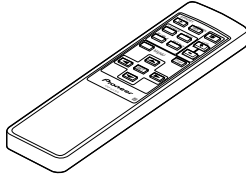


② AA (R6) batteries x 2

 


③ Cleaning cloth (for wiping front panel)




④ Speed clamp x 2

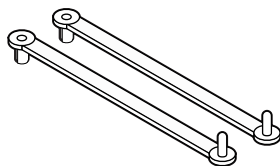


⑤ Bead band x 2

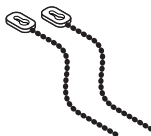

⑥ Display stand x 2

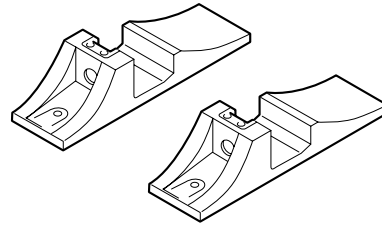


⑦ Washer (large) x 2

 


⑧ Washer (small) x 2



⑨ Hex hole bolt x 2

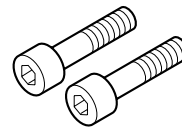


⑩ Remote control unit case

 

Use as a holder for the remote control unit. When attaching to the rear of the main unit, be careful not to cover the vents.

- Operating Instructions

## Main unit

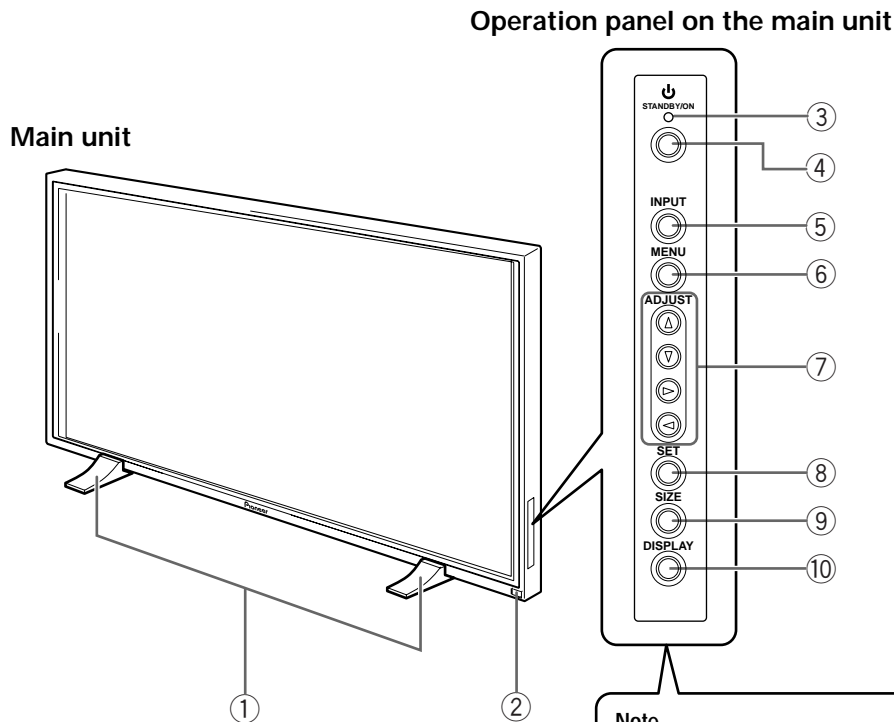

### Note

When optional speakers have been connected, the operation panel on the main unit will not be operable.

### Main unit


- ① **Display stand**
- ② **Remote control sensor**  
Point the remote control toward the remote sensor to operate the unit (page 23).

### Operation panel on the main unit

- ③ **STANDBY/ON indicator**  
This indicator is red during standby mode, and turns to green when the unit is in the operation mode (page 14).
- ④ **STANDBY/ON button**  
Press to put the display in operation or standby mode (page 14).
- ⑤ **INPUT button**  
Press to select input (page 14).
- ⑥ **MENU button**  
Press to open and close the on-screen menu (pages 13 to 21).
- ⑦ **ADJUST (▲/▼/▶/◀) buttons**  
Use to navigate menu screens and to adjust various settings on the unit.  
Usage of cursor buttons within operations is clearly indicated at the bottom of the on-screen menu display (pages 13 to 21).
- ⑧ **SET button**  
Press to adjust or enter various settings on the unit (pages 13 to 21).
- ⑨ **SIZE button**  
Press to manually select the screen size (page 16).
- ⑩ **DISPLAY button**  
Press to view the unit's current input and setup mode (page 15).




## Remote control unit

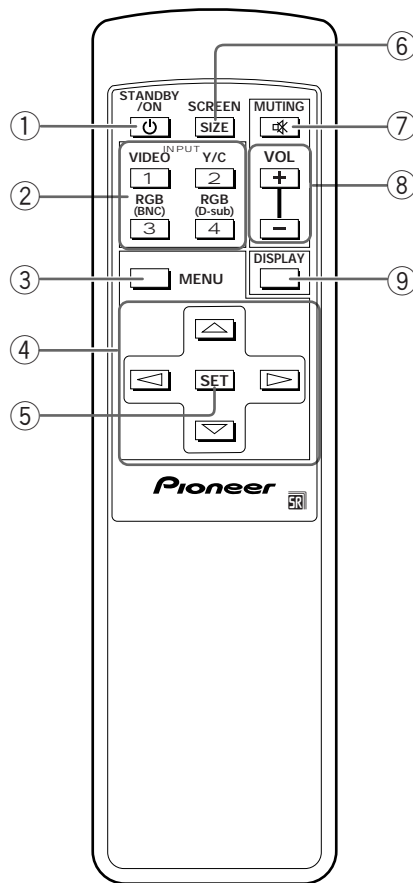

- ① **STANDBY/ON button**  
Press to put the unit in operation or standby mode (page 14).
- ② **INPUT buttons**  
Use to select the input (page 14).
- ③ **MENU button**  
Press to open and close the on-screen menu (pages 13 to 21).
- ④ **ADJUST (▲/▼/▶/◀) buttons**  
Use to navigate menu screens and to adjust various settings on the unit.  
Usage of cursor buttons within operations is clearly indicated at the bottom of the on-screen menu display (pages 13 to 21).
- ⑤ **SET button**  
Press to adjust or enter various settings on the unit (pages 13 to 21).
- ⑥ **SCREEN SIZE button**  
Press to manually select the screen size (page 16).
- ⑦ **MUTING button**  
Press to mute the volume (page 15).
- ⑧ **VOL (+/-) buttons**  
Use to adjust the volume (page 15).
- ⑨ **DISPLAY button**  
Press to view the unit's current input and setup mode (page 15).

## Connection panel

For details regarding a specific connection format, refer to the page written in parenthesis.

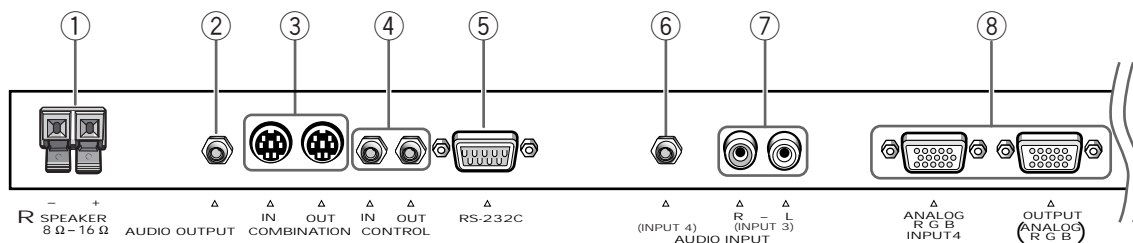

### ① SPEAKER (R) terminal

For connection of an external right speaker.  
Connect a speaker whose impedance is 8 -16  $\Omega$  (page 11).


### ② AUDIO OUTPUT (Stereo mini jack)

Use to output the audio of the selected source component connected to this unit to an AV amplifier or similar component (page 11).

### ③ COMBINATION IN/OUT DO NOT MAKE ANY CONNECTIONS TO THESE TERMINALS.

These terminals are used in the factory setup.

### ④ CONTROL IN/OUT

For connection of PIONEER components that bear the  mark. Making CONTROL connection enables control of this unit as a component in a system (page 11).

### ⑤ RS-232C DO NOT MAKE ANY CONNECTIONS TO THIS TERMINAL.

This terminal is used in the factory setup.

### ⑥ AUDIO INPUT (Stereo mini jack)

Use to obtain sound when INPUT4 is selected.  
Connect the audio output jack of components connected to INPUT4 to this jack (page 11).


### ⑦ AUDIO INPUT (Pin jack)

Use to obtain sound when INPUT3 is selected.  
Connect the audio output jack of components connected to INPUT3 to these jacks (page 11).  
NOTE: The left audio channel (L) jack is not compatible with monaural input sources.

### ⑧ INPUT4

For connection of a personal computer (PC). Make sure that the connection made corresponds to the format of the signal output from the connected component. Use the INPUT4 OUTPUT terminal to output the RGB signal to an external monitor or other component (page 10).

Note: The RGB signal will not be output from the INPUT4 OUTPUT terminal when the main power of this unit is off or in standby mode.

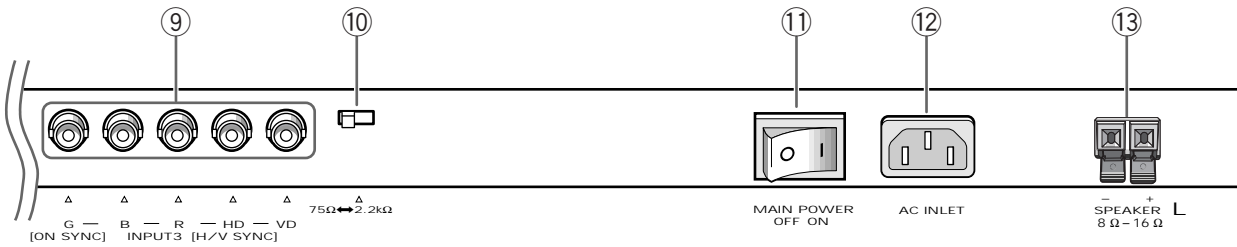

- ⑨ **INPUT3**  
For connection of a personal computer (page 10).
- ⑩ **Synchronizing signal impedance selector switch**  
Depending on the connections made at INPUT3, it may be necessary to set this switch to match the output impedance of the personal computer's synchronization signal.  
When the output impedance of the personal computer's synchronization signal is above 75  $\Omega$ , set this switch to the 2.2 k $\Omega$  position (page 10).
- ⑪ **MAIN POWER switch**  
Use to switch the main power of the unit on and off.
- ⑫ **AC INLET**  
Use to connect a power cord to an AC outlet (page 12).
- ⑬ **SPEAKER (L) terminal**  
For connection of an external left speaker. Connect a speaker that has an impedance of 8 -16  $\Omega$ .  
(page 11)

# Installation and Connections


## Installation of the unit

### Installation using the supplied display stand


Be sure to fix the supplied stand to the installation surface.

Use commercially available M8 bolts that are 25 mm longer than the thickness of the installation surface.


- 1 Fix the supplied stand to the installation surface at each of the 4 prepared holes using commercially available M8 bolts .

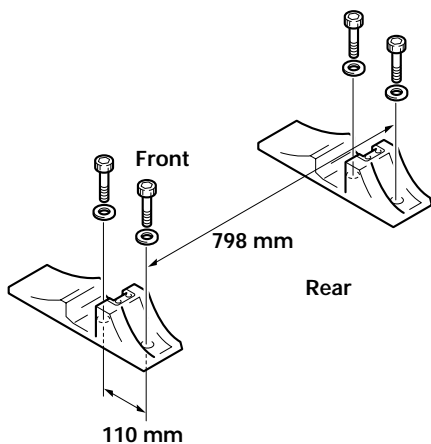


- 2 Insert the supplied washer (large) into the stand.

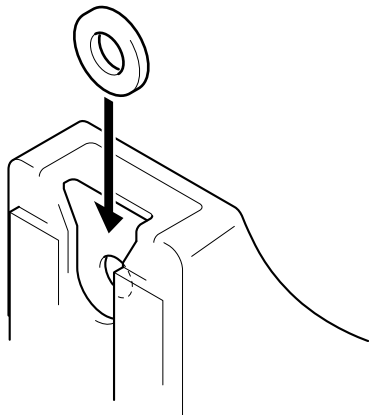


- 3 Take off the hole rivets (A) and (A)' of this unit using a screwdriver or a coin.

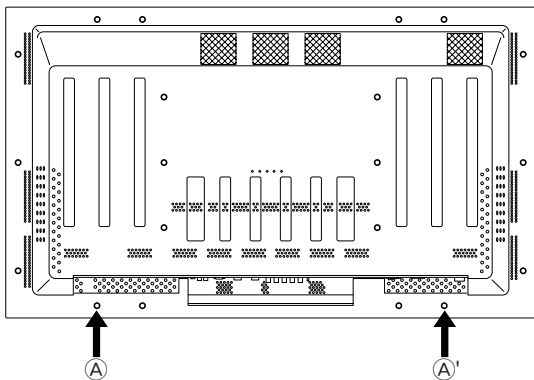

- 4 Set this unit in the stand.

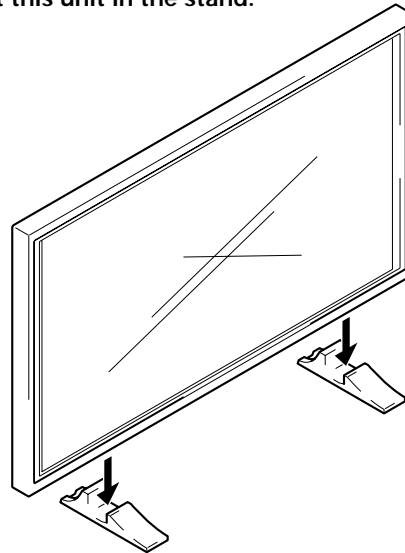

- 5 Fix this unit using the supplied washer and bolt.

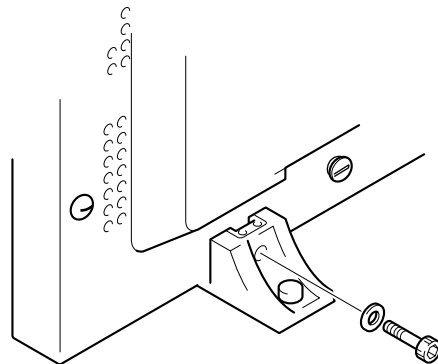

Use a 6 mm hex wrench to bolt them.

### CAUTION

Because this unit weighs about 40 kg and has little depth making it unstable, please use 2 people or more when packing, carrying or installing.

### Installation using the optional PIONEER stand or installation bracket

- Please be sure to request installation or mounting of this unit or the installation bracket by an installation specialist or the dealer where purchased.
- When installing, be sure to use the bolts provided with the stand or installation bracket.
- For details concerning installation, please refer to the instruction manual provided with the stand or installation bracket.


### Installation using accessories other than the PIONEER stand or installation bracket (sold separately)

- When possible, please install using parts and accessories manufactured by PIONEER. PIONEER will not be held responsible for accident or damage caused by the use of parts and accessories manufactured by other companies.
- For custom installation, please consult the dealer where the unit was purchased, or a qualified installer.


### Wall-mount installation of the unit

This unit has been designed with bolt holes for wall-mount installation, etc.. The installation holes that can be used are shown in the diagram below. (Hole rivets can be removed by turning with a screwdriver, coin or similar tool.)

- Be sure to attach in 4 or more locations above and below, left and right of the center line.
- Use bolts that are long enough to be inserted 12 mm to 20 mm into the main unit from the attaching surface for both a holes and b holes. Refer to the side view diagram below.
- As this unit is constructed with glass, be sure to install it on a flat, unwarped surface.

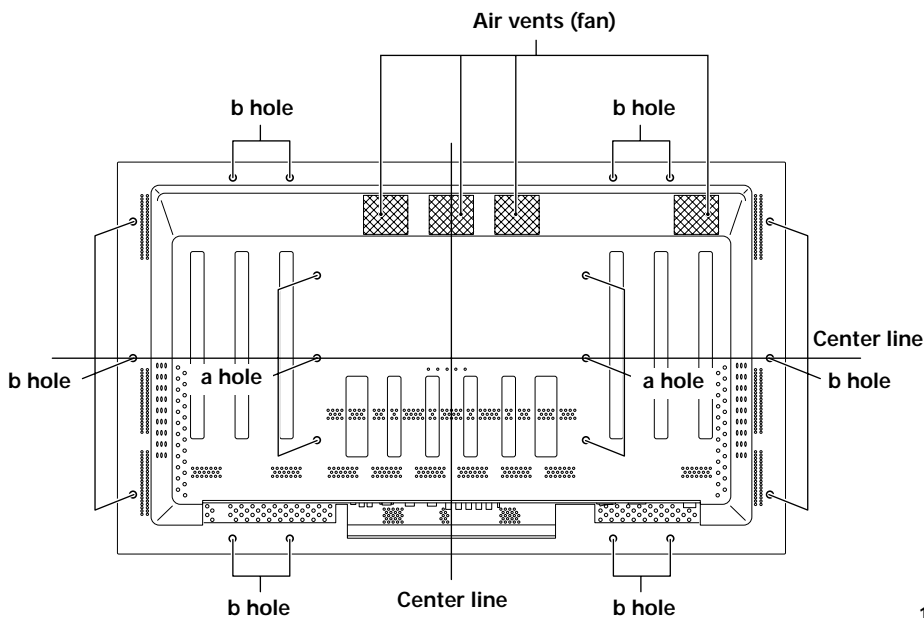

Rear view diagram

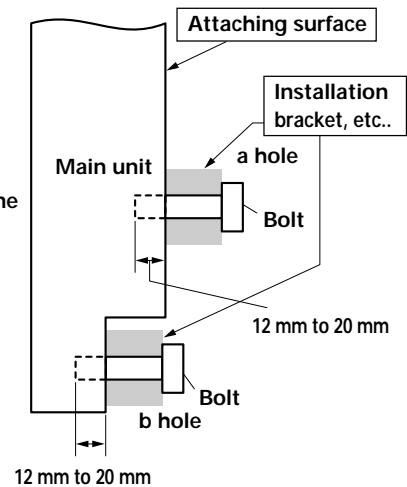

Side view diagram

#### ! CAUTION

To avoid malfunction, overheating of this unit, and possible fire hazard, make sure that the vents on the main unit are not blocked when installing. Also, as hot air is expelled from the air vents, be careful of deterioration and dirt build up on rear surface wall, etc..

#### ! CAUTION

Please be sure to use an M8 (Pitch = 1.25 mm) bolt. (Only this size bolt can be used.)

#### ! CAUTION

Because this unit weighs about 40 kg and has little depth making it unstable, please use 2 people or more when packing, carrying or installing.

#### ! CAUTION

This unit incorporates a thin design. To ensure safety if vibrated or shaken, please be sure to take measures to prevent the unit from tipping over.

## Connection to a personal computer

Connection method differs depending on the computer type. When connecting, please thoroughly read the computer's instruction manual.


Before making connections, be sure to make sure that the personal computer's power and this unit's main power is off.

For the PC input signals and screen sizes that this unit is compatible with, please refer to Supplement 1 (page 26).

### Connection of separate SYNC analog RGB source

Make separate SYNC connections for a component that has RGB output separated into 5 output signals: green, blue, red, horizontal synchronization signal, and vertical synchronization signal.

#### When connecting to INPUT3

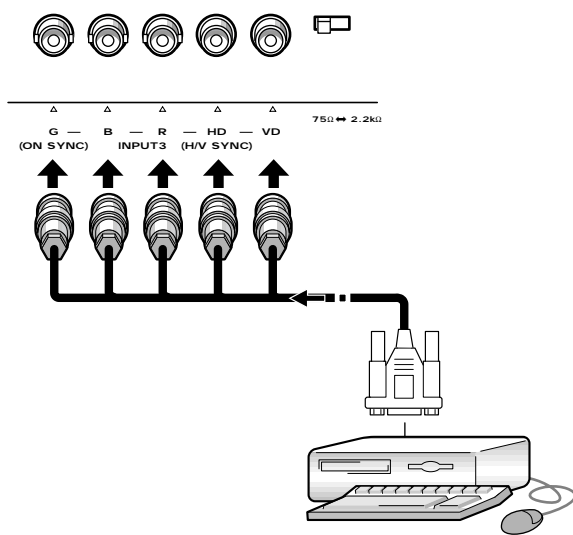


When using INPUT3, set the impedance selector switch to match the output impedance of the connected component's synchronization signal.

When the output impedance of the component's synchronization signal is above 75 Ω, set this switch to the 2.2 kΩ position.

On-screen setup is necessary after connection. Please see page 13.

#### When connecting to INPUT4

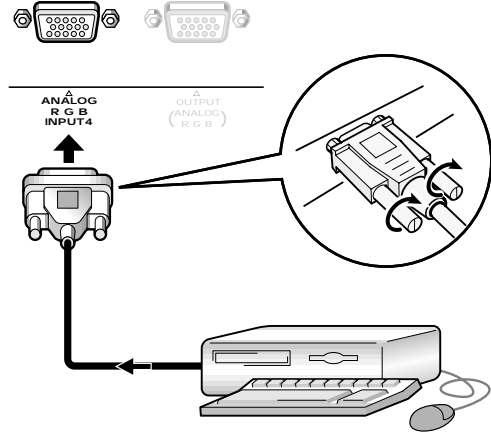

Connect the cable corresponding to the shape of the input terminal on this unit and the personal computer's output terminal.

Secure by tightening the terminal screws on both units.


After connecting, on-screen setup is necessary. Please see page 13.

#### Note

Depending on the type of computer model being connected, a conversion connector or adapter etc. provided with the computer or sold separately may be necessary.

For details, please read your PC's instruction manual or consult the maker or nearest dealer of your computer.

#### When connecting to INPUT4 (OUTPUT)

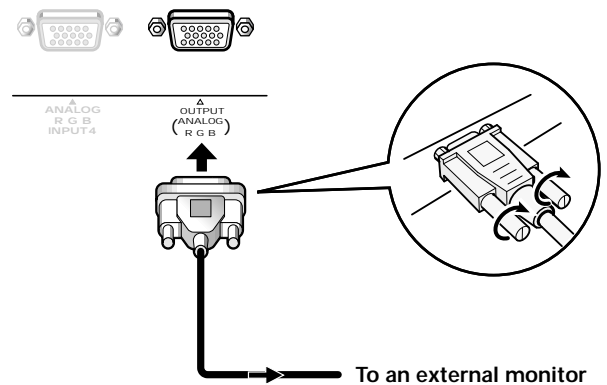

With this unit, it is possible to output the RGB signal to an external monitor or other component from the INPUT4 OUTPUT terminal.

#### Note

 
An RGB signal will not be output from the INPUT4 OUTPUT terminal when the main power of this unit is off or in standby.

## Audio connections


Before making connections, be sure to check that the component's power and the unit's main power is off.

### Connecting the speakers

This unit is equipped with speaker output jacks for connection to the speaker system (not supplied) specially designed for use with this unit. Refer to the illustrations below when making connections to the speaker terminals on this unit.



Twist exposed wire strands together.

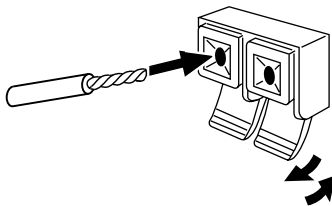

Push tab to the open position, and insert the wire. Then, close tab firmly to secure the wire in place.

#### Note

When making speaker connections, be sure to match the polarities (+ and -) of the speaker terminals on this unit and the corresponding terminals on the speakers. If the polarity is reversed, the sound will be unnatural and lack bass.

### Making connections to the audio inputs on this unit

This unit features two audio inputs and one audio output. The following chart shows the inputs and the corresponding audio input jacks.

Video input	Audio input jacks	Sound output
INPUT3	Pin jacks (L/R)	Sound of the selected input is output from the
INPUT4	Stereo mini jack (L/R)	<ul style="list-style-type: none"> <li>• SPEAKER terminals</li> <li>• Stereo mini jacks (L/R).</li> </ul>


## Control cord connection

When control cord connections are made, remote control operation of connected PIONEER components that bear the logo mark is done through the remote sensor on this unit.

When the connection is made to the CONTROL IN jack on another unit, the remote sensor of that component will no longer receive signals. Point the remote control unit of the connected component at the remote control sensor on this unit to control.

#### Notes

- Make sure the power is turned off when making connections.
- Please complete all component connections before making control cord connections.

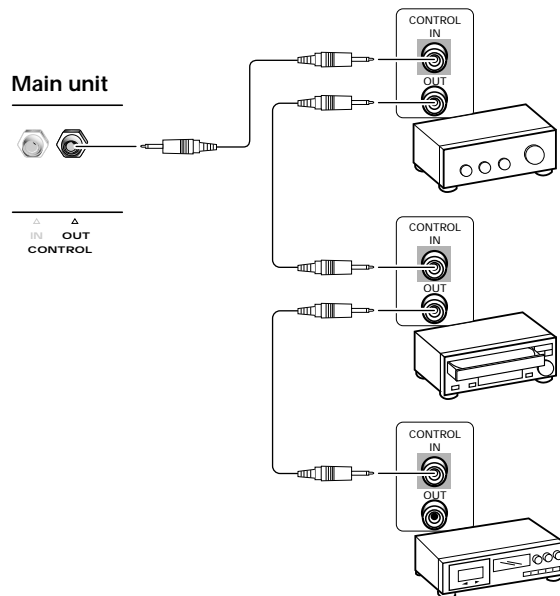

The control cables (not supplied) are monaural cables with mini plugs (no resistance).

## Power cord connection

Connect a power cord after all component connections have been completed.

PDP-502MXE power cord ratings  
 Cord ..... Cross-sectional area 3 x 1.0 mm<sup>2</sup>  
 (According to CEE 13)  
 Connector ..... 10 A, 250 V  
 (According to EN60320 Sheet C13)  
 Plug ..... International use (10 A, 250 V)  
 Example:  
 UK : UK 13 Amp Plug with rated 13 Amp fuse  
 (According to BS1363)  
 EURO : 10 A/16 A 250 V (According to CEE 7, 1 V)

### ⚠ CAUTION

- Do not use a power supply voltage other than that indicated (AC 100 - 240 V, 50/60 Hz) as this may cause fire or electric shock.
- For the plasma display, a three-core power cord with a ground terminal is used for efficiency protection. Always be sure to connect the power cord to a three-pronged grounded outlet and make sure that the cord is properly grounded. If you use a power source converter plug, use an outlet with a ground terminal and screw down the ground line.

## How to route cables

Speed clamps and bead bands are included with this unit for bunching cables together. Once components are connected, follow the following steps to route cables.


### 1 Organize cables together using the provided speed clamps.

Insert ① into an appropriate hole on the rear of the unit, then snap ② into the back of ① to fix the clamp.

Speed clamps are designed to be difficult to undo once in place. Please attach carefully.


### To attach the speed clamps to the main unit

Connect the speed clamps using the 4 holes marked with • below, depending on the situation.

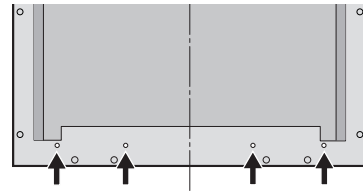

### To remove speed clamps

Using pliers, twist the clamp 90° and pull it outward. In some cases the clamp may have deteriorated over time and may be damaged when removed.

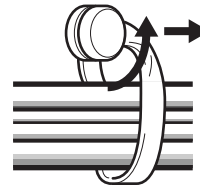


### 2 Bunch separated cables together and secure them with the provided bead bands.

#### Note

Cables can be routed to the right or left.

\* As viewed from the rear of the display.

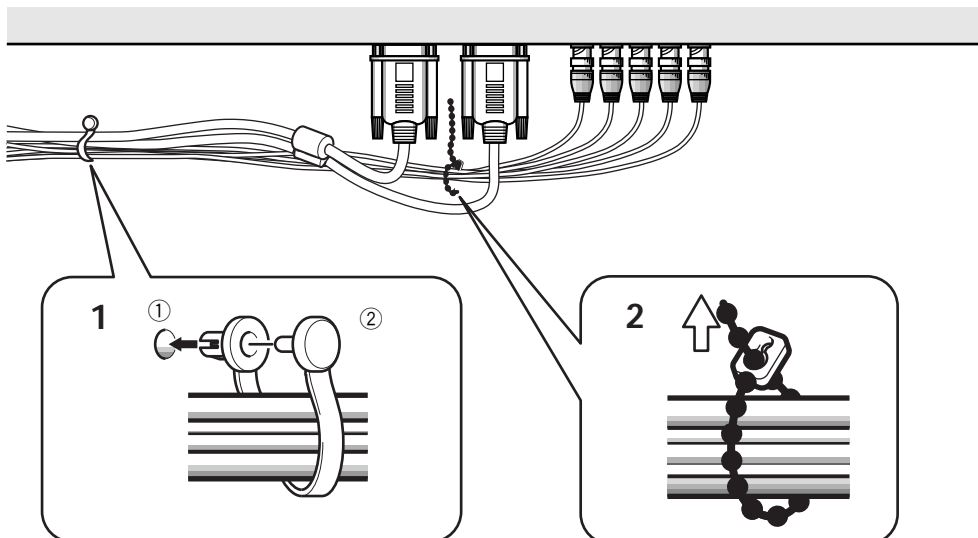




## Setup after connection

After components have been connected to INPUT3 or INPUT4, on-screen setup is necessary. Follow the procedure described below and make settings as they apply to the type of components connected.

- 1 **Switch MAIN POWER on the connection panel to the on position to turn on the unit's main power.**

The STANDBY/ON indicator lights red.


- 2 **Press  STANDBY/ON to put the unit in the operation mode.**


The STANDBY/ON indicator turns green.

- 3 **Select INPUT3 or INPUT4.**


- 4 **Press MENU to display the menu screen.**

The menu screen appears.

- 5 **Press  to select SET UP, and press SET.**

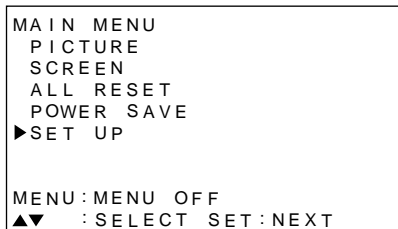

- 6 **Press  to select SETTING.**

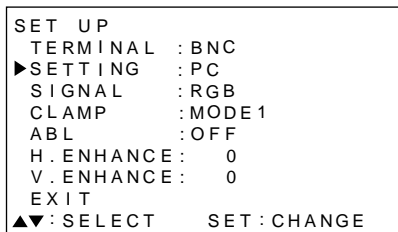

- 7 **Press SET to select "PC".**

Depending on the input signal, this unit may not be able to make the correct setting. Make sure that this setting is set to "PC".

### Note

Steps 6 to 7 are necessary when inputting a signal of horizontal frequency 31.5 kHz/vertical frequency 60 Hz. For signals of other frequencies, settings are done automatically, and therefore cannot be performed.

- 8 **When the setup is completed, press MENU to exit the menu screen.**

### Notes

- Make this setup for each input (INPUT3 and INPUT4).
- Please refer "G ON SYNC (CLAMP)" on this page for details concerning G ON SYNC setup.

## G ON SYNC setup (CLAMP)


The RGB video signal is normally composed of 5 signals: R, G, B, HD and VD. With G ON SYNC connection, however, the signal is composed of 3 signals: R, G (G, HD and VD combined) and B.


If the personal computer being used is a model where G ON SYNC connection is carried out, on-screen setup is necessary.


### Setup of G ON SYNC (CLAMP) connection


- 1 **Press MENU to display the menu screen.**

The menu screen appears.

- 2 **Press  to select SET UP, and press SET.**

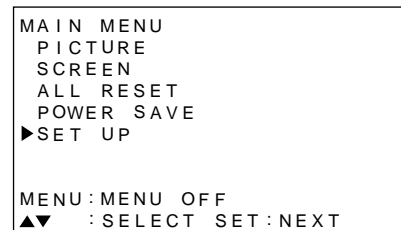


- 3 **Press  to select CLAMP.**

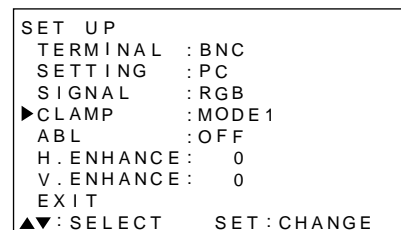

- 4 **Press SET to select MODE2.**

 Mode selection will change as follows each time SET is pressed.



- 5 **When the setup is completed, press MENU to exit the menu screen.**

### Notes

- Make this G ON SYNC setting for each applicable input (INPUT3 and INPUT4).
- When using this setup, be sure to carefully check the signal output of the personal computer you are using. For details, please refer to the instruction manual supplied with the personal computer you are connecting.
- If the screen becomes bright and turns a greenish color, set CLAMP to MODE2.
- G ON SYNC connection is carried out on some Macintosh computers.

## Selecting an input source


This section explains the basic operation of this unit. Outlined on the following pages is how to turn the main power on and off, put this unit in the operation or standby mode and how to select connected components.

### Note

**INPUT1** and **INPUT2** on the remote control unit can only be used when the optional video box, PDA-5001, is connected to this unit.

### Before you begin, make sure you have:

- Made connections between this unit and a personal computer as described in the section "Installation and Connections" starting on page 8.
- Set up the on-screen menu to input signals from components connected to INPUT3 and INPUT4 as described in the section "Setting Up the System" on page 13.

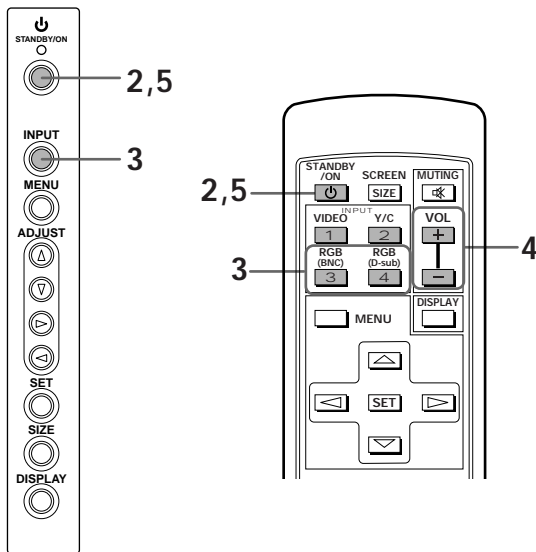

Operation panel of the main unit

Remote control unit

- 1 Switch MAIN POWER on the main unit to the on position to turn the main power on.**  
The STANDBY/ON indicator lights red.
- 2 Press  $\text{⏻}$  STANDBY/ON to put this unit in the operation mode.**  
The STANDBY/ON indicator turns green.

- 3 Press the appropriate INPUT button on the remote control unit or INPUT on the main unit to select the input.**

On the main unit, input changes each time **INPUT** is pressed as follows.




- Input cannot be changed when a menu screen is displayed.
- When a signal from a personal computer is input, if the signal is not compatible with this unit, "OUT OF RANGE" will appear on the screen.

- 4 Use VOLUME +/- on the remote control unit to adjust the volume.**  
If no audio connections are made to this unit, this step is not necessary.
- 5 When viewing is finished, press  $\text{⏻}$  STANDBY/ON to put the unit in standby mode.**  
The STANDBY/ON indicator will blink and then remain lit (red) indicating that the standby mode is engaged. Operation is not possible while the STANDBY/ON indicator is blinking (red).
- 6 Switch MAIN POWER on the main unit to the off position to turn the main power off.**

### CAUTION


Please do not leave the same picture displayed on the screen for a long time. Doing so may cause a phenomenon known as "screen burn" which leaves a ghost, or residual, image of the picture on the screen.

## To adjust the volume

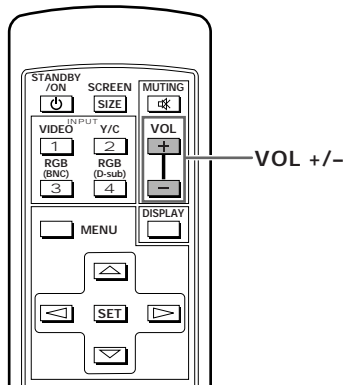


Use **VOL +** or **VOL -** to adjust the volume of the connected speakers.

## To confirm display settings

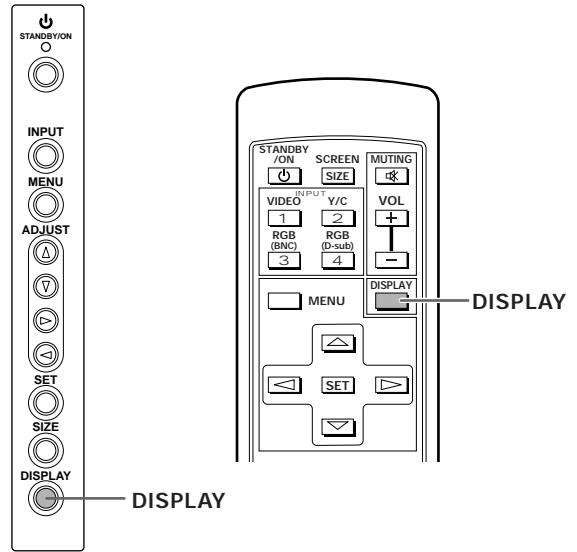


## To mute the sound

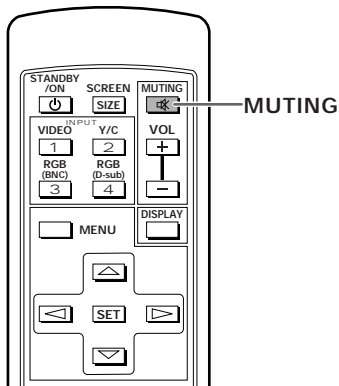

### Press **MUTING** on the remote control unit.

Press **MUTING** again to restore the sound. Muting is automatically canceled in about 8 minutes if no operations are performed during that time, and the volume level is adjusted to the minimum level. Press **VOL +** or **VOL -** to adjust the volume at a desired level.

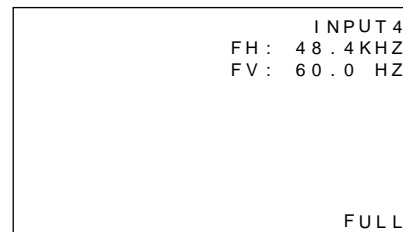

### Press **DISPLAY**.

The currently selected input, screen size and vertical and horizontal frequencies will be displayed for approximately 3 seconds.

### Note

The displayed vertical and horizontal frequencies are approximations, and may be slightly different from the actual values.

## Screen size selection

 
### Changing the screen size

The size of the picture or the picture's range projected on the screen can be changed between 4 screen sizes described in the table on this page.

#### Press **SCREEN SIZE** to select the size.

The screen size changes each time **SCREEN SIZE** on the remote control, or **SIZE** on the unit is pressed as follows.


#### For PC signals



(For screen sizes when the video signal of a personal computer is input, please see Supplement 1 on page 26.)

#### ① ORIGINAL


The input signal and the screen maintain a dot to line ratio of 1:1 and is thus highly faithful to the source.

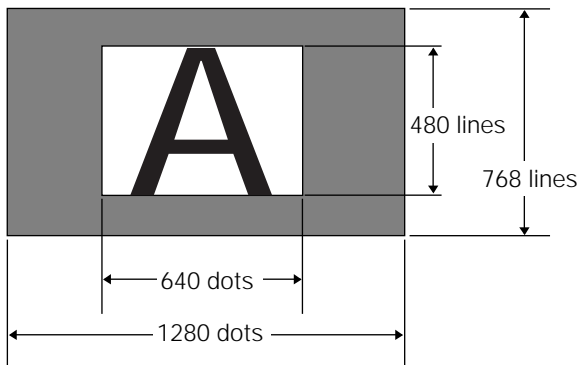

(Illustration shows 640 x 480 input.)

#### ② 4:3 NORMAL

The display fills the screen as much as possible without altering the aspect ratio of the input signal.

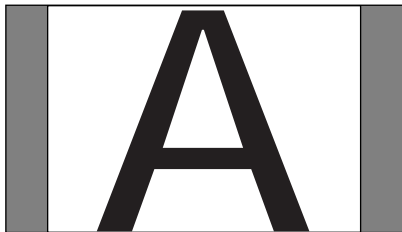


## Moving the screen position upward or downward

During personal computer input (1280 x 1024/60Hz only), when the ZOOM setting is selected, the position of the screen can be adjusted by using ▲/▼.


#### ③ FULL

The display is presented with a widescreen aspect ratio of 16:9 and fills the entire screen.

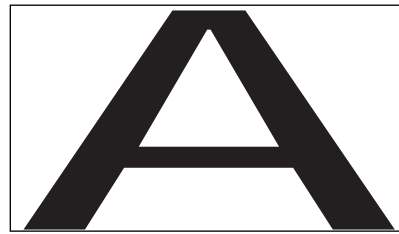

#### ④ ZOOM

The ZOOM setting is available only during personal computer input (1280 x 1024/60 Hz only). The input signal and the screen maintain a dot to line ratio of 1:1. Display is highly faithful to the source. However, in order to maintain the 1:1 ratio, a portion of the display will not appear on the screen.

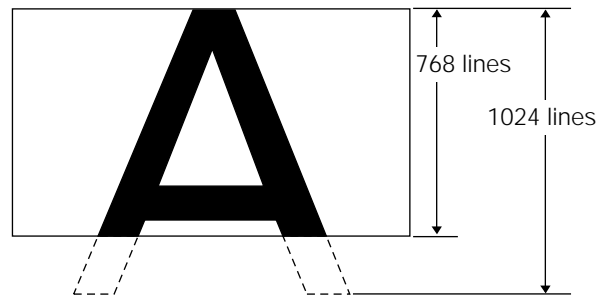


Use ▲/▼ to adjust the position of the video image on the screen.


## POWER SAVE

Using the POWER SAVE function of this unit, the power mode can be automatically put in standby mode when a video or computer signal has not been detected. (An indication will appear on the screen before the standby mode is engaged).

- 1 Press **MENU** to display the menu screen.
- 2 Press **▲/▼** to select **POWER SAVE**, and press **SET**.

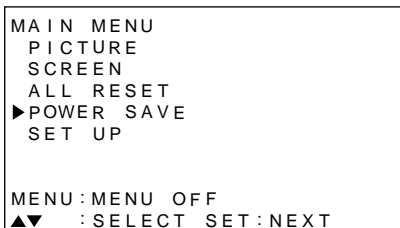


- 3 Press **▲/▼** to select "PC".

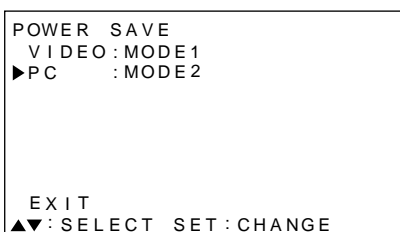

- 4 Press **SET** to select the **POWER SAVE** mode.

 The PC POWER SAVE mode changes each time **SET** is pressed as follows.



- When "OFF" is selected, this unit will stay in operation mode regardless of whether a synchronization signal is input or not.
- When "MODE1" is selected, this unit will be put in standby mode automatically if no new synchronization signal is input for 8 minutes.
- When "MODE2" is selected, this unit will be put in the power conservation standby automatically if no new synchronization signal is input. However, if the synchronization signal is restored, this unit is put back in operation mode.

- 5 When the setup is finished, press **MENU** to exit the menu screen.

### Note

The POWER SAVE setting is common to INPUT3 and INPUT4.

### To put the unit in operation mode again


Press **⏻ STANDBY/ON** on the main unit or remote control unit.

If "MODE 2" is selected for PC input, resuming PC operation or pressing **INPUT** on the main unit or remote control unit can also put the unit in operation mode again.


# Display Panel Adjustments

## Adjusting the picture quality

- 1 Press MENU to display the menu screen.
- 2 Press ▲/▼ to select PICTURE, then press ►.

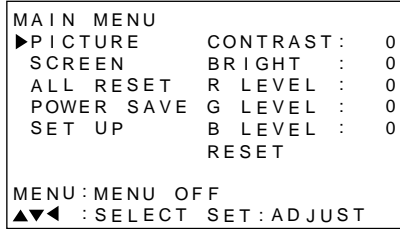

- 3 Press ▲/▼ to select the adjustment item, then press SET.

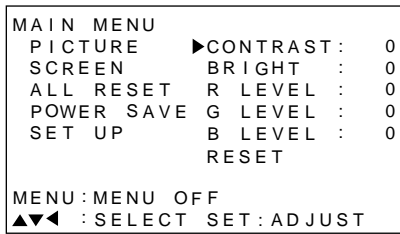

- 4 Press ◀/▶ to adjust the picture quality as desired.



Pressing SET returns the display to the step 3 screen.

- 5 When the setup is finished, press MENU to exit the menu screen.

### Note

Make these adjustments for both INPUT3 and INPUT4.

### PICTURE mode adjustment items


Below are brief descriptions of the options that can be set in the PICTURE mode.

- CONTRAST ..... Adjust according to the surrounding brightness so that the picture can be seen clearly.
- BRIGHT ..... Adjust so that the dark parts of the picture can be seen clearly.
- R LEVEL ..... Adjust the amount of red in the picture.
- G LEVEL ..... Adjust the amount of green in the picture.
- B LEVEL ..... Adjust the amount of blue in the picture.

### To reset PICTURE mode settings to the default

If settings have been adjusted excessively or the picture on the screen no longer appears natural, it may prove more beneficial to reset the PICTURE mode to default settings instead of trying to make adjustments under already adjusted conditions.


- 1 In step 3 in the previous procedure, press ▲/▼ to select RESET, then press SET.

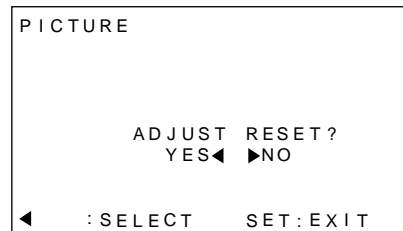

- 2 Press ◀ to select YES, and press SET. All PICTURE mode settings are returned to the factory set default.


## Adjusting the display image

- 1 Press **MENU** to display the menu screen.
- 2 Press **▲/▼** to select **SCREEN**, then press **▶**.

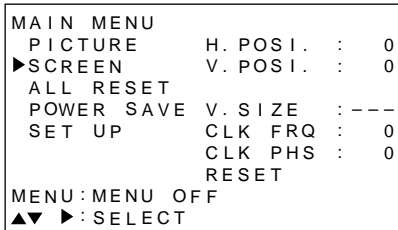


“---” is displayed if the adjustment is not available.

- 3 Press **▲/▼** to select the adjustment item, then press **SET**.

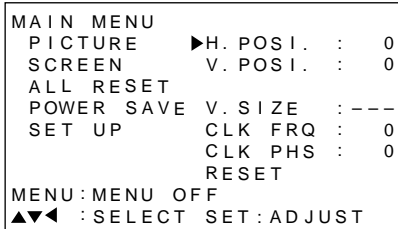

- 4 Press **◀/▶** to carry out the adjustment.

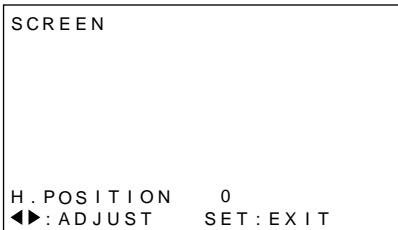

Use **▲/▼** for the adjustments of **V.POSITION** .  
Pressing **SET** returns the display to the step 3 screen.

- 5 When adjustment is finished, press **MENU** to exit the menu screen.

**Note**

Make these adjustments for both **INPUT3** and **INPUT4**.

### SCREEN mode adjustment items

Below are brief descriptions of the options that can be set in the **SCREEN** mode.

- H.POSITION ..... Adjust the picture's position to the left or right.
- V.POSITION ..... Adjust the picture's position upward or downward.
- CLK FREQ. .... Adjust letter breakup or noise on the screen. This setting adjusts the unit's internal clock signal frequency that corresponds to the input video signal.
- CLK PHASE ..... Adjust so that there is minimum flicker of screen letters or color misalignment. This setting adjusts the phase of the internal clock signal adjusted by the CLK FREQ. setting.


**Notes**

- When CLK FREQ. adjustment is carried out, the H.POSITION setting may have to be re-adjusted.
- If the adjustment items in the SCREEN mode are adjusted excessively, the picture may not be displayed properly.

### To reset SCREEN mode settings to the default

If settings have been adjusted excessively or the picture on the screen no longer appears natural, it may prove more beneficial to reset the SCREEN mode to default settings instead of trying to make adjustments under already adjusted conditions.

- 1 In step 3 in the previous procedure, press **▲/▼** to select **RESET**, then press **SET**.

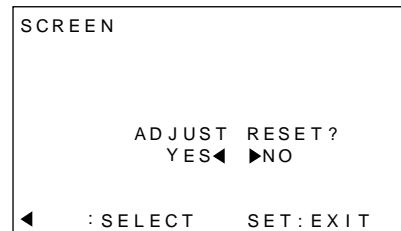

- 2 Press **◀** to select **YES**, and press **SET**.  
All SCREEN mode settings are returned to the factory set default.

## Making the PC image brighter (ABL)

Set this mode to "ON" to brighten the image during PC signal input. When ABL is set to "ON", the brightness of the image will change according to changes in the input signal. If you are bothered by changes to brightness during operation, set this mode to "OFF".

- 1 Press **MENU** to display the menu screen.

The menu screen appears.

- 2 Press **▲/▼** to select **SET UP**, then press **SET**.

```

MAIN MENU
PICTURE
SCREEN
ALL RESET
POWER SAVE
▶SET UP

MENU:MENU OFF
▲▼ : SELECT SET: NEXT
    
```

- 3 Press **▲/▼** to select **ABL**.

```

SET UP
TERMINAL : BNC
SETTING : PC
SIGNAL : RGB
CLAMP : MODE1
▶ABL : OFF
H. ENHANCE: 0
V. ENHANCE: 0
EXIT
▲▼ : SELECT SET: CHANGE
    
```

 
- 4 Press **SET** to set the mode to "ON".

"ON" is set when this unit is shipped from the factory.

```

SET UP
TERMINAL : BNC
SETTING : PC
SIGNAL : RGB
CLAMP : MODE1
▶ABL : ON
H. ENHANCE: 0
V. ENHANCE: 0
EXIT
▲▼ : SELECT SET: CHANGE
    
```

Each time **SET** is pressed, the settings change in the following order.



- 5 When the setup is finished, press **MENU** to exit the menu screen.

**Note**


Make the setting for each input (INPUT3 or INPUT4).




## Making the PC image clearer (H/V ENHANCE)

Adjust H/V ENHANCE to view a clear image during PC signal input.


- 1 Press **MENU** to display the menu screen.  
The menu screen appears.
- 2 Press **▲/▼** to select **SET UP**, then press **SET**.

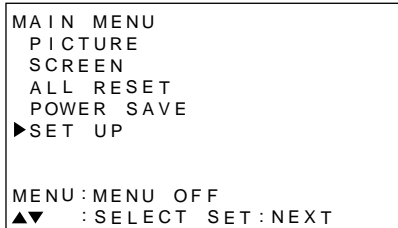

- 3 Press **▲/▼** to select **H. ENHANCE** or **V. ENHANCE**, then press **SET**.

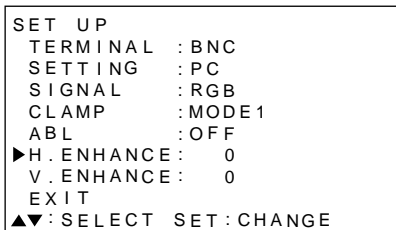

- 4 Press **◀/▶** to adjust.

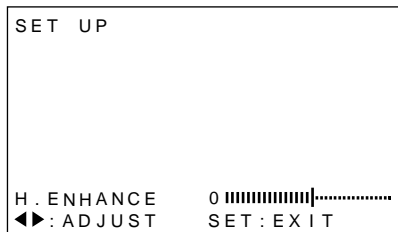

Pressing **SET** returns the display to the step 3 screen.


- 5 When the setup is finished, press **MENU** to exit the menu screen.

### Note


H. ENHANCE or V. ENHANCE mode adjusting is only possible during PC signal input.  
Make the adjustment for each input (INPUT3 and INPUT4).

## Resetting the unit to factory set defaults

- 1 Press **MENU** to display the menu screen.  
The menu screen appears.
- 2 Press **▲/▼** to select **ALL RESET**, then press **SET**.

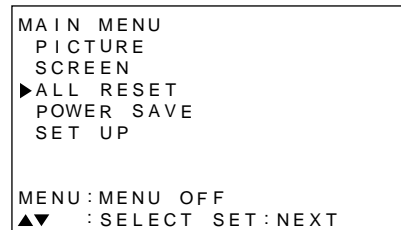

- 3 Press **◀** to select **YES**, then press **SET**.  
All settings of the PICTURE and SCREEN modes are returned to the default settings (factory set defaults).

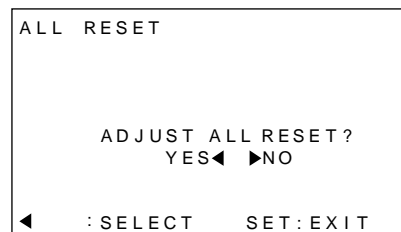

## Cleaning

Regular cleaning will extend the life and performance of this unit. The recommended way to clean the display and related parts is described below.

Before cleaning, be sure to unplug the power cord from the power outlet.

### Cleaning the display panel body and remote control

Do not under any circumstances use solvents such as benzene or thinner for cleaner. Use of such liquids may cause deterioration or peeling of paint from the display or remote control unit.

Wipe the display and remote control gently with a soft cloth. In the case of excessive dirt buildup, dampen a soft cloth with a diluted neutral cleaning detergent and after wringing the cloth thoroughly, wipe the component and then dry it with a dry soft cloth.


### Cleaning the screen

After dusting, wipe the screen gently using the supplied cleaning cloth or a soft cloth. Do not use tissue or a rough cloth. As the surface of the screen is easily scratched, do not rub it or hit it with a hard object.


### Cleaning the vents

As a general rule, use a vacuum cleaner about once a month to clean the vents on the rear panel of the display of dust buildup (set the vacuum cleaner to its weakest setting when doing this).

Using the unit without cleaning it of dust will cause the internal temperature to increase, resulting in possible breakdown or fire.

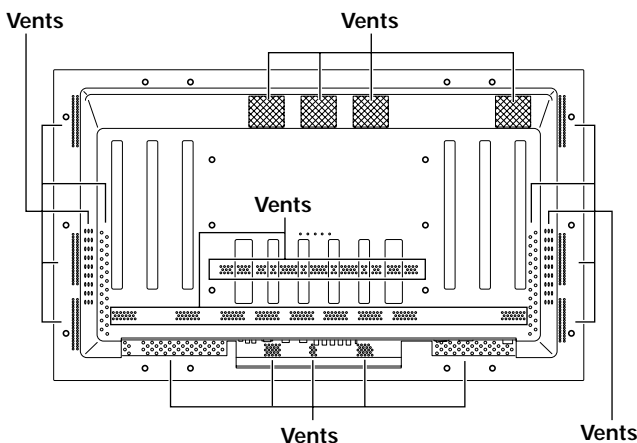

## Inserting the batteries in the remote control unit

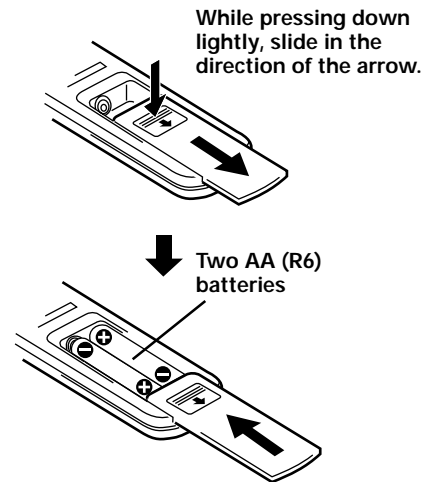

### When handling the remote control unit

- Do not drop or shake the remote control.
- Do not use the remote control unit in a location subject to direct sunlight, heat radiation from a heater, or in a place subject to excessive humidity.
- When the remote control unit's batteries begin to wear out, the operable distance will gradually become shorter. When this occurs, replace all batteries with new ones as soon as possible.

### **CAUTION**


- Insert batteries so that the plus (+) and minus (-) sides are aligned according to the markings in the battery case.
- Do not mix new batteries with used ones.
- The voltage of batteries may differ even if they are the same shape. Please do not mix different kinds of batteries together.
- When not using the remote control unit for a long period of time (1 month or more), remove the batteries from the remote control unit to prevent leaking of battery fluid. If battery liquid has leaked, thoroughly wipe the inside of the case until all liquid is removed, and then insert new batteries.
- Do not charge, short, disassemble or throw the provided batteries in a fire.

## Operating range of the remote control unit

When operating the remote control unit, point it at the remote sensor (SR) located on the front panel of the main unit. The remote control unit is operable up to 23 feet (7 m) from the unit and within a 30° angle on each side of the sensor.

### If you are having difficulty with operation of the remote control unit

- The remote control unit may not operate if there are objects placed between it and the display.
- Operational distance will gradually become shorter as the batteries begin to wear out, replace weak batteries with new ones as soon as possible.
- This unit discharges infrared rays from the screen. Placing a video deck or other component that is operated by an infrared remote control unit near this unit may hamper that component's reception of the remote control's signal, or prevent it from receiving the signal entirely. Should this occur, move the component to a position further away from this unit.
- Depending on the installation surroundings, this unit's remote control unit may be influenced by the infrared rays discharged from the plasma display, hampering reception of its rays or limiting its operational distance. The strength of infrared rays discharged from the screen will differ according to the picture displayed.

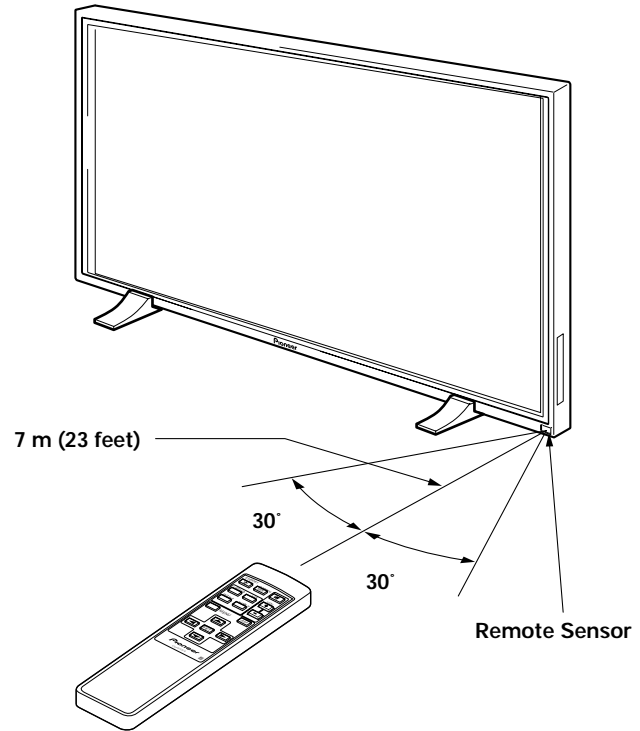

## Troubleshooting

What may at first seem to be an malfunction, may be remedied with a quick check.

Please check to see if a warning is displayed on the screen. If displayed, refer to page 24 and check the mode. If there is no display check to see if the problem is listed below. The problem may also be caused by something other than this unit so please also check the other components being used such as a video deck. If the problem can still not be solved please consult the dealer where this unit was purchased.

### General Problems

Problem	Possible Solution
<ul style="list-style-type: none"> <li>• No power</li> </ul>	<ul style="list-style-type: none"> <li>• Is the power cord disconnected? (page 12)</li> <li>• Has the MAIN POWER switch been switched on? (page 7)</li> </ul>
<ul style="list-style-type: none"> <li>• Unit cannot be operated.</li> </ul>	<ul style="list-style-type: none"> <li>• External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the unit after first turning the main power on/off, or unplugging the power cord and re-plugging it in after 1 to 2 minutes.</li> </ul>
<ul style="list-style-type: none"> <li>• Remote control does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>• Are batteries inserted with polarity (+, -) correctly aligned? (page 22)</li> <li>• Are batteries worn out? (Replace with new batteries).</li> <li>• Is the plug inserted in the CONTROL IN terminal? Because reception of the remote control's signal will not be possible if the plug is inserted, please check connections (page 11).</li> </ul>
<ul style="list-style-type: none"> <li>• Picture is cut off.</li> </ul>	<ul style="list-style-type: none"> <li>• Is the selected screen size correct? Switch to another screen size (page 16).</li> <li>• Are SCREEN mode adjustments such as picture size made correctly? (page 19).</li> </ul>
<ul style="list-style-type: none"> <li>• Strange color, light color, or dark, or color misalignment</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the picture tone (page 18).</li> <li>• Is the room too bright? The picture may look dark in a room that is too bright.</li> </ul>
<ul style="list-style-type: none"> <li>• Power is suddenly turned off.</li> </ul>	<ul style="list-style-type: none"> <li>• The unit's internal temperature has increased. (Air vents are blocked.) Remove any objects blocking vent or clean (page 22).</li> <li>• Is the POWER SAVE mode set to "MODE1" or "MODE2"? (page 17)</li> </ul>
<ul style="list-style-type: none"> <li>• No picture</li> </ul>	<ul style="list-style-type: none"> <li>• Are all connections correct? (page 10)</li> <li>• Has setup been done correctly after connection? (page 13)</li> <li>• Is the correct input selected? (page 14)</li> <li>• Is a non-compatible signal being input? (page 26)</li> <li>• Is picture adjustment correct? (page 18)</li> </ul>

## Problems commonly mistaken as breakdown

Problem	Possible Solution
<ul style="list-style-type: none"> <li>The screen is displayed in a small size.</li> </ul>	<ul style="list-style-type: none"> <li>Check the input signal compatibility chart (page 26).</li> <li>Is the correct screen size selected? (page 16)</li> </ul>
<ul style="list-style-type: none"> <li>Letter breakup on screen.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust using "SCREEN" mode on the menu screen (page 19). If there is still no improvement, this unit may be limiting the displayable range. Check the personal computer input signal compatibility chart (page 26).</li> </ul>
<ul style="list-style-type: none"> <li>A sharp sound is sometimes heard from the cabinet.</li> </ul>	<ul style="list-style-type: none"> <li>Expansion/contraction caused by surrounding temperature change may result in sound being heard from the cabinet. This is not a malfunction.</li> </ul>
<ul style="list-style-type: none"> <li>Bright portions of image appear to be losing intensity.</li> </ul>	<ul style="list-style-type: none"> <li>When the input signal's level is too high, the bright portions may appear to be losing their intensity. Increase the adjustment level of the contrast and check the picture (page 18).</li> </ul>
<ul style="list-style-type: none"> <li>Speckles or noise appears on screen.</li> </ul>	<ul style="list-style-type: none"> <li>May be caused by radio wave interference from appliances with motors such as hair dryers, electric vacuum cleaners, electric power drills, ignition systems of cars, motorcycles etc., switch devices such as thermostats etc., neon signs or electrical discharge from power lines etc..</li> </ul>
<ul style="list-style-type: none"> <li>Stripes appear on the screen.</li> </ul>	<ul style="list-style-type: none"> <li>May be caused by radio wave mingling from TV station, FM station, amateur radios, public radios (simplified radios) etc., or a nearby personal computer, TV, or video/audio component.</li> <li>A strong electromagnetic field may cause picture distortion and similar problems.</li> </ul>
<ul style="list-style-type: none"> <li>Operation is not possible.</li> </ul>	<ul style="list-style-type: none"> <li>External influences such as lightning strike, static electricity etc., may cause improper operation. In this case, operate the unit after first turning the main power ON/OFF, or unplugging the power cord and re-plugging it in after 1 to 2 minutes.</li> </ul>
<ul style="list-style-type: none"> <li>Sound is heard from inside the unit.</li> </ul>	<ul style="list-style-type: none"> <li>Sound of fan revolving. This is not a malfunction.</li> </ul>

Although this unit incorporates high precision technology in its design, please understand that there may be extremely slight pixel breakup, or light emission fault.

### Note

In order to protect this unit's panels and circuitry, the revolving speed of the interval fan will be automatically increased in order to cool the inside of the unit when the surrounding temperature exceeds 40 °C. (The sound of the fan will become louder at this time). Please operate this unit in a location with a surrounding temperature under 40 °C.

### Additional cautions

- If the power is automatically turned off during operation of this unit, the following reasons may be the cause.
  - Is the POWER SAVE mode set to "MODE1" or "MODE2"? (page 17)
  - The surrounding temperature has risen above 40 °C. Please operate this unit in a location with a surrounding temperature under 40 °C.
  - The vents are blocked or the internal temperature has risen abnormally due to abnormal heat generation of internal parts etc..

If the power is automatically turned off for a reason other than the above reasons, there could be a malfunction. In this case, unplug the power cord from the power outlet and request repair from your nearest sales outlet.

- The plasma display panel of this unit is very bright and viewing it a close distance will cause eye strain. We recommend that you view the screen from a suitable distance (3 to 6m).

## About the plasma panel's protection function

The brightness of this display will deteriorate slightly when an image with little movement such as a photograph or computer image is continuously displayed. This is caused by the plasma panel's protection function which detects images with slight movement and automatically adjusts brightness to protect the display, and is not a malfunction. This function starts approximately 5 minutes after the power has been turned on or after input has been switched.

## About the self diagnosis mode

Messages appear on the bottom of this unit's screen to indicate operation or connection faults. After message confirmation, check the condition of the unit.

If this message appears	Please do this
OUT OF RANGE or PLEASE CHANGE RESOLUTION OR REFRESH RATE	<ul style="list-style-type: none"> <li>A incompatible signal is being input. Check the PC input signal compatibility chart on page 26 and change the output signal setting on the computer side.</li> </ul>
THERMAL WARNING! PLEASE SHUT DOWN	<ul style="list-style-type: none"> <li>Turn off main power (page 14).</li> <li>Has the room temperature exceeded 40 °C? Reduce the room temperature.</li> <li>If the unit's vents are blocked, unblock them.</li> </ul>

## CAUTION

### Panel sticking and after-image lag

- Displaying the same images such as still images for a long time may cause after-image lagging. This may occur in the following two cases.
1. After-image lagging due to remaining electrical load  
When image patterns with very high peak luminance are displayed for more than 1 minute, after-image lagging may occur due to the remaining electric load. The after-images remaining on the screen will disappear when moving images are displayed. The time for the after-images to disappear depends on the luminance of the still images and the time they had been displayed.

2. After-image lagging due to sticking  
Avoid displaying the same images continuously over a long period of time with the Plasma Display. When images of the same pattern are displayed continuously for several hours or displayed for a short period of time every day, after-images may remain on the screen due to the sticking of the fluorescent materials. In this case, these images may decrease if moving images are displayed after them, but basically they will not disappear.

## Specifications

### General

Light emission panel .....	50 inch plasma display panel
Number of pixels .....	1280 x 768
Power supply .....	AC 100 – 240 V, 50/60 Hz
Rated current .....	5.4 – 2.2 A
Standby power consumption .....	0.6 W
External dimensions .....	1218 (W) x 714 (H) x 98 (D) mm
(when using display stand)	
.....	1218 (W) x 737 (H) x 300 (D) mm
Weight .....	40.3 kg
(including display stand) .....	41.0 kg
Operating temperature range .....	0 to 40 °C
Operating atmospheric pressure range	
.....	0.8 to 1.1 atmospheric pressure

### Input/output

#### Video

##### INPUT 3

<b>Input</b>	BNC jack (x5)
	RGB signal (G ON SYNC compatible)
	RGB ... 0.7 Vp-p/75 Ω/no sync.
	HD/CS, VD ... TTL level
	/positive and negative polarity/
	75 Ω or 2.2 kΩ
	(impedance switch)
	G ON SYNC ...
	1 Vp-p/75 Ω/negative sync.

##### INPUT 4

<b>Input</b>	Mini D-sub 15 pin (socket connector)
	RGB signal (G ON SYNC compatible)
	RGB ... 0.7 Vp-p/75 Ω/no sync.
	HD/CS, VD ... TTL level
	/positive and negative polarity
	/2.2 kΩ
	G ON SYNC
	... 1 Vp-p/75 Ω/negative sync.
	*Compatible with Microsoft's Plug & Play (VESA DDC1/2B)

<b>Output</b>	Mini D-sub 15 pin (socket connector)
	75 Ω/with buffer

#### Audio

<b>Input</b>	AUDIO INPUT (for INPUT3)
	Pin jack (x2)
	L/R ... 500mVrms/more than 10 kΩ

	AUDIO INPUT (for INPUT4)
	Stereo mini jack
	L/R ... 500mVrms/more than 10 kΩ

<b>Output</b>	AUDIO OUTPUT
	Stereo mini jack
	L/R ... 500mVrms (max)/less than 5 kΩ

	SPEAKER
	L/R ... 8 – 16 Ω/2W +2W (at 8 Ω)

#### Control

	CONTROL IN/OUT ... monaural mini jack (x2)
--	--

#### Accessories

Remote control unit .....	1
Remote control unit case .....	1
AA (R6/UM-3) batteries .....	2
Cleaning cloth .....	1
Speed clamp .....	2
Bead band .....	2
Operating Instructions .....	1
Display stand .....	2
Washer (large) .....	2
Washer (small) .....	2
Hex hole bolt (M8X40) .....	2

- Due to improvements, specifications and design are subject to change without notice.

# Supplement 1


PC signal compatibility table (INPUT3, INPUT4)

Resolution (Dot x Line)	Vertical frequency	Horizontal frequency	Screen size (Dot x line)				Remarks
			ORIGINAL	4.3 NORMAL	FULL	ZOOM	
640x400	56.4Hz	24.8kHz			○ 1280x768		NEC PC-9800
	70.1Hz	31.5kHz			↑		NEC PC-9800
640x480	60Hz	31.5kHz	◎ 640x480	○ 1024x768	○ 1280x768		(852x480) (864x480)
	66.7Hz	35.0kHz	↑	↑	↑		Apple Macintosh 13"
	72Hz	37.9kHz	↑	↑	↑		
	75Hz	37.5kHz	↑	↑	↑		
800 x600	85Hz	43.3kHz	↑	↑	↑		
	56Hz	35.2kHz	◎ 800x600	○ 1024x768	○ 1280x768		
	60Hz	37.9kHz	↑	↑	↑		(1072x600)
	72Hz	48.1kHz	↑	↑	↑		
832x624	74.6Hz	49.7kHz	◎ 832x624	○ 1024x748	○ 1280x748		Apple Macintosh 16"
	75Hz	46.9kHz	↑	↑	↑		
1024x768	85Hz	53.7kHz	◎ 800x600	○ 1024x720	○ 1280x720		
	43Hz Interlace	35.5kHz	△ 1024x768		△ 1280x768		
	60Hz	48.4kHz	◎ 1024x768		○ 1280x768		(1376x768)
	70Hz	56.5kHz	↑		↑		
	75Hz (74.9Hz)	60.0kHz (60.2kHz)	↑		↑		( ) indicates Apple Macintosh 19"
1152x864	85Hz	68.7kHz	↑		↑		
	60Hz	53.7kHz		△ 1024x768	△ 1280x768		
	72Hz	64.9kHz		↑	↑		
1152x870	75Hz	67.7kHz		↑	↑		
	75.1Hz	68.7kHz		△ 1024x768	△ 1280x768		Apple Macintosh 21"
1152x900	66.0Hz	61.8kHz		△ 1024x768	△ 1280x768		Sun Microsystems LO
	76.0Hz	71.7kHz		↑	↑		Sun Microsystems HI
1280x768	56Hz	45.1kHz	◎ 1280x768				
1280x960	60Hz	60.0kHz		△ 1024x768	△ 1280x768		
1280x1024	43Hz Interlace	46.4kHz			△ 1280x768		
	60Hz	64.0kHz		△ 960x768	△ 1280x768	◎ 1280x768	
	75Hz	80.0kHz		△ 960x768			(1600x1024)
	85Hz	91.1kHz		↑			
1600 x 1200	60Hz	75.0kHz		△ 1024x768			
	65Hz	81.3kHz		↑			
	70Hz	87.5kHz		↑			

◎ : Optimal picture. Adjustment of picture position, frequency, phase etc., may be necessary.      : Not available.  
 ○ : Picture will be enlarged but some fine detail will be hard to see.  
 △ : Simple reproduction. Fine detail will not be reproduced. Screen size will be displayed as " - (TYPE)".

## Supplement 2

Signal assignment of INPUT 4 (Mini D-sub 15 pin socket connector)

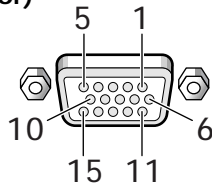

Pin No.	Input	Output
1	R	←
2	G	←
3	B	←
4	NC (No connection)	←
5	GND	NC (No connection)
6	GND	←
7	GND	←
8	GND	←
9	DDC + 5V	NC (No connection)
10	GND	←
11	NC (no connection)	←
12	DDC SDA	NC (No connection)
13	HD or H/V SYNC	←
14	VD	←
15	DDC SCL	NC (No connection)

## Explanation of Terms

### Aspect ratio

The TV screen's width to height ratio is referred to as its aspect ratio. The aspect ratio on standard TVs is 4:3 and on wide TVs or High Definition TVs it is 16:9.

### G ON SYNC

This indicates a video signal in the form of a synchronization signal added to the G (GREEN) signal of the R.G.B signal.

### VGA

VGA is short for "Video Graphics Array". Generally this indicates a 640 dot x 480 line resolution.

### XGA

General term for "eXtended Graphics Array". Generally this indicates a 1024 dot x 768 line resolution.

Macintosh is a registered trademark of Apple Computer, Inc.  
 Microsoft is a registered trademark of Microsoft Corporation.  
 PC-9800 is a trademark of NEC Corporation.  
 NEC is a trademark of NEC Corporation.  
 VESA is a registered trademark of Video Electronics Standards Association.  
 Sun Microsystems is a registered trademarks of Sun Microsystems, Inc.

# Precautions de securite

français

## IMPORTANT



Ce symbole de l'éclair, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, à l'intérieur du coffret de l'appareil, de "tensions dangereuses" non isolées d'une grandeur suffisante pour représenter un risque d'électrocution pour les êtres humains.



**ATTENTION:** Pour éviter tout risque d'électrocution, ne pas enlever le couvercle (ni le panneau arrière). Aucune pièce réparable par l'utilisateur ne se trouve à l'intérieur. Confier tout entretien à un personnel qualifié uniquement.



Ce point d'exclamation, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, dans les documents qui accompagnent l'appareil, d'explications importantes du point de vue de l'exploitation ou de l'entretien.

Nous vous remercions vivement d'avoir fait l'acquisition de ce produit PIONEER.

Avant d'utiliser votre écran à plasma, veuillez lire attentivement les "Précautions de Sécurité" ainsi que la présente "Mode d'emploi" de manière à utiliser l'écran à plasma correctement.

Conservez ce manuel dans un endroit sûr. Il vous sera sûrement utile dans les mois ou les années qui suivent.

**ATTENTION:** AFIN DE PREVENIR TOUS RISQUES DE CHOC ELECTRIQUE OU DE DEBUT D'ENCENDIE, NE PAS EXPOSER CET APPAREIL A L'HUMIDITE OU A LA PLUIE.

**ATTENTION:** Ce produit peut seulement être utilisé avec le socle, modèle PDK-5001. L'utilisation d'autres socles peut entraîner une instabilité pouvant causer des blessures.

**AVERTISSEMENT:** EN POSITIONNANT L'EQUIPEMENT, S'ASSURER QUE LA FICHE ET LA PRISE DE RACCORDEMENT DE L'ALIMENTATION SONT FACILEMENT ACCESSIBLES.

### AVERTISSEMENT:

Il s'agit d'un produit de classe A. Dans un environnement domestique, ce produit risque de provoquer des interférences radio; dans ce cas, l'utilisateur est prié d'engager des mesures adéquates.

Pour garantir un rayonnement thermique adéquat, placer l'unité à une certaine distance des autres équipements, murs, etc. (normalement à une distance supérieure à 10 cm). Eviter les modes d'installation décrits ciaprès qui entraînent l'obstruction des orifices et provoquent une accumulation de chaleur interne, d'où un risque d'incendie.

- Ne pas essayer de placer l'unité dans des espaces réduits et mal ventilés
- Ne pas la placer sur un tapis
- Ne pas la recouvrir d'un tissu etc.
- Ne pas la placer sur le côté
- Ne pas la renverser
- Si une installation spéciale est envisagée, comme un montage à proximité immédiate du mur, un placement horizontal, consulter d'abord le revendeur Pioneer de votre région.

### Remarques sur l'installation:

Ce produit est vendu en assumant qu'il sera installé par un personnel suffisamment expérimenté et qualifié. Faites toujours réaliser le montage et l'installation par un spécialiste ou par votre revendeur.

PIONEER ne peut être tenu responsable pour tout dommage causé par une erreur d'installation ou de montage, une mauvaise utilisation ou un désastre naturel.

### Remarque pour le revendeur:

Après l'installation, assurez-vous de remettre ce mode d'emploi à l'utilisateur et de lui expliquer comment utiliser ce produit.

Les symboles qui suivent se trouvent sur les étiquettes apposées sur le produit. Ils alertent les utilisateurs de ce matériel ainsi que le personnel du service après-vente sur toutes les situations qui présentent un danger potentiel.

### DANGER

Ce symbole concerne un risque ou une pratique dangereuse qui peut entraîner des blessures graves ou la mort.

### ATTENTION

Ce symbole concerne un risque ou une pratique dangereuse qui peut entraîner des blessures ou des dégâts matériels.

Commencer



France : tapez 36 15 PIONEER

Published by Pioneer Corporation.  
Copyright © 1999 Pioneer Corporation.  
All rights reserved.

### Home Entertainment Company (Consumer products)

---

**PIONEER CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087, Keetberglaan 1 B-9120 Melsele, Belgium, TEL: 32-3-570-0511

**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 253 Alexandra Road #04-01, Singapore, 159936, TEL: 65-472-1111

**PIONEER GULF FZE** P.O.BOX 61226, Jebel Ali, Dubai, United Arab Emirates, TEL:(971)4-815756

### Business Systems Company (Products for business use)

---

**PIONEER CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

**PIONEER ELECTRONIC [EUROPE] N.V. MULTIMEDIA DIVISION** Pioneer House Hollybush Hill, Stoke Poges, Slough SL2 4QP, U.K., TEL:44-1753-789-789

**PIONEER ELECTRONICS AUSTRALIA PTY.LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL:61-39-586-6300

**PIONEER ELECTRONICS (CHINA) LTD.** Room 1704-06,17/F World Trade Centre, 280 Gloucester Rd Causeway Bay, H.K., TEL:852-2848-6488

**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 253 Alexandra Road, #04-01, Singapore, 159936, TEL:65-472-1111

**PIONEER GULF FZE** P.O.BOX 61226, Jebel Ali, Dubai, United Arab Emirates, TEL:(971)4-815756

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>