

OVER 12 months

06027/06035 Asst.

PLAYSKOOL®

Fun Tunes™ Rowboat

**Thank you for choosing this unique
PLAYSKOOL brand product.**

**Includes 3 x 1.5V "AA"/R6 batteries. Alkaline batteries
recommended. Phillips/cross head screwdriver
(not included) required to replace batteries.**




THIS IS NOT A WATER TOY.

TO PLAY

Please note: The toy is shipped in "DEMO" mode. Move switch to "PLAY" for play at home.

Join the captain as he sings "Row, Row, Row Your Boat" and his shipmates play musical instruments to this classic children's song.


- Place the captain in the boat and place a shipmate in any other seat to hear the captain sing, accompanied by that shipmate playing the musical instrument they're holding. Add the other shipmates to hear them "play" their musical instruments. The song builds, becoming fuller and more complete as you add shipmates. The singing and musical instruments play in order from the front to the back of the boat. Press the flag to hear the song again or stop the play.
- When the captain is in the navigator's seat with no passengers aboard, he says, "Hey, where is everyone?"
- If a shipmate is alone in the boat, or if the captain is alone in a passenger seat, you'll hear, "Uh, oh...I can't sail by myself."

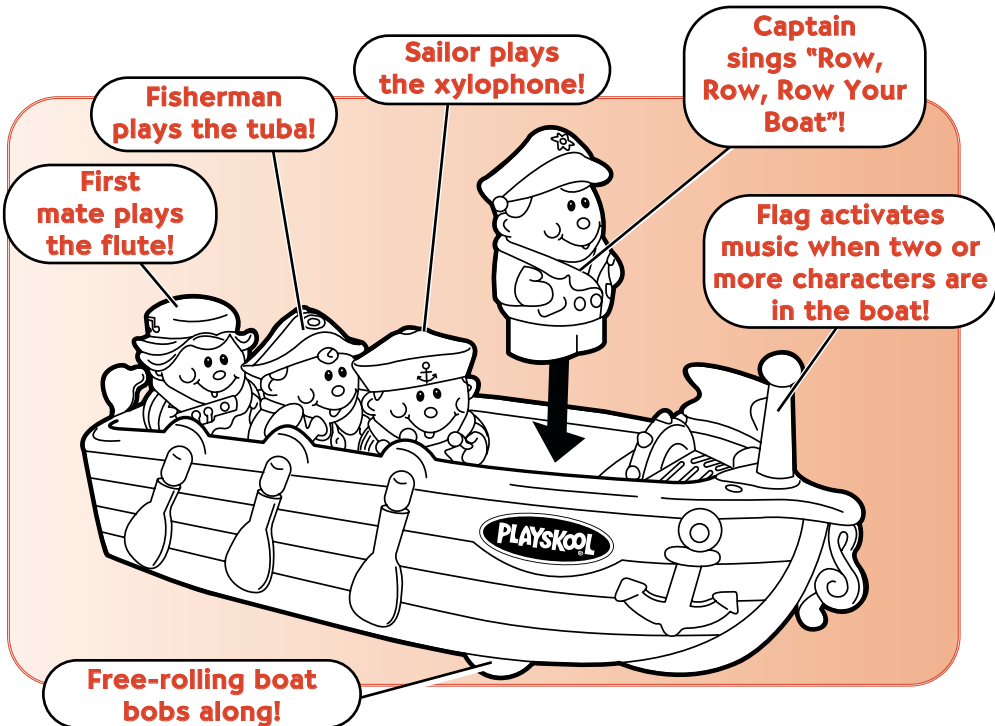

Note: To prevent accidental activation, slide the switch on bottom of toy to "OFF."

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Remove old batteries. Insert 3 fresh "AA"/LR6 (1.5V) alkaline batteries. Replace door and tighten screw.

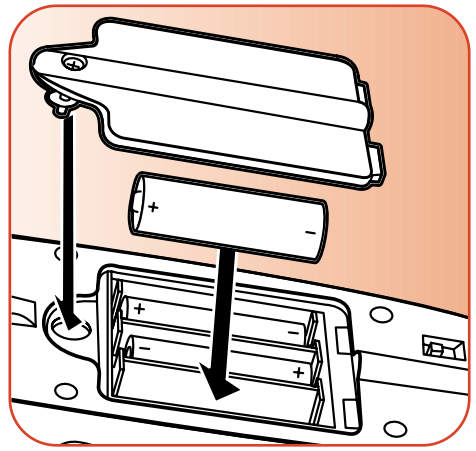

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© 2003 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
06027/06035 Asst. P/N 6262150000

PLAYSKOOL.COM 
FOR NEW PRODUCTS AND OFFERS
Questions? Call: 1-800-PLAYSKL

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>